




- U.S.A. : **Kubota Tractor Corporation**
1000 Kubota Drive, Grapevine, Texas 76051, U.S.A.
Telephone : (1)-817-756-1171
- Canada : **Kubota Canada Ltd.**
1155 Kubota Drive, Pickering, Ontario L1X 0H4, Canada
Telephone : (1)-905-294-6535
- France : **Kubota Europe S.A.S.**
19-25, Rue Jules Verceyruysse, Z.I., BP88 95101 Argenteuil Cedex, France
Telephone : (33)-1-3426-3434
- Italy : **KUBOTA EUROPE S.A.S Italy Branch**
Via Grandi, 29 20068 Peschiera Borrome (MI) Italy
Telephone : (39)02-51650377
- Germany : **Kubota Baumaschinen GmbH**
Steinhauser Straße 100, 66482 Zweibrücken Rheinlandpfalz, Germany
Telephone : (49)-6332-4870
- U.K. : **KUBOTA (U.K.) LTD.**
Dormer Road, Thame, Oxfordshire, OX9 3UN, U.K.
Telephone : (44)1844-214500
- Spain : **Kubota España S.A.**
Calle Fernando Alonso número 15, Leganés, 28914 (Madrid), Spain
Telephone : (34)-91-508-6442
- Turkey : **KUBOTA TURKEY MAKINE TIC.LTD.ŞTİ.**
Cumhuriyet Mah. Yahya Kaptan Cad. No:3 Cayirova / Kocaeli/Turkey 41420
Telephone : (90)262-658-9045
- Australia : **KUBOTA AUSTRALIA PTY LTD.**
25-29 Permas Way, Truganina, VIC 3029, Australia
Telephone : (61)-3-9394-4400
- Malaysia : **KUBOTA MALAYSIA SDN. BHD.**
Lot 766, Jalan Subang 4, off Persiaran Subang Sungai Penaga Industrial Park,
47500 Subang Jaya
Telephone : (60)-3-7890-3533
- Philippines: **KUBOTA PHILIPPINES, INC.**
232 Quirino Highway, Baesa, Quezon City 1106, Philippines
Telephone : (63)2-422-3500
- Taiwan : **SHIN TAIWAN AGRICULTURAL MACHINERY CO., LTD.**
16, Fengping 2nd Rd, Taliiao Shiang Kaohsiung 83107, Taiwan R.O.C.
Telephone : (886)7-702-2333
- Indonesia : **PT KUBOTA MACHINERY INDONESIA**
Tower A at EightyEight@Kasablanka Lantai 16
Jalan Raya Casablanka Kav. 88, Jakarta 12870 Indonesia
Telephone : (62)-21-29568-720
- Thailand : **SIAM KUBOTA CORPORATION CO., LTD.**
101/19-24 Moo 20, Navanakorn Industrial Estate, Tambon Khlongnueng, Amphur Khlongluang,
Pathumthani 12120, THAILAND
Telephone : (66)2-909-0300
- Korea : **KUBOTA KOREA CO., LTD.**
41-27, Jayumyeok-gil, Baeksan-myeon, Gimje-si, Jeollabuk-do, Korea
Telephone : (82)-63-544-5822
- India : **KUBOTA AGRICULTURAL MACHINERY INDIA PVT. LTD.**
B 500 A & C, Indospace Industrial Park, 104 Polivakkam Village,
Sriperumbadur-Thiruvallur Main Road, Thiruvallur District-602 002.
Telephone : (91)44-4019-2000
- Vietnam : **KUBOTA VIETNAM CO., LTD.**
Lot B-3A2-CN, My Phuoc 3 Industrial Park, Thoi Hoa Ward, Ben Cat Town, Binh Duong Province, Vietnam
Telephone : (84)-274-3577-507

BB . H . 1 - 1 . . . AK

English (U.S.A., Oceania)
Code No. K7921-7121-1

OPERATOR'S MANUAL

KUBOTA *RTV-X1130* UTILITY VEHICLE

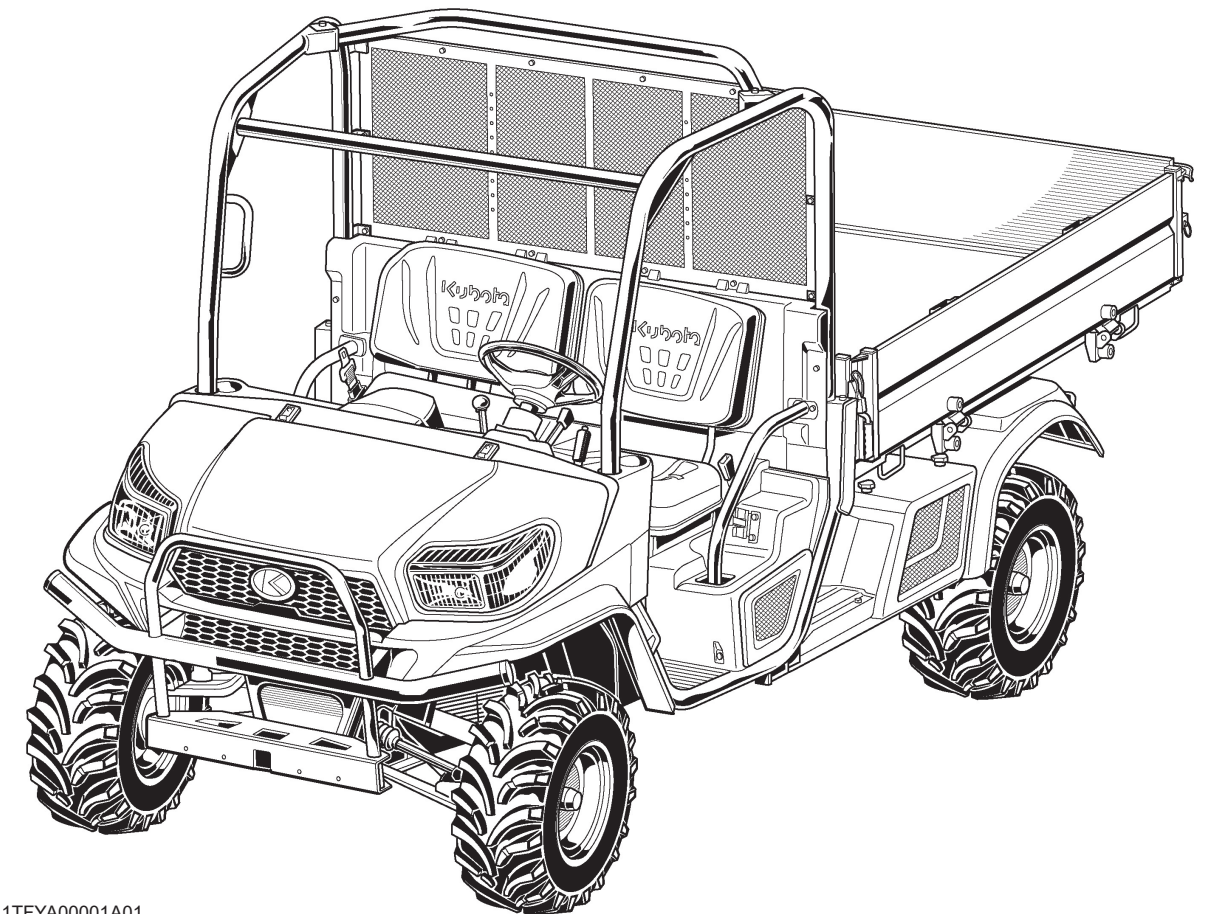

1TFYA00001A01

RTV-X1130

READ AND SAVE THIS MANUAL



ABBREVIATION LIST

Abbreviations	Definitions
2WD	2 Wheel Drive
4WD	4 Wheel Drive
API	American Petroleum Institute
ASTM	American Society for Testing and Materials, USA
HST	Hydrostatic Transmission
Km/h	Kilometers Per Hour
MPH	Miles Per Hour
m/s	Meters Per Second
PTO	Power Take Off
RH/LH	Right-hand and left-hand sides are determined by facing in the direction of forward travel
ROPS	Roll-Over Protective Structures
rpm	Revolutions Per Minute
r/s	Revolutions Per Second
SAE	Society of Automotive Engineers, USA
VHT	Variable Hydro Transmission

California Proposition 65

▲ WARNING ▲

Engine exhaust, some of its constituents, certain vehicle components and fluids, contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
































IMPORTANT

The engine in this machine is equipped by the manufacture with a standard spark arrester. It is a violation of California Public Resource Code Section 4442 to use or operate this engine on or near any forest-covered, brush-covered land, or grass-covered land unless the exhaust system is equipped with a working spark arrester meeting state laws. Other states or federal areas may have similar laws.

**Canadian Electromagnetic Compatibility (EMC):
This machine complies with Industry Canada ICES-002.**

UNIVERSAL SYMBOLS

As a guide to the operation of your vehicle, various universal symbols have been utilized on the instruments and controls. The symbols are shown below with an indication of their meaning.

	Safety alert symbol		Headlight
	Seat belt (2 point type)		Audible warning device
	Seat belt (3 point type)		FAST
	Diesel fuel		SLOW
	Fuel - level		4-wheel drive - ON
	Hourmeter / elapsed operating hours		LOCK
	Engine coolant - temperature		UNLOCK
	Brake fluid		
	Parking brake		
	Battery charging condition		
	Engine oil - pressure		
	VHT oil - temperature		
	Turn signal / hazard		
	Engine - STOP		
	Engine - RUN		
	Starter control		
	Diesel preheat / glow plugs (low temperature start aid)		
	Differential lock		
	Differential lock hold		
	Lift cylinder - RETRACT		
	Lift cylinder - EXTEND		
	Lift cylinder - FLOAT		
	Steering wheel - tilt control		
	Hazard warning lights		

FOREWORD

You are now the proud owner of a KUBOTA Vehicle. This vehicle is a product of Kubota quality engineering and manufacturing. It is made of excellent materials and under a rigid quality control system. It will give you long, satisfactory service. To obtain the best use of your vehicle, please read this manual carefully. It will help you become familiar with the operation of the vehicle and contains many helpful hints about vehicle maintenance. This manual contains instructions for minor maintenance, but information about major repairs is outlined in the Kubota Workshop Manual and should be performed only by a Kubota Dealer Technician. It is Kubota's policy to utilize as quickly as possible every advance in our research. The immediate use of new techniques in the manufacture of products may cause some small parts of this manual to become outdated. Kubota distributors and dealers will have the most up-to-date information. Please do not hesitate to consult with them.



SAFETY FIRST

This symbol, the industry's safety alert symbol, is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to assemble or use this unit.

**DANGER:**

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

**WARNING:**

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

**CAUTION:**

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

IMPORTANT:

Indicates that equipment or property damage could result if instructions are not followed.

NOTE:

Gives helpful information.

CONTENTS

SAFE OPERATION	7
SERVICING OF THE VEHICLE	21
DEALER SERVICE.....	21
WARRANTY OF THE VEHICLE.....	21
SCRAPPING THE VEHICLE.....	21
REPORTING SAFETY CONCERNS IN CANADA.....	21
SPECIFICATIONS	23
SPECIFICATION TABLE.....	23
TRAVELING SPEEDS.....	24
VEHICLE LIMITATIONS	25
INSTRUMENT PANEL AND CONTROLS	26
LOCATION OF PARTS.....	26
PRE-OPERATION CHECK	29
DAILY CHECK.....	29
OPERATING THE ENGINE	30
STARTING THE ENGINE.....	30
1. Cold weather starting.....	32
2. Engine hand throttle (if equipped).....	32
3. Block heater (if equipped).....	32
STOPPING THE ENGINE.....	32
WARMING UP THE ENGINE.....	32
1. Warming up the transmission oil in the low temperature range.....	32
JUMP STARTING THE ENGINE.....	32
OPERATING THE VEHICLE	34
OPERATING A NEW VEHICLE.....	34
1. Operating the new vehicle for the first 50 hours.....	34
2. Changing lubricating oil for a new vehicle.....	34
STARTING THE VEHICLE.....	34
1. Seat belt.....	34
2. Steering wheel tilt lever.....	35
3. Seat slide lever.....	35
4. Head light switch.....	35
5. Hazard light switch (if equipped).....	35
6. Turn signal light switch (if equipped).....	36
7. Horn button.....	36
8. Work light (front) (if equipped).....	36
9. Work light (rear) (if equipped).....	37
10. Brake pedal.....	37
11. Range gear shift lever.....	37
12. 4WD lever.....	38
13. Parking brake lever.....	38
14. Speed control pedal.....	39
15. Dynamic braking.....	39
STOPPING THE VEHICLE.....	39
CHECK DURING DRIVING.....	39
1. Easy Checker™.....	39
2. Fuel gauge.....	40
3. Coolant temperature gauge.....	40
4. Hourmeter and odometer.....	40

5. Speedometer	41
PARKING THE VEHICLE.....	41
1. Parking brake lever.....	41
ACCESSORY.....	41
1. 12 V electric outlet	41
2. Utility box	42
3. Glove box and glove box cover	42
OPERATING TECHNIQUES.....	42
1. Differential lock	42
2. Directions for use of power steering	43
3. Driving on unfamiliar terrain.....	43
4. Driving in reverse.....	43
5. Driving in “4WD”	43
6. Turning the vehicle	44
7. Driving on hills	44
8. Traversing hillsides.....	45
9. Sliding and skidding.....	45
10. Driving through water	45
STATIONARY HYDRAULIC OUTLET (IF EQUIPPED).....	46
CARGO BED.....	47
GENERAL CAUTION.....	47
MAX. CARGO BED LOAD	47
OPENING THE CARGO BED TAILGATE.....	48
OPENING THE CARGO BED SIDE GATE.....	48
REMOVING THE TAILGATE AND SIDE GATES OF THE CARGO BED.....	49
RAISING AND LOWERING THE CARGO BED	51
OPERATING THE CARGO BED LOCK.....	52
HYDRAULIC OUTLET	53
HYDRAULIC OUTLET (IF EQUIPPED).....	53
1. Hydraulic outlet lever	53
2. Connecting and disconnecting the hydraulic outlet valve coupler	54
TIRES AND WHEELS.....	55
TIRES.....	55
1. Inflation pressure	55
2. Tire type and use	55
WHEELS	55
SHOCK ABSORBERS.....	56
1. Shock absorber spring adjustment	56
TOWING AND TRANSPORTING	57
TOWING AND TRANSPORTING	57
1. Rear trailer hitch (if equipped)	57
2. Front trailer hitch (if equipped).....	57
3. Winch mount bracket.....	57
4. Transporting the vehicle safely	57
MAINTENANCE	59
SERVICE INTERVALS.....	59
LUBRICANTS, FUEL, AND COOLANT	62
1. For North American market	64
2. For other than North American market	65
BIODIESEL FUEL (BDF)	66
1. Applicable BDF	66
2. Product warranty, emission, and other precautions.....	66
3. Maintenance requirements	67
3.1 When using BDF B0 through B5	67

3.2 When using BDF B6 through B20	67
4. Long term storage	67
PERIODIC SERVICE	69
HOW TO OPEN THE HOOD AND TILT THE SEATS	69
1. Opening the hood	69
2. Tilting the seats	69
HOW TO RAISE THE CARGO BED	70
1. Raising and lowering the cargo bed	70
JACK-UP POINTS	70
1. Front end	70
2. Rear end	71
DAILY CHECK	71
1. Walk around inspection	71
2. How to clean the vehicle	71
3. Checking around the engine	72
4. Checking the amount of fuel and refueling	72
5. Checking the engine oil level	72
6. Checking the transmission fluid level	73
7. Checking hydraulic oil tank level	73
8. Checking the coolant level	74
9. Cleaning the radiator screen	74
10. Cleaning the oil cooler net	74
11. Checking the brake fluid level	75
12. Checking the brake pedal	75
13. Checking the parking brake	75
14. Checking Easy Checker™	75
15. Checking the head light and the turn signal light (if equipped)	76
16. Checking the seat belt and the ROPS	76
17. Checking the joint boots	76
18. Checking the tire inflation pressure	76
19. Checking the backup beeper (if equipped)	77
EVERY 50 HOURS	77
1. Greasing	77
2. Checking the engine start system	78
EVERY 100 HOURS	79
1. Checking the VHT neutral spring	79
2. Checking the VHT pressure release	79
3. Checking the wheel fastener torque	79
4. Cleaning the air cleaner primary element	80
5. Adjusting the alternator belt tension	80
6. Checking the fuel filter	81
7. Checking the battery condition	82
7.1 Charging the battery	83
7.2 Replacing the battery	83
7.3 Directions for battery storage	84
8. Adjusting toe-in	84
9. Cleaning the muffler (for swirl type spark arrester)	84
10. Checking the exhaust system	85
EVERY 200 HOURS	85
1. Adjusting the parking brake	85
2. Greasing	86
3. Replacing the engine oil filter	86
4. Changing the engine oil	87
5. Replacing the transmission oil filter (VHT)	88
6. Replacing the transmission oil filter (suction)	88
7. Changing the hydraulic tank oil	89
8. Checking the brake pedal	90

9. Checking the front brake case	90
10. Checking the brake light switch	90
EVERY 200 HOURS OR 3,000 KM	91
1. Checking the suspension arm bushings	91
EVERY 300 HOURS	91
1. Checking the tires	91
EVERY 400 HOURS	91
1. Changing the front knuckle case oil	91
2. Changing the transmission fluid	92
3. Changing the front axle case oil	92
4. Replacing the fuel filter	93
EVERY 800 HOURS	93
1. Adjusting the engine valve clearance	93
EVERY 1000 HOURS OR EVERY 1 YEAR	93
1. Replacing the air cleaner primary element and the secondary element	93
EVERY 1500 HOURS	93
1. Checking the fuel injection nozzle injection pressure	93
EVERY 2000 HOURS OR EVERY 2 YEARS	93
1. Flushing the cooling system and changing the coolant	93
2. Preparing antifreeze	95
EVERY 3000 HOURS	95
1. Checking the injection pump	95
EVERY YEAR	95
1. Checking the fuel lines	95
2. Checking the hydraulic oil line	95
3. Checking the radiator hoses and clamps	96
4. Checking the intake air line	97
5. Checking the engine breather hose	98
6. Checking the brake hose and the brake pipe	98
EVERY 2 YEARS	99
1. Changing the brake fluid	99
2. Checking the hydraulic oil line	99
3. Checking the radiator hoses and clamps	99
4. Checking the engine breather hose	99
5. Checking the brake hoses and pipes	99
EVERY 4 YEARS	99
1. Replacing the fuel hose	99
2. Replacing the brake master cylinder (inner parts)	99
3. Replacing the front brake seal	99
4. Replacing the rear brake cylinder seal	100
5. Replacing the intake air line	100
SERVICE AS REQUIRED	100
1. Bleeding the fuel system	100
2. Cleaning around the engine	100
3. Replacing a fuse	100
4. Replacing a slow blow fuse	101
5. Replacing a light bulb	101
6. Checking the hydraulic tank suction strainer	101
STORAGE	102
VEHICLE STORAGE	102
REMOVING THE VEHICLE FROM STORAGE	102
TROUBLESHOOTING	103
ENGINE TROUBLESHOOTING	103
BATTERY TROUBLESHOOTING	104
MACHINE TROUBLESHOOTING	105
OPTIONS	106

LIST OF OPTIONS	106
INDEX.....	107

SAFE OPERATION

Careful operation is your best insurance against an accident.


Read and understand this Operator's Manual carefully before operating the vehicle.

All operators, no matter how much experience they may have, should read this and other related manuals before operating the vehicle or any implement attached to it. It is the owner's obligation to instruct all operators in safe operation.

BEFORE OPERATING THE VEHICLE

1. General

- Pay special attention to the safety labels on the vehicle.
- Do not remove roll-over protective structures (ROPS) for any application and fasten seat belts at all times. This combination will reduce the risk of serious injury or death, should the vehicle be upset. If the ROPS is loosened or removed for any reason, make sure that all parts are reinstalled correctly before operating the vehicle. Never modify or repair a ROPS because welding, bending, drilling, grinding, or cutting may weaken the structure. If any structural member of the ROPS is damaged, replace the entire structure at your local Kubota dealer.

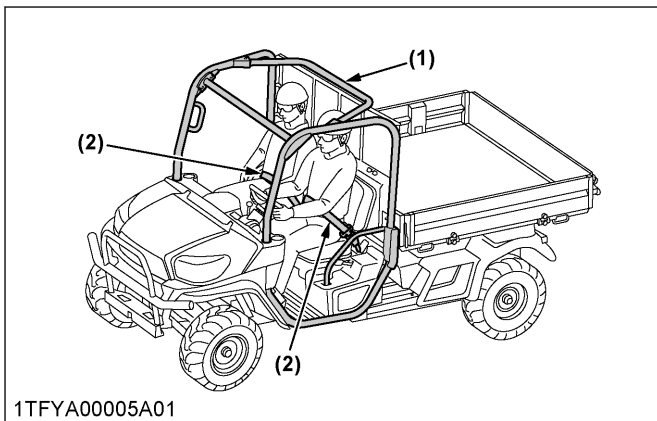

- (1) ROPS
- (2) Seat belt

- Always use the seat belts. Check the seat belts regularly and replace if frayed or damaged.
- Do not operate the vehicle or any implement attached to it while under the influence of alcohol, medication, controlled substances or while fatigued.

- Carefully check the vicinity before operating the vehicle or any implement attached to it. Check for overhead clearance which may interfere with the CAB or ROPS. Do not allow any bystanders around or near the vehicle during operation.
- Never allow anyone under age 16 or without a valid driver's license to operate this vehicle.
- Before allowing other people to use your vehicle, explain how to operate and have them read this manual before operation.
- Never wear loose, torn, or bulky clothing around the vehicle. It may catch on moving parts or controls, leading to the risk of an accident. Use additional safety items, for example helmet, safety boots or shoes, eye and hearing protection, or gloves as appropriate or required.
- This vehicle is for off road use only. Kubota does not recommend operating on public roads.
- In addition to the driver, only 1 passenger should ride in the vehicle. Minimum age for passenger is 5 years old.
- Keep all shields in place and stay away from all moving parts.
- Check brakes, speed control pedal, and other mechanical parts for improper adjustment and wear. Replace worn or damaged parts promptly. Check the tightness of all nuts and bolts regularly. (See MAINTENANCE on page 59.)
- Keep your vehicle clean. Dirt, grease, and trash build up may contribute to fires and lead to personal injury.
- Use only implements meeting the specifications listed in this manual or implements approved by Kubota. (See VEHICLE LIMITATIONS on page 25.)
- The maximum cargo capacity of this vehicle is 550 kg (1212 lbs.). Reduce cargo capacity to match operating conditions. Avoid top-heavy loading and ensure that the center-of-gravity remains as low as possible. Do not carry anything which sticks outside the cargo bed.
- Do not modify the vehicle. Modifications may affect the function of the vehicle, which may result in personal injury.
- Do not make any modifications to the engine or emission components as they may result in damage and malfunctions such as:
 - Damage to the powertrain from excessive engine output.

SAFE OPERATION

- Engine overheating caused by exceeding the engine cooling performance capabilities.
- Malfunctions of the exhaust gas aftertreatment control devices.

Modifications to the engine and its emission components may violate emission regulations and are subject to fines and penalties. Kubota and its affiliates are not liable for any damage, malfunction or accidents caused by modifications to the engine or emission components.

- Do not carry small children on lap.

OPERATING THE VEHICLE

Operator safety is a priority. Safe operation, specifically with respect to overturning hazards, entails understanding the equipment and environmental conditions at the time of use.


Some prohibited uses which can affect overturning hazards include traveling and turning with implements and loads carried too high. This manual sets forth some of the obvious risks, but the list is not, and cannot be, exhaustive. It is the operator's responsibility to be alert for any equipment or environmental condition that could compromise safe operation.

1. Starting the vehicle

- Always sit in the operator's seat when starting the engine or operating levers or controls.
- Before starting the engine, make sure that all levers are in their neutral positions, that the parking brake is engaged, and that the hydraulic outlet (if equipped) is off. And make sure that the engine hand throttle (if equipped) is in its idle engine speed position.
- Do not start the engine by shorting across starter terminals or bypassing the safety start switch. The vehicle may start in gear and move if normal starting circuitry is bypassed.
- Be sure that the operator (and passenger) are properly positioned and seat belts are appropriately fastened.
- Do not operate or idle the engine in a non-ventilated area. Carbon monoxide gas is colorless, odorless, and deadly.

2. Operating the vehicle

- Always wear the seat belt when operating the unit.
- Do not wear headphones while operating.
- Pull only from the trailer hitch (if equipped). Never hitch to any other point except trailer hitch; such arrangements will increase the risk of serious personal injury or death due to a vehicle upset.

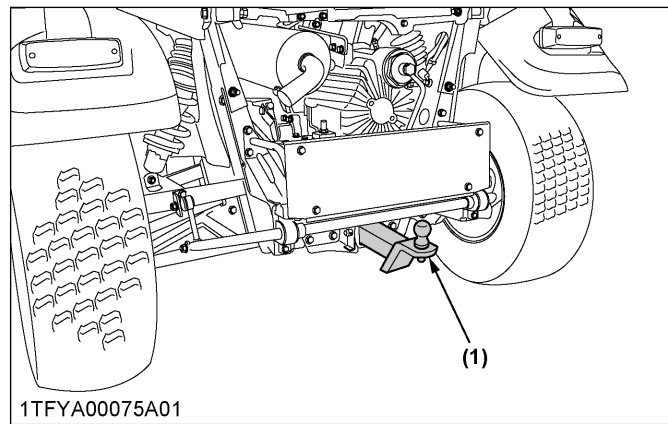

(1) Trailer hitch (if equipped)

- Keep all shields and guards in place. Replace any that are missing or damaged.
- Avoid sudden starts. To avoid rollovers, slow down when turning, on uneven ground, and before stopping. While increasing engine speed with the engine hand throttle (if equipped), operate the speed control pedal with great care to avoid sudden starts.
- The vehicle cannot turn with the differential locked and attempting to do so could be dangerous.
- Do not operate near ditches, holes, embankments, or other ground surface features which may collapse under the vehicle's weight. The risk of vehicle upset is even higher when the ground is loose or wet.
- Watch where you are going at all times. Watch for and avoid obstacles. Be alert at row ends, near trees, and other obstructions.
- When working in groups, always let the others know what you are going to do before you do it.
- Never try to get on or off a moving vehicle.
- Do not stand between vehicle and trailer unless parking brake is applied.
- Operate in a manner consistent with loading and weight configuration and operating terrain.

3. Safety for children

Tragedy can occur if the operator is not alert to the presence of children. Children generally are attracted to vehicles and the work they do.

- Never assume that children will remain where you last saw them.
- Keep children out of the work area and under the watchful eye of another responsible adult.
- Be alert and shut your vehicle down if children enter the work area.
- Never carry children in the cargo bed. There is no safe place for them to ride. No person under the age of 5 may ride as a passenger in this vehicle. A passenger under 5 years of age requires special restraints which are not available with this vehicle.

- Never allow children to operate the vehicle even under adult supervision.
- Never allow children to play on the vehicle or on the implement.
- Use extra caution when backing up. Look behind and down to make sure area is clear before moving.
- Whenever possible, park your vehicle on a firm, flat, and level surface. If this is not possible, park it across the slope. Set the parking brake(s), lower the implements to the ground, remove the key from the ignition and chock the wheels.

4. Operating on slopes

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. All slopes require extra caution.

- Travel straight up or down hill.
- Reduce load when operating on hilly or over rough terrain.
- Keep front wheels straight at crest of hill or going over bumps.
- Do not stop or start suddenly when going uphill or downhill. Be especially cautious when changing direction on slopes.
- If the vehicle stops or loses power going up a hill, lock parking brake to hold the vehicle on slope. Maintain direction of travel and release brake slowly. Back straight downhill while maintaining control. Do not turn the vehicle sideways. The vehicle is more stable in a straight forward or rearward position.
- When riding on soft terrain, turn front wheels slightly uphill to keep the vehicle on a straight line across the hill.
- If the vehicle begins to tip, turn front wheels downhill to gain control before proceeding.
 - To avoid upsets, always back up steep slopes. If you cannot back up the slope or if you feel uneasy on it, do not operate on it. Stay off slopes too steep for safe operation.
 - Driving forward out of a ditch, mired condition or up a steep slope increases the risk of a vehicle to be upset backward. Always back out of these situations. Extra caution is required with 4-wheel drive mode because the increased traction can give the operator false confidence in the vehicle's ability to climb slopes.
 - Keep all movement on slopes slow and gradual. Do not make sudden changes in speed, direction or apply brake and make sudden motions of the steering wheel.
 - Special attention should be made to the weight and location of implements and loads as such will affect the stability of the vehicle.

5. Operation in inclement conditions

- Only operate during daylight or with good artificial light.
- Operate vehicle in an open, unobstructed area.
- Use helmet and/or protective gear as appropriate or required for the operating conditions.
- Reduce speed according to trail, terrain, and visibility conditions.
- Always drive within the limit of visibility. Slow down near crest of hill until getting a clear view of the other side.
- Stay alert for holes, rocks, and other hidden hazards in the terrain.
- Never cross any body of water where depth may be unknown to the operator (deep water is considered anything in excess the bottom edge of the axle cap). Choose a course within the waterway where both banks have a gradual incline. Cross at a point known to be safe.

6. Driving the vehicle at high speeds

- Check the front wheel engagement. The braking characteristics are different between 2 and 4 wheel drive. Be aware of the difference and use carefully.
- Always slow the vehicle down before turning. Turning at high speed may tip the vehicle over.
- Turn the headlights on.
- Drive at speeds that allow you to maintain control at all times.
- Do not apply the differential lock while traveling at high speeds. The vehicle may run out of control.
- Avoid sudden motions of the steering wheel as they can lead to a dangerous loss of stability. The risk is especially great when the vehicle is traveling at high speeds.

7. Other miscellaneous

- Clean the platform if dirty and remove any debris from around foot controls.
- Always keep both hands on the steering wheel.
- Always keep arms and legs inside the operating compartment.
- Never operate the vehicle while standing.
- Do not tow a cart with any riders on it.
- Never attempt wheelies, jumps, or other stunts.
- Never operate with a person in the cargo bed.

HAULING LOADS IN THE CARGO BED


- Allow no riders in cargo bed or anywhere else.
- Do not overload the vehicle. Securely anchor all loads.

SAFE OPERATION

- Reduce cargo capacity when operating on rough or hilly terrain.
- Position cargo toward the front and center of the cargo bed and as evenly distributed as possible.
- Securely anchor all loads in the cargo bed. Braking could shift the load and affect vehicle stability.
- Never operate vehicle with the cargo bed raised.
- Operate cargo bed dump with the vehicle stationary and the parking brake locked. Do not dump while moving.
- Operate hydraulic dump on level ground only.
- Operate dump from operator's seat only.
- Do not place hands or body under the cargo bed when lowering bed.

OPERATING HYDRAULIC OUTLET DRIVEN EQUIPMENT (IF EQUIPPED)

- Before installing or using hydraulic outlet driven equipment, read the manufacturer's manual and review the safety labels attached to the equipment.
- Wait until all moving components have completely stopped before getting off the vehicle, connecting, disconnecting, adjusting, cleaning, or servicing any hydraulically driven equipment.
- When operating stationary hydraulically driven equipment, always apply the vehicle parking brake and place chocks behind and in front of the rear wheels. Stay clear of all rotating parts. Never step over rotating parts.

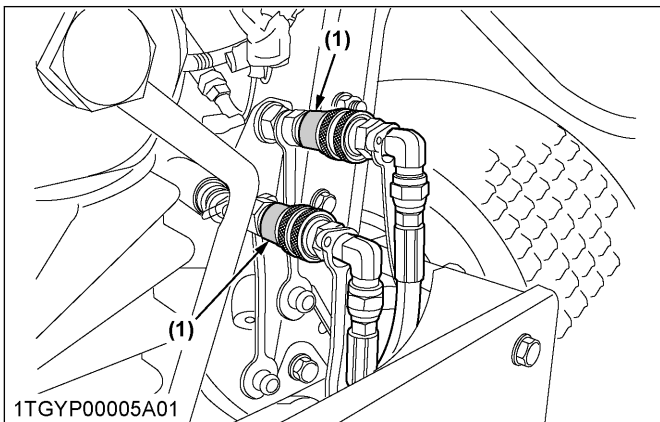


(1) Hydraulic outlet (if equipped)

PARKING THE VEHICLE

- Make sure that the hydraulic outlet is off (if equipped), lower all implements to the ground, place all control levers in their neutral positions, set the parking brake, stop the engine, and remove the key.

- Make sure that the vehicle has come to a complete stop before dismounting.
- Avoid parking on steep slopes, if at all possible park on a firm and level surface; if not, park across a slope with chock the wheels and always with attachment on the ground. Failure to comply with this warning may allow the vehicle to move and could cause injury or death.

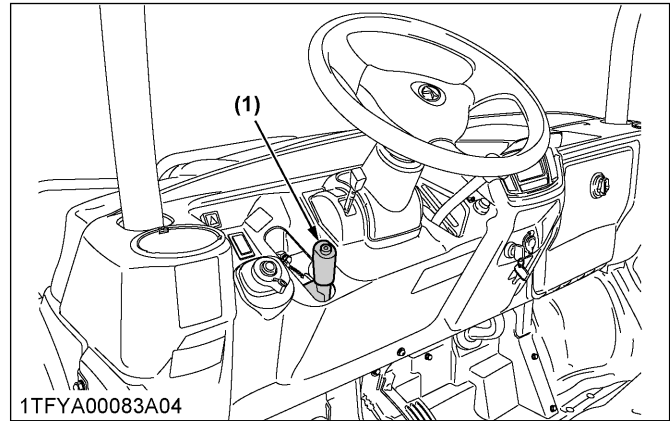

(1) Parking brake lever

TRANSPORTING THE VEHICLE

- Disengage power to attachment(s) when transporting or not in use.
- Do not tow this vehicle. Use a suitable truck or trailer when transporting on public roads.
- Use extra care when loading or unloading the vehicle into a trailer or truck.
- Tie down in accordance with all local and federal regulations.


SERVICING THE VEHICLE

Before servicing the vehicle, park it on a firm, flat and level surface, set the parking brake, lower all implements to the ground, place the range gear shift lever in neutral, stop the engine and remove the key.

- Allow the vehicle time to cool off before working on or near the engine, muffler, or radiator.
- Always stop the engine before refueling. Avoid spills and overfilling.
- Do not smoke when working around battery or when refueling. Keep all sparks and flames away from battery and fuel tank. The battery presents an explosive hazard, because it gives off hydrogen and oxygen especially when recharging.
- Before "Jump starting" a dead battery, read and follow all of the instructions. (See JUMP STARTING THE ENGINE on page 32.)
- Keep first aid kit and fire extinguisher handy at all times.

! SAFE OPERATION


- Disconnect the battery's ground cable before working on or near electric components.
- To avoid the possibility of battery explosion, do not use or charge the refillable type battery if the fluid level is below the **[LOWER]** (lower limit level) mark. Check the fluid level regularly and add distilled water as required so that the fluid level is between the **[UPPER]** and **[LOWER]** marks.
- To avoid sparks from an accidental short circuit, always disconnect the battery's ground cable (-) first and reconnect it last.

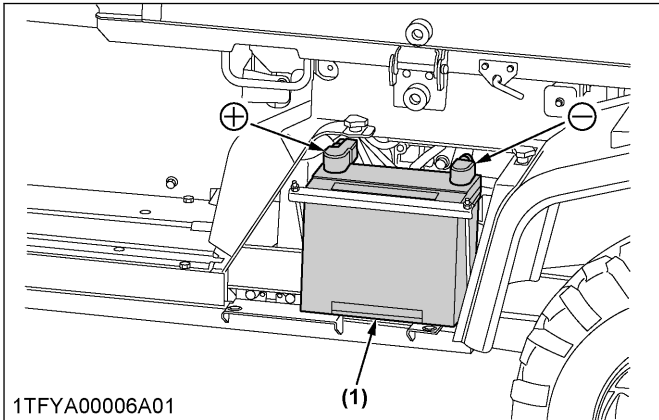

1TFYA00006A01

(1) Battery


- Do not remove the radiator cap while coolant is hot. When cool, slowly rotate the cap to the first stop and allow sufficient time for excess pressure to escape before removing the cap completely. This vehicle has a coolant recovery tank, add coolant or water to the tank, not the radiator. (See Checking the coolant level on page 74.)
- Do not attempt to mount a tire on a rim. This should be done by a qualified person with the proper equipment.
- Always maintain the correct tire pressure. Do not inflate tires above the recommended pressure shown in the Operator's Manual.

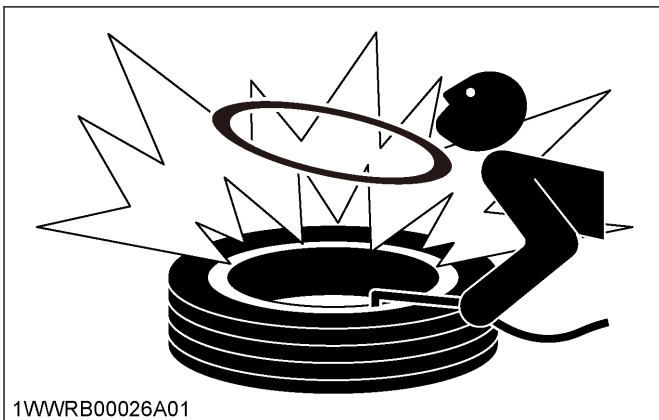

1WWRB00026A01


- Securely support the vehicle when changing wheels.
- Make sure that wheel bolts and nuts have been tightened to the specified torque.

- Do not work under any hydraulically supported devices. They can settle, suddenly leak down, or be accidentally lowered. If it is necessary to work under the vehicle or any vehicle elements for servicing or adjustment, securely support them with stands or suitable blocking beforehand.
- Escaping hydraulic fluid under pressure has sufficient force to penetrate skin causing serious personal injury. Before disconnecting hydraulic lines, release all residual pressure. Before applying pressure to the hydraulic system, make sure that all connections are tight and that all lines, pipes, and hoses are free of damage.

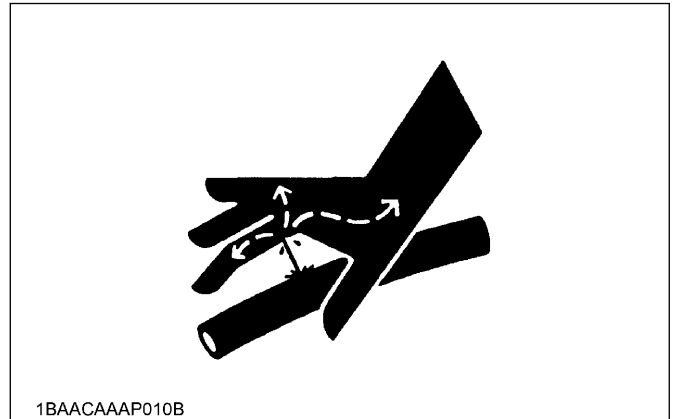

1BAACAAAP010B

- Fluid escaping from pinholes may be invisible. Do not use hands to search for suspected leaks; use a piece of cardboard or wood. Use of safety goggles or other eye protection is also highly recommended. If injured by escaping fluid, see a medical doctor at once. This fluid will produce gangrene or severe allergic reaction.

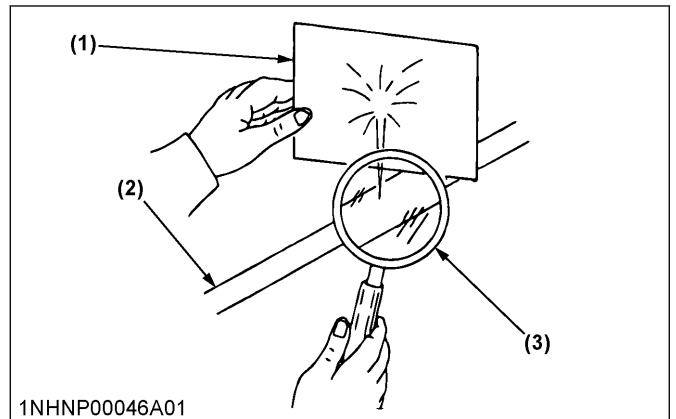

1NHNP00046A01

- (1) Cardboard
- (2) Hydraulic line
- (3) Magnifying glass


- Waste products such as used oil, fuel, hydraulic fluid, and batteries, can harm the environment, people, pets and wildlife. Please dispose properly and in accordance with all local and federal regulations. See your local recycling center or Kubota dealer to learn how to recycle or dispose of waste products.

SAFE OPERATION

SAFETY LABELS

(1) Part No. K7591-6541-1

WARNING

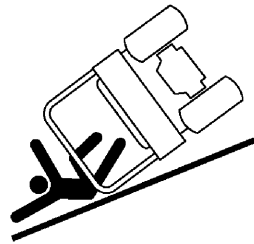

TO AVOID PERSONAL INJURY OR DEATH:

1. Do not remove Roll-Over Protective Structures (ROPS) for any application.
2. Do not modify or repair a ROPS because welding, grinding, drilling or cutting any portion may weaken the structure.

(2) Part No. K7591-6526-1

WARNING



TO AVOID PERSONAL INJURY OR DEATH:
Always fasten your seat belt.

WARNING

TO AVOID PERSONAL INJURY DUE TO LOSS OF STEERING CONTROL:
Do not depress the differential lock pedal at high speed.

(3) Part No. K7591-6528-2

WARNING

TO AVOID PERSONAL INJURY:
Do not operate the vehicle with the front hood open. Impaired visibility of the operator may cause loss of vehicle control. Latch the hood securely before operating the vehicle.

(4) Part No. K7621-6538-1

WARNING



NO STEP

(5) Part No. K7921-6523-1

WARNING

TO AVOID PERSONAL INJURY:


1. Do not carry passengers in cargo bed.
2. Do not travel with the cargo bed in raised position.

(6) Part No. K7591-6542-1



WARNING

TO AVOID PERSONAL INJURY:
Use the Safety Support or Propping Rod when working near a raised cargo bed or attachment.

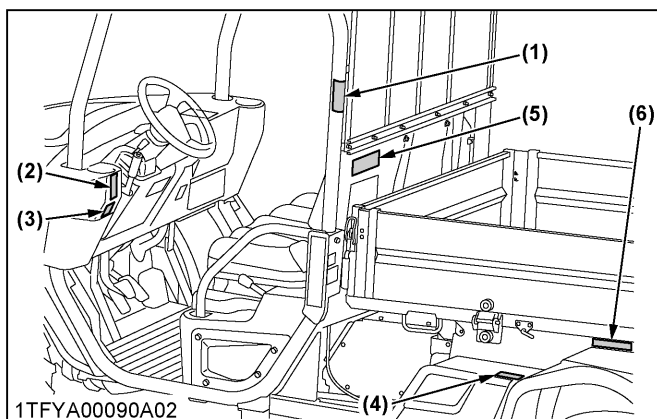

1TFYA00016A01enUS

! SAFE OPERATION

(1) Part No. K7591-6524-1 for DOT-3 brake fluid

! WARNING

TO AVOID PERSONAL INJURY:

1. Use brake fluid (DOT-3) only. Other oil types will ruin synthetic resin or rubber installed in brake system components, and cause brake failure.
2. If brake fluid is spilled on power steering hose, wash off with water immediately. Brake fluid quickly ruins synthetic resin or rubber hoses.

Part No. K7431-6584-1 for DOT-4 brake fluid

! WARNING

TO AVOID PERSONAL INJURY OR DEATH:

1. Use brake fluid (DOT-4) only. Other oil types will ruin synthetic resin or rubber installed in brake system components, and cause brake failure.
2. If brake fluid is spilled on power steering hose, wash off with water immediately. Brake fluid quickly ruins synthetic resin or rubber hoses.

(2) Part No. K7591-6544-2

! WARNING

TO AVOID PERSONAL INJURY:
Attach pulled or towed loads to the drawbar only.

MAX. 8.9 INCH
(225 MM)

(3) Part No. K7591-6521-2

! WARNING

TO AVOID PERSONAL INJURY:

1. Read and understand the operator's manual before operation.
2. Never allow anyone under age 16 or without a valid driver's license to operate this vehicle.
3. Before allowing other people to use the vehicle, have them read the operator's manual.
4. This vehicle is for off road use only. Never operate on a public road, as such operation could be a violation of the law and may be hazardous.
5. Wear safety gear, including helmet and eye protection, as appropriate.
6. Check the tightness of all nuts and bolts regularly.
7. In addition to the driver, only one passenger can be carried. Minimum age for passenger is five years old.
8. Before starting the engine, make sure that everyone is at a safe distance from the vehicle and the hydraulic outlet is off (if equipped).
9. Do not operate the vehicle under the influence of drugs or alcohol.
10. Keep all shields in place and stay away from all moving parts.
11. Slow down for turns, or rough terrain.
12. Before getting off from the vehicle, apply the parking brake, stop the engine and remove the key.
13. Do not operate unless driver and passenger are properly positioned and seat belts appropriately fastened.

(4) Part No. K7591-6527-1


! WARNING

TO AVOID PERSONAL INJURY OR DEATH:
Always fasten your seat belt.


(5) Part No. K7591-6548-1



- Hot surface-Burn to finger or hand
- Do not touch oil cooler while surface is hot.

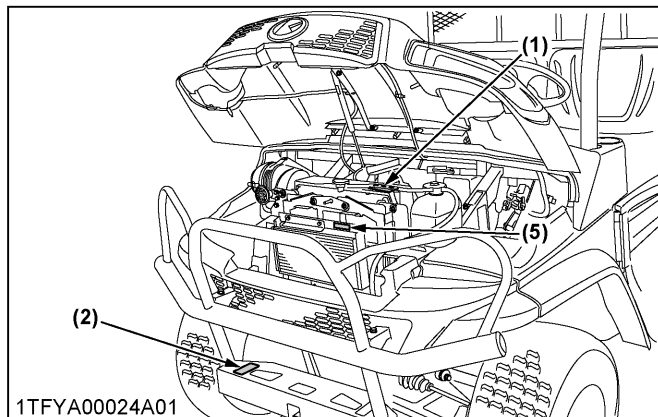

1TFYA00017A01enUS

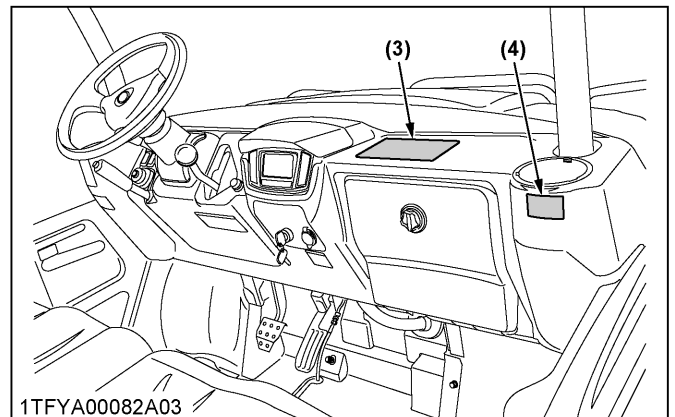


SAFE OPERATION

(1) Part No. K7731-6596-1

California Proposition 65

WARNING

Engine exhaust, some of its constituents, certain vehicle components and fluids, contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

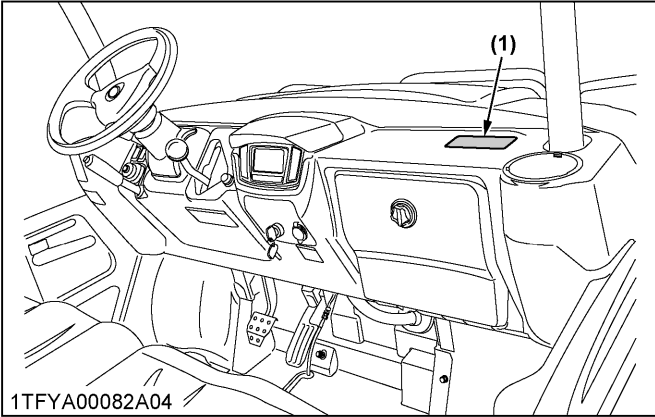

1TFYA00018A01enUS

(1) Part No. K7591-6546-3


- Hot surface – burn to finger or hand
- Do not touch muffler while surface is hot.


	<p>! WARNING</p> <p>TO AVOID PERSONAL INJURY:</p> <ol style="list-style-type: none">1. Before touching any part of an exhaust system, be absolutely sure that it has had sufficient time to cool.2. Always wear safety goggles and a (face)mask.3. The particulate matter contained in the muffler contains chemicals that are harmful to people, animal and marine life.4. If you are unable to do this work, have it done by your KUBOTA Dealer.
---	--

◆ Maintenance

The swirl type spark arrester should be cleaned after every 100 hours of use.

1. Set vehicle in an open area away from combustible materials and on flat surface.
2. Apply parking brake and shift range gear shift lever into N(neutral) position.
3. Remove the drain plug located on the bottom of the muffler body.
4. Start engine and raise and lower engine revolution while tapping on the muffler with a rubber mallet until the carbon particles are purged from the muffler.
5. Stop the engine.
6. Reinstall the drain plug.
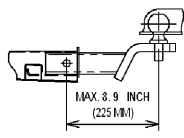
<p>! WARNING</p> <p>TO AVOID PERSONAL INJURY:</p> <p>Attach pulled or towed loads to the drawbar only.</p>	1
 <p>MAX. 8.9 INCH (225 MM)</p>	2

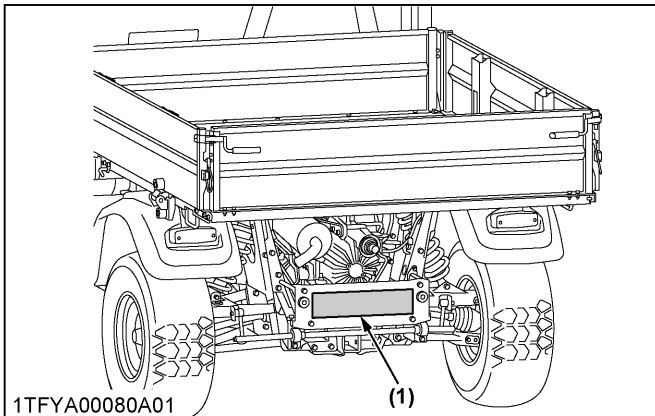

1TFYA00019A01enUS

SAFE OPERATION

(1) Part No. K7591-6542-1



(2) Part No. K7621-6551-1



(3) Part No. K7621-6532-1




- Be careful not to get your fingers and hands injured by the engine cooling fan.
- Be careful not to get your hands and arms caught.
- Do not detach the safety cover while the engine is running.

(4) Part No. K7621-6552-1



- Hot surface-Burn to finger or hand
- Do not touch oil tank while surface is hot.

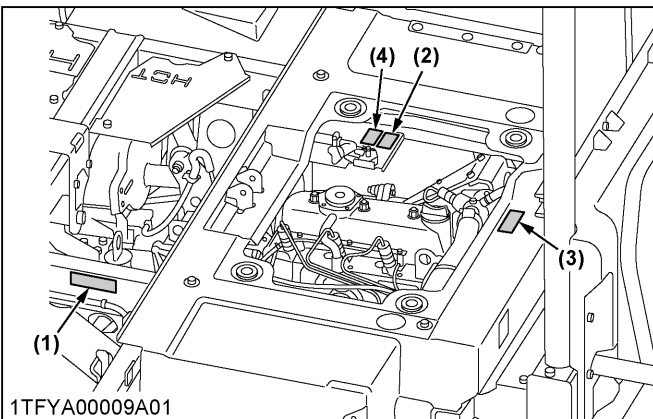

1TFYA00020A01enUS

! SAFE OPERATION

(1) Part No. K7591-6534-4




(2) Part No. K7591-6547-1



(3) Part No. K7591-6533-1




(4) Part No. K7591-6522-1




! DANGER

TO AVOID POSSIBLE INJURY OR DEATH FROM A MACHINE RUNAWAY:

1. Do not start engine by shorting across starter terminals or bypassing the safety start switch. The vehicle may start in gear and move if normal starting circuitry is bypassed.
2. Start engine only from operator's seat with range shift lever in neutral position and hydraulic outlet off (if equipped).

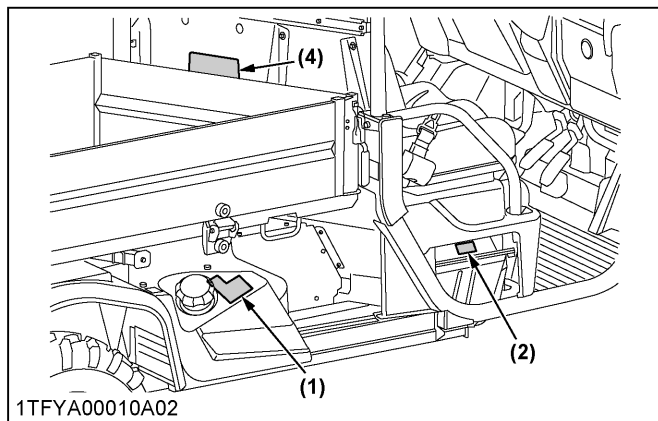



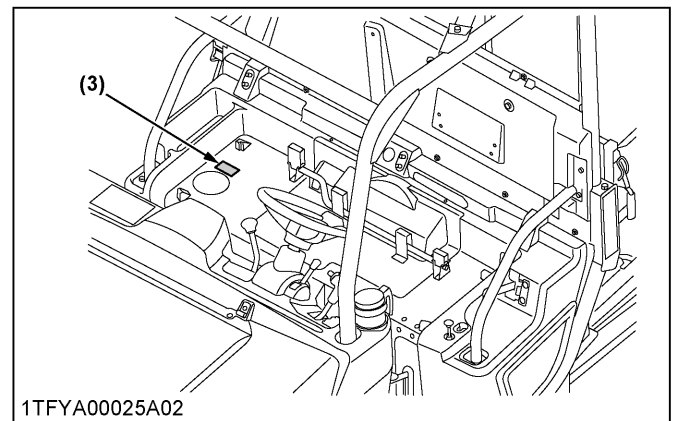



1TFYA00021A01enUS



⚠️ SAFE OPERATION

(1) Part No. K7731-6114-3

 FLAMMABLES	 SHIELD EYES	 KEEP OUT OF THE REACH OF CHILDREN	<p>DANGER EXPLOSIVE GASES CIGARETTES, FLAMES OR SPARKS COULD CAUSE BATTERY TO EXPLODE. ALWAYS SHIELD EYES AND FACE FROM BATTERY. DO NOT CHARGE OR USE BOOSTER CABLES OR ADJUST POST CONNECTIONS WITHOUT PROPER INSTRUCTION AND TRAINING.</p> <p>POISON CAUSES SEVERE BURNS CONTAINS SULFURIC ACID. AVOID CONTACT WITH SKIN, EYES OR CLOTHING. IN EVENT OF ACCIDENT FLUSH WITH WATER AND CALL A PHYSICIAN IMMEDIATELY.</p> <p>KEEP OUT OF REACH OF CHILDREN</p> <p>California Proposition 65 WARNING : This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.</p>
 CAUTIOUS OF SULFURIC ACID	 READ INSTRUCTION MANUAL CAREFULLY	 EXPLOSIVE	

(2) Part No. K7591-6531-1

⚠️ WARNING



Operation of this equipment may create sparks that can start fires around dry vegetation. A spark arrester may be required. The operator should contact local fire agencies for laws or regulations relating to fire prevention requirements.

(3) Part No. K7591-6583-3

⚠️ WARNING

TO AVOID PERSONAL INJURY FROM CRUSHING:

1. Do not utilize the lever lock for machine maintenance or repair.
2. The lever lock is in order to prevent accidental actuation.

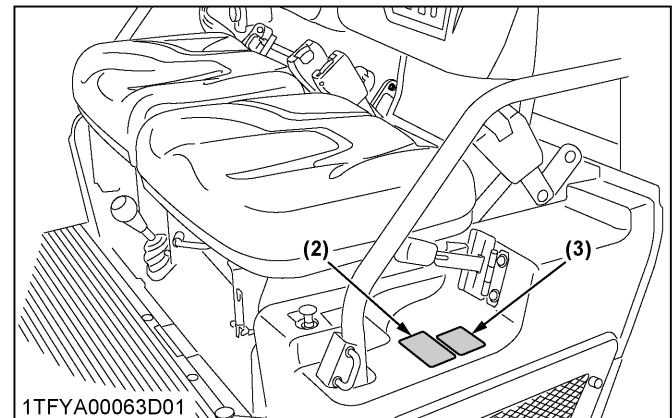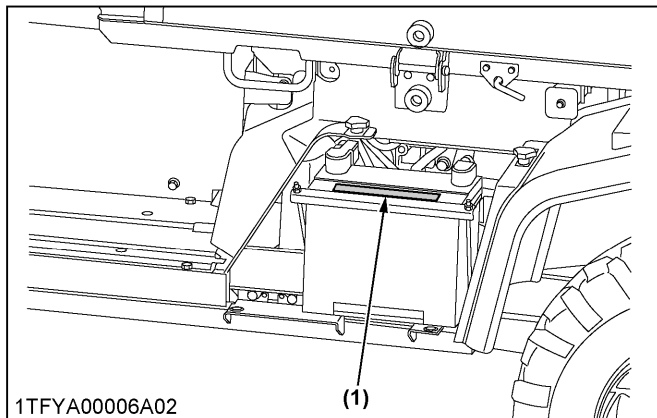

1TFYA00022A01enUS

CARE OF SAFETY LABELS

- Keep safety labels clean and free from obstructing material.
- Clean safety labels with soap and water, dry with a soft cloth.
- Replace damaged or missing safety labels with new labels from your local Kubota dealer.
- If a component with safety label(s) affixed is replaced with new part, make sure new label(s) is (are) attached in the same location(s) as the replaced component.
- Mount new safety labels by applying on a clean dry surface and pressing any bubbles to outside edge.

SERVICING OF THE VEHICLE

DEALER SERVICE

Your dealer has knowledge of your new vehicle and has the desire to help you get the most value from it. After reading this manual thoroughly, you will find that you can do some of the regular maintenance by yourself.

However, when in need of parts or major service, see your Kubota dealer.



For service, contact your Kubota dealer.

When in need of parts, be prepared to give your dealer the product identification number (PIN), and the serial number of the engine, transmission and ROPS.


Locate the PIN and serial numbers now and record them in the space provided.

Product identification number		
Date of purchase		
Name of dealer		
	Type	Serial number
Vehicle		—
Engine		
Transmission		
ROPS		

To be filled in by purchaser

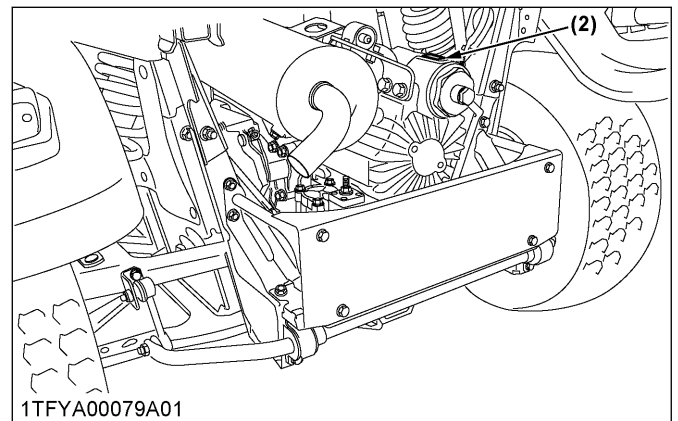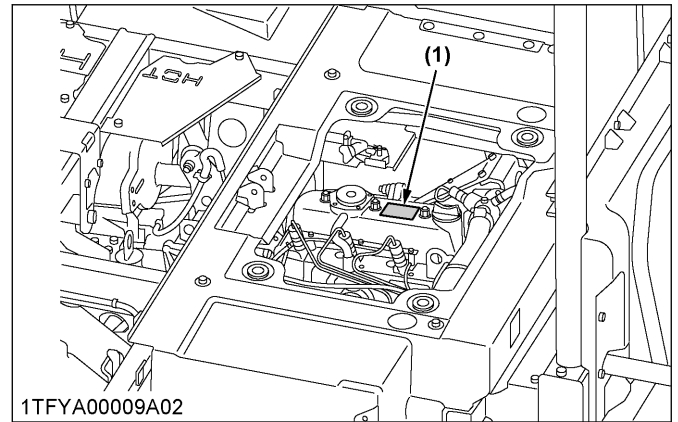

- (1) Engine serial number
- (2) Transmission assy serial number

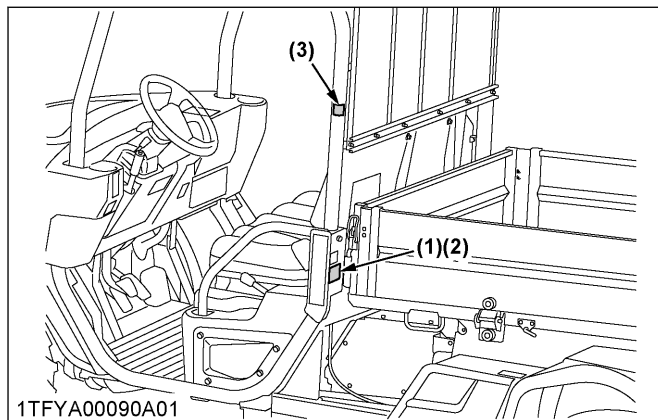

- (1) Vehicle identification plate
- (2) Product identification number
- (3) ROPS serial number

WARRANTY OF THE VEHICLE

This vehicle is warranted under the **Kubota Limited Express Warranty**, a copy of which may be obtained from your selling dealer. No warranty shall, however, apply if the vehicle has not been handled according to the instruction given in the Operator's Manual even if it is within the warranty period.

SCRAPPING THE VEHICLE

To put the vehicle out of service, correctly follow the local rules and regulations of the country or territory where you scrap it. If you have questions, contact your local Kubota dealer.

REPORTING SAFETY CONCERNS IN CANADA

To report a safety concern relating to your vehicle, you may contact Transport Canada at the following:

SERVICING OF THE VEHICLE

Telephone:

819-420-4300 (Ottawa-Gatineau area or
internationally)

Toll free: 1-800-333-0510 (in Canada)

Online:

<http://www.tc.gc.ca/recalls> (ENGLISH)

<http://www.tc.gc.ca/rappels> (FRENCH)

SPECIFICATIONS

SPECIFICATION TABLE

Model			RTV-X1130		
			Worksite/Orange	Worksite/Camo	
Engine	Make		D1105		
	Type		3 cylinders, 4-cycle, diesel, OHV		
	Displacement	L (cu. in.)	1.123 (68.53)		
	Gross power *1	kW (HP)	18.5 (24.8)		
	Rated revolution	rpm	3000		
	Low idling revolution	rpm	1400 to 1500		
Fuel capacity		L (U.S.gals)	30 (7.9)		
Transmission			Continuously variable hydro transmission (VHT)		
Wheels, drive system			4, rear 2WD or 4WD		
Differential lock			Standard; foot operated with mechanical holder		
Gear selection			Hi-low range forward, neutral, reverse		
Brakes	Front/rear		Wet disk brake		
	Parking brake		Rear wheel, hand lever		
Steering			Hydrostatic power		
Suspension	Front		Independent, dual A-Arm type		
	Rear				
Dimensions	Length		mm (in.)	3925 (154.5)	
	Width		mm (in.)	1605 (63.2)	
	Height, overall		mm (in.)	2025 (79.7)	
	Front tread centers		mm (in.)	1280 (50.4) HDWS, ATV	
	Rear tread centers		mm (in.)		
	Wheelbase		mm (in.)	2495 (98.2)	
	Ground clearance	front axle		mm (in.)	293 (11.5)
		rear axle		mm (in.)	257 (10.1)
Turning diameter		m (ft)	10.4 (34.2)		
Max. rolling weight (towing capacity)			kg (lbs.)	Rear: 590 (1300), Front: 295 (650)	
Payload capacity			kg (lbs.)	754 (1662)	
Weight			kg (lbs.)	1060 (2337)	
Gross vehicle weight rating (GVWR)			kg (lbs.)	1814 (3999)	
Cargo bed	Width		mm (in.)	1384 (54.5)	
	Length		mm (in.)	1837 (72.3)	

(Continued)

Model			RTV-X1130	
			Worksite/Orange	Worksite/Camo
Cargo bed	Depth	mm (in.)	294 (11.6)	
	Volume	m ³ (cu.ft.)	0.74 (26.4)	
	Bed height (unloaded)	mm (in.)	924 (36.4)	
	Cargo bed capacity	kg (lbs.)	550 (1212)	
Sound level, operator ear		db (A)	85.5	
Tires	Front		25 × 10-12 ATV, 6PLY 25 × 10-12 HDWS, 6PLY	
	Rear		25 × 10-12 ATV, 6PLY 25 × 10-12 HDWS, 6PLY	
Tilt steering wheel			Std.	
Seat belt			2 point type	
Front deluxe guard			Std.	—
Front deluxe guard with light guard			—	Std.
Body color			Orange	Camo
Bed lift			Std.	
Speedometer			Std.	
Seat slide			Std.	

*1 SAE J1995. The engine output value 18.2 kW indicated on the EPA exhaust gas label is the ISO 8178 net value without a cooling fan.

NOTE :

- **The company reserves the right to change the specifications without notice.**
- **The values in “Ground clearance” and “Weight” are those of the machine equipped with the tires in the previous table.**

TRAVELING SPEEDS


Range gear shift lever	Gear position		Traveling speed
			RTV-X1130
	Low	km/h (mph)	24 (15)
High	km/h (mph)	40 (25)	
Reverse	km/h (mph)	27 (17)	

VEHICLE LIMITATIONS

The Kubota vehicle has been thoroughly tested for proper performance with implements sold or approved by Kubota. Use with following implements may result in malfunctions or failures of the vehicle, damage to other property and injury to the operator or others.

- Implements which are not sold or approved by Kubota
- Implements which exceed the maximum specifications listed as follows, or
- Implements which are otherwise unfit for use with the Kubota vehicle

Any malfunctions or failures of the vehicle resulting from use with improper implements are not covered by the warranty.

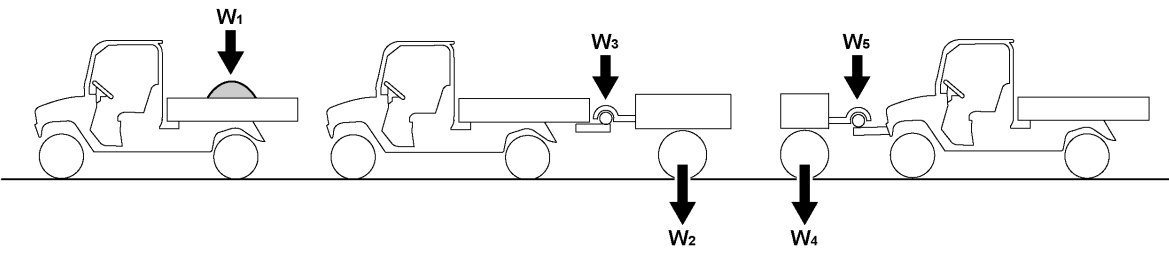Cargo bed	<p>Max. cargo bed loading weight (W1) should not exceed "CBC" or "PCBL". Cargo bed capacity (CBC): 550 kg (1212 lbs.) Permissible cargo bed load (PCBL) is determined by the following calculus equation.</p> <p>PCBL = PC - (operator + passenger + opt. + acc. + cabin) weight</p> <ul style="list-style-type: none"> • PC: payload capacity • opt.: option • acc.: accessory (including tongue weights) • cabin [if equipped]: 125 kg (275 lbs.)
Rear trailer hitch	<p>Max. rolling weight (W2): 590 kg (1300 lbs.) *1 Max. tongue weight (W3): 50 kg (110 lbs.)</p>
Front trailer hitch	<p>Max. rolling weight (W4): 295 kg (650 lbs.) *2 Max. tongue weight (W5): 50 kg (110 lbs.)</p>
 <p>The diagram illustrates three vehicle configurations with weight indicators: <ul style="list-style-type: none"> W1: A downward arrow pointing to a load on the cargo bed of a vehicle. W2: A downward arrow pointing to the rear axle of a vehicle towing a trailer. W3: A downward arrow pointing to the tongue of a trailer being towed by a vehicle. W4: A downward arrow pointing to the front axle of a vehicle being towed by a trailer. W5: A downward arrow pointing to the tongue of a trailer towing a vehicle. </p> <p>1TFYA00026A01</p>	
Payload capacity	754 kg (1662 lbs.)

*1 Including W3


*2 Including W5

Rolling weight: trailer weight + trailer cargo load

- Specifications previously mentioned are based on level ground condition.


INSTRUMENT PANEL AND CONTROLS

LOCATION OF PARTS

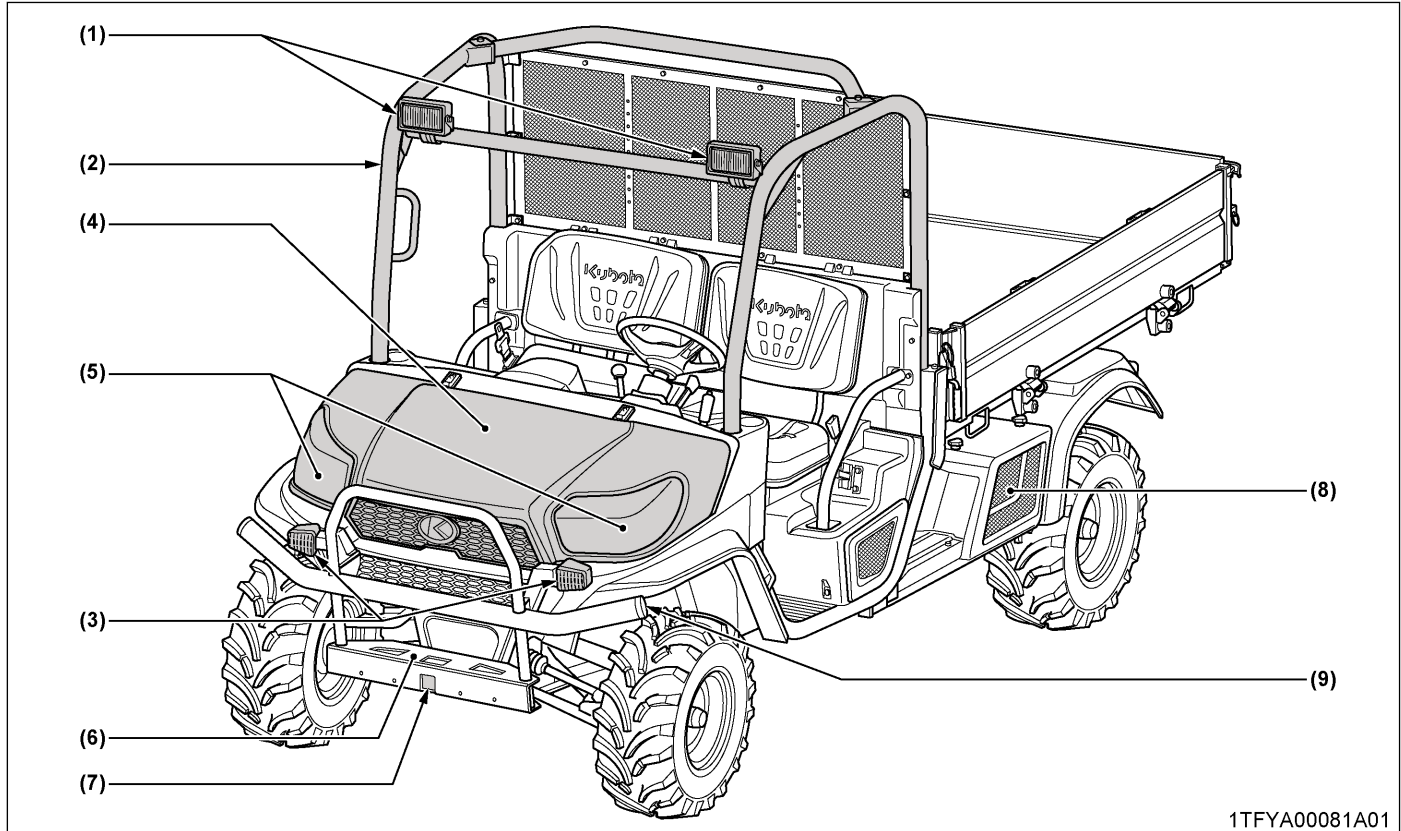



1TFYA00081A01

(1) Front work light (if equipped)	36	(6) Winch mount bracket	57
(2) ROPS		(7) Front trailer hitch bracket	57
(3) Hazard / Turn signal light (if equipped)	35	(8) Battery	82
(4) Front hood	69	(9) Front guard	
(5) Headlights	35		

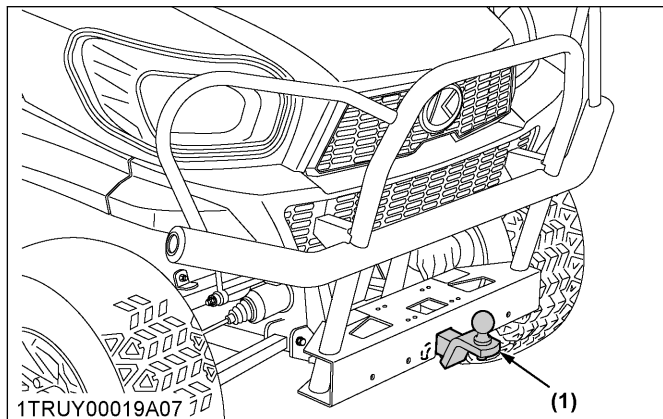


(1) Front trailer hitch (if equipped)	57
---	----

Front panel viewed from the passenger side

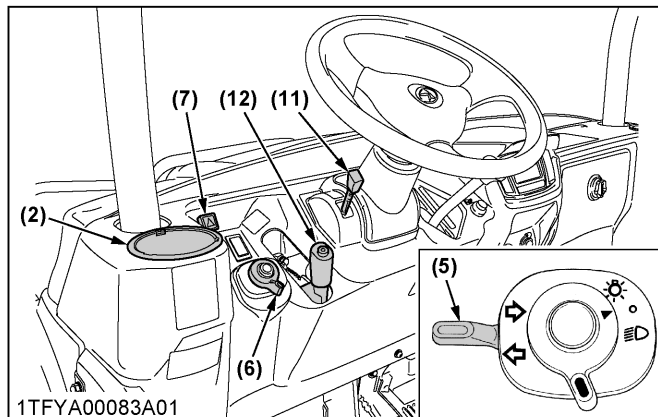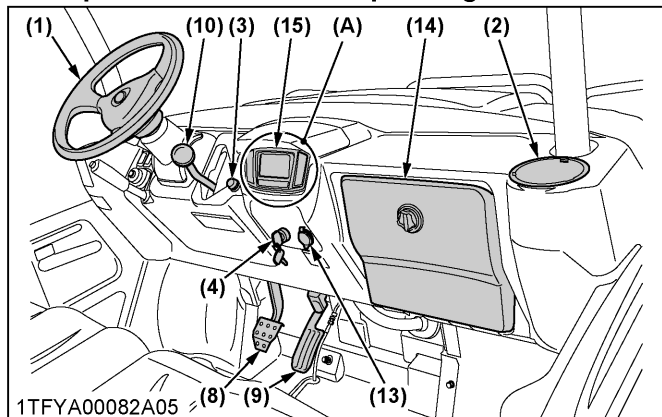


Front panel viewed from the passenger side:
Enlarged view (A)


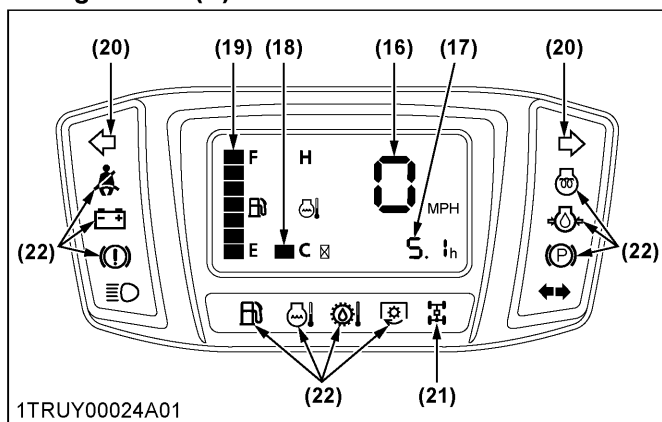


1TFYA00070A01enUS

(1) Steering wheel	(13) 12 V accessory plug	41
(2) Cup holder	(14) Glove box cover	42
(3) Horn button	(15) Liquid crystal display	39
(4) Key switch	(16) Speedometer	41
(5) Turn signal light switch (if equipped)	(17) Hourmeter	40
(6) Head light switch	(18) Coolant temperature gauge	40
(7) Hazard light switch (if equipped)	(19) Fuel gauge	40
(8) Brake pedal	(20) Turn signal indicator (if equipped) / Hazard signal indicator (if equipped)	36
(9) Speed control pedal	(21) 4WD indicator	38
(10) Range gear shift lever	(22) Easy Checker™	39
(11) Tilt lever	(A) Enlarged view (A)	
(12) Parking brake lever		

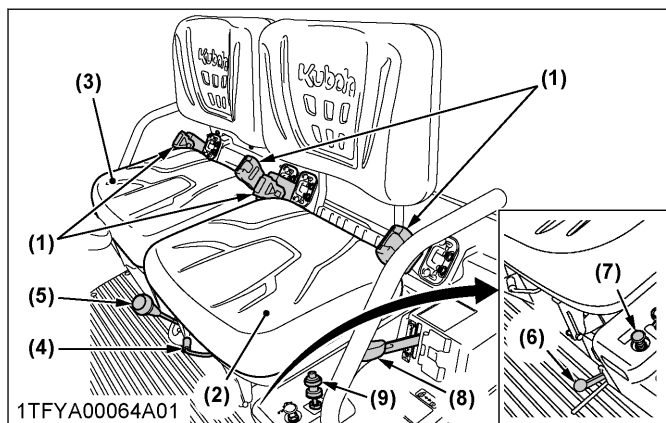

(1) Seat belts	34
(2) Operator's seat	69
(3) Passenger seat	69
(4) Seat slide lever	35
(5) 4WD lever	38
(6) Differential lock pedal	42
(7) Differential lock holder	42
(8) Hydraulic lift cylinder lever or Hydraulic outlet lever (if equipped)	51
(9) Engine hand throttle (if equipped)	

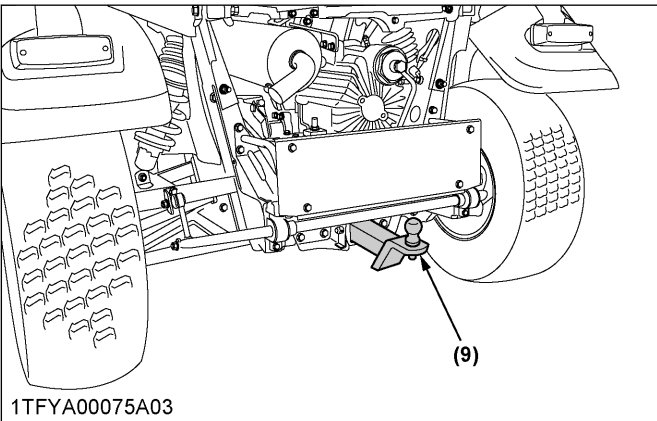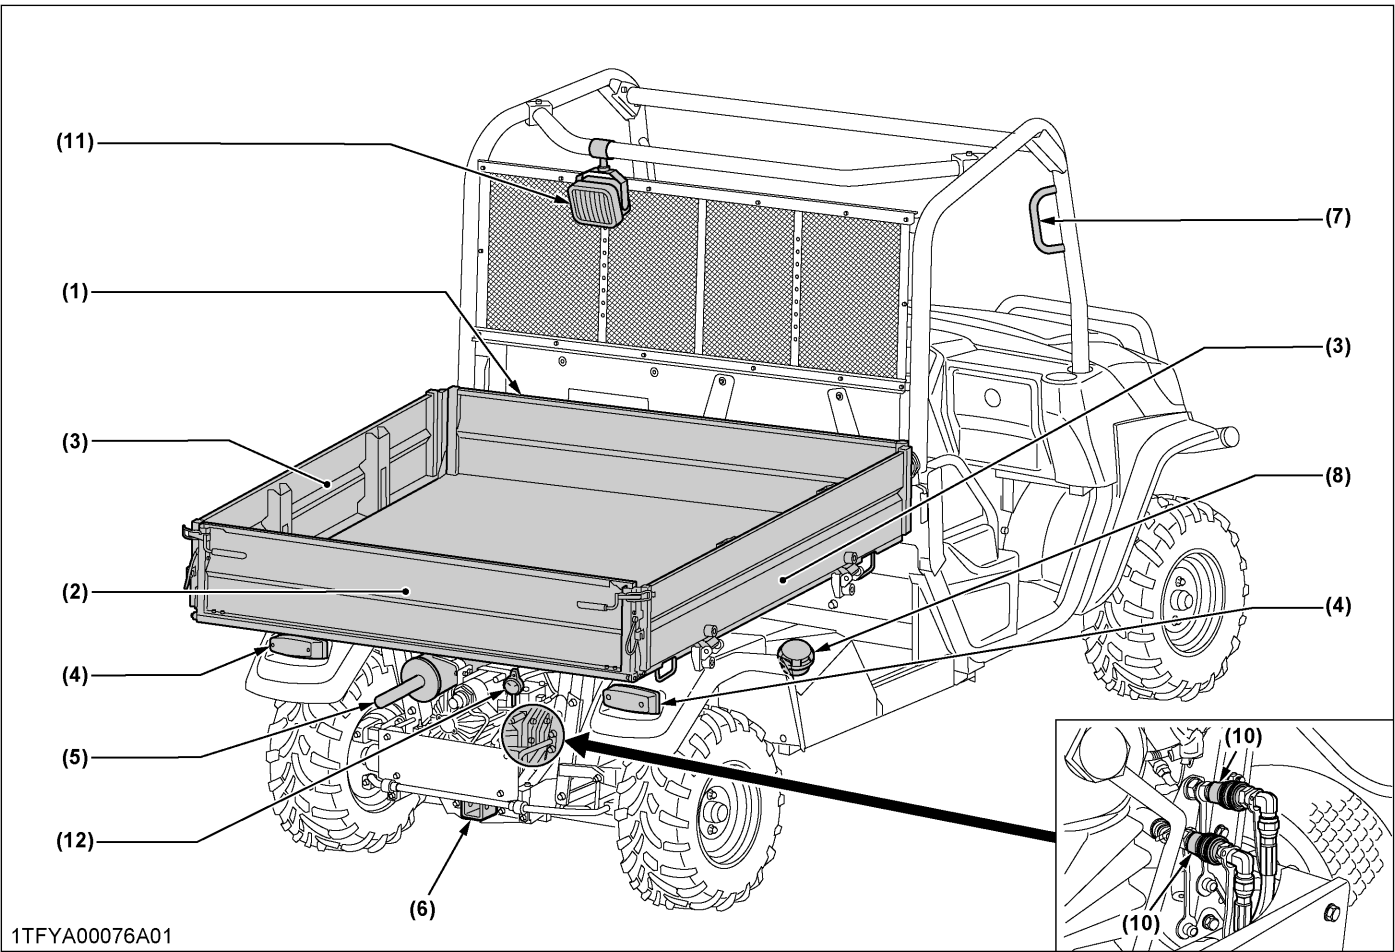

(1) Cargo bed	47
(2) Tailgate	48
(3) Side gate	
(4) Tail lamp (Combination lamp if equipped)	35
(5) Muffler	84
(6) Rear trailer hitch bracket	57
(7) Handgrip	
(8) Fuel tank cap	72
(9) Rear trailer hitch (if equipped)	57
(10) Hydraulic outlet (if equipped)	53
(11) Rear work light (if equipped)	37
(12) Backup beeper (if equipped)	77

PRE-OPERATION CHECK

DAILY CHECK

To prevent trouble from occurring, it is important to know the condition of the vehicle well. Check it before starting.



WARNING

To avoid serious injury or death, check and service the vehicle on a level surface with the engine shut off, the parking brake “ON”, and the implement lowered to the ground if equipped.

Items to check

- Walk around inspection 71
- Checking engine oil level..... 72
- Checking transmission fluid level 73
- Checking hydraulic oil tank level 73
- Cleaning hydraulic oil cooler net 74
- Checking coolant level 74
- Cleaning grille, radiator screen..... 74
(When used in a dusty place)
- Cleaning area near engine manifold 72
- Checking brake fluid level 75
- Checking brake pedal..... 75
- Checking parking brake..... 75
- Checking indicators, gauges and meters 75
- Checking lights 76
- Checking seat belt and ROPS..... 76
- Checking front and rear joint boots 76
- Checking tire inflation pressure 76
- Checking backup beeper (if equipped)..... 77
- Refuel
(See DAILY CHECK on page 71.)
- Care of safety labels
(See SAFETY LABELS on page 12.)

OPERATING THE ENGINE

WARNING

To avoid serious injury or death:

- Read and understand the safe operation section.
- Read and understand the safety labels located on the vehicle.
- To avoid the danger of exhaust fume poisoning, do not operate the engine in a closed building without proper ventilation.
- Never start the engine while standing on the ground. Start the engine only from the operator's seat.
- Before starting the engine, always set the range gear shift lever to the "NEUTRAL" position, the hydraulic outlet lever (if equipped) to the "OFF" position, and the hydraulic lift cylinder lever to the "NEUTRAL" position.
- Make sure that the engine hand throttle (if equipped) is in its idle engine speed position.


Details regarding safe operation can be found in a different section.
(See SAFE OPERATION on page 7.)

IMPORTANT :

- Do not use starting fluid or ether.
- To protect the battery and the starter, make sure that the starter is not continuously turned for more than 10 seconds.

STARTING THE ENGINE


1. Make sure that the parking brake is set.

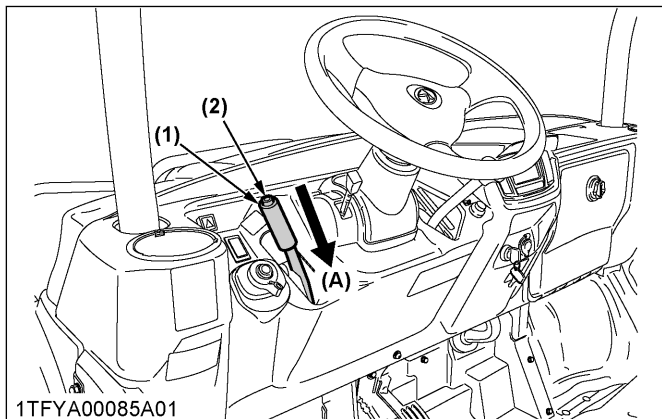

1TFYA00085A01

- (1) Parking brake lever (A) "PARK"
(2) Release button


2. Set the range gear shift lever to the "NEUTRAL" position.

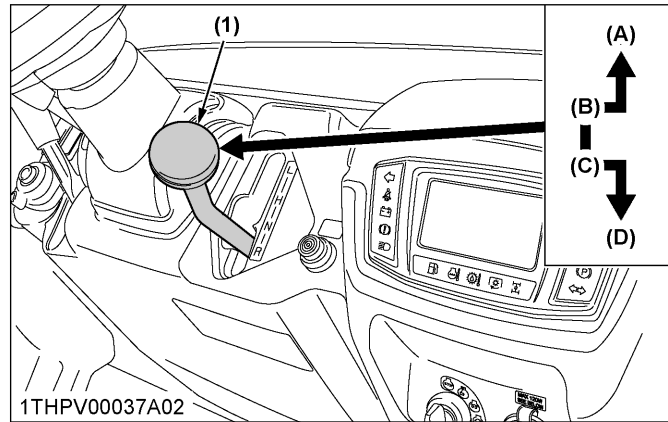

1THPV00037A02

- (1) Range gear shift lever (A) "LOW" range
(B) "HIGH" range
(C) "NEUTRAL"
(D) "REVERSE"


3. Lock the hydraulic lift cylinder lever (std.) or the hydraulic outlet lever (if equipped) to the "NEUTRAL" position with a restricting plate.

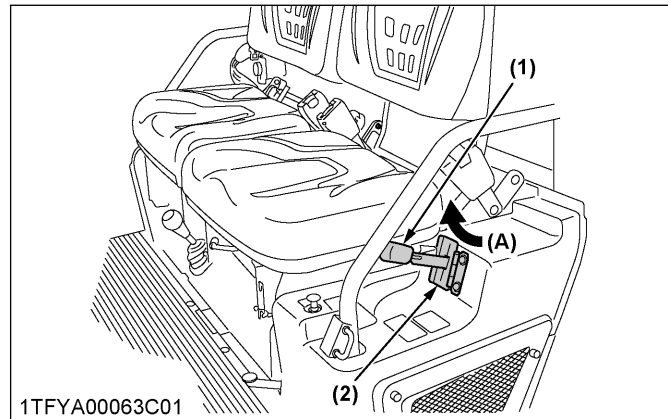

1TFYA00063C01


- (1) Hydraulic lift cylinder lever or (A) "LOCK"
hydraulic outlet lever (if equipped)
(2) Restricting plate

4. Push the speed control pedal down about 1/2 way.

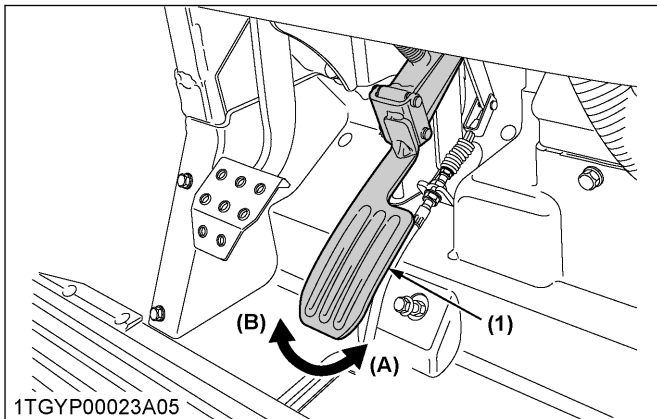

(1) Speed control pedal (A) "INCREASE" (B) "DECREASE"

5. Insert the key into the key switch and turn it "ON".

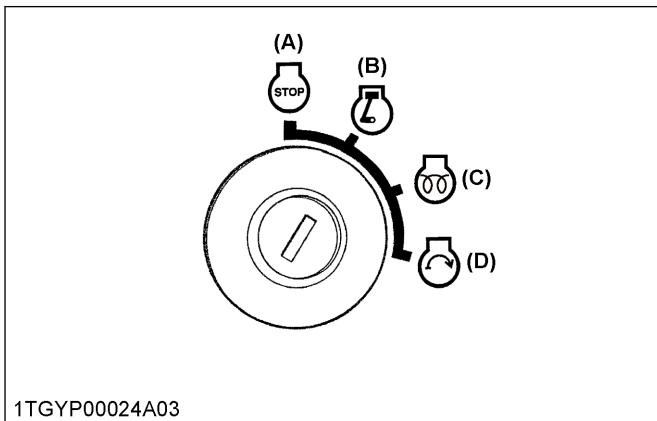

(A) "OFF" (Engine-stop)
 (B) "ON" (Engine-run)
 (C) "GLOW" (Preheat)
 (D) "START" (Engine-start)

IMPORTANT :

Do not leave the key at "ON" position. Turn it back to the "OFF" position after use. Otherwise, the battery will be quickly discharged.

NOTE :

When the key is turned "ON", all the accessories can be used while the engine is stopped.


Easy Checker™ lamps

- When the key is turned "ON", lamps (3) (4) should come on. If trouble should occur at any location while the engine is running, the warning lamp corresponding to that location comes on.
- The parking brake warning lamp (1) comes on while parking brake is applied and goes off when it is released.

IMPORTANT :

If the parking brake is released but the lamp stays on, it means that the brake system may be damaged.

Have it checked by your local Kubota dealer before use.

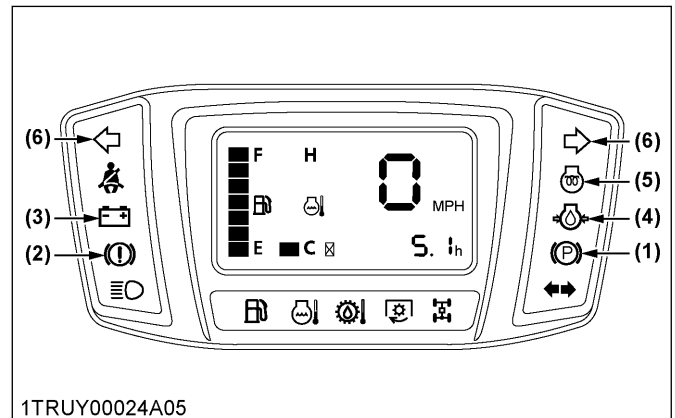

(1) Parking brake
 (2) Brake fluid
 (3) Electrical charge
 (4) Engine oil pressure
 (5) Glow plug
 (6) Hazard (if equipped) / Turn signal (if equipped)

IMPORTANT :

- Daily checks with the Easy Checker™ only, are not sufficient. Conduct daily checks carefully by referring to the daily check. (See DAILY CHECK on page 71.)

6. Turn the key to the "PREHEAT" position and hold it for the preheating.

For the appropriate preheating time, see the following table:

Temperature	Preheating time
Over 0 °C (32 °F)	2 sec. to 3 sec.
-5 °C to 0 °C (23 °F to 32 °F)	5 sec.
-15 °C to -5 °C (5 °F to 23 °F)	10 sec.
Limit of continuous use	30 sec.

NOTE :

- Glow plug indicator (5) comes on while key switch is in the "GLOW" position.

7. Turn the key to the "START" position and release when the engine starts.

IMPORTANT :

- Because of safety devices, the engine will not start except when the range gear shift lever is placed in the "NEUTRAL" position.

8. Check to see that all the warning lamps on the Easy Checker™ are "OFF".
If any warning lamp stays on, immediately stop the engine and determine the cause.

1. Cold weather starting

When the ambient temperature is below 0 °C and the engine fails to start after 10 seconds, turn off the key for 30 seconds. Then repeat steps 6 and 7. To protect the battery and the starter, make sure that the starter is not continuously turned for more than 10 seconds.

2. Engine hand throttle (if equipped)

- When the ambient temperature is below -15 °C (5 °F) and the engine is very cold, pull the hand throttle to the "HIGH" position and turn the key switch to "START" position.
- After the engine starts, push the hand throttle back to the "LOW" position.

3. Block heater (if equipped)

A block heater is available as an option from your dealer. It will assist you in starting your vehicle when the ambient temperature is below -20 °C (-4 °F).

STOPPING THE ENGINE

1. Slow the engine to idle.
2. Turn the key to "OFF".
3. Return the engine hand throttle (if equipped) to its idle engine speed position.
4. Remove the key.

WARMING UP THE ENGINE

WARNING

To avoid serious injury or death:

- Set the parking brake during warm-up.
- Set the range shift lever to the "NEUTRAL" position and lock both the hydraulic lift cylinder and the hydraulic outlet levers to the "OFF" position with restricting plate during warm-up.

IMPORTANT :

- For 5 minutes after engine start-up, allow the engine to warm up without applying any load. This is to allow oil to reach every part of the engine. If load should be applied to the engine without this warm-up period, problems may develop such as seizure, breakage or premature wear may develop.

1. Warming up the transmission oil in the low temperature range

Hydraulic oil serves as transmission fluid. In cold weather, the oil may be cold with increased viscosity. This can cause delayed oil circulation or abnormally low hydraulic pressure for some time after engine start-up. This in turn can create problems with the hydraulic system.

To prevent the problems with the hydraulic, observe the following instructions: Warm up the engine at about 50 % of rated rpm according to the following table:

Ambient temperature	Warm-up time requirement
Above 0 °C (32 °F)	Approx. 5 minutes
-10 °C to 0 °C (14 °F to 32 °F)	5 minutes to 10 minutes
-20 °C to -10 °C (-4 °F to 14 °F)	10 minutes to 15 minutes
Below -20 °C (-4 °F)	More than 15 minutes

IMPORTANT :

- Do not operate the vehicle under full load condition until it is sufficiently warmed up.
- In order for these vehicles to achieve sufficient traveling performance, it is required to warm hydraulic oil temperature up at 60 °C (120 °F) or more.

JUMP STARTING THE ENGINE

WARNING

To avoid serious injury or death:

- Put on safety goggles and rubber gloves before jump starting the engine.
- Keep cigarettes, sparks, and flames away from the battery.
- If the vehicle battery is frozen, do not jump start the engine.
- Do not connect the other end of the negative jumper cable to the negative terminal of the vehicle battery.
- The parts such as the muffler may be hot. Be careful not to get burned in connecting jumper cables.

When jump starting the engine, follow the following instructions to safely start the engine.

1. Bring a helper vehicle with a battery of the same voltage as the disabled vehicle within easy cable reach.


IMPORTANT :

- Do not make the vehicles contact with each other.
2. Engage the parking brake of both vehicles.
 3. Put the shift lever of both vehicles in neutral.

4. Shut off the engines of both vehicles.
5. Ensure that the vent caps are securely in place (if equipped).
6. Attach the red clamp to the positive (red, (+) or pos.) terminal of the dead battery and clamp the other end of the same cable to the positive (red, (+) or pos.) terminal of the helper battery.
7. Clamp the other cable to the negative (black, (-) or neg.) terminal of the helper battery.
8. Clamp the other end to the engine block or frame of the disabled vehicle as far from the dead battery as possible.
9. Start the helper vehicle.
10. Run the engine of the helper vehicle for a few moments.
11. Start the disabled vehicle.
12. Disconnect the jumper cables in the exact reverse order of attachment (steps 8, 7 and 6).

- Use only matching voltage source when **"Jump starting"** a low or dead battery. Use of a higher voltage source could result in severe damage to vehicle's electrical system.


Jump starting the battery

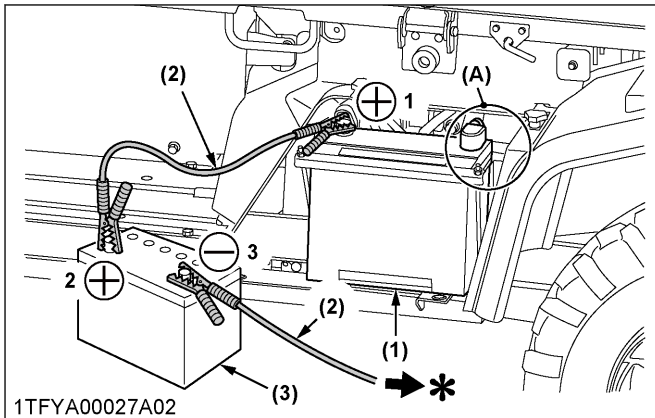

- (1) Dead battery
- (2) Jumper cable
- (3) Helper battery

(A) Enlarged view (A)

Jump starting the battery: Enlarged view (A)

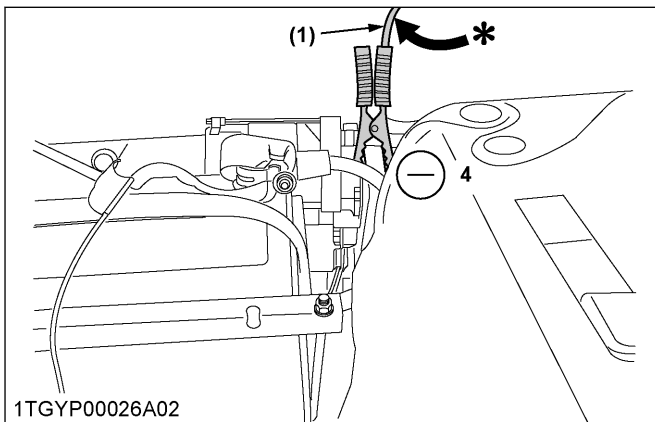

- (1) Jumper cable

IMPORTANT :

- This vehicle has a 12 volt negative (-) ground starting system.

OPERATING THE VEHICLE

OPERATING A NEW VEHICLE

How a new vehicle is handled and maintained determines the life of the vehicle.

A new vehicle just off the factory production line has been tested, but the various parts are not accustomed to each other, so care should be taken to operate the vehicle for the first 50 hours at a slower speed and avoid excessive work or operation until the various parts become *"broken-in"*.

The manner in which the vehicle is handled during the *"breaking-in"* period greatly affects the life of your vehicle. Therefore, to obtain the maximum performance and the longest life of the vehicle, it is very important to properly break-in your vehicle.

In handling a new vehicle, the following precautions should be observed.

1. Operating the new vehicle for the first 50 hours

- Do not operate the vehicle at full speed for the first 50 hours.
- Do not start the vehicle quickly nor apply the brakes suddenly.
- In winter, operate the vehicle after fully warming up the engine.
- Do not run the engine at speeds faster than necessary.
- On rough roads, slow down to suitable speeds. Do not operate the vehicle at fast speed. The previous precautions are not limited only to new vehicles, but to all vehicles. But it should be especially observed in the case of new vehicles.

2. Changing lubricating oil for a new vehicle

The lubricating oil is especially important in the case of a new vehicle. The various parts are not *"broken-in"* and are not accustomed to each other. Small pieces of metal grit may develop during the operation of the vehicle; and this may wear out or damage the parts. Therefore, care should be taken to change the lubricating oil a little earlier than would ordinarily be required.

For further details of change interval hours, see MAINTENANCE on page 59.

STARTING THE VEHICLE

1. Fasten the seat belt.
(See Seat belt on page 34.)
2. Adjust the steering position.
(See Steering wheel tilt lever on page 35.)
3. Adjust the operator's seat.
(See Seat slide lever on page 35.)
4. Select the light switch position.
(See Head light switch on page 35.)
(See Horn button on page 36.)
5. Check the brake pedal.
(See Brake pedal on page 37.)
6. Start the engine.
(See OPERATING THE ENGINE on page 30.)
7. Select the travel speed.
(See Range gear shift lever on page 37.)
(See 4WD lever on page 38.)
8. Unlock the parking brake and start slowly.
(See Parking brake lever on page 38.)
(See Speed control pedal on page 39.)

1. Seat belt




WARNING

To avoid serious injury or death:

- Always use the seat belts when operating and riding in the vehicle.
- Where appropriate, use a child safety seat. The lap-style seat belts may not provide adequate protection for small children. Special care is recommended when carrying a child passenger.


Adjust the seat belts for proper fit and connect the buckle.

This seat belt is an auto-locking retractable type.

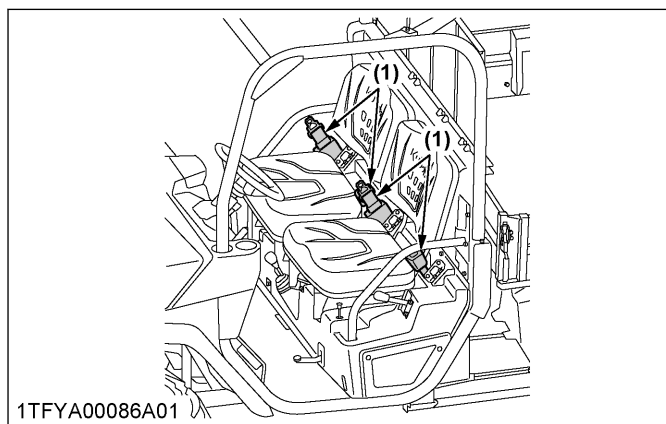

1TFYA00086A01

(1) Seat belt

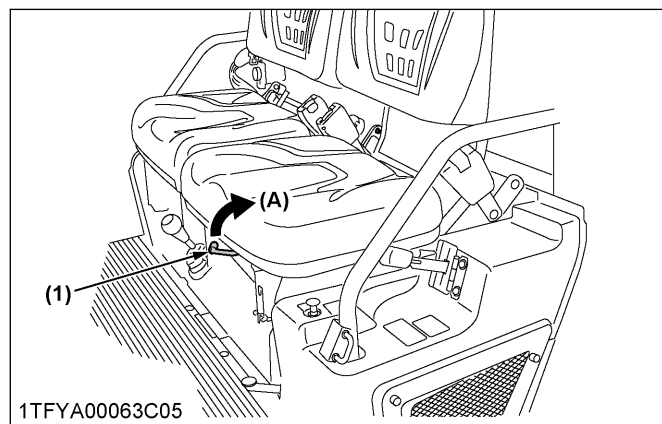


1TFYA00063C05

(1) Seat side lever (A) "PULL UP"

2. Steering wheel tilt lever

WARNING
 To avoid serious injury or death, adjust the steering wheel only when the vehicle is completely stopped. Adjusting while driving may cause the operator to mishandle the vehicle and cause an accident.

Adjust the steering wheel to proper position. The steering wheel can be adjusted while the tilt lever is pulled.

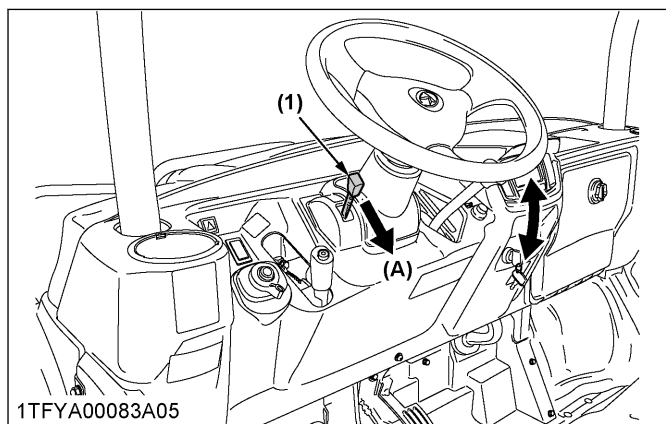


1TFYA00083A05

(1) Tilt lever (A) "PULL"

4. Head light switch

The head light switch is operative when the key switch is in the "ON" position. Turn on the key switch and turn the head light switch clockwise to the "ON" position, the head lights light up. Turn the head light switch counterclockwise to the "OFF" position to turn off the head light.

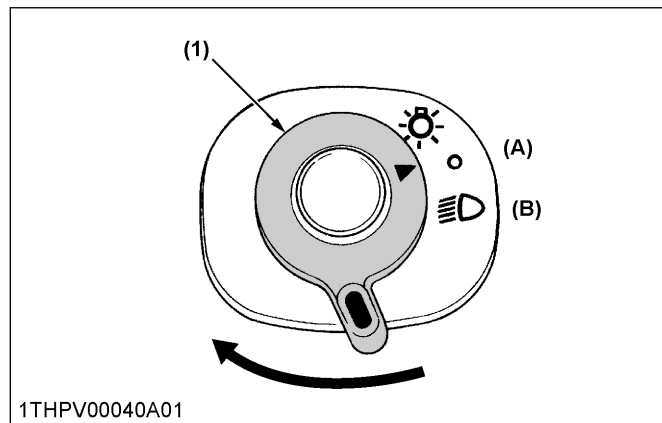

1THPV00040A01

(1) Head light switch (A) Head lights "OFF" (B) Head lights "ON"

NOTE :

- Turning the head light switch to the "ON" position causes the following lamps to light simultaneously.
 - Tail lights (lamps at the rear portions of the vehicle)

3. Seat slide lever

WARNING
 To avoid serious injury or death, adjust the steering wheel only when the vehicle is completely stopped. Adjusting while driving may cause the operator to mishandle the vehicle and cause an accident.

Adjust the operator's seat to proper position. The operator's seat can be adjusted while the seat slide lever is pulled up.

5. Hazard light switch (if equipped)

When you press the hazard light switch, the hazard lights flash along with the indicator on the instrument panel. Press the hazard light switch again to turn off the hazard lights.

NOTE :

- The hazard light switch is operative when the key switch is in either the “ON” or “OFF” position.
Be careful that leaving the switch “ON” causes the battery to run out.

6. Turn signal light switch (if equipped)


To indicate a right turn, turn the turn signal light switch clockwise.

To indicate a left turn, turn the turn signal light switch counter-clockwise.

When the left or right signal is activated, the indicated turning light will flash and the other will stay on. Similarly, the indicator lamp on the instrument panel also flashes.


NOTE :

- The turn signal light switch is only operative when the key switch is in the “ON” position.
- If the hazard light switch is pressed to the “ON” position while the turn signal is activated, the indicated turning light will flash and the other will stay on.
- Return the switch to the center position after turning.

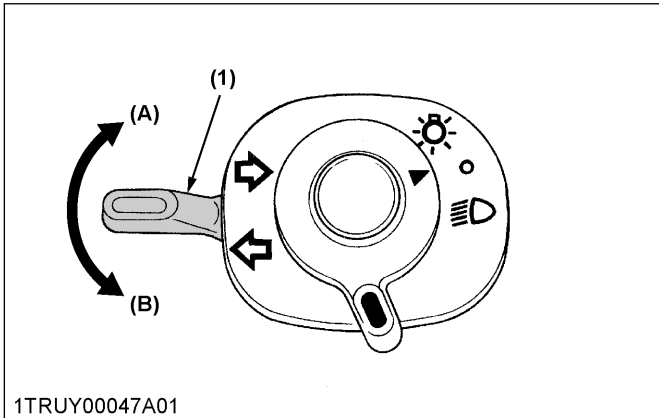


1TRUY00047A01

- (1) Turn signal light switch (if equipped)
- (A) “RIGHT TURN”
(B) “LEFT TURN”

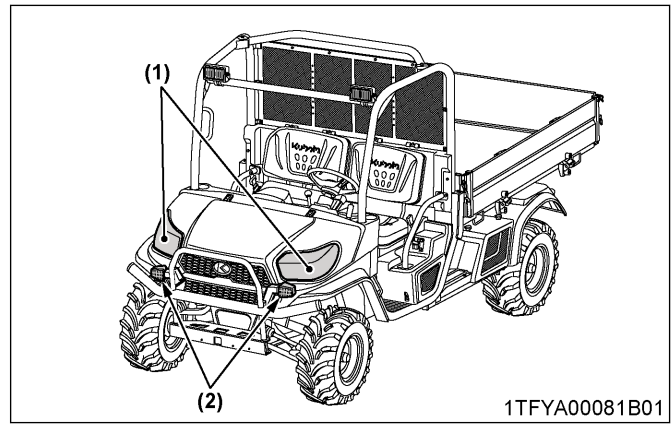

1TFYA00081B01

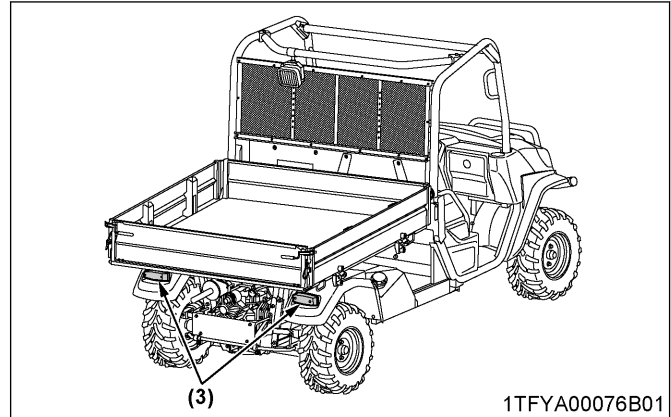


1TFYA00076B01

- (1) Head light
(2) Hazard and turn signal light (if equipped)
(3) Tail lamp (combination lamp if equipped)

7. Horn button

The horn switch is operative when the key switch is in either the “ON” or “OFF” position.

The horn will sound when the horn button is pressed.

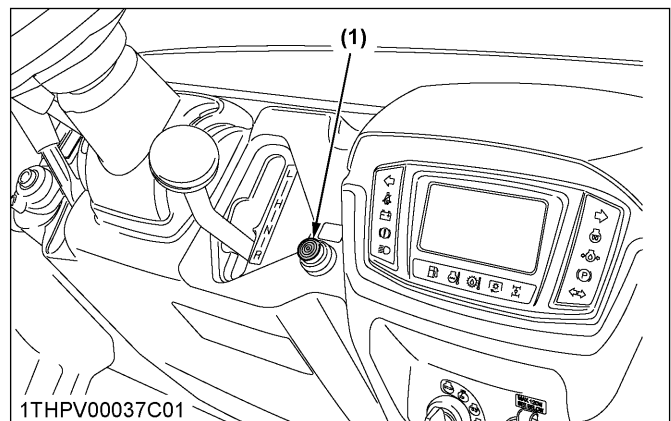


1THPV00037C01

- (1) Horn button

8. Work light (front) (if equipped)

When the key switch is turned to the “ON” position and the front work light switch is turned to the “ON” position, the work light comes on.

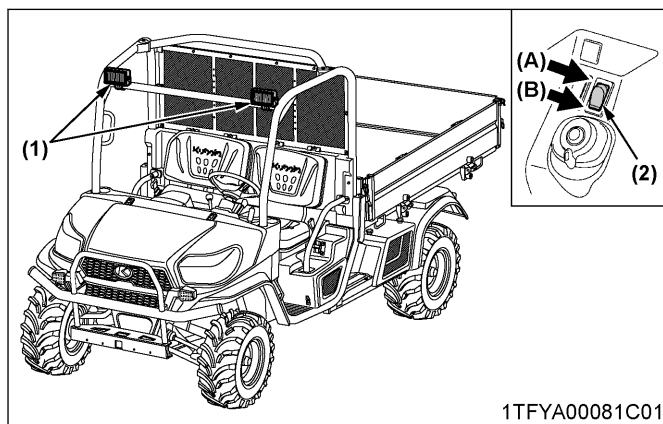


- 1TFYA00081C01
- (1) Front work light (if equipped) (A) "ON"
 (2) Front work light switch (if equipped) (B) "OFF"

9. Work light (rear) (if equipped)

When the key switch is turned to the "ON" position and the slide switch at the rear of each work light is slid to the "ON" position, the work light comes on. When the slide switch is slid to the "OFF" position, the light goes off.

After the slide switch for each work light is shifted to the "OFF" position, turn the key switch to the "OFF" position.

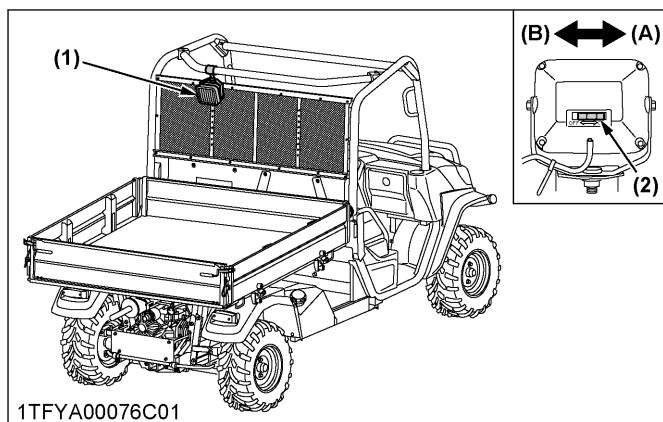

- 1TFYA00076C01
- (1) Rear work light (if equipped) (A) "ON"
 (2) Rear work light switch (if equipped) (B) "OFF"

10. Brake pedal

! WARNING


To avoid serious injury or death:

- Avoid sudden braking. An accident may occur due to loss of control or the shifting forward of heavy loads.
- When driving on icy, wet or loose surface, operate at reduced speed to avoid skidding and loss of steering control.

The brake pedal is the left pedal on the foot board. Depress the pedal to slow or stop the vehicle.

NOTE :

- Primary braking is using the brake pedal to apply the vehicle brakes to slow and stop the vehicle.
 (See Dynamic braking on page 39.)
- Use the brake pedal to control vehicle speed when descending a slope.

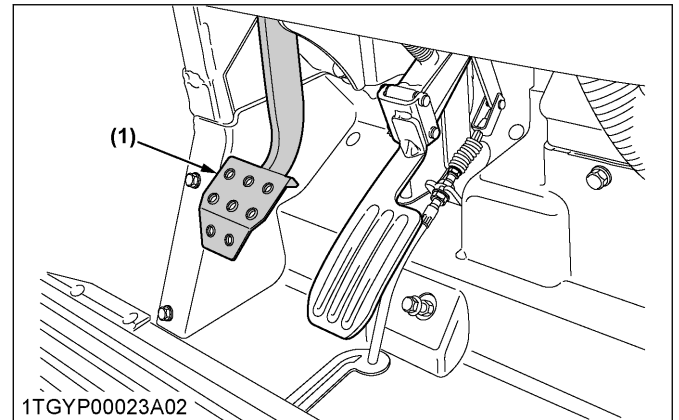

- 1TGYP00023A02
- (1) Brake pedal

11. Range gear shift lever

! WARNING


To avoid serious injury or death:

- Operate the range gear shift lever properly. An accident may occur with erratic shifting operation.
- Make sure that the range gear is engaged completely. Failure to do so can cause the vehicle to coast on slopes.
- Avoid changing the range gear shift lever when ascending or descending a slope.
- Before ascending or descending a slope, shift to the [L] range to control the vehicle speed.
- If you shift gears while ascending or descending a slope, be prepared to use the brake to maintain control.
- Operate in reverse at slow speeds to maintain control.

Select proper gear and engine speed depending on the type of job.

- The range gear shift lever can only be shifted when vehicle is completely stopped and the speed control pedal is in the "NEUTRAL" position.
- To avoid transmission and shift linkage damage, completely stop the vehicle using the brake pedal before shifting gears.
- Select proper gear and engine speed depending on the type of job.

- Before dismounting vehicle, shift the range gear shift lever to the “NEUTRAL” position and set parking brake.

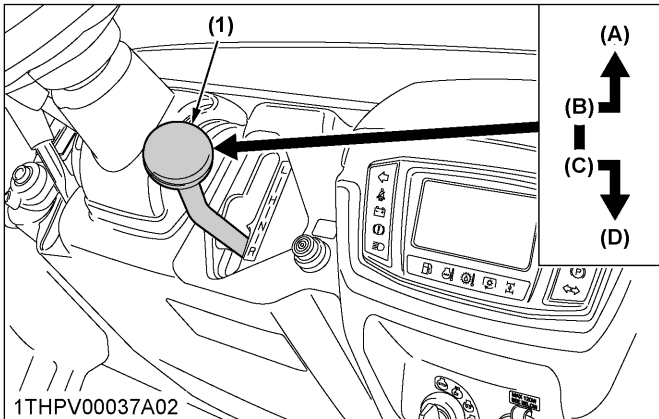

- (1) Range gear shift lever
- (A) “LOW” range
 - (B) “HIGH” range
 - (C) “NEUTRAL” position
 - (D) “REVERSE”

NOTE :


- When range gear shift lever is hard to engage, do not force the lever. Set the parking brake, slightly depress the speed control pedal, and release it to “NEUTRAL” position, then shift the lever.
- When the range gear shift lever is hard to disengage, do not force the lever. Depress the brake pedal fully, then shift the lever.

12. 4WD lever


WARNING

To avoid serious injury or death:

- Do not engage the front wheel drive when traveling at road speed.
- When driving on icy, wet, or loose surfaces, operate at reduced speed to avoid skidding and loss of steering control.
- Do not suddenly brake the vehicle. An accident may occur such as by heavy towed loads shifting forward causing loss of control.
- Be aware of the difference in the braking characteristics between 2- and 4-wheel drive and use carefully.

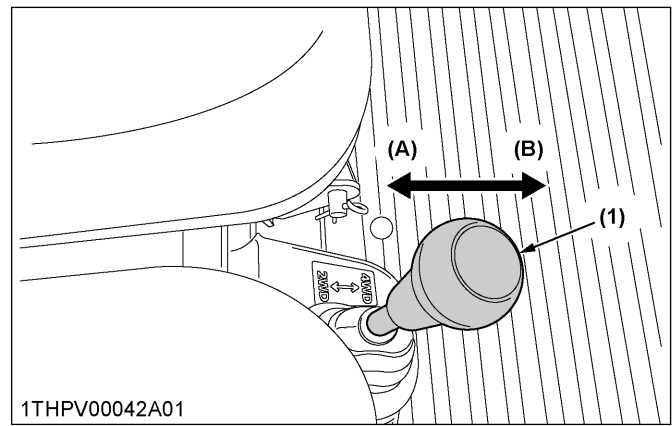

- (1) 4WD lever
- (A) “2WD”
 - (B) “4WD”

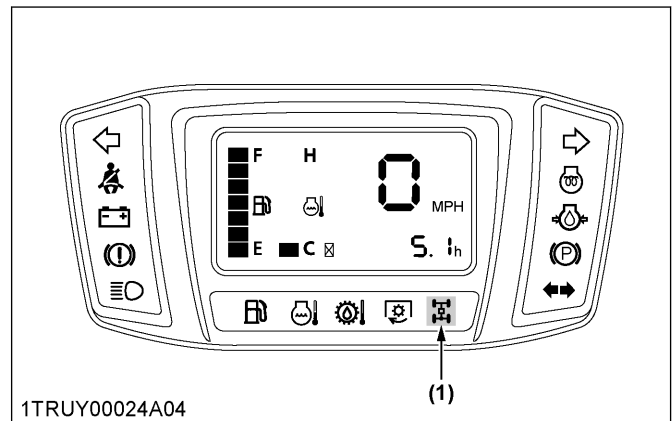

- (1) 4WD indicator

IMPORTANT :

- Use the lever to engage the front wheels with the vehicle stopped. Shift the lever to “4WD” to engage the front wheel drive. When the lever is in “4WD” position, the 4WD indicator comes on.
- Tires will wear quickly if front wheel drive is engaged on paved roads.


Front wheel drive is effective for the following jobs:

- When greater pulling force is needed, such as working in a wet field, when pulling a trailer, or when working with a front-end blade
- When working in sandy soil

13. Parking brake lever

To release the parking brake, depress the brake pedal, push the release button, and push up the parking brake lever.

Depressing the brake pedal makes release force smaller. Make sure that the indicator in the Easy Checker™ goes off.

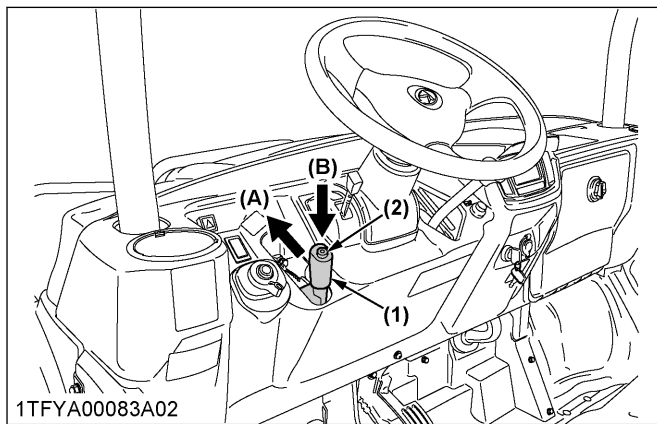


1TFYA00083A02

(1) Parking brake lever
(2) Release button

(A) "RELEASE"
(B) "PUSH"

14. Speed control pedal

Use the speed control pedal when traveling. Push it down for higher speed.

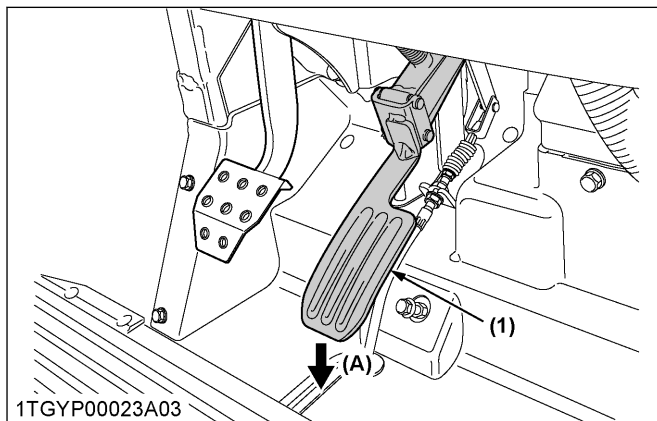

1TGYF00023A03

(1) Speed control pedal

(A) "INCREASE"

15. Dynamic braking

Dynamic braking offers an additional braking power to slow the vehicle as soon as you release the speed control pedal. This braking power is provided by the HST.

IMPORTANT :

- **Primary braking power must be provided by the brake pedal.**
- **To avoid premature damage to the HST, use the brake pedal to slow and stop the vehicle.**

STOPPING THE VEHICLE

1. Release the speed control pedal.
2. Step on the brake pedal to slow and stop the vehicle.
3. After the vehicle has stopped, put the range gear shift lever in the "NEUTRAL" position.
4. Set the parking brake.

CHECK DURING DRIVING


IMPORTANT :

Immediately stop the engine in any of the following cases:

- The engine suddenly slows down or accelerates.
- Unusual noises suddenly occur.
- Exhaust fumes suddenly become very dark.

While driving, check the following items to see that all the parts are functioning normally:

- Easy Checker™ on page 39
- Fuel gauge on page 40
- Coolant temperature gauge on page 40
- Hourmeter and odometer on page 40
- Speedometer on page 41

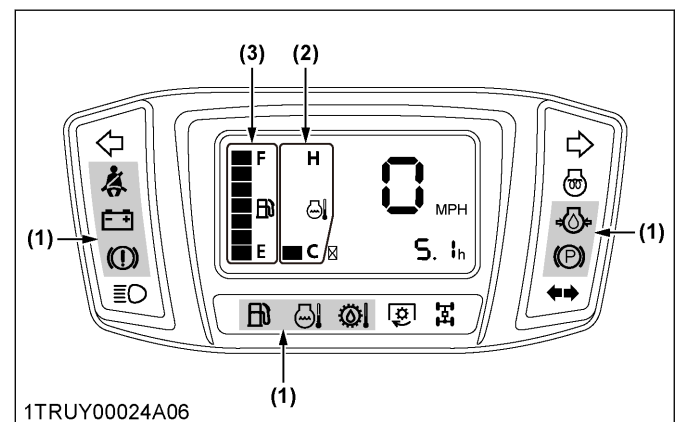

1TRUY00024A06

- (1) Easy Checker™
(2) Coolant temperature gauge
(3) Fuel gauge

1. Easy Checker™

If the warning lamps in the Easy Checker™ come on during operation, immediately stop the engine, and find the cause as shown as follows.

Never operate the vehicle with an Easy Checker™ lamp on.

Engine oil pressure

If the oil pressure in the engine goes below the prescribed level, the warning lamp in the Easy Checker™ will come on.

If this should happen during operation, and it does not go off when the engine is accelerated, check level of engine oil.

(See Checking the engine oil level on page 72.)

Electrical charge

If the alternator is not charging the battery, the warning lamp in the Easy Checker™ will come on. If this should happen during operation, check the electrical charging system or contact your local Kubota dealer.

(!) Low brake fluid level

If the brake fluid goes below the prescribed level, the warning lamp in the Easy Checker™ will come on.

If this should happen during operation, check to see that there is no oil leak in the brake system, and then add DOT-3 or DOT-4 brake fluid.

(See Checking the brake fluid level on page 75.)

(!) VHT oil temperature

If the VHT oil is overheated, the warning lamp will come on and the buzzer will sound.

(See TROUBLESHOOTING on page 103 to check the vehicle.)

(P) Parking brake

If the parking brake indicator is on during operation, release the parking brake lever immediately.

The parking brake indicator in the Easy Checker™ comes on if the parking brake is applied.


2. Fuel gauge

Before checking the fuel gauge, park the vehicle on a flat place.

When the key switch is “ON”, the fuel gauge indicates the fuel level.

IMPORTANT :

Be careful not to empty the fuel tank. Otherwise air may enter the fuel system. Should this happen, the system should be bled. (See Bleeding the fuel system on page 100.)

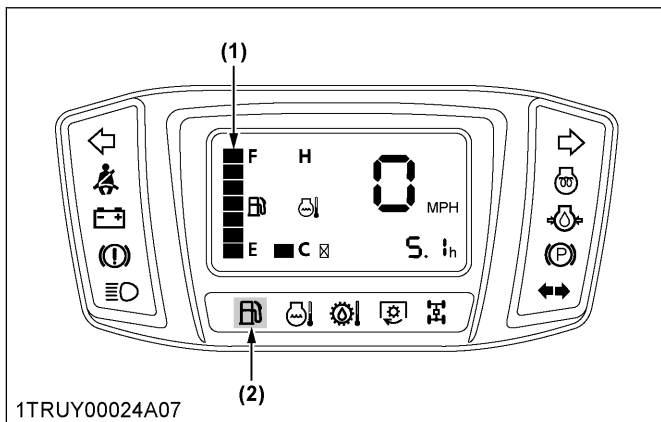

(1) Fuel gauge
(2) Fuel level warning lamp


3. Coolant temperature gauge

WARNING

To avoid serious injury or death, observe the following instructions if engine overheats. Do not remove the radiator cap until the coolant and engine temperature has cooled. Before

completely removing the radiator cap, loosen it slightly to the stop to relieve any pressure.

1. With the key switch “ON”, the coolant temperature gauge indicates the temperature of the coolant.
2. If the engine overheats, the warning lamp will come on and the buzzer will sound. (See TROUBLESHOOTING on page 103 to check the vehicle.)

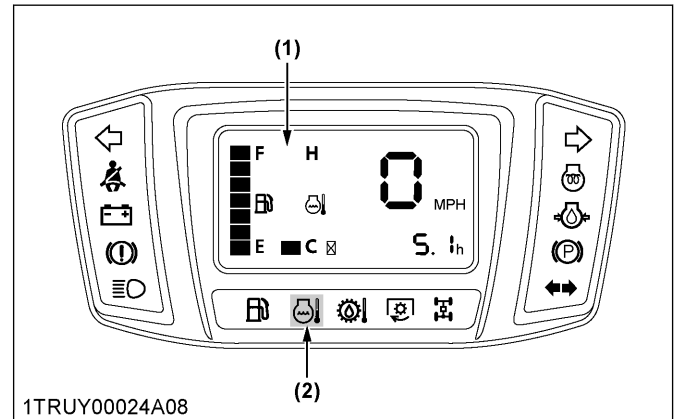

(1) Coolant temperature gauge
(2) Overheat warning lamp

IMPORTANT :

- If the engine and VHT overheat at the same time, do not stop the engine. When it is safe to do so, remove the engine load and keep the engine idling to allow cool down to occur. After the warning lamps go off, wait for 5 minutes, and stop the engine. See TROUBLESHOOTING on page 103.


4. Hourmeter and odometer

When the key is turned to the “ON” position and the engine is not running, the hourmeter is displayed.


When the key is in the “ON” position and the engine is running, the odometer is displayed.

The hourmeter indicates in 5 digits the hours the vehicle has been used; the last digit indicates 1/10 of an hour.

The odometer indicates in 5 digits the distance the vehicle has been used; the last digit indicates 1/10 of a km.

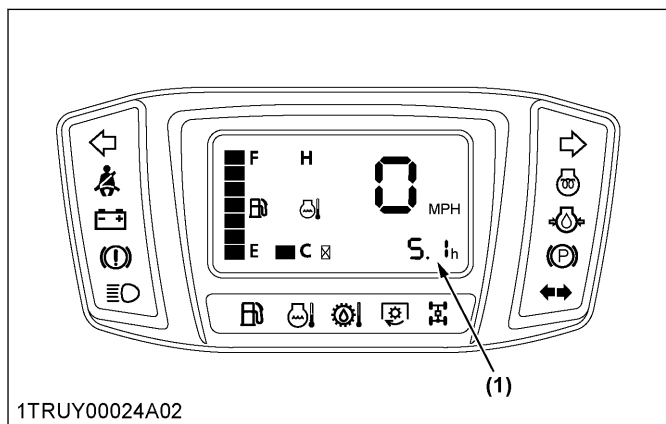


(1) Hourmeter

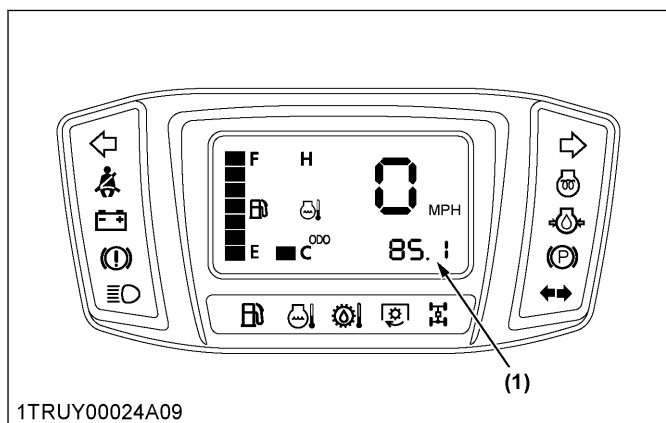

(1) Odometer

5. Speedometer

The speedometer indicates the traveling speed.

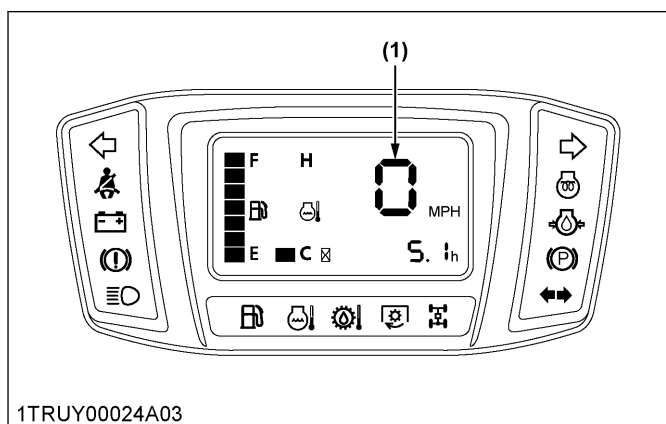

(1) Speedometer

PARKING THE VEHICLE

1. Parking brake lever

WARNING
To avoid serious injury or death, observe the following before dismounting the vehicle.

- Always set the parking brake and lower all implements to the ground. Leaving the transmission in gear with the engine stopped will not prevent vehicle from rolling.
- Stop the engine and remove the key.

Follow either of the following steps:

To set the parking brake


1. Stop the vehicle on a level surface.
2. Depress the brake pedal.
3. Pull the parking brake lever to the rear engaged position.

To release the parking brake

1. Depress the brake pedal.
2. Push the release button.
3. Push up the parking brake lever.
4. Make sure that the indicator in the Easy Checker™ goes off.

NOTE :

Depressing the brake pedal makes release force smaller.

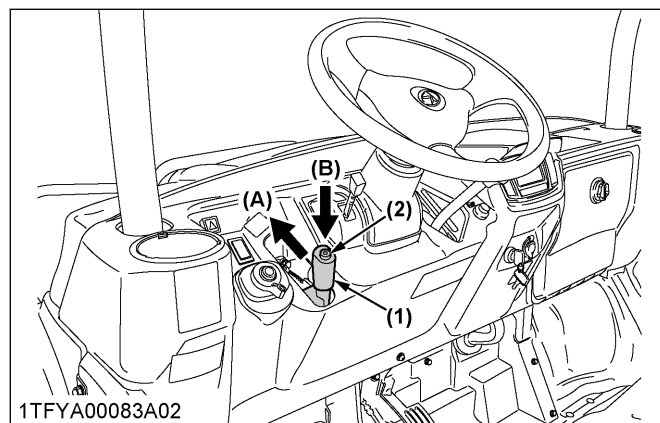

- (1) Parking brake lever
- (A) "RELEASE"
- (2) Release button
- (B) "PUSH"

IMPORTANT :

Do not operate the vehicle with the parking brake applied. Otherwise, the brake will be damaged.

ACCESSORY

1. 12 V electric outlet


WARNING
To avoid serious injury or death, do not use the 12 V electric outlet when it is wet.

The 12 volt power point is located on the front panel. An auxiliary light or other devices may be connected to this outlet.

IMPORTANT :

- Do not use as a cigarette lighter.


- Make sure that the cap is closed when the outlet is not used.
- This outlet is powered when the key switch is in either the "ON" or "OFF" position. Remove accessory when not in use to avoid battery drain down.
- Do not connect a light or other device that draws more than 120 watts to this power point, or the battery may discharge very rapidly or the outlet may fail.

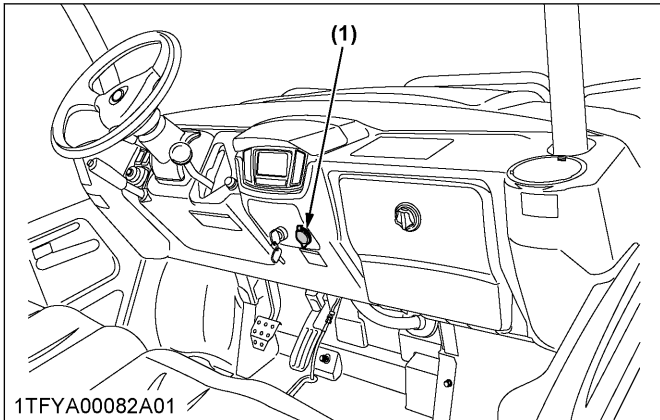

1TFYA00082A01

(1) 12 V electric outlet

2. Utility box

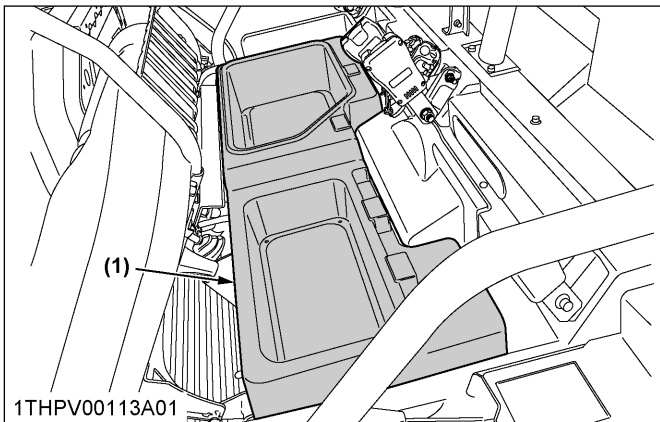


1THPV00113A01

(1) Utility box

3. Glove box and glove box cover

Insert the key into the knob slot and turn it counterclockwise to lock.
 Insert the key into the knob slot and turn it clockwise to unlock.

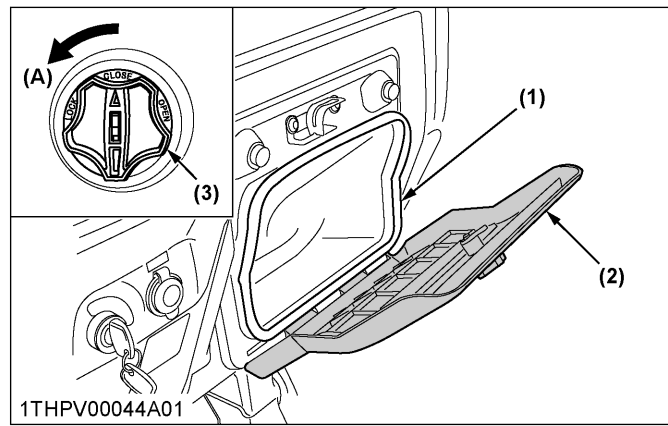

1THPV00044A01

- (1) Glove box
- (2) Glove box cover
- (3) Knob

(A) "LOCK"

OPERATING TECHNIQUES

1. Differential lock


! WARNING

To avoid serious injury or death due to loss of steering control:

- Do not operate the vehicle at high speed with the differential lock engaged.
- Do not attempt to turn with the differential lock engaged.
- Release the differential lock before making a turn in field conditions.

If one of the rear wheels should slip, step on the differential lock pedal. Both wheels will then turn together, reducing slippage.

Differential lock is maintained while the pedal is depressed or may be held by using differential lock holder.

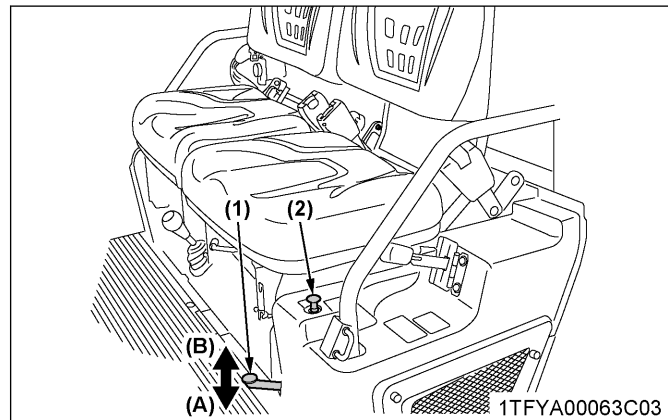

- (1) Differential lock pedal
- (2) Differential lock holder

(A) "ENGAGE"

(B) "DISENGAGE"

1TFYA00063C03

Handling the retaining device for differential lock

1. Pull the differential lock holder up while the differential lock pedal is depressed.
2. Release the pedal before your hand leaves the differential lock holder.

The differential lock is then maintained even if your foot leaves the pedal.

- The lock is released when the foot pedal is depressed again.

IMPORTANT :

- When using the differential lock, always slow the vehicle and engine down.
- To prevent damage to the powertrain, do not engage the differential lock when one wheel is spinning and the other is completely stopped.

2. Directions for use of power steering


- Power steering is activated only while the engine is running. While the engine is stopped, the vehicle functions in the same manner as vehicle without power steering.
- When the steering wheel is turned all the way to the stop, the relief valve is activated. Do not hold the steering wheel in this position for a long period of time.
- Avoid turning the steering wheel while the vehicle is stopped, otherwise tires may wear out sooner.
- The power steering mechanism makes the steering easier. Be careful when driving at high speeds.
- Do not operate the hydraulic lift cylinder lever (or hydraulic outlet lever) when driving. Otherwise loss of control or failure of the power steering could occur.

3. Driving on unfamiliar terrain

⚠ WARNING

To avoid serious injury or death:

- Check for hidden obstacles or hazards before driving in a new area.
- Keep your speed down until you know the area well.
- Use existing trails and stay away from hazardous areas such as steep, rocky slopes or swamps.
- Be cautious when visibility is limited, as you may not be able to see obstacles in your path.

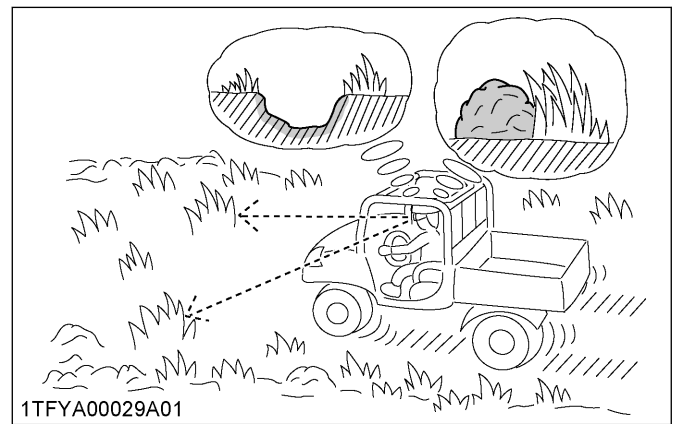


4. Driving in reverse

⚠ WARNING

To avoid serious injury or death:

- Turn around and look down and behind you before backing up to be sure there are no obstacles or people in your way.
- Depress the speed control pedal gradually and reverse cautiously.
- To stop while driving in reverse, take your foot off the speed control pedal and gradually apply the brake.
- Do not suddenly engage the brake.

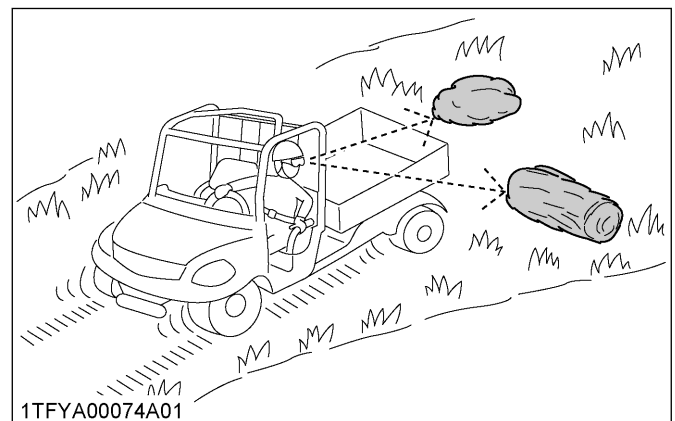




5. Driving in "4WD"

⚠ WARNING


To avoid serious injury or death:

- Do not drive in "4WD" on paved surfaces.
- Be aware of the difference in the braking characteristics between 2- and 4-wheel drive and use carefully.

For the maximum traction, shift the range gear shift lever into low range and use "4WD" on steep slopes or when stuck in the mud, with differential locked if necessary.

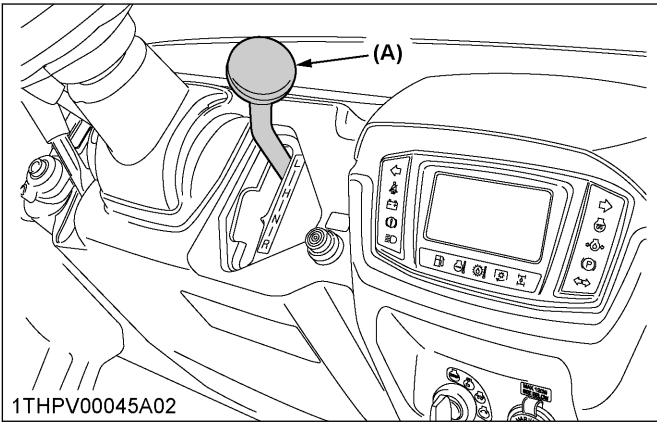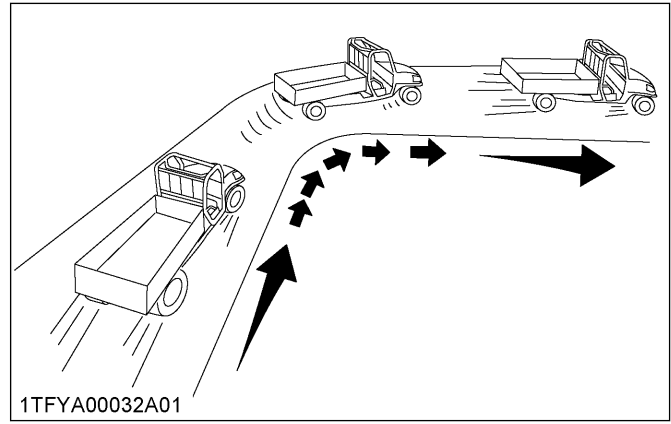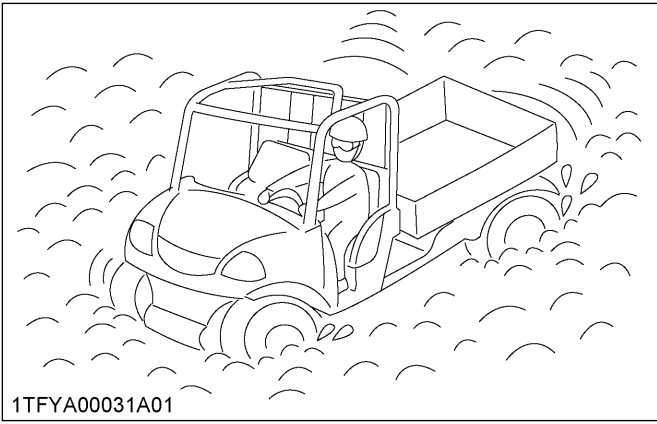

(A) Low range

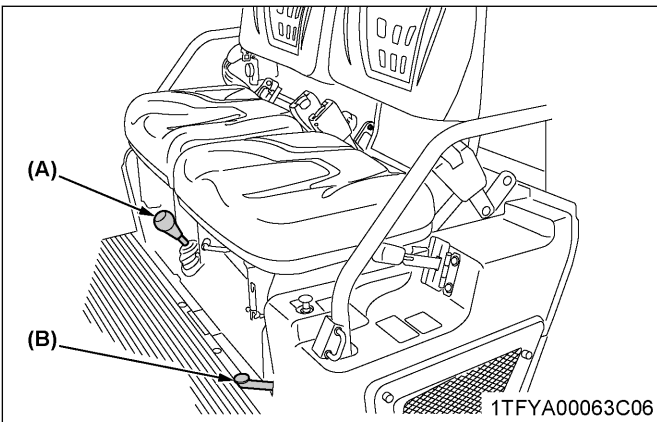


(A) "4WD"
(B) Differential lock "ON"

7. Driving on hills

! WARNING

To avoid serious injury or death:

- Do not turn sideways on a hill, or the vehicle may roll over.
- Always go straight up or down the hill.
- Slow down until you can get a clean view of the other side at the crest of a hill.
- If the engine stalls on a steep slope, roll slowly straight down, using the brake.
- Stop and look for obstacles before descending a hill.

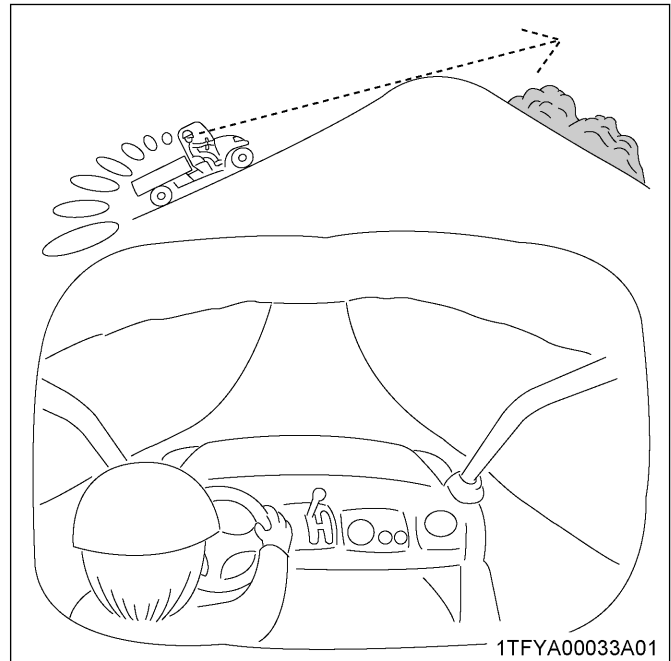


6. Turning the vehicle

! WARNING

To avoid serious injury or death:

- Reduce the vehicle speed before entering the turn and maintain an even speed through the turn.
- Do not make sharp turns in order to avoid loss of control or tipping.

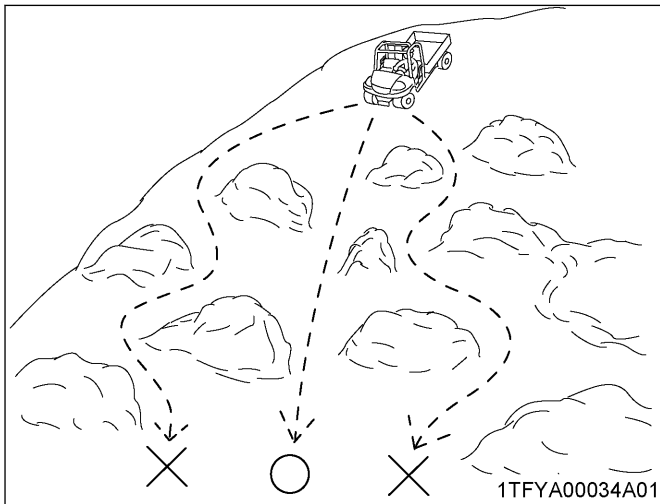

8. Traversing hillsides

WARNING

To avoid serious injury or death:


- Reduce the vehicle speed to prevent tipping or loss of control.
- Do not traverse hillsides that are slippery or covered with rocks or obstacles which may cause you to tip over.

9. Sliding and skidding

WARNING

To avoid serious injury or death:

- Drive slowly and carefully when you are unsure or unprepared for the surface.
- Do not apply heavy braking force or accelerate when skidding to prevent loss of control.
- Use 4WD and maintain low speeds on areas covered with clay, mud, ice, or snow to prevent uncontrolled skidding.


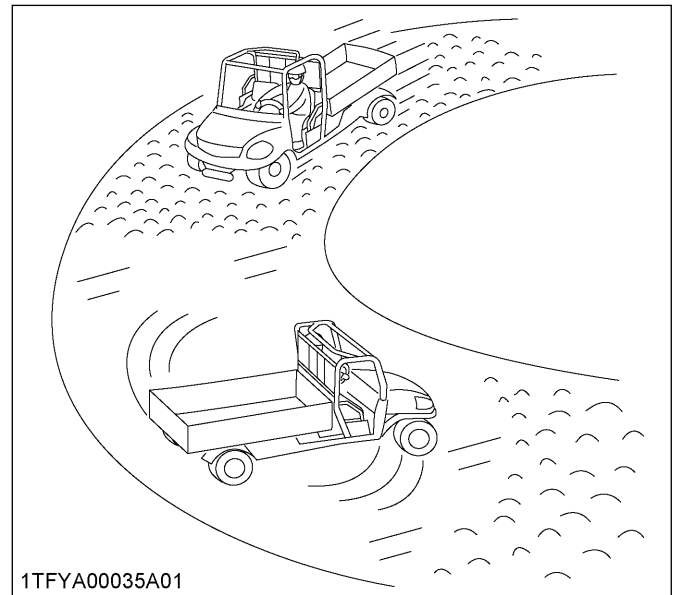


10. Driving through water

WARNING

To avoid serious injury or death:

- Do not drive through water whenever it is possible.
- Drive slowly across shallow water and choose a location to enter and exit the water where the banks are not too steep or slippery.
- Before entering water, check for rocks, holes or other obstacles that may cause the vehicle to overturn, get stuck, or become submerged.
- Never operate the vehicle in the fast flowing water or in water deeper than the bottom edge of the axle caps.

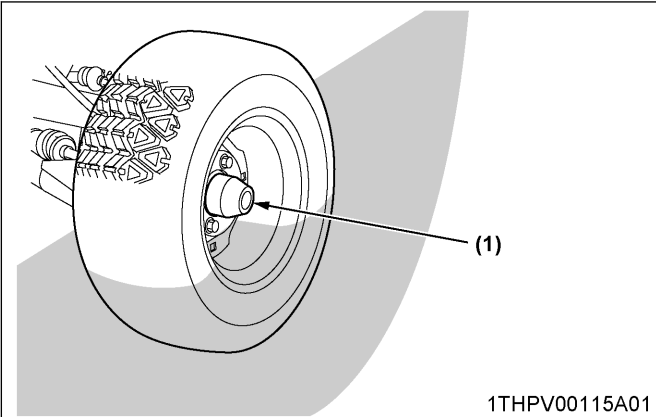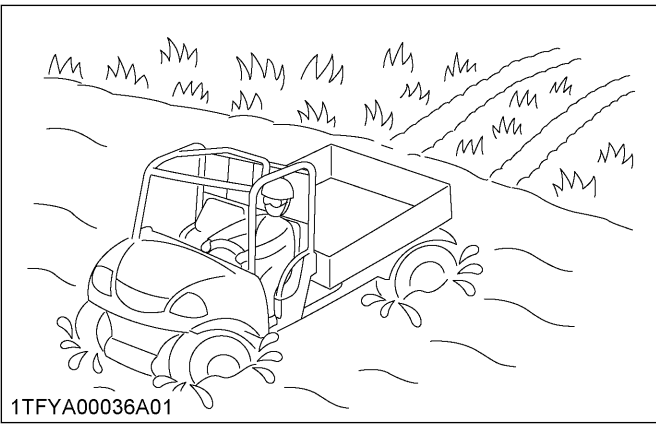

(1) Axle cap

STATIONARY HYDRAULIC OUTLET (IF EQUIPPED)

To use the hydraulic outlet system, start the hydraulic outlet system in the following steps.

1. Apply the parking brake and place chocks at the tires.
2. Make sure that the shift levers are in "NEUTRAL".
3. Start the engine.
4. Operate the hydraulic outlet lever.
(See HYDRAULIC OUTLET (IF EQUIPPED) on page 53.)
5. Set the engine speed to provide recommended fluid rate. (Refer to the implement Operator's Manual.)

IMPORTANT :

- Do not use a hydraulic implement which has a hydraulic motor except those approved by Kubota.

CARGO BED

GENERAL CAUTION



WARNING

To avoid serious injury or death:

- Never carry passengers in the cargo bed. They can be tossed about or even thrown off, causing serious injury or death.
- Never raise the cargo bed when it is loaded, except to dump the load, and only when located in a safe place.
- Always lower the cargo bed and lock the hydraulic lift cylinder lever before driving. Driving with the cargo bed tilted may be hazardous.
- Be careful not to put any part of your body, such as hands or arms, between the bed and the vehicle.
- Drive slowly when it is loaded.

MAX. CARGO BED LOAD

Never carry loads exceeding the cargo bed capacity and the permissible cargo bed load (PCBL).






PCBL = PC - (operator + passengers + opt. + acc. + cabin) weight

- CBC: cargo bed capacity
- PC: payload capacity
- opt.: option
- acc.: accessory

Payload capacity (PC)

Payload capacity	kg (lbs)	754 (1662)
------------------	----------	------------

Quick reference table for cargo bed load

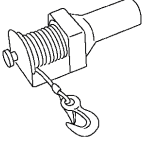
Operator*1	Passenger*1	Implement	Cargo bed capacity	Permissible cargo bed load
 95 kg	—	W: weight 	550 kg (1212 lbs.)	[ROPS type] 550 kg (1212 lbs.) - W [Cabin type] 534 kg (1177 lbs.) - W
 95 kg	 95 kg	Blade +  Winch + other opt. and acc. weight (including tongue weights)		[ROPS type] 550 kg (1212 lbs.) - W [Cabin type] 439 kg (968 lbs.) - W

*1 The calculation was made provided that the operator and the passengers weight 95 kg each.

IMPORTANT :

- Cargo bed capacity (CBC) is 550 kg (1212 lbs).
- Never carry loads exceeding the permissible cargo bed load (PCBL).
- Cargo bed load should not exceed cargo bed capacity or permissible cargo bed load.

OPENING THE CARGO BED TAILGATE

 **CAUTION**

To avoid personal injury:

- Do not sit on the tailgate.
- Do not apply loads exceeding 22.6 kg (50 lbs.) on the tailgate.
- Do not place fingers or hands between the tailgate and side gates when opening or closing.

IMPORTANT :

To avoid damage to the tailgate:

- Do not apply excessive load on the tailgate. The maximum weight on the tailgate during loading is 22.6 kg (50 lbs.).
- Do not drive with the tailgate open.
- Remove the rear trailer hitch when the wire loops are removed and the cargo bed is raised.

For loading and unloading, the tailgate of the cargo bed can be opened.


The tailgate is held level to the cargo bed floor with wire loops.

To open the tailgate

1. Release the latches on both sides of the tailgate.
2. Lower the tailgate.


To close the tailgate

1. Lift the tailgate.
2. Secure the latches on both sides of the tailgate.

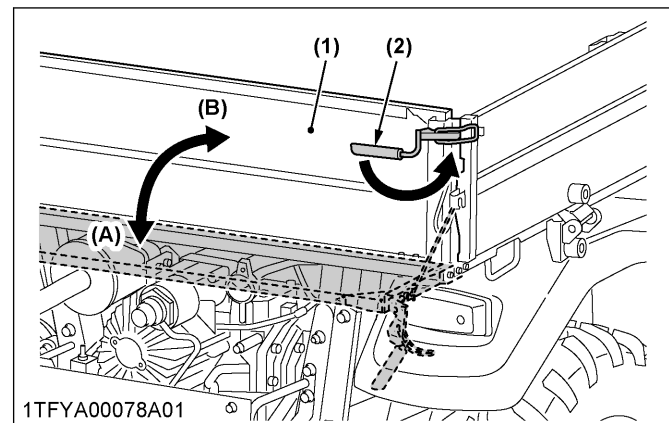

(1) Tailgate (A) "OPEN"
(2) Rear gate latch (B) "CLOSE"

OPENING THE CARGO BED SIDE GATE

 **CAUTION**

To avoid personal injury, do not place fingers or hands between the tailgate or front panel and the side gates when opening or closing.

IMPORTANT :

To avoid side gate damage:

- Remove the rear wire loop before opening the side gate.
- Do not drop the side gate when opening.
- Do not drive the vehicle with the side gates lowered.


For loading and unloading from the side of the vehicle, the side gates of the cargo bed can be opened. The side gates rest vertically on the cargo bed side bumpers when opened.

To open a side gate on either side

1. Remove the rear wire loop.
2. Release the forward and rear gate latches.
3. Lower the side gate.

To close a side gate on either side


1. Lift the side gate.
2. Secure the forward and rear gate latches.
3. Reattach the rear wire loop.

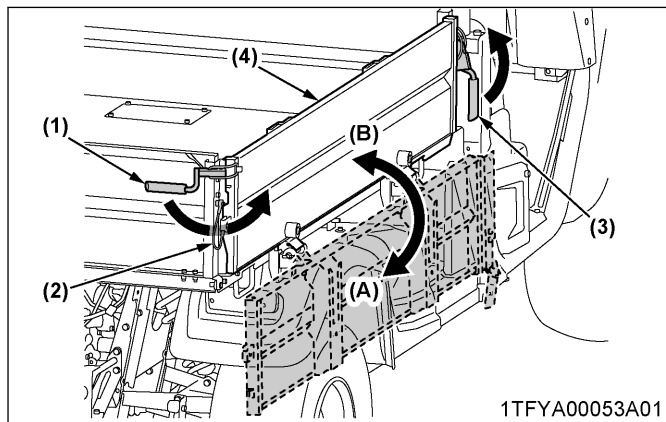

- | | |
|------------------------|-------------|
| (1) Rear gate latch | (A) "OPEN" |
| (2) Wire loop | (B) "CLOSE" |
| (3) Forward gate latch | |
| (4) Side gate | |


To lower both side gates

1. Remove the rear wire loops.
2. Release the rear gate latches.
3. Fully lower the tailgate.

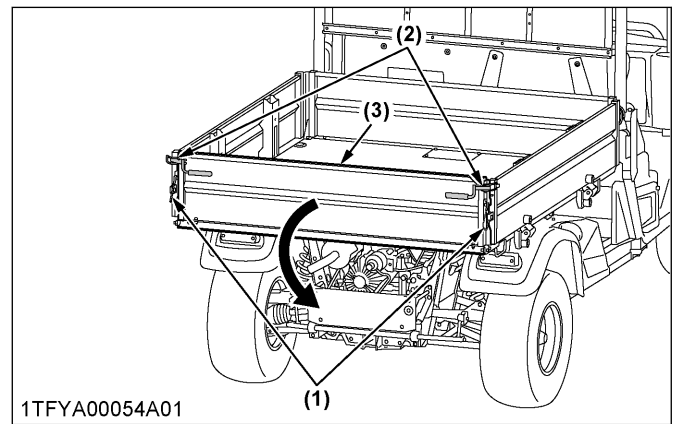


- (1) Wire loop
- (2) Rear gate latch
- (3) Tailgate

4. Release the forward gate latches.
5. Lower the side gates.

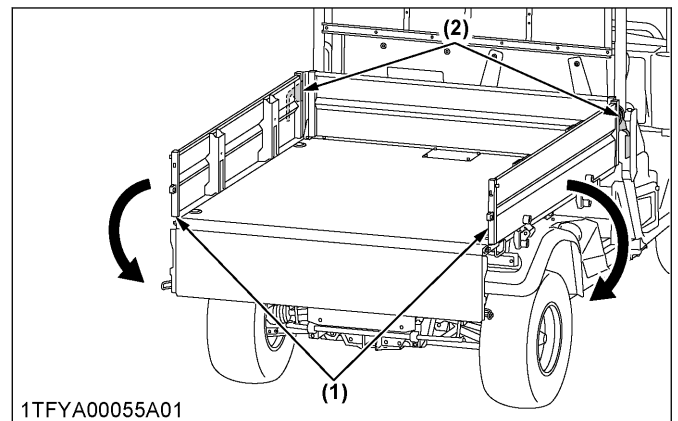

- (1) Side gate
- (2) Forward gate latch

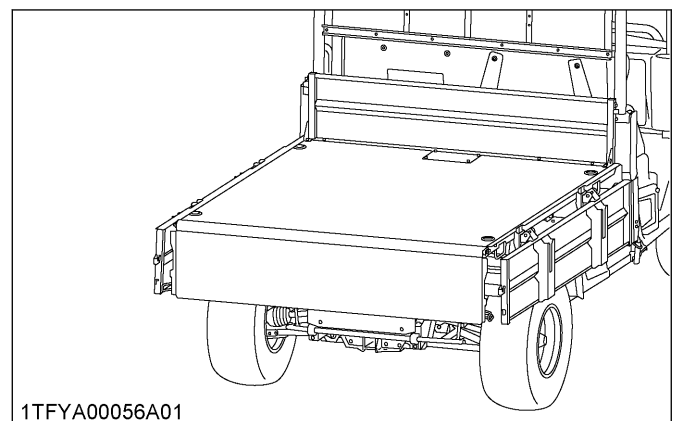

REMOVING THE TAILGATE AND SIDE GATES OF THE CARGO BED

⚠ WARNING
To avoid serious injury or death:

CARGO BED

- Do not load items larger than the cargo bed base. Items may collide with objects or persons during operation.
- Securely anchor items to the cargo bed base. Items may fall off during operation.

IMPORTANT :


To avoid gate damage:

- Always support the gates when removing or installing.
- Store the removed gates and pins in a safe location.

For loading and unloading flexibility, the side gates and tailgate of the cargo bed can be removed.


To remove the tailgate

1. Remove the rear wire loops.
2. Release the rear gate latches.
3. Fully lower the tailgate.

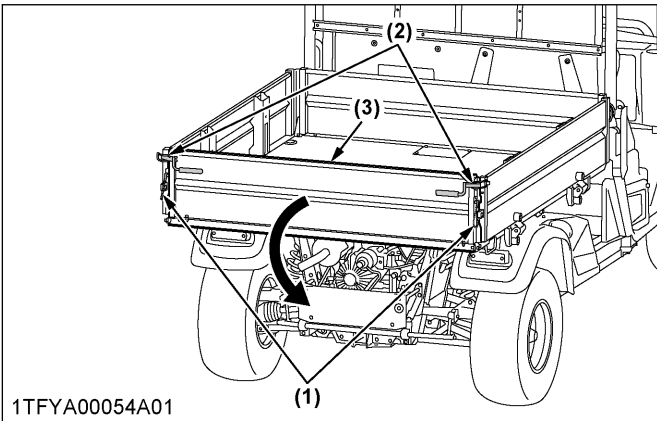

- (1) Wire loop
- (2) Rear gate latch
- (3) Tailgate

4. Remove the tailgate retention pin from the left of the tailgate.

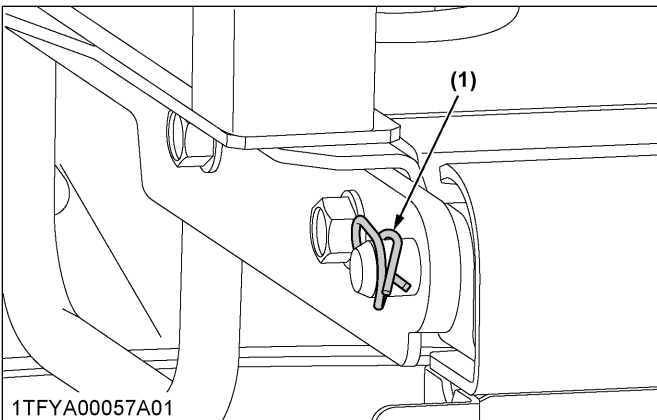


- (1) Tailgate retention pin

5. While supporting the weight of the tailgate in the fully lowered position, slide it to the right side of the vehicle to remove.

To remove the side gates


1. Release the forward gate latch.
2. While supporting the side gate in the raised position, remove the side gate retention pins and pivot pins.

Side gate retention mechanism

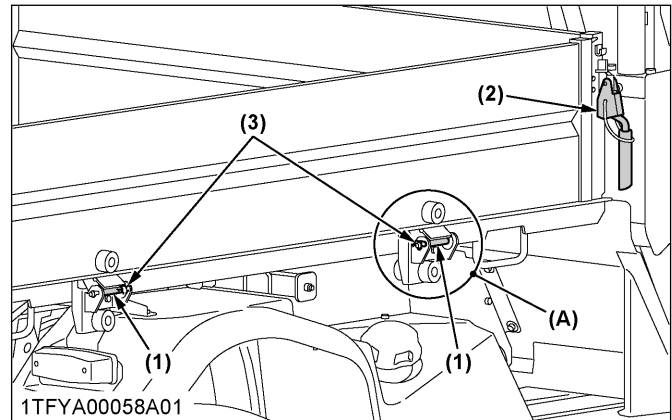

- (1) Pivot pin
 - (2) Forward gate latch
 - (3) Side gate retention pin
- (A) Enlarged view (A)

Side gate retention mechanism: Enlarged view (A)

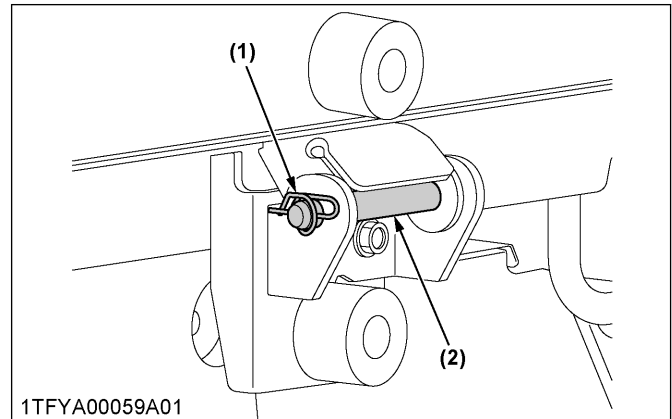

- (1) Side gate retention pin
- (2) Pivot pin

To install the side gates

1. While supporting the side gate, rest it on the cargo base and align the pivot brackets.
2. Install the pivot pins and retention pins.
3. Secure the forward gate latch.

To install the tailgate

1. While supporting the weight of the tailgate in the fully lowered position, align the pivot pins and slide it to the left side of the vehicle.
2. Install the retention pin.
3. Lift the tailgate.
4. Secure the latches on both sides of the tailgate.
5. Reinstall the wire loops.

RAISING AND LOWERING THE CARGO BED

WARNING

To avoid serious injury or death:


- Make sure that the vehicle is on a firm, level surface and the parking brake is applied before raising the cargo bed.
- If the vehicle is facing uphill with the cargo bed raised, the weight of the cargo bed may cause the vehicle tip.
- When servicing under the bed raised with the lift cylinder, make sure that the safety support is properly mounted.
- Do not operate the hydraulic lift cylinder lever (or hydraulic outlet lever) when driving. Otherwise loss of control or failure of the power steering could occur.

To raise the cargo bed

1. Start the engine.
2. Release the restricting plate.
3. Pull up the hydraulic lift cylinder lever to raise the cargo bed.
4. Return the hydraulic lift cylinder lever to the "NEUTRAL" position immediately after raising the cargo bed.
5. Mount the safety support.

To mount the safety support


1. Move the safety support from the hook to the hydraulic lift cylinder as shown in the figures.

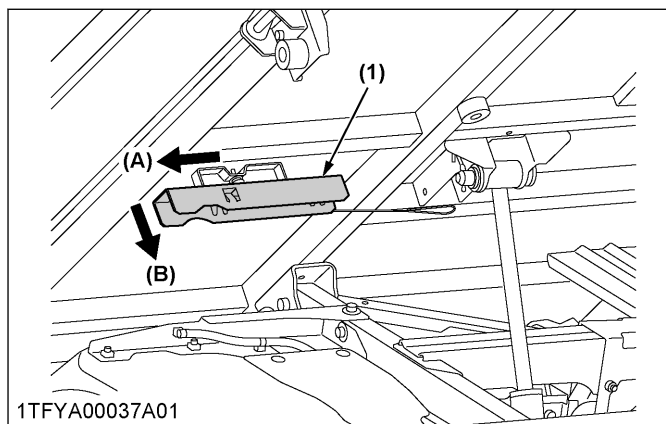

1TFYA00037A01

(1) Safety support

(A) "UNLOCK"
(B) "MOVE"

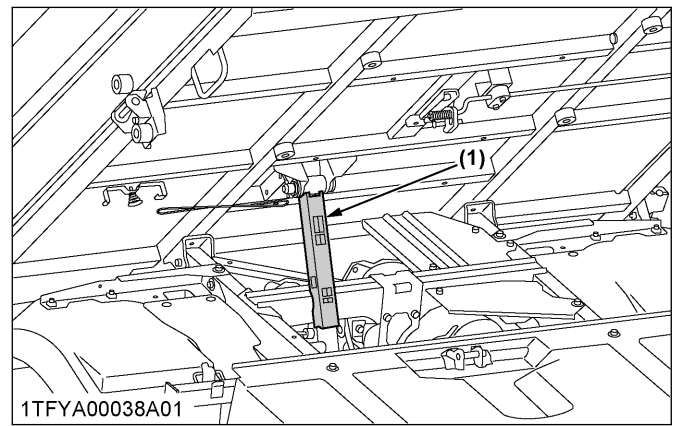


1TFYA00038A01

(1) Safety support


NOTE :

- When setting the safety support in place, insert the hooks into the holes of safety support and lock it.

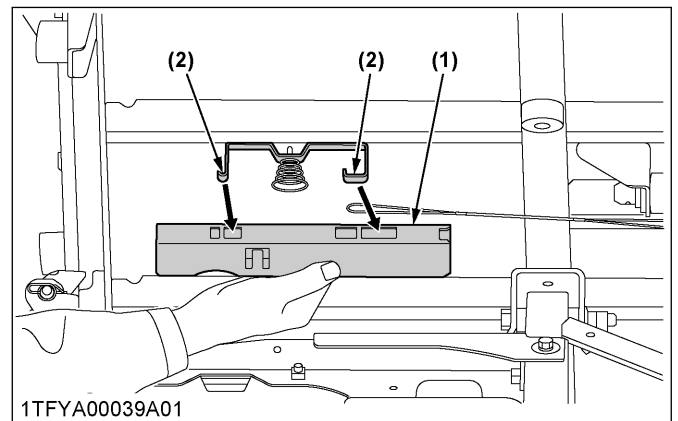

1TFYA00039A01

(1) Safety support
(2) Hook

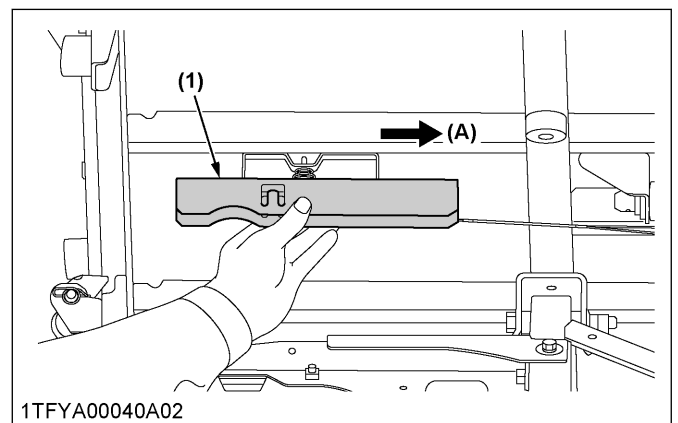

1TFYA00040A02

(1) Safety support

(A) "LOCK"

To lower the cargo bed

1. Remove the safety support.
2. Shift the hydraulic lift cylinder lever to the "DOWN" position.
3. Lower the cargo bed.

4. After making sure that the bed has been lowered to the lowest position, return the lever to the "NEUTRAL" position.
5. Lock the lever with the restricting plate.

IMPORTANT :


Do not hold the lever in the "UP" or "DOWN" position once the remote cylinder has reached the end of its stroke, as this will cause oil to flow through the relief valve. Forcing oil through the relief valve for extended periods will overheat the oil.

Continuing to use the lever may cause oil temperature to rise excessively.

Using the "FLOAT" position

If the cargo bed cannot be raised or lowered due to trouble with the engine or hydraulic system, the cargo bed can be raised or lowered manually.

1. Shift the lever to the "FLOAT" position.

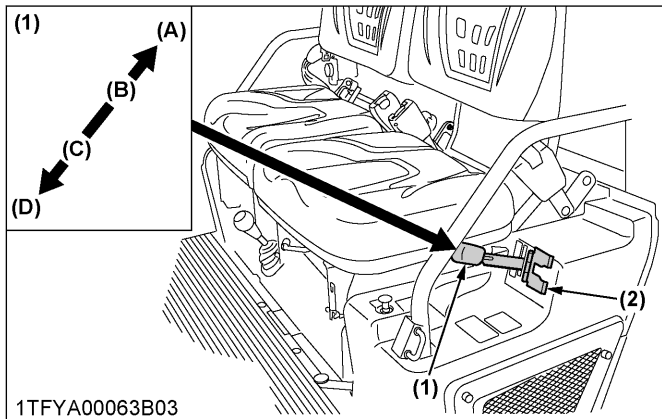


- | | |
|-----------------------------------|-------------------------|
| (1) Hydraulic lift cylinder lever | (A) "UP" |
| (2) Restricting plate | (B) "NEUTRAL" |
| | (C) "DOWN" |
| | (D) "FLOAT with detent" |

To lock the cargo bed in the lowered position

1. Lower the cargo bed.
2. Pull the lock lever out and rotate down to the locked position.
3. Release the lever.

To unlock the cargo bed

1. Pull the lock lever out and rotate up to the unlocked position.
2. Release the lever.

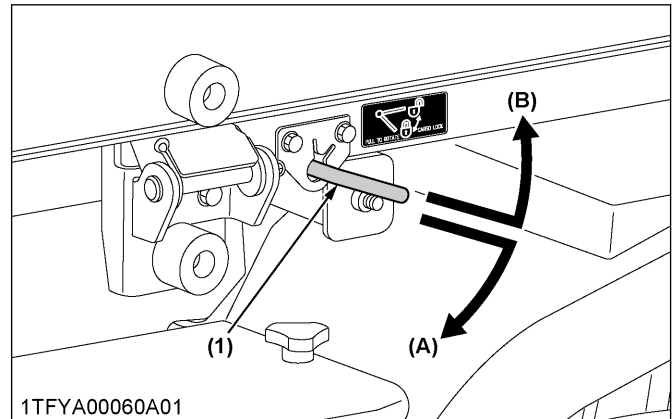

- | | |
|--------------------------|--------------|
| (1) Cargo bed lock lever | (A) "LOCK" |
| | (B) "UNLOCK" |

OPERATING THE CARGO BED LOCK

The cargo bed is equipped with a lock to prevent unintentional raising of the cargo bed when a load or weight is isolated at the rear of the cargo bed.

Kubota recommends that you do not store or transport cargo isolated at the rear of the cargo bed.

IMPORTANT :

- Lock the cargo bed before loading items into the cargo bed. When a load is applied on the rear of the cargo bed, the cargo bed may rise unintentionally.
- Unlock the cargo bed before raising the cargo bed. Attempting to raise the cargo bed using the hydraulic lift cylinder lever without unlocking could damage the locking mechanism.

HYDRAULIC OUTLET

HYDRAULIC OUTLET (IF EQUIPPED)


1. Hydraulic outlet lever

WARNING


To avoid serious injury or death, shift the range gear shift lever to the **“NEUTRAL”** position, and lock the parking brake lever firmly when you leave the vehicle while the engine is running.

Steps for operation


1. Remove the hydraulic hoses for hydraulic dump.
2. Clamp the hydraulic hoses so that they are not caught in rotary objects.
3. Check the outlet and return directions of the hydraulic coupler and then connect the hydraulic hose.
4. Make sure that the hydraulic outlet lever at the side of the working vehicle is in the **“OFF”** position.
5. Shift the hydraulic outlet lever to the **“A”** position or **“C”** position according to the implement of use.
6. Lock the hydraulic outlet lever at the **“OFF”** position with the restricting plate after use.

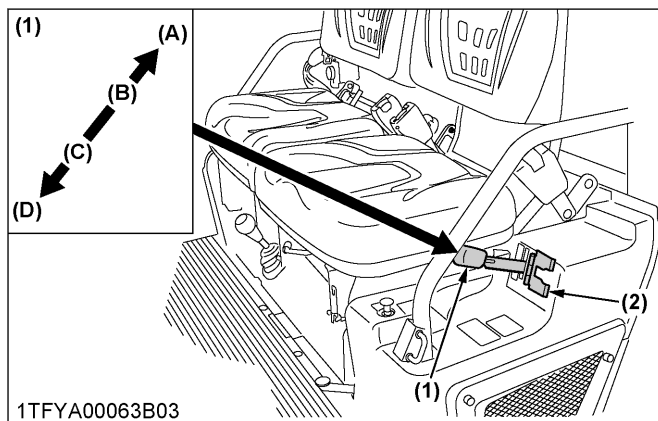

- (1) Hydraulic outlet lever (if equipped)
- (2) Restricting plate
- (A) “ON”
- (B) “OFF”
- (C) “ON”
- (D) “FLOAT with detent”

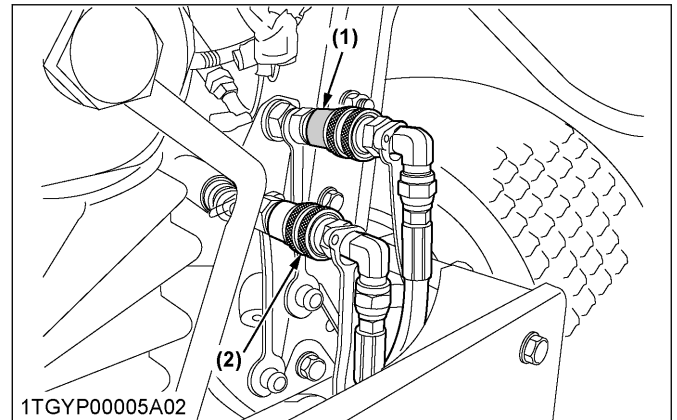

- (1) Hydraulic outlet (if equipped) (yellow)
- (2) Hydraulic outlet (if equipped) (white)



Lever		Pull (A)		Push (C)	
Port	(yellow)	OUT	→	IN	←
	(white)	IN	←	OUT	→

IMPORTANT :

- Do not hold the hydraulic outlet lever in the **“PULL”** or **“PUSH”** position once the remote cylinder has reached the end of its stroke, as this will cause oil to flow through the relief valve. Forcing oil through the relief valve for extended periods will overheat the oil.
- Continuing to use the hydraulic outlet lever may cause oil temperature to rise excessively. The use of oil at a high temperature causes the seals to become damaged and fail.
- Shift the hydraulic outlet lever to the **“OFF”** position and then stop the engine.
- Because of the safety devices, the engine will not start except when the hydraulic outlet lever is placed in the **“OFF”** position and the range gear shift lever is placed in the **“NEUTRAL”** position.
- Do not operate the hydraulic outlet lever when driving. Otherwise loss of control or failure of the power steering could occur.
- Do not use a hydraulic implement which has a hydraulic motor except those approved by Kubota.

2. Connecting and disconnecting the hydraulic outlet valve coupler


WARNING

To avoid serious injury or death:

- Stop the engine and relieve pressure before connecting or disconnecting lines.
- Do not use your hand to check for leaks.
- Make sure that couplers are locked securely after connecting them.
- Always wear protective gloves when handling hydraulic tools, hoses, and couplers.

Connecting


1. Remove dust plugs.
2. Clean both couplers.
3. Insert the implement coupler to the vehicle hydraulic coupler.
4. Pull the implement coupler slightly to make sure that couplers are firmly connected.

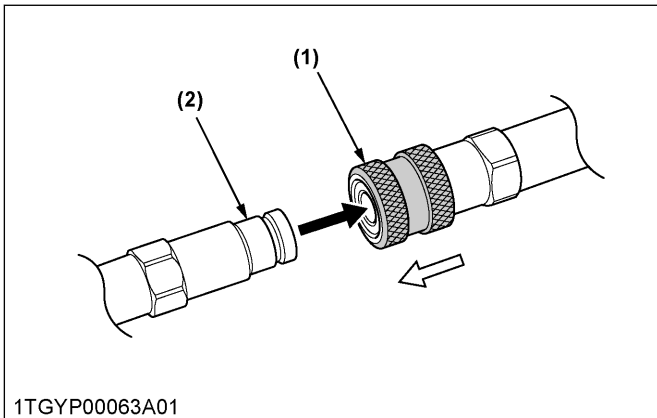

- (1) Ring of female coupler
(2) Male coupler

Disconnecting

1. Lower the implement first to the ground to relieve hydraulic pressure in the hoses.
2. Clean the couplers.
3. Relieve pressure by moving hydraulic control levers with the engine shut off.
4. Pull the hose straight from the hydraulic coupler while pulling the ring to release it.
5. Clean oil and dust from the coupler.
6. Replace the dust plugs.

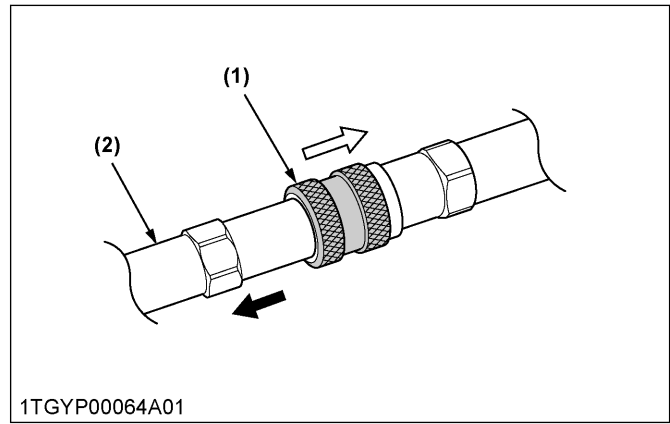

- (1) Ring of female coupler
(2) Male coupler

NOTE :

- Your local Kubota dealer can supply parts to adapt couplers to hydraulic hoses.

TIRES AND WHEELS

TIRES

⚠ WARNING
To avoid serious injury or death:

- Do not attempt to mount a tire on a rim. This should be done by a qualified person with the proper equipment.
- Always maintain the correct tire pressure. Do not inflate tires above the recommended pressure shown in the Operator's Manual.


IMPORTANT :

- Do not use tires other than those approved by Kubota.

1. Inflation pressure

Though the tire pressure is factory-set to the prescribed level, it naturally drops slowly in the course of time. Thus, check it everyday at ambient temperature and inflate as necessary.


Tire size	Cargo bed load condition	
	0 kg to 249 kg (0 lbs. to 550 lbs.)	249 kg to 550 kg (550 lbs. to 1212 lbs.)
25 × 10 - 12 HDWS, front and rear	Front: 0.14 MPa (1.4 kgf/cm ² , 20 psi) Rear: 0.14 MPa (1.4 kgf/cm ² , 20 psi)	Front: 0.14 MPa (1.4 kgf/cm ² , 20 psi) Rear: 0.17 MPa (1.7 kgf/cm ² , 24 psi)
25 × 10 - 12 ATV, front and rear		

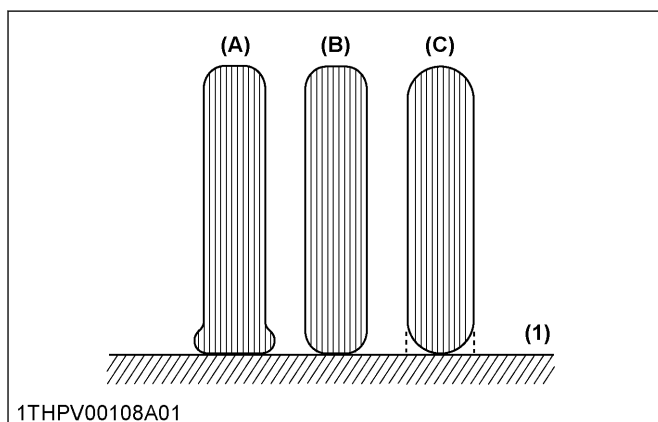


1THPV00108A01
 (1) Ground
 (A) "INSUFFICIENT"
 (B) "NORMAL"
 (C) "EXCESSIVE"

2. Tire type and use

Heavy duty work site tire

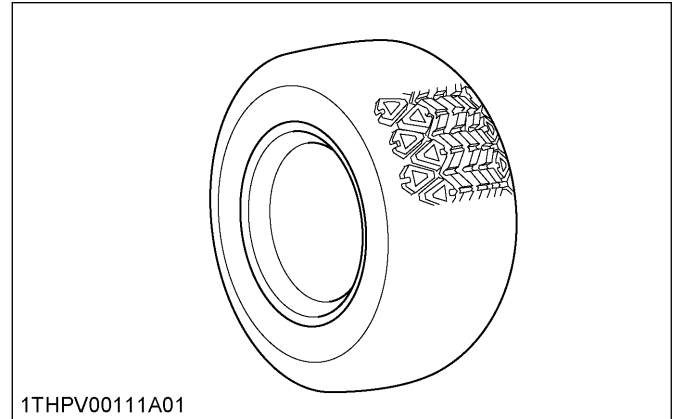

All terrain vehicle tire

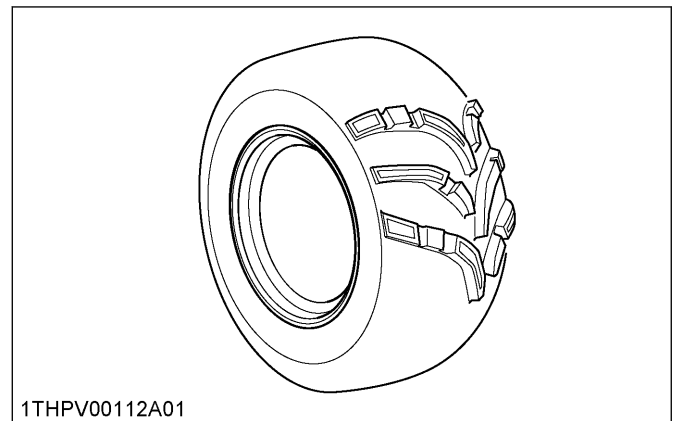


WHEELS

⚠ WARNING
To avoid serious injury or death:

- Support the vehicle securely on stands before removing a wheel.
- Never operate the vehicle with loose wheel nuts.


IMPORTANT :

- When re-fitting a wheel, tighten the nuts to the following torques then recheck after driving the vehicle 200 m (220 yards), tighten the nuts again, after driving in 10 hours, and thereafter according to service interval.

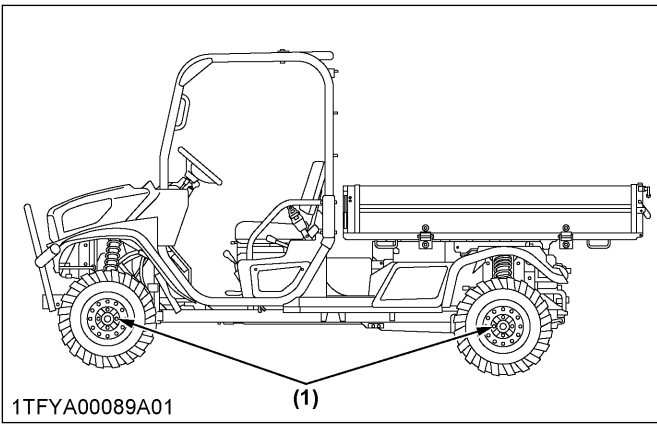

(1) Wheel nut

Tightening torque	108 N·m to 130 N·m 11.1 kgf·m to 13.2 kgf·m 79.7 lbf·ft to 95.8 lbf·ft
-------------------	--

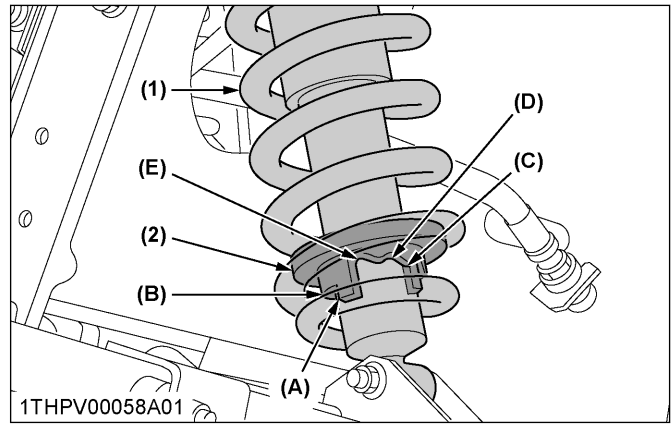

(1) Rear shock absorber
(2) Adjusting sleeve

(A) Position 1
(B) Position 2
(C) Position 3
(D) Position 4
(E) Position 5

SHOCK ABSORBERS

1. Shock absorber spring adjustment

The front and rear shock absorber springs can be adjusted for different riding and loading condition.

Shock absorber position

Position	Spring	Load
1	Stronger	Heavy
2	↑	↑
3 (default)		
4	↓	↓
5	Weaker	Light

NOTE :

- If you have any difficulty with the adjustment, contact your local Kubota dealer.
- If the vehicle is equipped with a cab, the front and rear shock absorber positions are set to position 1.

The front and rear shock absorber springs are adjusted to third position (default) in the following figure.

To adjust the shock absorber springs, turn the adjusting sleeves with a hook wrench.

TOWING AND TRANSPORTING

TOWING AND TRANSPORTING

1. Rear trailer hitch (if equipped)

! WARNING


To avoid serious injury or death:

- Always tow a load slowly enough to maintain control and avoid tipping.
- To provide adequate braking ability and traction, do not tow a load unless the vehicle cargo bed is loaded or an attachment is installed.
- Attach a trailer to the trailer hitch only.

Details regarding the rear trailer hitch load can be found in a different section.

(See VEHICLE LIMITATIONS on page 25.)

When towing other equipment, use a safety chain.

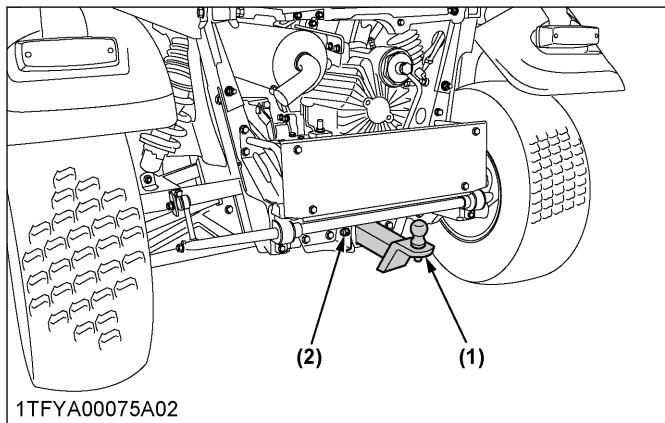

- (1) Rear trailer hitch (if equipped)
(2) Hitch pin (if equipped)

2. Front trailer hitch (if equipped)


! WARNING

To avoid serious injury or death, do not tow with this vehicle unless all the functions of the vehicle are properly working, since the malfunction of steering operation or braking may cause an accident.

Use the front trailer hitch for greater maneuverability in confined areas such as a barn.

Details regarding the front trailer hitch load can be found in a different section.

(See VEHICLE LIMITATIONS on page 25.)

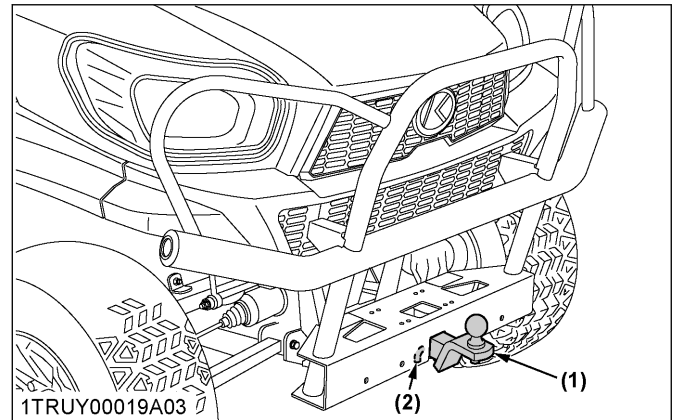


- (1) Front trailer hitch (if equipped)
(2) Hitch pin (if equipped)

3. Winch mount bracket

! WARNING

Before using the optional winch, read the Instruction Manual attached to the winch thoroughly.

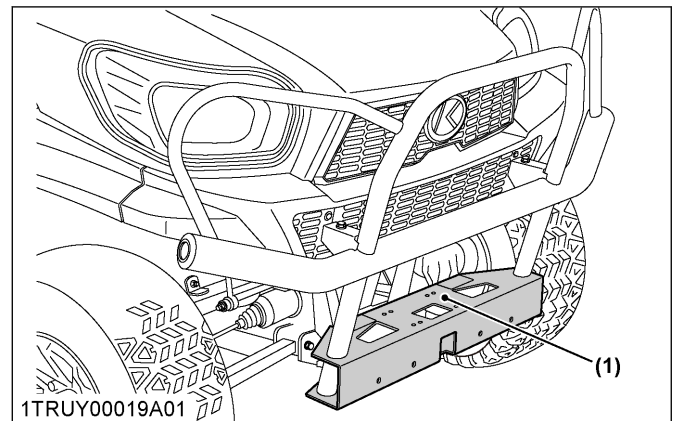

- (1) Winch mount bracket

4. Transporting the vehicle safely

Pay attention to the following points when transporting the vehicle.

1. Apply the parking brake and place chocks against the front and rear tires.
2. Secure the portions of the vehicle, which are shown in the following figure, by using adequate straps or chains.


- When transporting the vehicle on a truck or trailer, always comply with federal and/or local regulations for securement.

IMPORTANT :

- Do not apply the straps and chains to the rear stabilizer.


Follow these instructions when towing the vehicle. Otherwise, the vehicle's powertrain may get damaged.

- Set the all shift levers to the "NEUTRAL" position.
- If possible, start the engine and select 2WD. If creep speed is fitted, ensure that it is disengaged.
- Tow the vehicle using its front hitch or drawbar.
- Never tow faster than 10 km/h (6.2 mph).

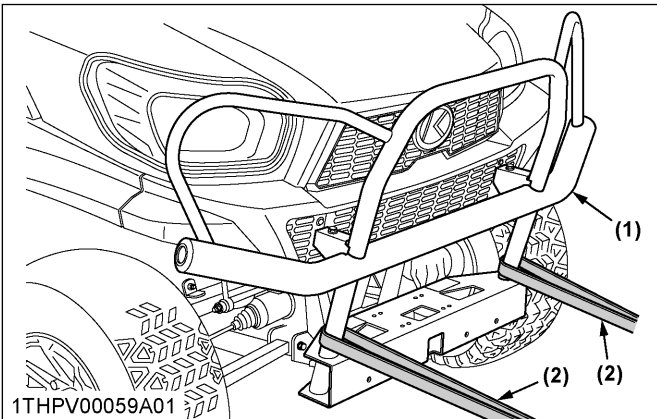


- Front guard
- Heavy-duty strap

Rear view with straps

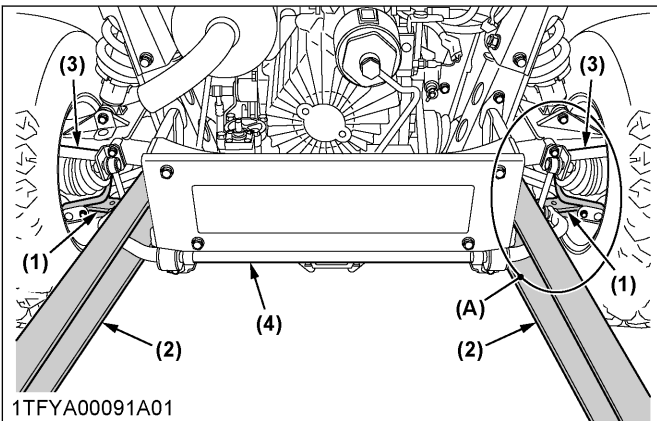

- Lower arm
 - Heavy-duty strap
 - A-arm
 - Rear stabilizer
- (A) Enlarged view (A)

Rear view with straps: Enlarged view (A)

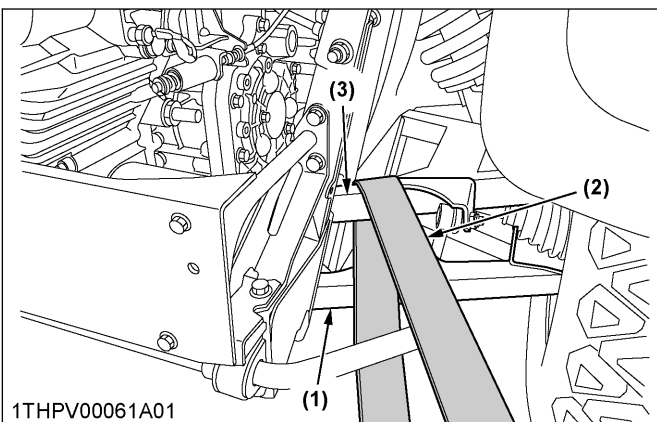

- Lower arm
- Heavy-duty strap
- A-arm

MAINTENANCE

 **WARNING**

To avoid serious injury, death or vehicle damage:

- Be sure you have sufficient knowledge, experience, the proper replacement parts and tools before you attempt any vehicle maintenance task.
- If you do not have the knowledge and equipment which are necessary to perform the maintenance task, contact your local Kubota dealer.
- Have your local Kubota dealer perform inspection of the items which are marked *2 in the following chart.

SERVICE INTERVALS

Maintenance parts		Maintenance timing										Interval	Ref. page			
		Indication on hour meter														
		50	100	150	200	250	300	350	400	450	500					
Engine start system	Check	○	○	○	○	○	○	○	○	○	○	Every 50 hrs	78			
Greasing (except DT shaft bearing)	Apply	○	○	○	○	○	○	○	○	○	○		77			
Wheel fastener torque	Check	⊙	○		○		○		○		○	Every 100 hrs	79	*1		
Engine oil	Change	⊙			○				○			Every 200 hrs	87	*1		
Engine oil filter	Replace	⊙			○				○				86	*1		
Transmission oil filter (VHT) (yellow color)	Replace	⊙			○				○				88	*1		
Transmission oil filter (suction) (black color)	Replace	⊙			○				○				88	*1		
Brake pedal	Check	⊙			○				○				90	*1 *2		
Parking brake	Adjust	⊙			○				○				85	*1		
Brake light switch	Check	⊙			○				○				90	*1		
Front brake case	Check	⊙			○				○				90	*1		
Tire wear	Check	⊙							○				Every 300 hrs	91	*1	
Battery condition	Check		○		○				○		○		Every 100 hrs	82	*3	
Alternator belt	Adjust		○		○				○		○	80				
VHT neutral spring	Check		○		○				○		○	79		*2		
VHT pressure release	Check		○		○				○		○	79		*2		
Toe-in	Adjust		○		○				○		○	84				
Muffler (spark arrester)	Clean		○		○				○		○	84				
Exhaust system	Check		○		○				○		○	85				
Fuel filter element	Check		○		○				○		○	81				
	Replace								○			Every 400 hrs		93	*2	@
Air cleaner element	Clean		○		○				○		○	Every 100 hrs		80	*4	@

(Continued)

MAINTENANCE

Maintenance parts		Maintenance timing										Ref. page			
		Indication on hour meter													Interval
		50	100	150	200	250	300	350	400	450	500				
Air cleaner element	Replace	Every 1000 hrs or 1 year										93	*5	@	
Greasing (DT shaft bearing)	Apply				○				○			Every 200 hrs	86		
Hydraulic tank oil	Change				○				○				89		
Suspension arm bushings	Check				○				○			Every 200 hrs or 3,000 km	91	*2 *6	
Transmission fluid	Change								○				Every 400 hrs	92	
Front axle case oil	Change								○			92			
Front knuckle case oil	Change								○			91			
Engine valve clearance	Adjust	Every 800 hrs										93	*2		
Fuel injection nozzle injection pressure	Check	Every 1500 hrs										93	*2	@	
Cooling system	Flush	Every 2000 hrs or 2 years										93	*7		
Coolant	Change											93	*7		
Injection pump	Check	Every 3000 hrs										95	*2	@	
Radiator hoses and clamps	Check	Every 1 year										96	*8		
	Check	Every 2 years										99	*2		
Hydraulic oil line	Check	Every 1 year										95	*8		
	Check	Every 2 years										99	*2		
Engine breather hose	Check	Every 1 year										98	*8		
	Check	Every 2 years										99	*2		
Brake hose and pipe	Check	Every 1 year										98	*8		
	Check	Every 2 years										99	*2		
Fuel line	Check	Every 1 year										95	*8	@	
	Replace	Every 4 years										99			
Intake air line	Check	Every 1 year										97	*8	@	
	Replace	Every 4 years										100	*2		
Brake fluid	Change	Every 2 years										99	*2		
Brake master cylinder (inner parts)	Replace	Every 4 years										99	*2		
Rear brake cylinder seal	Replace											100	*2		
Front brake seal	Replace											99	*2		
Fuel system	Bleed	Service as required										100			
Fuse	Replace											100			
Around the engine	Clean											100			
Light bulb	Replace											101			
Hydraulic tank	Check											101			

*1 The initial 50 hours should not be a replacement (check, change or adjustment) cycle.

*2 Contact your local Kubota dealer for this service.

*3 When the battery is used for less than 100 hours per year, check the battery condition by reading the indicator annually.

*4 Air cleaner should be cleaned more often in dusty conditions than in normal conditions.

*5 Every 1000 hours or every 1 year whichever comes first.

*6 Every 200 hours or 3,000 km, whichever comes first.

*7 Every 2000 hours or every 2 years whichever comes first.

*8 Replace if any deterioration (crack, hardening, scar, or deformation) or damage occurred.

IMPORTANT :

- The jobs indicated by ☉ must be done after the first 50 hours of operation.
- The items listed in the previous chart (@marked) are registered as emission related critical parts by Kubota in the U.S.EPA non road emission regulation. As the engine owner, you are responsible for the performance of the required maintenance on the engine according to the below instruction. Please see Warranty Statement in detail.
- When using biodiesel, check the maintenance requirements of biodiesel fuel as the intervals will change in some of the items.

LUBRICANTS, FUEL, AND COOLANT


No.	Location		Capacity	Lubricant, fuel, and coolant	
(1)	Fuel		30 L (7.9 U.S.gals.)	No. 2-D diesel fuel No. 1-D diesel fuel if temperature is below -10 °C (14 °F)	
(2)	Coolant (with reserve tank)		7.6 L (8.0 U.S.qts.)	Fresh clean water with antifreeze	
(3)	Engine crankcase	Filter ex- changed	4.1 L (4.3 U.S.qts.)	<ul style="list-style-type: none"> Engine oil: API service classification (See following "Engine oil".) 	
		Filter not exchanged	3.8 L (4.0 U.S.qts.)	Above 25 °C (77 °F)	SAE30, SAE10W-30 or 15W-40
				0 to 25 °C (32 to 77 °F)	SAE20, SAE10W-30 or 15W-40
		Below 0 °C (32 °F)	SAE10W, SAE10W-30		
(4)	Transmission case		7.0 L (1.8 U.S.gals.)	Kubota SUPER UDT2 fluid *1	
(5)	Front axle case		0.6 L (0.6 U.S.qts.)		
(6)	Front knuckle case		Ref. 0.25 L (0.26 U.S.qts.)		
(7)	Hydraulic tank oil		18.0 L (19.0 U.S.qts.)		
(8)	Brake fluid (reservoir and lines)		0.4 L (0.4 U.S.qts.)	Kubota DOT-3 GENUINE BRAKE FLUID or Kubota DOT-4 GENUINE BRAKE FLUID	

*1 The product name of Kubota genuine UDT fluid may be different from that in the Operator's Manual depending on countries or territories. Contact your local Kubota dealer for further detail.

NOTE :

- Indicated capacities of water and oil are manufacturer's estimate.

Oil inlets for Kubota UDT (No. (4) to No. (7) in the previous table)

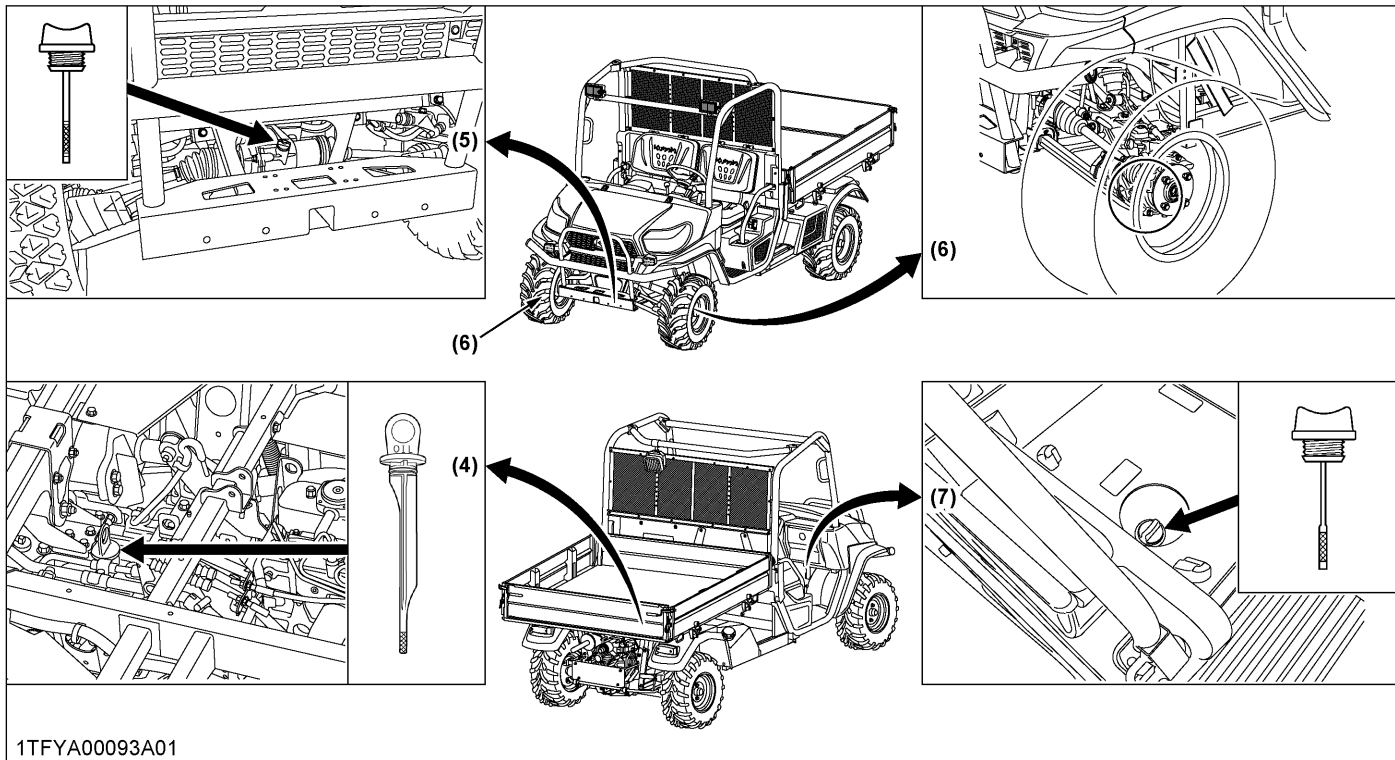

1TFYA00093A01

NOTE :

- The oil rooms for No. (4) and No. (7) are separated.

Greasing	No. of greasing points	Capacity	Type of grease
Parking brake lever	2	Moderate amount	Multipurpose EP2 grease (NLGI grade No. 2)
Battery terminal	2		
Cargo lift cylinder pivot	1	Until grease overflows	
Cargo bed pivot	2	Moderate amount	
VHT link	2	Until grease overflows	
	1	Moderate amount	
Valve lever link	1		
4WD lever link	1		
Range gear shift link	1		
Unload link	1		
Differential lock pedal	2		
DT shaft bearing	1	Until grease overflows	
Front A-ARM	6		
Rear A-ARM	8		
Parking brake link	1	Moderate amount	Antirust silicone grease
Hand throttle cable (if equipped)	—		

1. For North American market

Engine oil:

NOTE :

- Oil used in the engine should have an American Petroleum Institute (API) service classification and Proper SAE engine oil according to the ambient temperatures as shown previously.
- Refer to the following table for the suitable API classification engine oil according to the engine type (with internal EGR, external EGR or non-EGR) and the fuel.

Fuel used	Engine oil classification (API classification)	
	Oil class of engines except external EGR	Oil class of engines with external EGR
Ultra low sulfur fuel [<0.0015 % (15 ppm)]	CF, CF-4, CG-4, CH-4 or CI-4	CF or CI-4 (Class CF-4, CG-4 and CH-4 engine oils cannot be used on EGR type engines)

EGR: Exhaust Gas Re-circulation

- The CJ-4 engine oil is intended for diesel particulate filter (DPF) type engines, and cannot be used on this vehicle.

	Except external EGR	With external EGR
Model	RTV-1130	—

Fuel:

NOTE :

- Cetane number of 45 is minimum. Cetane number greater than 50 is preferred, especially for temperatures below -20 °C (-4 °F) or elevations above 1500 m (5000 ft).
- Diesel fuels specified to EN 590 or ASTM D975 are recommended.
- No. 2-D is a distillate fuel of lower volatility for engines in industrial and heavy mobile service. (SAE J313 JUN87)

Transmission oil:

To complete lubrication of the transmission, it is important that a multi-grade transmission fluid is used in this system. We recommend the use of Kubota genuine fluid for optimum protection and performance. (See LUBRICANTS, FUEL, AND COOLANT on page 62.) Contact your local Kubota dealer for further detail. Do not mix different brands together.

Hydraulic tank oil:

To insure proper operation of the hydraulic and VHT system, it is important that a multi-grade transmission fluid is used in this system. We recommend the use of Kubota genuine fluid for optimum protection and performance. (See LUBRICANTS, FUEL, AND COOLANT on page 62.) Contact your local Kubota dealer for further detail. Do not mix different brands together.

Brake fluid:

Always use **Kubota DOT-3 GENUINE BRAKE FLUID** or **Kubota DOT-4 GENUINE BRAKE FLUID** from a sealed container. If it is not available, you should use only DOT-3 or DOT-4 fluid other than **Kubota GENUINE BRAKE FLUID** as a temporary replacement from a sealed container. However, the use of DOT-3 or DOT-4 fluid other than **Kubota GENUINE BRAKE FLUID** can cause corrosion and decrease the life of the system. When you use DOT-3 or DOT-4 fluid other than **Kubota GENUINE BRAKE FLUID**, have the brake system flushed and refilled with **Kubota GENUINE BRAKE FLUID** as soon as possible. Use the **Kubota GENUINE BRAKE FLUID** (DOT-3 or DOT-4) indicated on the filler cap and the label beside it. Do not mix 2 types (DOT-3 and DOT-4) and any brands of fluid for use in the brakes. Change the brake fluid every 2 years and any time the fluid becomes contaminated or if the type and brand of the fluid in the reservoir are unknown.

2. For other than North American market

Engine oil:

NOTE :

- Oil used in the engine should have an American Petroleum Institute (API) service classification and Proper SAE engine oil according to the ambient temperatures as shown previously.
- With the emission control now in effect, the CF-4 and CG-4 lubricating oils have been developed for use of a low-sulfur fuel on on-road vehicle engines. When an off-road vehicle engine runs on a high-sulfur fuel, it is advisable to use the "CF or better" lubricating oil with a high total base number (TBN of 10 minimum).
- Refer to the following table for the suitable API classification engine oil according to the engine type (with internal EGR, external EGR or non-EGR) and the fuel (low-sulfur or high-sulfur fuel).

Fuel used	Engine oil classification (API classification)	
	Oil class of engines except external EGR	Oil class of engines with external EGR
High sulfur fuel (≥ 0.05 % (500 ppm))	CF (If the "CF-4", "CG-4", "CH-4" or "CI-4" lubricating oil is used with a high-sulfur fuel, change the lubricating oil at shorter intervals. (approximately half))	—
Low sulfur fuel (<0.05 % (500 ppm)) or ultra low sulfur fuel (<0.0015 % (15 ppm))	CF, CF-4, CG-4, CH-4 or CI-4	CF or CI-4 (Class CF-4, CG-4 and CH-4 engine oils cannot be used on EGR type engines)

EGR: Exhaust Gas Re-circulation

- The CJ-4 engine oil is intended for diesel particulate filter (DPF) type engines, and cannot be used on this vehicle.

	Except external EGR	With external EGR
Model	RTV-1130	—

Fuel:

NOTE :

- Cetane number of 45 is minimum. Cetane number greater than 50 is preferred, especially for temperatures below -20 °C or elevations above 1500 m.
- If diesel fuel with sulfur content greater than 0.5 % (5000 ppm) is used, reduce the service interval for engine oil and filter by 50 %.
- Never use diesel fuel with sulfur content greater than 0.05 % (500 ppm) for external EGR type engine.
- Do not use diesel fuel with sulfur content greater than 1.0 % (10000 ppm).
- Diesel fuels specified to EN 590 or ASTM D975 are recommended.
- No. 2-D is a distillate fuel of lower volatility for engines in industrial and heavy mobile service. (SAE J313 JUN87)

Transmission oil:

To complete lubrication of the transmission, it is important that a multi-grade transmission fluid is used in this system. We recommend the use of Kubota genuine fluid for optimum protection and performance.

(See LUBRICANTS, FUEL, AND COOLANT on page 62.)

Contact your local Kubota dealer for further detail.

Do not mix different brands together.

Hydraulic tank oil:

To insure proper operation of the hydraulic and VHT system, it is important that a multi-grade transmission fluid is used in this system. We recommend the use of Kubota genuine fluid for optimum protection and performance.

(See LUBRICANTS, FUEL, AND COOLANT on page 62.)

Contact your local Kubota dealer for further detail.

Do not mix different brands together.

Brake fluid:

Always use **Kubota DOT-3 GENUINE BRAKE FLUID** or **Kubota DOT-4 GENUINE BRAKE FLUID** from a sealed container. If it is not available, you should use only DOT-3 or DOT-4 fluid other than **Kubota GENUINE BRAKE FLUID** as a temporary replacement from a sealed container.

However, the use of DOT-3 or DOT-4 fluid other than **Kubota GENUINE BRAKE FLUID** can cause corrosion and decrease the life of the system.

When you use DOT-3 or DOT-4 fluid other than **Kubota GENUINE BRAKE FLUID**, have the brake system flushed and refilled with **Kubota GENUINE BRAKE FLUID** as soon as possible.

Use the **Kubota GENUINE BRAKE FLUID** (DOT-3 or DOT-4) indicated on the filler cap and the label beside it.

Do not mix 2 types (DOT-3 and DOT-4) and any brands of fluid for use in the brakes.

Change the brake fluid every 2 years and any time the fluid becomes contaminated or if the type and brand of the fluid in the reservoir are unknown.

BIODIESEL FUEL (BDF)

B0-B20 biodiesel fuels (BDF): mixed diesel fuels containing 20 % or less biodiesel can be utilized under the following conditions.

IMPORTANT :

- **Refueling and handling fuel should be done with caution in order to avoid contact with the fuel and spillage that could create a potential environmental or fire hazard. Wear appropriate protective equipment when refueling.**

1. Applicable BDF

1. Blended diesel fuels containing 6 % through 20 % BDF (B6 - B20) which comply with American Society for Testing and Materials (ASTM) D7467 standard, as revised, can be used without adversely affecting the performance and durability of the engine and fuel system components.
2. Any mineral oil diesel fuel, if used, must conform to ASTM D975 (or the European EN590) standard, as revised. B100 fuel used to make biodiesel blended fuels must meet ASTM D6751 (or EN14214) standard, as revised. The final blended fuel B20 must conform to ASTM D7467 standard, as revised. Straight vegetable oil is not allowed in any blended fuel.
3. Allowable blended fuel is mineral oil diesel fuel blended with B100 (that is 100 % BDF). The blended fuel ratio shall be less than 20 % B100 and 80 % or more diesel fuel. The B100 source used for biodiesel blends must be purchased from an accredited BQ-9000 marketer or producer. More information about qualified marketer(s) and producer(s) can be found at <http://www.bq-9000.org> .

Preparation:

1. Before using BDF concentrations greater than B5, you are advised to replace the engine oil, engine oil filter, and fuel filter with new oil and filters. Details regarding the replacement procedures can be found in a different section. (See PERIODIC SERVICE on page 69.)

2. Product warranty, emission, and other precautions

1. The engine emission control system was certified according to current regulations based on the use of non-BDF. When using BDF, the owner is advised to check applicable local and federal emission regulations and comply with all of them.
2. BDF may cause restricted or clogged fuel filters during cold weather conditions, resulting in the engine not operating properly.
3. BDF encourages the growth of microorganisms which may cause degradation of the fuel. This in turn may cause fuel line corrosion or reduce fuel filter flow earlier than expected.

4. BDF inherently absorbs moisture which may cause degradation of the fuel earlier than expected.
To avoid this, drain the water separator and fuel filter port often.
5. Do not use biodiesel concentrations higher than 20 % (that is greater than B20).
Engine performance and fuel consumption will be affected, and degradation of the fuel system components may occur.
6. Do not readjust the engine fuel control system as this will violate emission control levels for which the equipment was approved.
7. Compared with soybean-based and rapeseed-based feedstock, palm oil-based feedstock has a thicker consistency (that is, higher viscosity) at lower temperatures.
Consequently, fuel filter performance may be reduced, particularly during cold weather conditions.
8. The Kubota warranty, as specified in the Owner's Warranty Information Guide, only covers defects in product materials and workmanship. Accordingly, any problems that may arise due to the use of poor quality fuels that fail to meet the previous requirements, whether biodiesel or mineral oil based, are not covered by the Kubota warranty.

Routine handling:

1. Avoid spilling BDF onto painted surfaces as this may damage the finish.
If fuel is spilled, immediately wipe clean and flush with soapy water to avoid permanent damage.
2. When using BDF, you are advised to maintain a full tank of fuel, especially overnight and during short term storage, to reduce condensation within the tank. Tighten the fuel cap after refueling to prevent moisture build up within the tank. Water in the biodiesel mixture will damage fuel filters and may damage engine components.

3. Maintenance requirements

3.1 When using BDF B0 through B5

Follow the recommended oil change intervals.
(See MAINTENANCE on page 59.)

Extended oil change intervals may result in premature wear or engine damage.

3.2 When using BDF B6 through B20

The maintenance intervals for fuel related parts change.
See the following table for the new maintenance intervals.

Item		Interval	Remarks
Fuel filter element	Check	Every 50 hrs	
	Replace	Every 200 hrs	Contact your local Kubota dealer for this service.
Fuel line	Check	Every 6 months	Replace if any deterioration (crack, hardening, scar, or deformation) or damage occurred.
	Replace	Every 2 years	Contact your local Kubota dealer for this service.

4. Long term storage

1. BDF easily deteriorates due to oxygen, water, heat, and foreign substances.
Do not store B6 through B20 longer than 1 month and B5 longer than 3 months.
2. When using B6 through B20 and storing the machine longer than 1 month, drain the fuel from the tanks and replace with light mineral oil diesel fuel.

Subsequently, run the engine at least 30 minutes to remove all of the biodiesel from the fuel lines.

3. When using B5 fuel and storing machine longer than 3 months, drain the fuel from the tanks and replace with light mineral oil diesel fuel.

Subsequently, run the engine at least 30 minutes to remove all of the biodiesel from the fuel lines.

PERIODIC SERVICE


⚠ WARNING
 To avoid serious injury or death, do not work under any hydraulically supported devices. They can settle, suddenly leak down, or be accidentally lowered. If it is necessary to work under vehicle or any vehicle elements for servicing or adjustment, securely support them with stands or suitable blocking beforehand.

HOW TO OPEN THE HOOD AND TILT THE SEATS

⚠ WARNING
 To avoid serious injury or death from contact with moving parts, never open the cover under the seat while the engine is running unless servicing requires such access.

1. Opening the hood

- To open the hood**
1. Pull the latch lever toward the left side of the machine.
 Result: The hood latch is released.
 2. Open the hood.

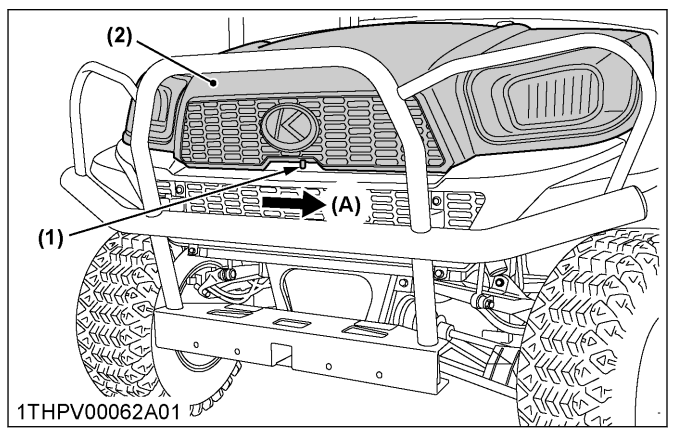


(1) Latch lever (A) "RELEASE"
 (2) Hood

- To close the hood**
1. Press down the hood with both hands.
 Result: The hood latch is engaged.

2. Tilting the seats

1. To open the seats, raise the seats to forward position.

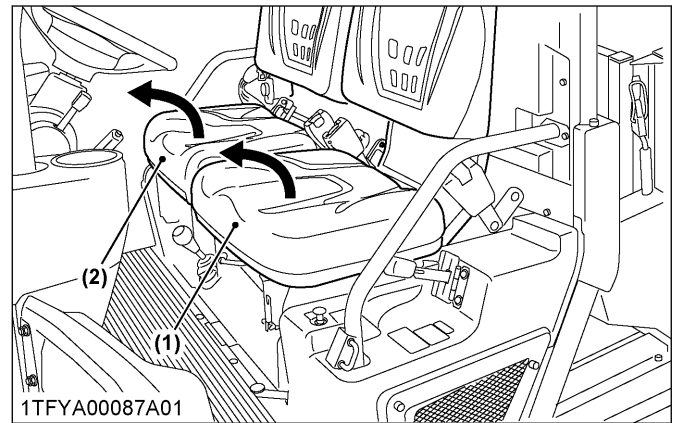


(1) Operator's seat
 (2) Passenger seat

2. Remove 2 push rivets, if equipped.

NOTE :


- To remove the push rivet:
 1. Push the pin to unlock.
 2. Remove the push rivet.

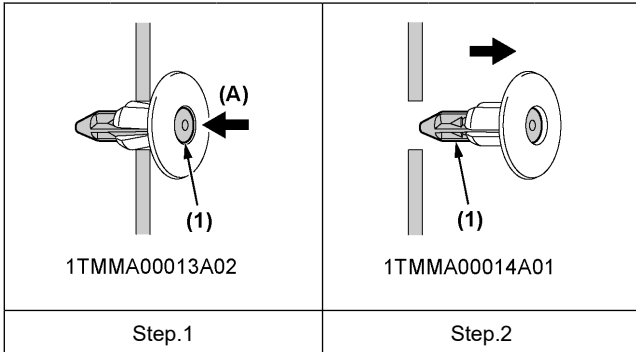

(1) Pin

(A) "PUSH"


- To install the push rivet:
 3. Push the pin to ready to install.
 4. Install the push rivet into the hole.
 5. Push the pin to lock.

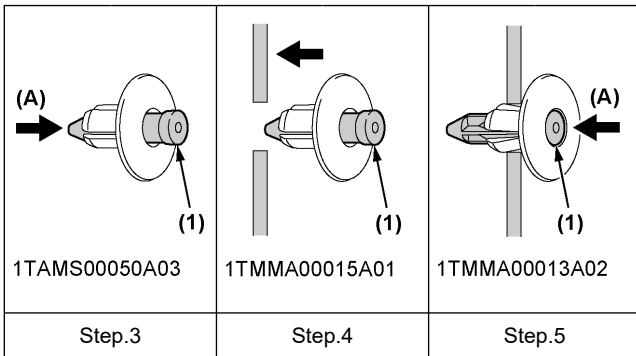

(1) Pin


(A) "PUSH"

3. Remove the utility box.

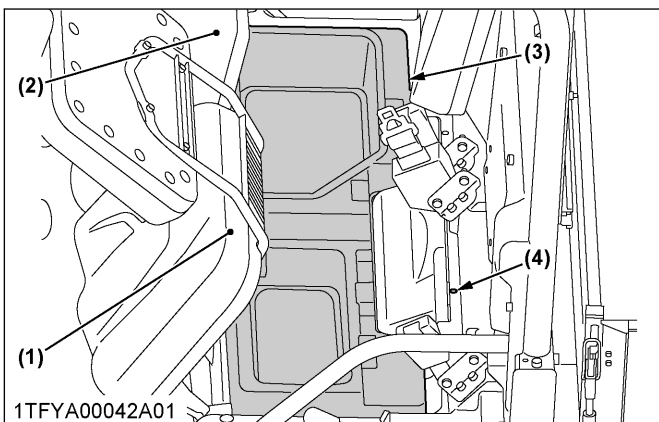

- (1) Operator's seat
- (2) Passenger seat
- (3) Utility box
- (4) Push rivet (if equipped)

4. Remove the maintenance cover.

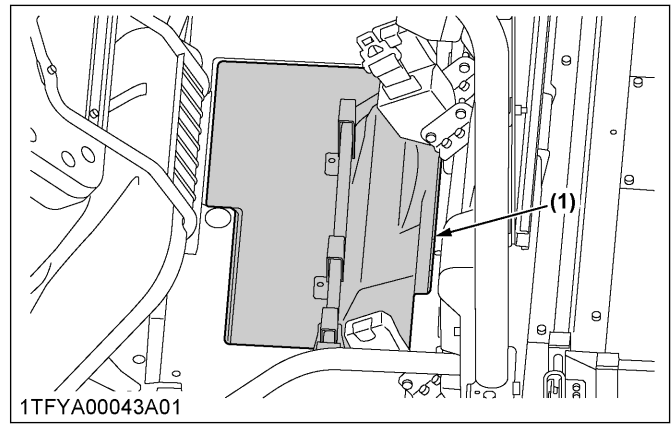

(1) Maintenance cover

HOW TO RAISE THE CARGO BED

! WARNING

To avoid serious injury or death:

- When servicing under the raised bed, make sure that the safety support is properly mounted.
- Do not touch the muffler or exhaust pipes while they are hot. Otherwise, severe burns could result.

1. Raising and lowering the cargo bed

See RAISING AND LOWERING THE CARGO BED on page 51.



JACK-UP POINTS

! WARNING

To avoid serious injury, death, or vehicle damage, do not work under the vehicle unless it is secured by safe stands or suitable blocking.

1. Front end


Jack up at the plate under the front axle case only.

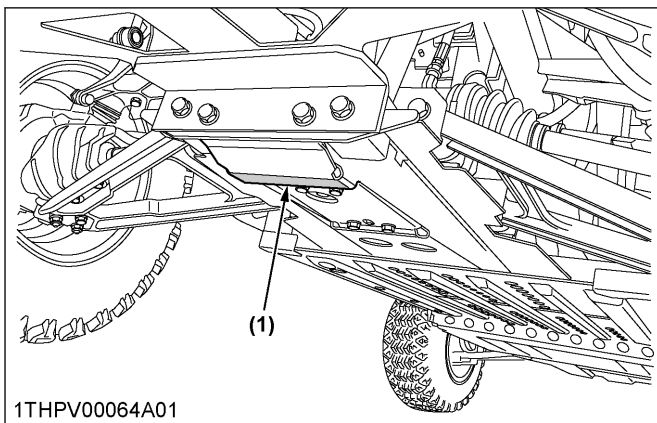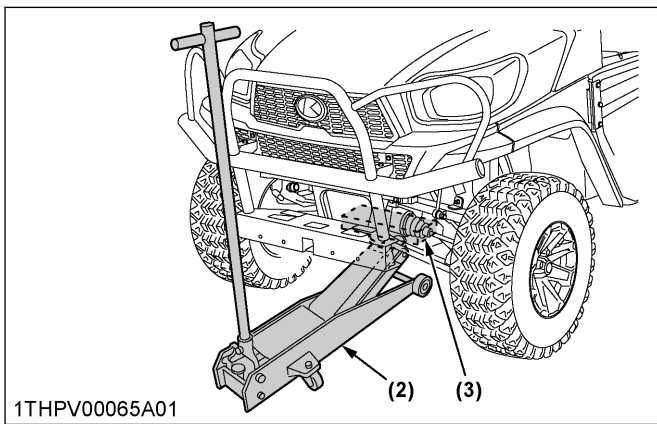

- (1) Plate under the front axle case
- (2) Jack
- (3) Wooden block

2. Rear end


Jack up the rear end after placing a wooden block under the bottom plate of the transmission frame.

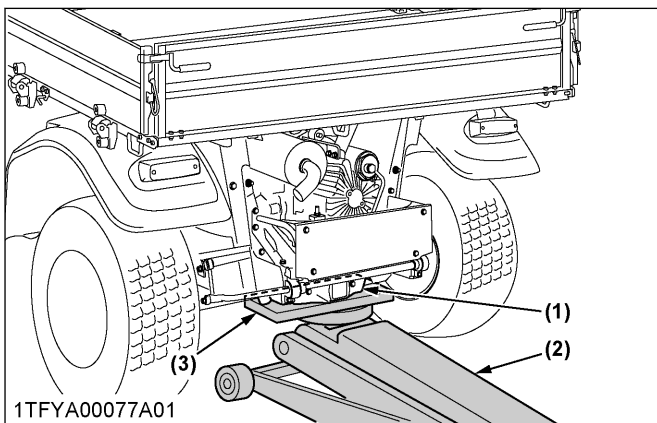

- (1) Bottom plate of the transmission frame
- (2) Jack
- (3) Wooden block

IMPORTANT :

- To avoid damage to frame, do not pick up on the rear upper cross member when hoisting the vehicle.

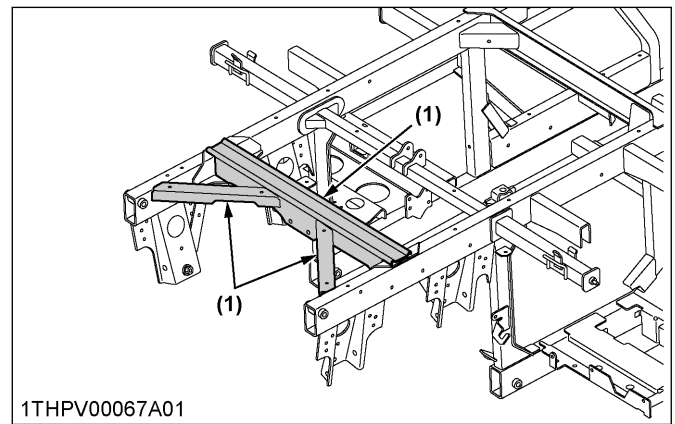

- (1) Rear upper cross member

DAILY CHECK

For your own safety and maximum service life of the vehicle, make a thorough daily inspection before operating the vehicle to start the engine.

⚠ WARNING

To avoid serious injury or death, check and service the vehicle on a flat surface with the engine shut off and the parking brake "ON".

1. Walk around inspection

Look around and under the vehicle for such items as loose bolts, trash build-up, oil or coolant leaks, or broken or worn parts. Use a low pressure garden hose to clean the skid plates of the vehicle when there is dirt build-up.

IMPORTANT :

- Avoid spraying high-pressure water to the following places.
 - Brake components
 - Steering systems
 - Boots and seals
 - Electrical components and wire harnesses
 - Operation control cables

2. How to clean the vehicle


For your own safety and maximum service life of the vehicle, keep your vehicle clean.

IMPORTANT :

- Using a high pressure water system for cleaning may damage components. Avoid using a high pressure water system on the following items. If there is a specific instruction, follow it.
 - Bearings
 - Radiators
 - Rubber boots components

- Brake
- Control cables
- Labels and decals
- Electrical components and wires
- All intake components
- All outlet components
- Seat belts
- Seats

Fuel tank capacity	30 L (7.9 U.S.gals.)
--------------------	----------------------

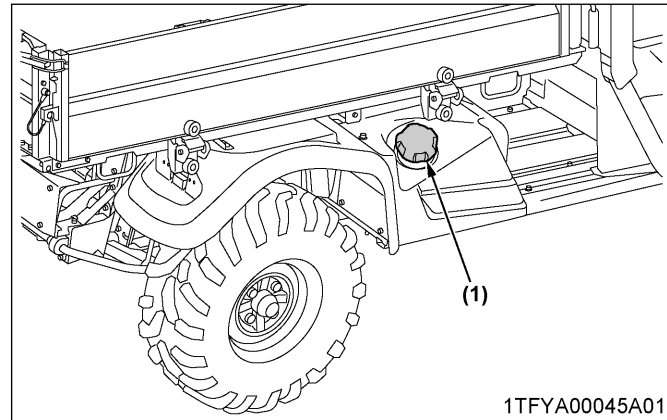

(1) Fuel tank cap

3. Checking around the engine

1. Park the vehicle on a level surface.
2. Stop the engine.
3. Raise the cargo bed.
4. Mount the safety support.
5. Check around the engine for mud or foreign materials.
6. Remove all foreign materials if they are found.
7. Clean the manifold area of any flammable material.

4. Checking the amount of fuel and refueling

! WARNING

To avoid serious injury or death:

- Do not smoke while refueling.
- Stop the engine before refueling.
- Make sure that no passengers are seated on the vehicle during refueling.
- Never use fire.
- Close the fuel tank cap after refueling.

IMPORTANT :

- Do not permit dirt or trash to get into the fuel system.
- Be careful not to let the fuel tank become empty, otherwise air will enter the fuel system, necessitating bleeding before next engine start.
- Be careful not to spill during refueling. If should spill, wipe it off at once, or it may cause a fire.
- To prevent water condensation from accumulating in the fuel tank, fill the tank before parking overnight.

1. Stop the engine.
2. Turn the key switch to "ON".
3. Check the amount of fuel by fuel gauge.
4. Fill the fuel tank when the fuel gauge shows 1/4 or less fuel in the tank.
5. Use grade No. 2-diesel fuel at temperatures above -10 °C (14 °F).
Use grade No. 1-diesel fuel at temperatures below -10 °C (14 °F).

5. Checking the engine oil level

! WARNING


To avoid serious injury or death, stop the engine before checking the oil level.

IMPORTANT :

Check the engine oil before starting the engine, or 5 minutes or more after the engine has stopped.

1. Park the vehicle on a level surface.
2. Raise the cargo bed.
3. Mount the safety support.
4. Stop the engine.
5. Draw out the dipstick.
6. Wipe the dipstick clean.
7. Replace the dipstick.
8. Draw out the dipstick again.
9. Check to see that the oil level lies between the 2 lines.

10. If the oil level is too low, add new oil to the prescribed level at the oil inlet.
(See the first table of LUBRICANTS, FUEL, AND COOLANT on page 62.)

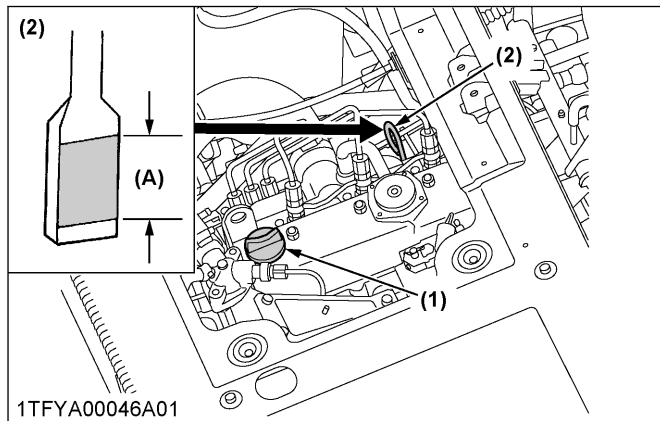


(1) Oil inlet (A) Oil level
(2) Dipstick

IMPORTANT :

- If the oil level is low, do not run the engine.

6. Checking the transmission fluid level

1. Park the vehicle on a level surface.
2. Raise the cargo bed.
3. Mount the safety support.
4. Stop the engine.
5. Draw out the dipstick.
6. Wipe the dipstick clean.
7. Replace the dipstick.
8. Draw out the dipstick again.
9. Check to see that the oil level lies between the 2 lines.
10. If the oil level is too low, add new oil to the prescribed level at the oil inlet.
(See the first table of LUBRICANTS, FUEL, AND COOLANT on page 62.)

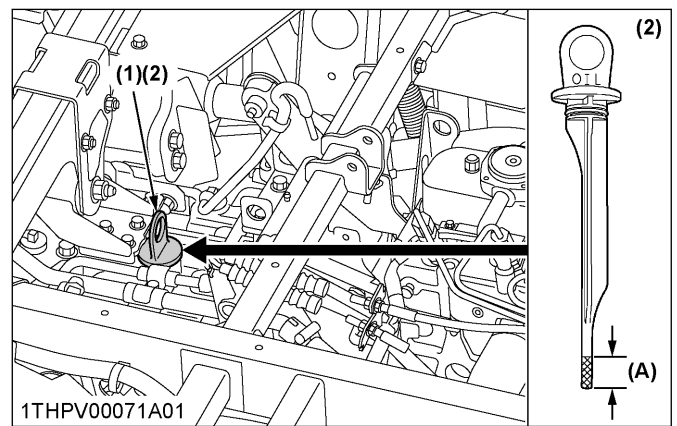


(1) Oil inlet (A) Oil level
(2) Dipstick

IMPORTANT :

- If the oil level is low, do not run the engine.

7. Checking hydraulic oil tank level

1. Park the vehicle on a level surface.
2. Stop the engine.
3. Open the seat.
4. Remove the utility box.
5. Remove the rubber cap.
6. Draw out the dipstick.
7. Wipe the dipstick clean.
8. Screw the dipstick into the filling hole.
9. Draw out the dipstick again.
10. Check to see that the oil level lies between the 2 lines.
11. If the oil level is too low, add new oil to the prescribed level at the oil inlet.
(See the first table of LUBRICANTS, FUEL, AND COOLANT on page 62.)

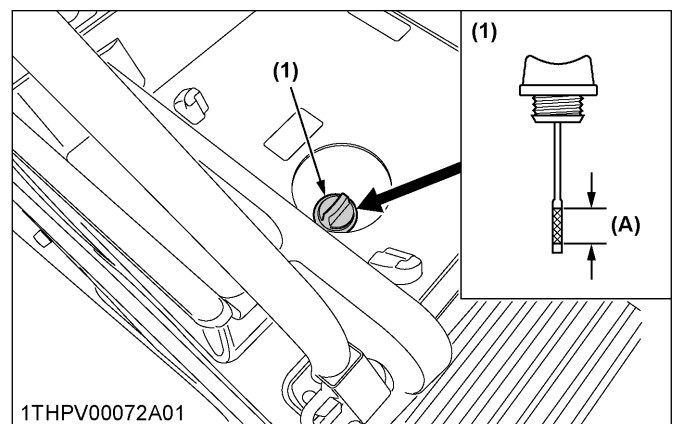

(1) Filling plug with dipstick (A) Oil level

IMPORTANT :


- If the oil level is low, do not run the engine.

8. Checking the coolant level

WARNING

To avoid serious injury or death, do not remove the radiator cap while coolant is hot. When coolant is cool, slowly rotate the cap to the first stop and allow sufficient time for excess pressure to escape before removing the cap completely.

1. Park the vehicle on a level surface.
2. Stop the engine.
3. Open the hood.
4. Check to see that the coolant level is between the **[FULL]** and **[LOW]** marks of the recovery tank.

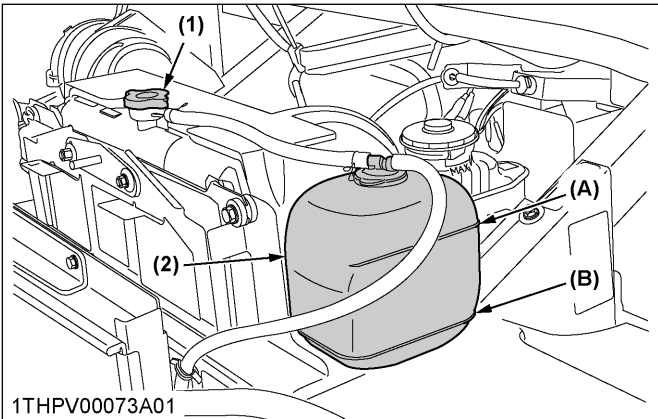

- | | |
|-------------------|-------------------|
| (1) Radiator cap | (A) [FULL] |
| (2) Recovery tank | (B) [LOW] |

5. If the coolant level is too low, follow either of the following steps:
 - If the coolant level is low due to evaporation
Add water only up to the full level.
 - If the coolant level is low due to leakage
Add antifreeze and water in the specified mixing ratio up to the full level.
 (See Flushing the cooling system and changing the coolant on page 93.)

IMPORTANT :


- If the radiator cap has to be removed, follow the previous caution and securely retighten the cap.
- Use clean, fresh water and antifreeze to fill the recovery tank.
- If water should leak, contact your local Kubota dealer.

9. Cleaning the radiator screen

WARNING

To avoid serious injury or death, stop the engine before removing the screen.

1. Park the vehicle on a flat surface.
2. Stop the engine.
3. Open the hood.
4. Detach the radiator screen.
5. Remove all foreign materials from the radiator screen.

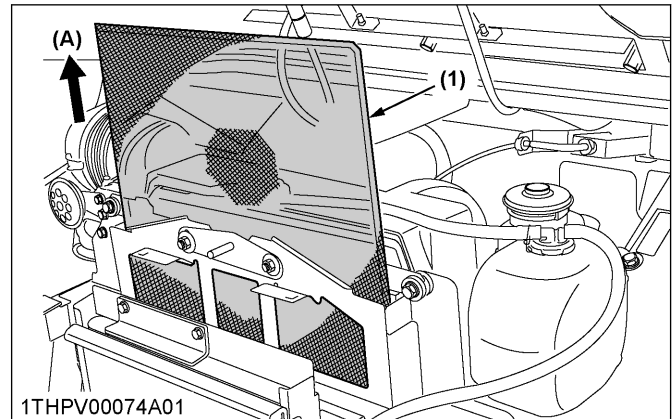

- | | |
|---------------------|--------------|
| (1) Radiator screen | (A) "DETACH" |
|---------------------|--------------|

IMPORTANT :


- Keep the radiator screen clean from debris to prevent engine from overheating.

10. Cleaning the oil cooler net

WARNING

To avoid serious injury or death, allow oil cooler or oil line parts to cool down sufficiently. They can be hot and can cause injury.

1. Park the vehicle on a flat surface.
2. Stop the engine.
3. Open the hood.
4. Detach the oil cooler net.
5. Remove all foreign materials from the oil cooler net.

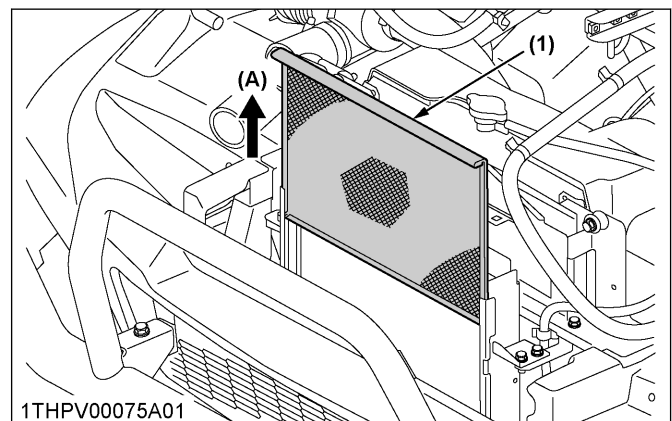

- | | |
|--------------------|--------------|
| (1) Oil cooler net | (A) "DETACH" |
|--------------------|--------------|


11. Checking the brake fluid level

! WARNING

To avoid serious injury or death:

- Never operate the vehicle if the brake fluid is below the [MIN] mark.
- Use only Kubota GENUINE BRAKE FLUID from a sealed container. Use the brake fluid (DOT-3 or DOT-4) indicated on the filler cap and the label beside it. Do not mix 2 types (DOT-3 and DOT-4) of brake fluid. Using other type of oil ruins synthetic resin or rubber installed in brake system components, and may cause brake failure.
- Avoid contamination of the brake fluid. Thoroughly clean area around the filler cap before removing. Do not open the brake fluid reservoir cap unless absolutely necessary.
- Use extreme care when filling the reservoir. If brake fluid is spilled on the power steering hose, wash off with water immediately. Brake fluid quickly ruins synthetic resin or rubber hoses.

1. Park the vehicle on a level surface.
2. Open the hood.
3. Check to see that the brake fluid level is between the [MAX] and [MIN] marks.

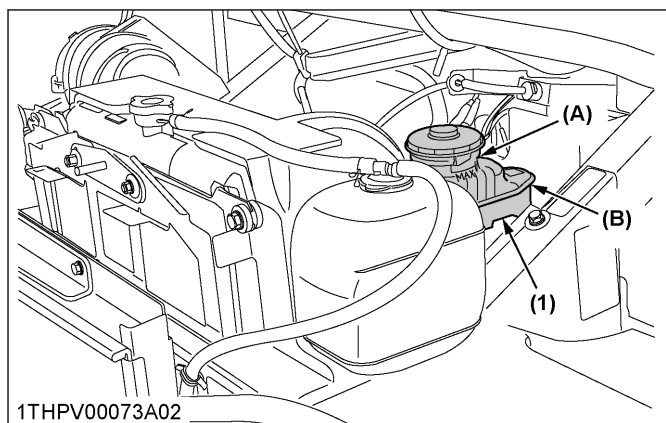

(1) Reservoir
(A) [MAX]
(B) [MIN]

4. If it is below the [MIN] mark, add brake fluid to the [MAX] mark.


12. Checking the brake pedal

! WARNING

To avoid serious injury or death, stop the engine and chock the wheels before checking brake pedal.

1. Inspect the brake pedal for free travel and smooth operation.

2. Adjust if incorrect measurement is found. (See Checking the brake pedal on page 90.)

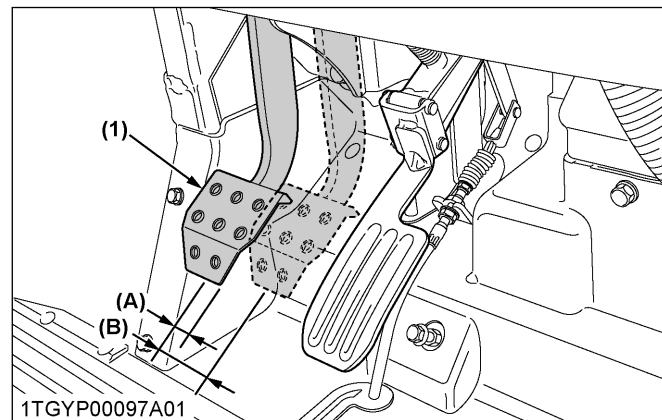


(1) Brake pedal
(A) "FREE TRAVEL"
(B) "PEDAL STROKE"

13. Checking the parking brake

1. Pull the parking brake lever to apply the brakes.
2. With the key switch at "ON" position, check if the parking brake indicator on the instrument panel lights up.
3. To release the brakes, push in the button at the side of the parking brake lever and tilt the lever forward.

NOTE :

- Make sure that the parking brake warning lamp (P) on the Easy Checker™ goes off when the parking brake lever is tilted forward.

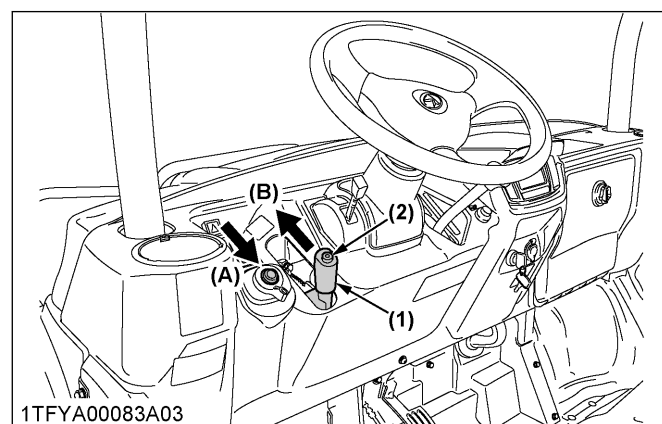

(1) Parking brake lever
(2) Release button
(A) "PULL"
(B) "RELEASE"

14. Checking Easy Checker™

1. Inspect the instrument panel for broken Easy Checker™ lamps.
2. Contact your local Kubota dealer if broken.

15. Checking the head light and the turn signal light (if equipped)


1. Inspect the lights for broken bulbs and lenses.
2. Replace if broken.

16. Checking the seat belt and the ROPS


1. Always check condition of the seat belts before operating the vehicle.
2. Replace if damaged.

17. Checking the joint boots


1. Check to see if the joint boots are not damaged.
2. If the joint boots are cut, cracked, or show signs of deterioration, contact your local Kubota dealer.

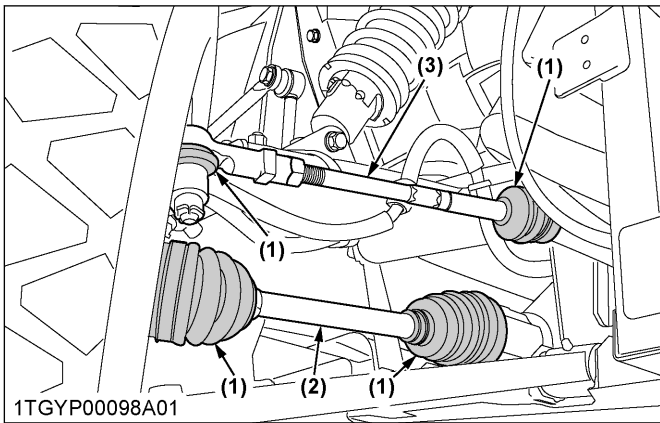


- (1) Joint boot
- (2) Front drive shaft
- (3) Tie-rod

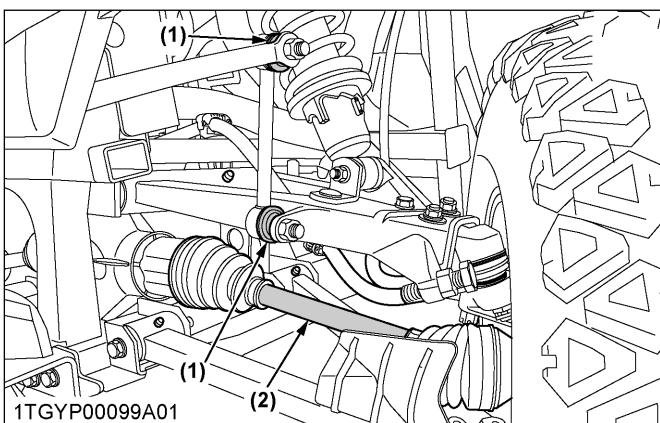


- (1) Joint boot
- (2) Front drive shaft

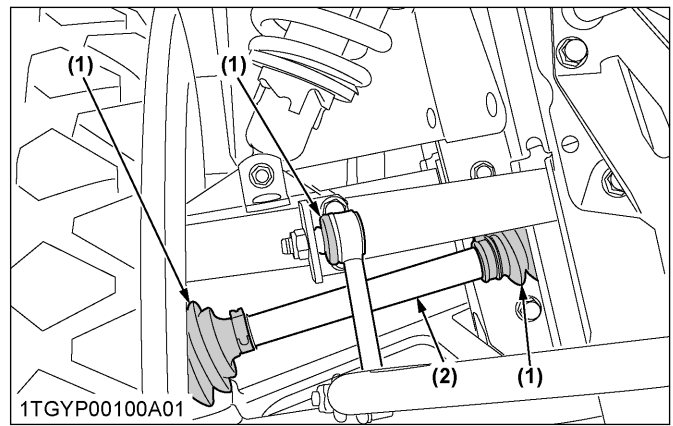

- (1) Joint boot
- (2) Rear drive shaft

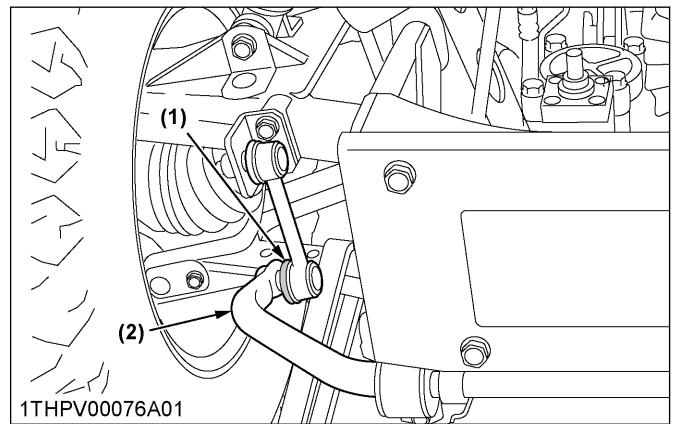

- (1) Joint boot
- (2) Rear stabilizer

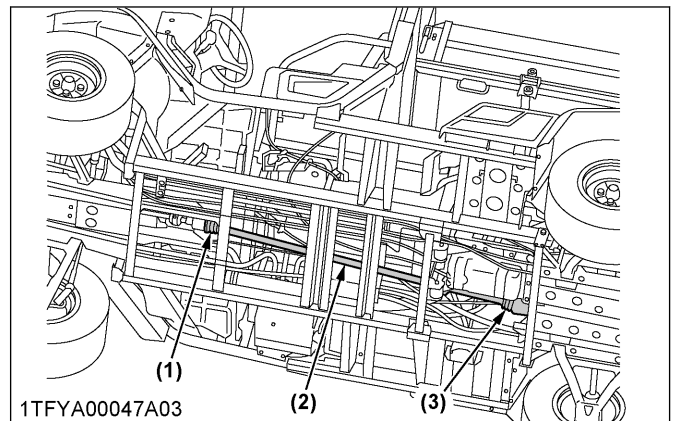


- (1) Joint boot (front)
- (2) Drive shaft
- (3) Joint boot (rear)

18. Checking the tire inflation pressure

Though the tire pressure is factory-set to the prescribed level, it naturally drops slowly in the course of time. Thus, check it everyday and inflate as necessary.

Tire size	Cargo bed load condition	
	0 kg to 249 kg (0 lbs. to 550 lbs.)	249 kg to 550 kg (550 lbs. to 1212 lbs.)
25 × 10 - 12 HDWS, front and rear	Front: 0.14 MPa (1.4 kgf/cm ² , 20 psi) Rear: 0.14 MPa (1.4 kgf/cm ² , 20 psi)	Front: 0.14 MPa (1.4 kgf/cm ² , 20 psi) Rear: 0.17 MPa (1.7 kgf/cm ² , 24 psi)
25 × 10 - 12 ATV, front and rear	Front: 0.14 MPa (1.4 kgf/cm ² , 20 psi) Rear: 0.14 MPa (1.4 kgf/cm ² , 20 psi)	Front: 0.14 MPa (1.4 kgf/cm ² , 20 psi) Rear: 0.17 MPa (1.7 kgf/cm ² , 24 psi)

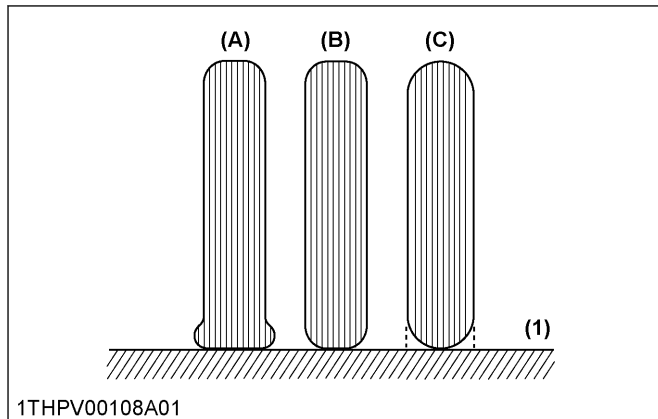


1THPV00108A01

(1) Ground

- (A) "INSUFFICIENT"
- (B) "NORMAL"
- (C) "EXCESSIVE"

19. Checking the backup beeper (if equipped)

1. Sit on the operator's seat.
2. Set the parking brake.
3. Stop the engine.
4. Shift the range gear shift lever to the "NEUTRAL" position.
5. Turn the key to "ON" position.
6. Shift the range gear shift lever to the "REVERSE" position.

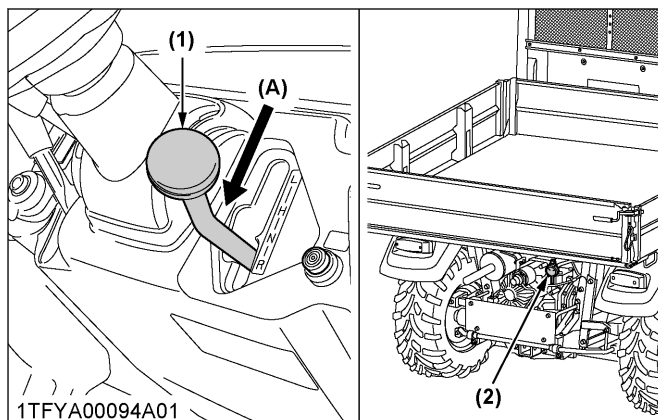

1TFYA00094A01


- (1) Range gear shift lever
- (2) Backup beeper (if equipped)
- (A) "REVERSE"

7. If the backup beeper does not beep, contact your local Kubota dealer.


EVERY 50 HOURS

1. Greasing


Apply a small amount of multi-purpose grease to the following points every 50 hours. If you operated the vehicle in extremely wet and muddy conditions, lubricate grease fittings more often.

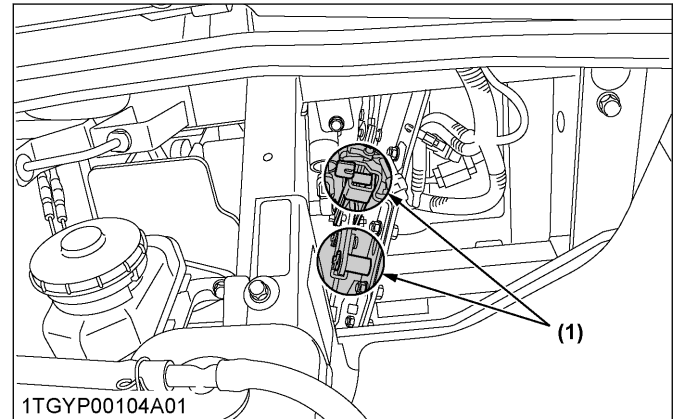


(1) Parking brake lever (spray type grease)

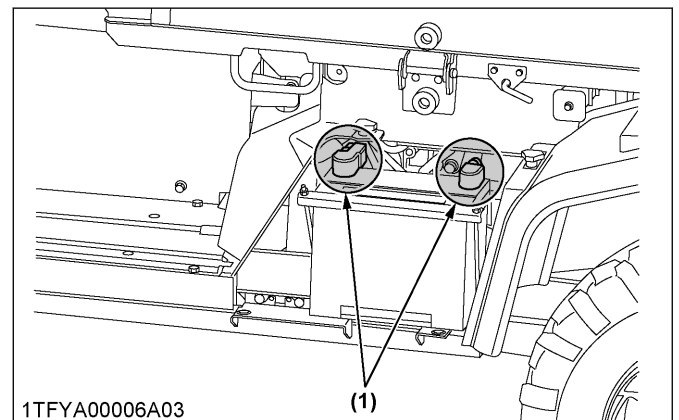


(1) Battery terminals

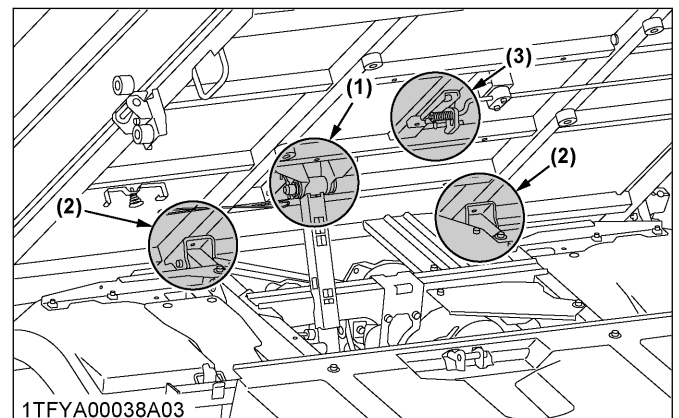


- (1) Cargo lift cylinder pivot (grease fitting)
- (2) Cargo bed pivot (spray type grease)
- (3) Cargo bed lock (spray type grease)

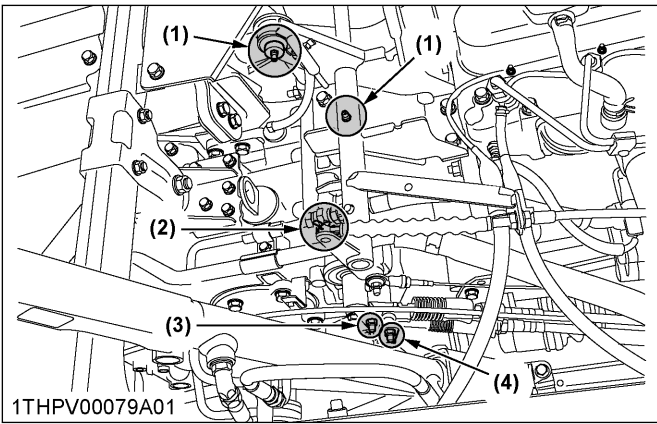


- (1) VHT link (grease fitting)
- (2) VHT link (spray type grease)
- (3) Valve lever link (spray type grease)
- (4) 4WD lever link (spray type grease)

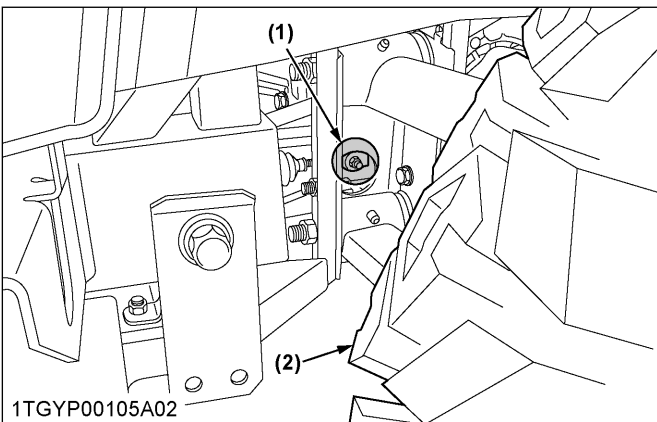


- (1) Range gear shift link (spray type grease)
- (2) Left rear tire

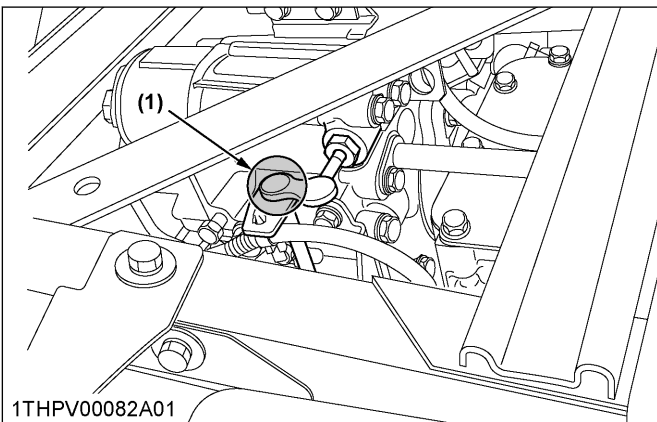


- (1) Unload link (spray type grease)

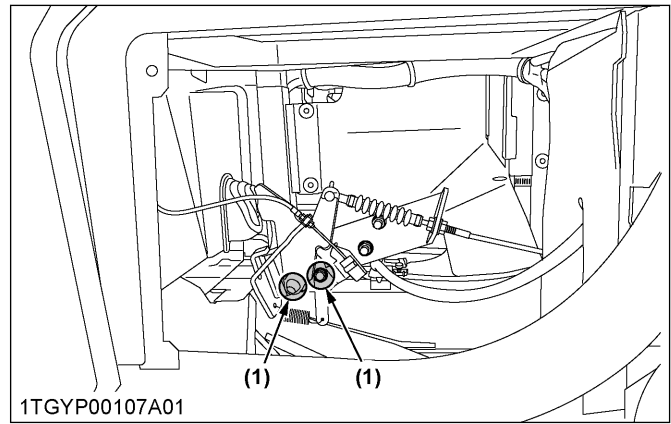

- (1) Differential lock pedal (spray type grease)

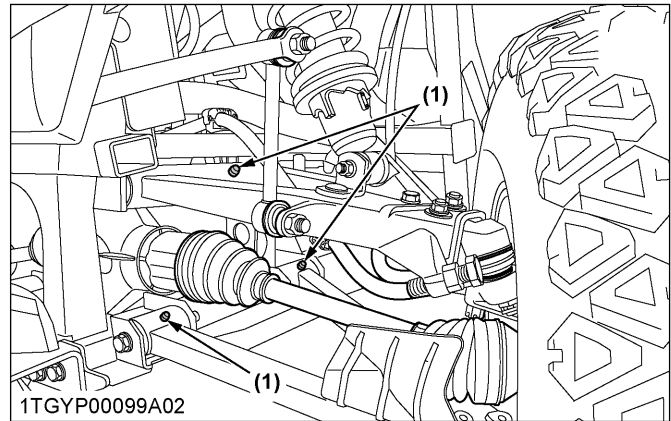

- (1) Front A-ARM (grease fitting)

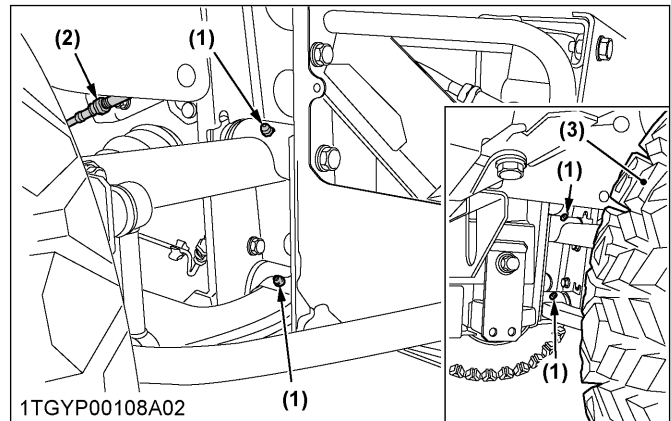

- (1) Rear A-ARM (grease fitting)
- (2) Parking brake link (spray type grease)
- (3) Left rear tire

2. Checking the engine start system

WARNING

To avoid serious injury or death:


- Do not allow anyone near the vehicle while testing.
- If the vehicle does not pass the test, do not operate the vehicle.

Preparation before testing

1. Place all control levers in the "NEUTRAL" position.
2. Set the parking brake and stop the engine.


Test: Range gear shift lever safety switch

1. Sit on the operator's seat.
2. Shift the range gear shift lever to the [H] position.
3. Return the speed control pedal to the "NEUTRAL" position.

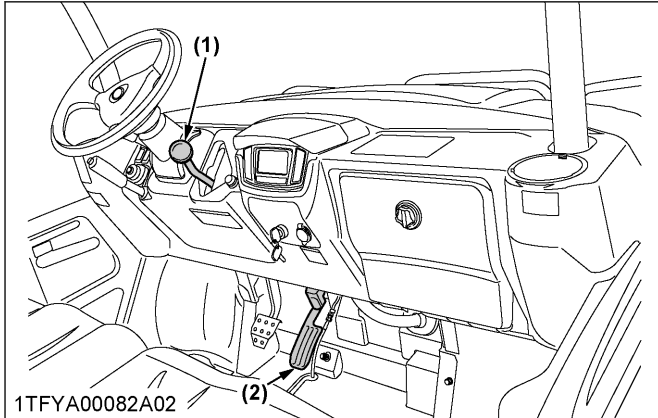

- (1) Range gear shift lever
- (2) Speed control pedal

4. Shift the hydraulic lift cylinder lever to the "NEUTRAL" position.

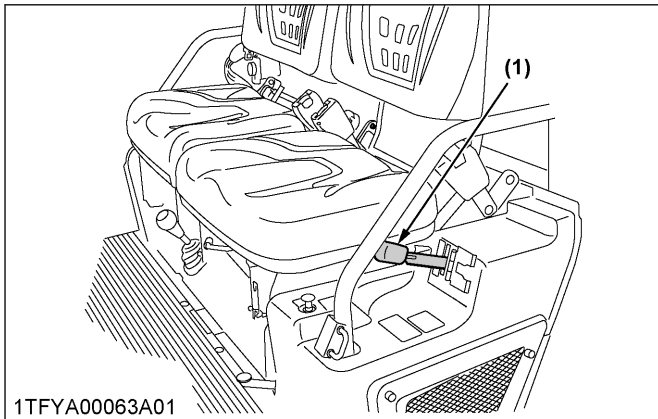

- (1) Hydraulic lift cylinder lever

5. Turn the key to the "START" position.
6. The engine must not crank.
7. Repeat the step 2 to 6 with the range gear shift lever at the [L] position and the [R] position.
8. If it cranks, contact your local Kubota dealer for service.

EVERY 100 HOURS

1. Checking the VHT neutral spring


1. Park the vehicle on a level surface.
2. Set the parking brake.
3. Shift the range gear shift lever to the "NEUTRAL" position.

4. Lock the hydraulic lift cylinder lever to the "NEUTRAL" position with the restricting plate.
5. Start the engine.
6. Depress the speed control pedal several times and take the foot off the pedal.
7. Make sure that the rotation speed of the engine returns to the idling rotation immediately.
8. If the rotation speed does not return to the idling rotation immediately, it is necessary to adjust the VHT neutral spring. Contact your local Kubota dealer for this service.

2. Checking the VHT pressure release

⚠ WARNING
 To avoid serious injury or death, do not touch muffler or exhaust pipes while they are hot. Otherwise, severe burns could result.

1. Park the vehicle on a level surface.
2. Set the parking brake.
3. Start the engine and shut it off soon.
4. Check the points (A) and (B).

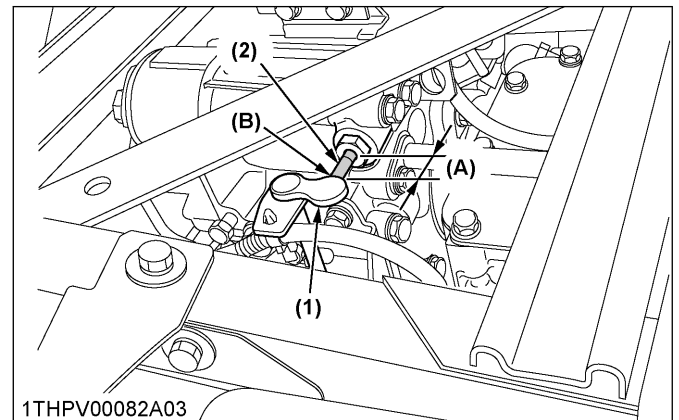

- | | |
|----------------------|---|
| (1) Unload link | (A) Rod length |
| (2) Unload valve rod | (B) Contact point of the link and the rod |


5. If the result does not correspond to both a. and b., contact your local Kubota dealer.
 - a. There is no clearance between rod and the link.
 - b. The length of the rod is 21.5 mm and over.

3. Checking the wheel fastener torque

⚠ WARNING
 To avoid serious injury or death:
 • Never operate the vehicle with loose wheel nuts.

- Any time nuts are loosened, retighten to the specified torque.
- Check all nuts frequently and keep them tight.

Check wheel nuts regularly especially when the vehicle is new. If wheel nuts are loose, tighten them as follows.

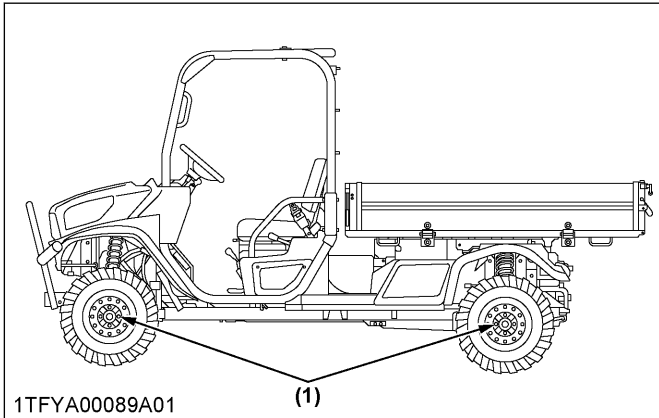

(1) Wheel nut

IMPORTANT :


- Tightening torque:
108 N·m to 130 N·m, 11.1 kgf·m to 13.2 kgf·m,
79.7 lbf·ft to 95.8 lbf·ft

4. Cleaning the air cleaner primary element

CAUTION

To avoid personal injury, wear appropriate protective gear when cleaning the element. Do not blow material onto yourself.

1. Remove the air cleaner cover and primary element.

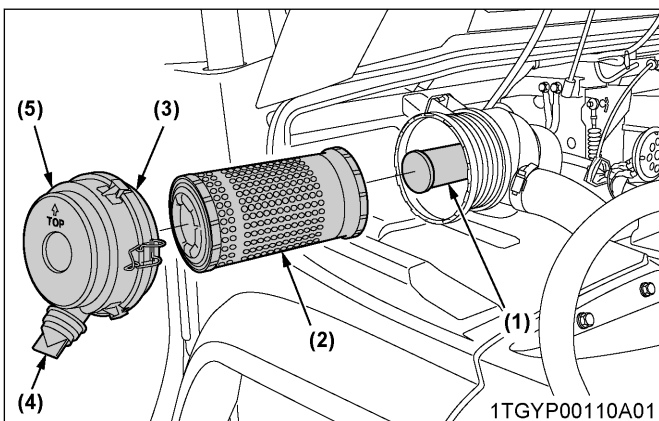

- (1) Secondary (safety) element
- (2) Primary element
- (3) Rubber seal
- (4) Evacuator valve
- (5) Cover

2. Clean or replace the primary element according to the following.

Cleaning the primary element

- When dry dust adheres to the element, blow compressed air from the inside, turning the element. Pressure of compressed air must be under 205 kPa (2.1 kgf/cm², 30 psi).
- When carbon or oil adheres to the element, replace the element with a new one even if it has not been used for 1 year.

Replacing the primary element

Replace the primary element once a year or after 1000 hours of use, whichever comes first.

NOTE :

- Check to see if the evacuator valve is blocked with dust.
- Check the rubber seal. Replace if damaged.

IMPORTANT :

- The air cleaner uses a dry element. Never apply oil.
- Do not run the engine with the filter element removed.
- Refit the cover with the arrow (on the rear of cover) upright. If the cover is improperly fitted, evacuator valve will not function and dust will adhere to the element.
- Do not touch the secondary element except in cases where replacing is required.

Evacuator valve

Open the evacuator valve once a week under ordinary conditions - or daily when used in a dusty place - to get rid of large particles of dust and dirt.


5. Adjusting the alternator belt tension

WARNING

To avoid serious injury or death:


- Stop the engine before checking belt tension.
- When disconnecting the cable from the battery, start with the negative terminal first. When connecting the cable to the battery, start with the positive terminal first.

1. Park the vehicle on a flat surface.
2. Raise the cargo bed.
3. Stop the engine.
4. Remove the rear cover.

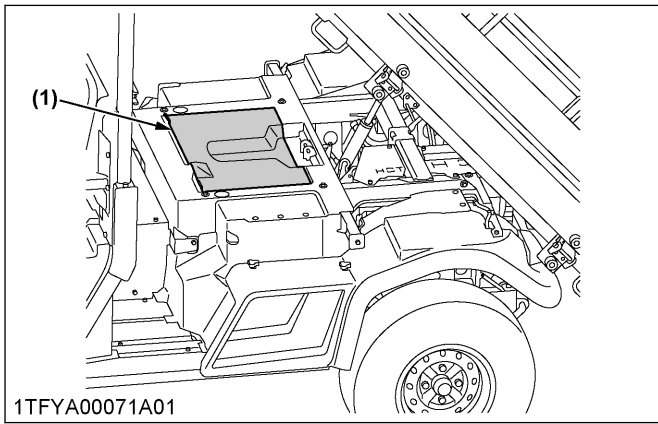

1TFYA00071A01
(1) Rear cover

5. Apply moderate thumb pressure to the middle of the belt span between the fan drive pulley and alternator pulley.

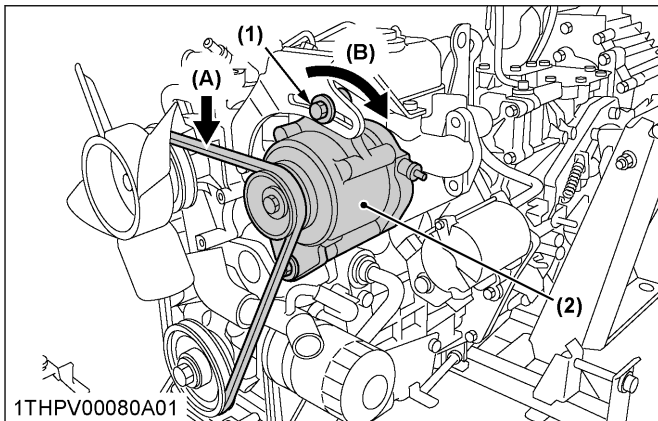


1THPV00080A01
(1) Alternator mounting bolt (A) Belt tension check point
(2) Alternator (B) "TIGHTEN"

Proper alternator belt tension	A deflection of between 4.0 to 5.9 mm (0.16 to 0.23 in.) when the belt is pressed in the middle of the span.
--------------------------------	--

If the belt tension is incorrect or the belt is damaged, follow either of the following steps:

If the belt tension is incorrect

1. Remove the battery.
2. Loosen the alternator mounting bolt and nut.
3. Using a lever between the alternator and the engine block, pull the alternator out until the deflection of the belt falls within acceptable limits.
4. Tighten the alternator mounting bolt and nut.

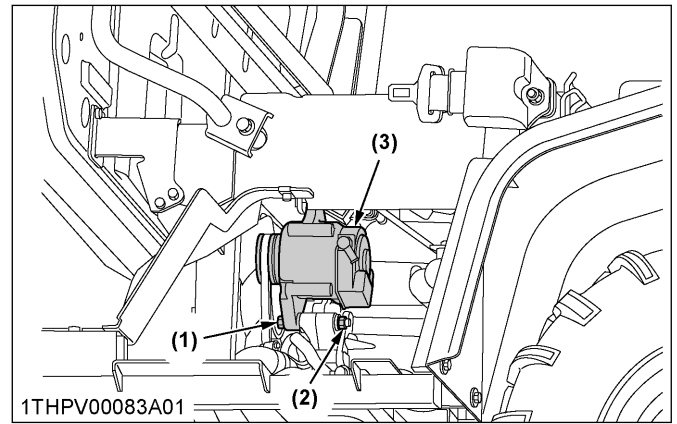

1THPV00083A01
(1) Alternator mounting bolt
(2) Nut
(3) Alternator

If the alternator belt is damaged

1. Remove the battery.
2. Loosen the alternator mounting bolt and nut.
3. Push the alternator in.
Result: The alternator belt is loosened.
4. Remove the damaged alternator belt.
5. Install a new alternator belt.
6. Using a lever between the alternator and the engine block, pull the alternator out until the deflection of the belt falls within acceptable limits.
7. Tighten the alternator mounting bolt and nut.

6. Checking the fuel filter

! WARNING

To avoid serious injury or death:

- Stop the engine and remove the key when attempting to make the following checks and changes.
- Check the fuel lines periodically.
The fuel lines are subject to wear and aging. Fuel may leak out onto the running engine, causing a fire.


IMPORTANT :

- When the fuel line is disconnected for maintenance or repair, close both ends of the fuel line with a piece of clean cloth or paper to prevent dust and dirt from entering. In addition, particular care must be taken not to admit dust and dirt into the fuel pump. Entrance of even a small amount of dust or dirt cause premature wear and malfunction of the fuel pump and injector components.

Fuel lines should be checked every 1 year. The fuel line is made of rubber and ages regardless of service period.


1. Park the vehicle on a flat surface.

2. Raise the cargo bed.
3. Mount the safety support to the cargo bed.
4. Shut off the engine.
5. If the fuel line and clamps are found to be damaged or deteriorated, replace them.

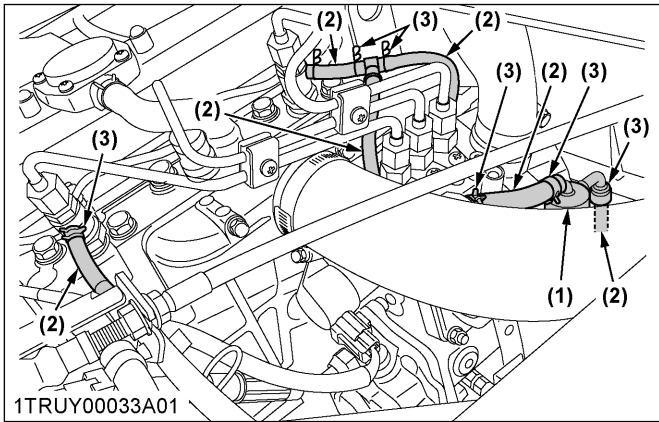

- (1) Fuel pump
- (2) Fuel line
- (3) Pipe clamp

6. Check the fuel filter. If it is clogged by debris or contaminated with water, replace it.

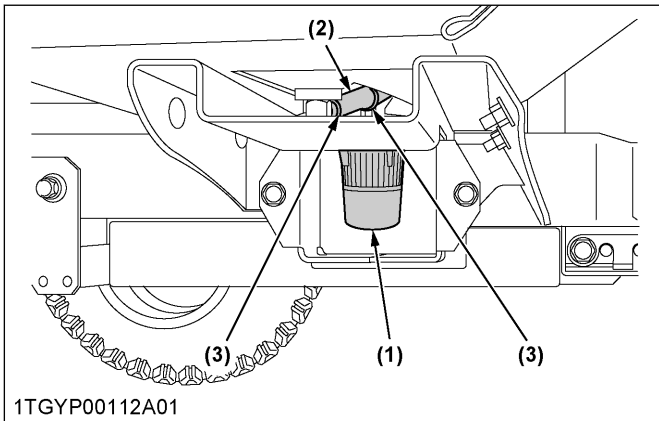

- (1) Fuel filter
- (2) Fuel line
- (3) Pipe clamp

7. Checking the battery condition

! DANGER

To avoid the possibility of battery explosion:
For the refillable type battery, follow these instructions.

- Do not use or charge the refillable type battery if the fluid level is below the [LOWER] (lower limit level) mark. Otherwise, the battery component parts may prematurely deteriorate, which may shorten the battery's service life or cause an explosion.
- Check the fluid level regularly and add distilled water as required so that the fluid level is between the [UPPER] and [LOWER] levels.

! DANGER

To avoid serious injury or death, keep open sparks and flames away from the battery at all times, especially when charging the battery. When the battery is being activated, hydrogen and oxygen gases in the battery are extremely explosive.

! WARNING

To avoid serious injury or death:

- Wash hands after handling batteries, battery posts, terminals, or related accessories. They contain lead, lead compounds, and other chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- Never remove the battery cap while the engine is running.
- Keep electrolyte away from eyes, hands and clothes. If you are splattered with it, wash it away completely with water immediately and seek medical attention.
- Keep open sparks and flames away from the battery at all times. Hydrogen gas mixed with oxygen becomes very explosive.
- Wear eye protection and rubber gloves when working around the battery.

NOTE :

- The factory-installed battery is a non-refillable type.
If the battery is weak, charge the battery or replace it with a new one.

IMPORTANT :

- Check the battery periodically. The original battery is maintenance free, but needs some servicing.
 Mishandling the battery shortens the service life and adds to maintenance costs. If the battery is weak, the engine will be difficult to start and the lights will be dim.

For non-accessible maintenance-free type batteries:

Maintenance-free, non-accessible batteries are designed to eliminate the need to add water. Yet the volume of electrolyte above plates may eventually become depleted due to abnormal conditions such as high heat or improper regulator setting. Use a voltmeter to check the state of charge.

(See the following reference chart to determine if charging is necessary.)

Battery voltage (V)	Reference state of charge
12.6	100 % (full charge)
12.4	75 %
12.2	50 %
12.0	25 %
11.8	0 %

7.1 Charging the battery


! DANGER

To avoid serious injury or death, keep open sparks and flames away from the battery at all times, especially when charging the battery. When the battery is being activated, hydrogen and oxygen gases in the battery are extremely explosive.

! WARNING

To avoid serious injury or death:

- When disconnecting the cable from the battery, start with the negative terminal first. When connecting the cable to the battery, start with the positive terminal first.
- Never check the battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

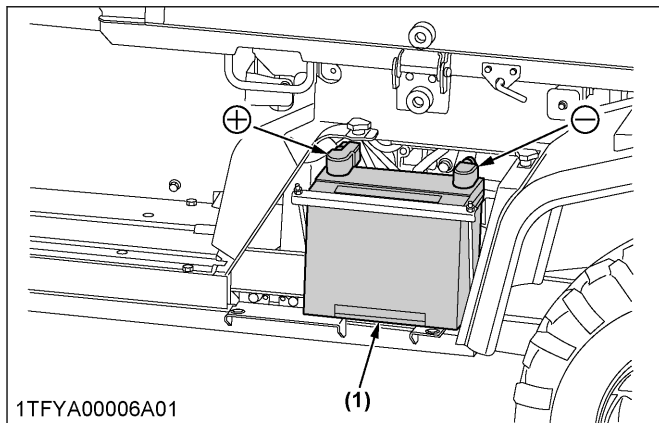

(1) Battery

1. Park the vehicle on a flat surface.
2. Stop the engine.
3. Remove the battery cover.
4. Follow one of the following steps:
 - [To charge the battery]
Connect the battery positive terminal to the charger positive terminal and the negative to the negative, then recharge in the standard fashion.

IMPORTANT :

- If your battery charger has a boost charge function, use it only for

emergency. When using a boost-charged battery, it is necessary to recharge the battery as early as possible. Failure to do this will shorten the battery's service life.

- [To replace the battery with a new one]
(See Replacing the battery on page 83.)

7.2 Replacing the battery

! WARNING

To avoid serious injury or death:

- When disconnecting the cable from the battery, start with the negative terminal first. When connecting the cable to the battery, start with the positive terminal first.
- Be careful not to confuse the battery connections. If the positive (+) and negative (-) connections are not attached in the correct way, the cables may become damaged, potentially resulting in fire.
- Do not throw, drop, tilt, or apply impact to the battery. Otherwise, the electrolyte (dilute sulfuric acid) in the battery may damage your eyesight or burn you.

IMPORTANT :


- When exchanging an old battery for a new one, use a battery of equal specification in the following table.

Battery type	Volts (V)	Reserve capacity (min)	Cold cranking amps	Capacity at 20 hrs (A. H.)	Normal charging rate (A)
24R-670	12	115	670	66	11.5

- When mounting the battery (+) and (-) terminals and tightening additionally, be sure not to tighten too far, as the terminals or the battery post may be damaged. Also, do not use electric tools for tightening.
- When tightening the terminals, keep the terminal bottom and battery top in contact.

Removing the battery

1. Park the vehicle on a flat surface.
2. Stop the engine.
3. Remove the battery cover.
4. Disconnect the negative terminal.
5. Disconnect the positive terminal.
6. Remove the nuts and the battery retention bracket.
7. Remove the battery.

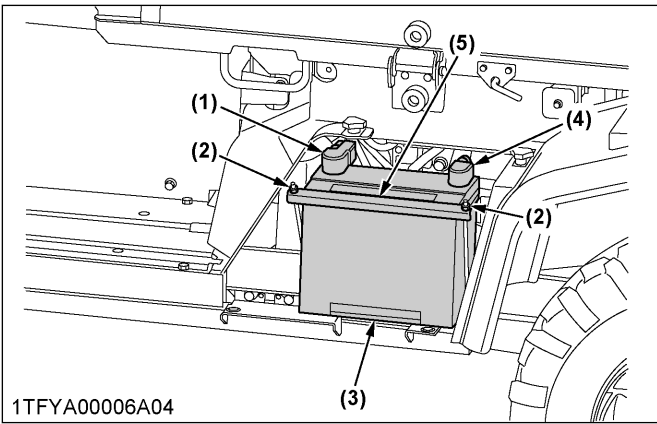

- (1) Positive terminal
- (2) Nut
- (3) Battery
- (4) Negative terminal
- (5) Battery retention bracket

Installing a new battery

1. Install a new battery.
2. Install the battery retention bracket.
3. Tighten the nuts.
4. Connect the positive terminal.
5. Connect the negative terminal.
6. Install the battery cover.

7.3 Directions for battery storage


When storing the vehicle for a long period, remove the battery from vehicle, adjust the electrolyte to the proper level (refillable type only) and store in a dry place out of direct sunlight.

The battery self-discharges while it is stored. Recharge it once every 3 months in hot seasons and once every 6 months in cold seasons.

8. Adjusting toe-in

Proper toe-in	5 mm to 15 mm (0.2 in. to 0.59 in.)
---------------	-------------------------------------

1. Park the vehicle on a flat place.
2. Turn the steering wheel so that the front wheels are in the straight ahead position.
3. Lock the parking brake and stop the engine.
4. Measure the distance between tire beads at front of tire, at hub height.
5. Measure the distance between tire beads at rear of tire, at hub height.

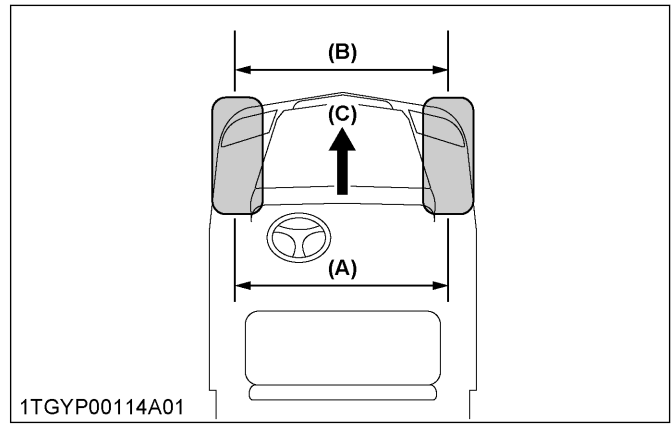


- (A) Wheel-to-wheel distance at rear
- (B) Wheel-to-wheel distance at front
- (C) "FRONT"

6. Front distance should be shorter than rear distance. If not, adjust the tie-rod length.

Adjusting procedures

1. Loosen the lock nut.
2. Turn the tie-rod to adjust the rod length until the proper toe-in measurement is obtained
3. Retighten the lock nut.

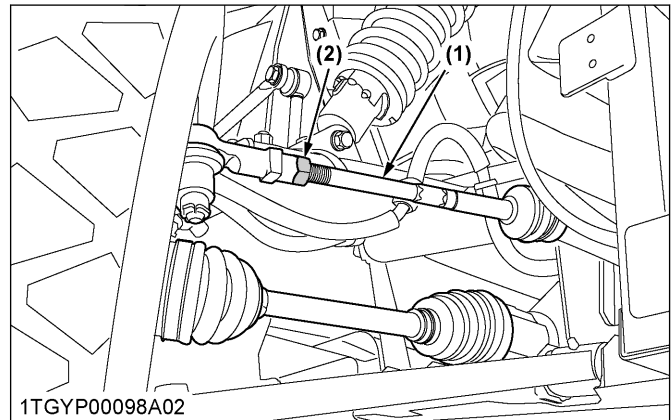

- (1) Tie-rod
- (2) Lock nut

IMPORTANT :

- Keep the length of the left and right tie-rods equal.
- Tightening torque (lock nut):
74 N·m to 84 N·m, 7.6 kgf·m to 8.5 kgf·m,
55 lbf·ft to 61 lbf·ft

9. Cleaning the muffler (for swirl type spark arrester)

⚠ WARNING

To avoid serious injury or death:

- Before touching any part of an exhaust system, be absolutely sure that it has sufficient time to cool.
- Always wear safety goggles and a (face) mask.


- Do not inhale the particulate matter contained in the muffler or release it to the environment. It contains chemicals that are harmful to people, animals, and marine life.
- If you are unable to do this work, have it done by your Kubota dealer.

This swirl type spark arrester was examined, tested, and qualified in accordance with the USDA Forest Service Standard 5100-1c, "Spark Arresters for Internal Combustion Engines".

Maintenance and cleanout procedure:

The swirl type spark arrester should be cleaned and inspected after every 100 hours of use.

1. Set the vehicle in an open area away from combustible materials and on a flat surface.
2. Apply the parking brake.
3. Shift the range gear shift lever into the "NEUTRAL" position.
4. Remove the drain plug located on the bottom of the muffler body.

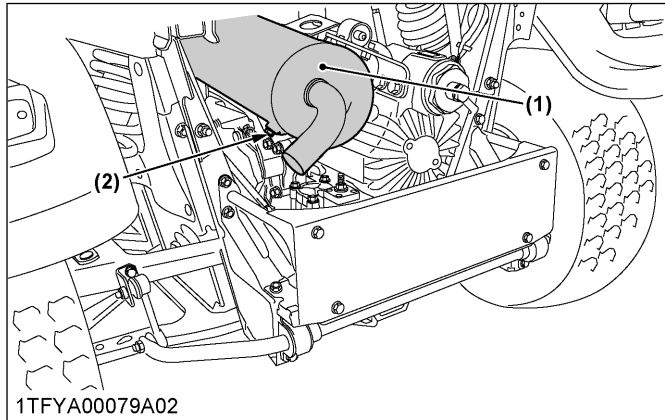

- (1) Muffler
- (2) Drain plug

5. Start the engine.
6. Raise and lower the engine revolution while tapping on the muffler with a rubber mallet until the carbon particles are purged from the muffler.
7. Stop the engine.
8. Reinstall the drain plug.


NOTE :

- Visually check the muffler for cracks or holes in the body, weldment, or pipes at regular intervals.
- Replace the entire muffler if it is damaged.
- Do not operate the vehicle with a damaged muffler.

10. Checking the exhaust system

Check the exhaust system parts (muffler, pipe, bracket, gasket, rubber bush, spring) for failures such as cracks and deformation. If necessary, replace the faulty part. Especially inspect any wear or deterioration on the rear

rubber bush. If there is any gap between the rubber bush and the rod, replace the rubber bush. If you do not know the failure, contact your local Kubota dealer for this service.

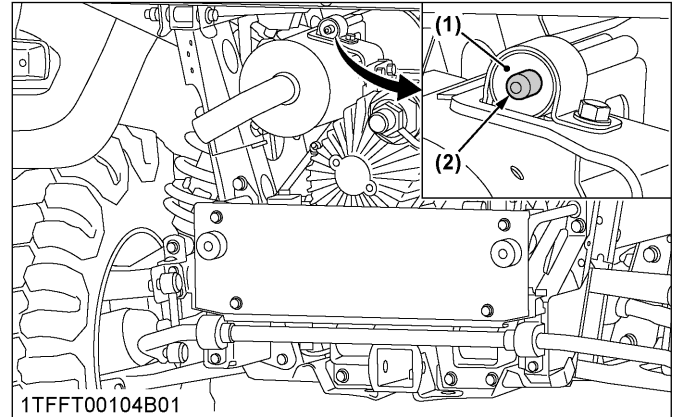

- (1) Rear rubber bush
- (2) Rod


EVERY 200 HOURS

1. Adjusting the parking brake

Proper parking brake lever free play range	1 notch
--	---------


Adjusting procedure

1. Park the vehicle on a flat surface.
2. Stop the engine.
3. Jack up the rear wheels.
4. Remove the left rear tire.
5. Remove the mud guard of rubber.

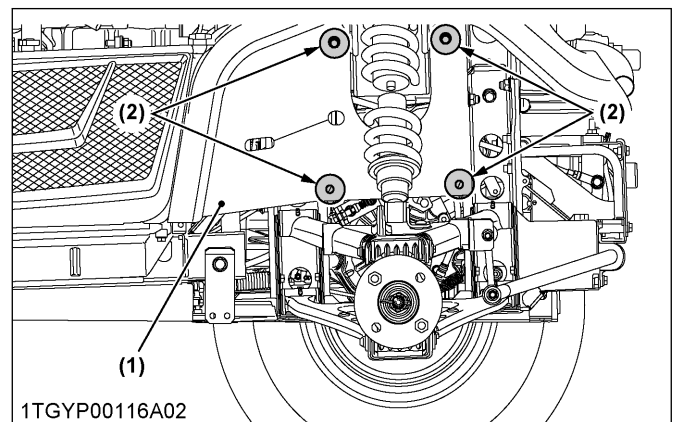

- (1) Mud guard
- (2) Push rivet


6. Release the parking brake.

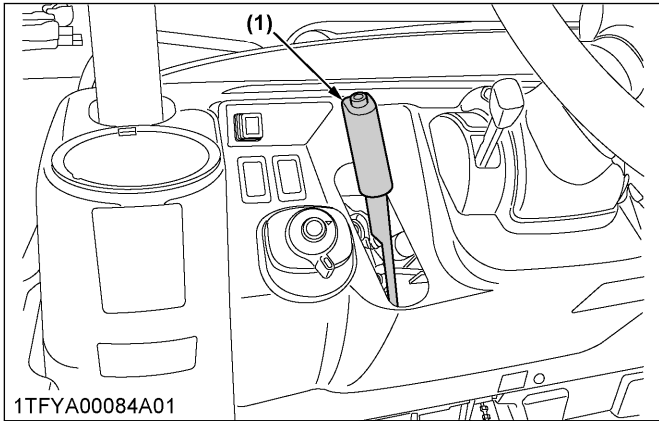

(1) Parking brake lever

7. Loosen the lock nuts.

8. Adjust the cable wire length.

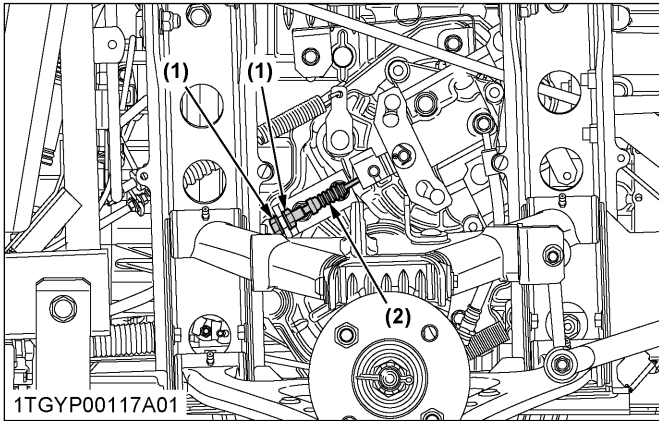

(1) Lock nut
(2) Cable wire

9. Tighten the lock nuts securely.


IMPORTANT :

- **Tightening torque (lock nut):**
19.6 to 28.4 N·m, 2.00 to 2.89 kgf·m, 14.5 to 20.9 lbf·ft

10. Install the mud guard.

11. Install the left rear tire.

2. Greasing

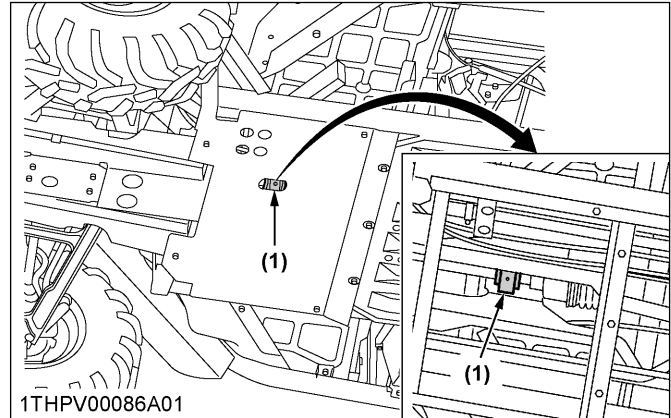

(1) DT shaft bearing (grease fitting)


3. Replacing the engine oil filter

! WARNING

To avoid serious injury or death:

- Stop the engine before changing the oil filter.
- Allow the engine to cool down sufficiently. Oil can be hot and can burn.

1. Park the vehicle on a flat surface.
2. Stop the engine.
3. Remove the rear skid plate.
4. Remove the oil filter.

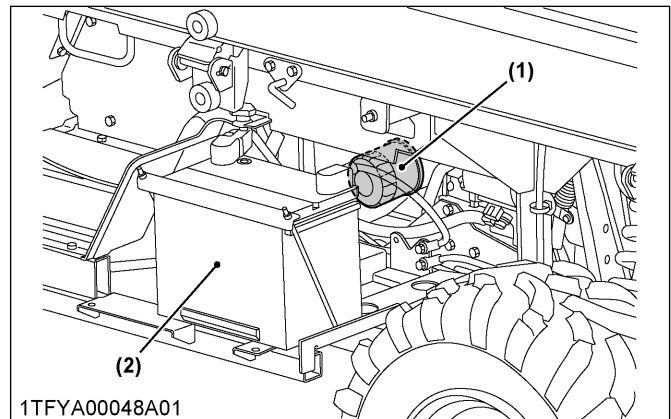

(1) Engine oil filter
(2) Battery

5. Put a film of clean engine oil on the rubber seal of the new filter.
6. Tighten the filter quickly until it contacts the mounting surface.
7. Tighten the filter by hand an additional 1/2 turn only.
8. Make sure that the engine oil does not leak through the seal.

9. Check the oil level on the dipstick.

How to check:

- a. Draw out the dipstick.
- b. Wipe the dipstick clean.
- c. Replace the dipstick.
- d. Draw out the dipstick again.
- e. Check to see that the oil level lies between the 2 lines.

NOTE :

After the new filter is installed, the engine oil normally decreases a little.

10. Replenish the engine oil up to the prescribed level.
11. Properly dispose of the used filter.

IMPORTANT :

- **To prevent serious damage to the engine, use only a Kubota genuine filter.**

4. Changing the engine oil


⚠ WARNING
To avoid serious injury or death:

- **Stop the engine before changing the oil.**
- **Allow the engine to cool down sufficiently. Oil can be hot and can burn.**

Oil capacity	Filter exchanged: 4.1 L (4.3 U.S.qts.) Filter non-exchanged: 3.8 L (4.0 U.S.qts.)
--------------	--

(See the first table of LUBRICANTS, FUEL, AND COOLANT on page 62.)

1. Park the vehicle on a level surface.
2. Raise the cargo bed.
3. Mount the safety support.
4. Stop the engine.
5. Remove the rear skid plate.

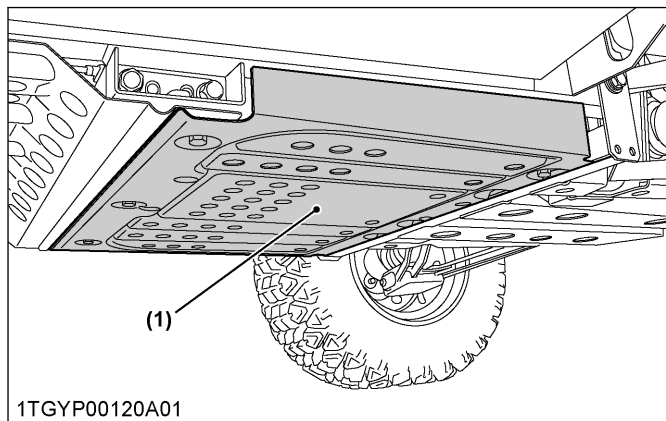


(1) Rear skid plate

6. Place an oil pan under the drain plug at the bottom of the engine.
7. Remove the drain plug.

8. Wait until the oil is completely drained into the oil pan.


NOTE :

- **All the used oil can be drained out easily when the engine is still warm.**

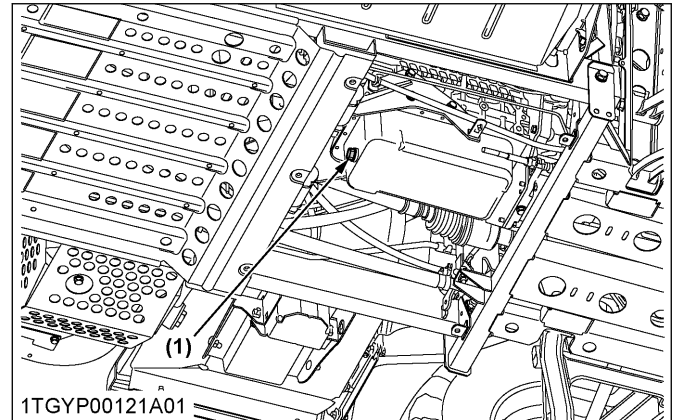

(1) Drain plug

9. After draining, reinstall the drain plug.
10. Remove the rear cover.

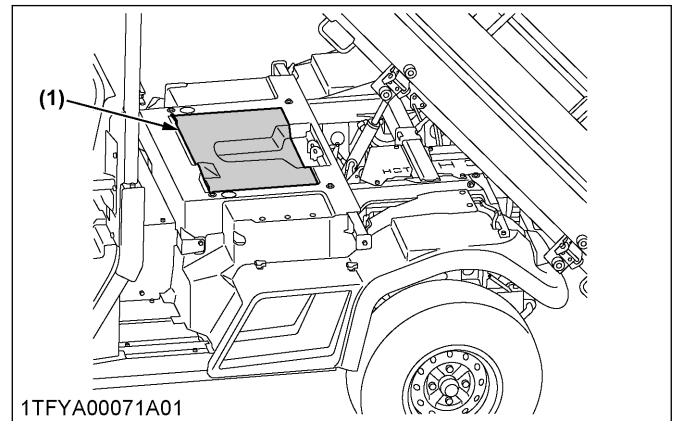


(1) Rear cover

- Fill with the new oil up to the upper line on the dipstick.

How to check:

- Draw out the dipstick.
- Wipe the dipstick clean.
- Replace the dipstick.
- Draw out the dipstick again.
- Check to see that the oil level lies between the 2 lines.

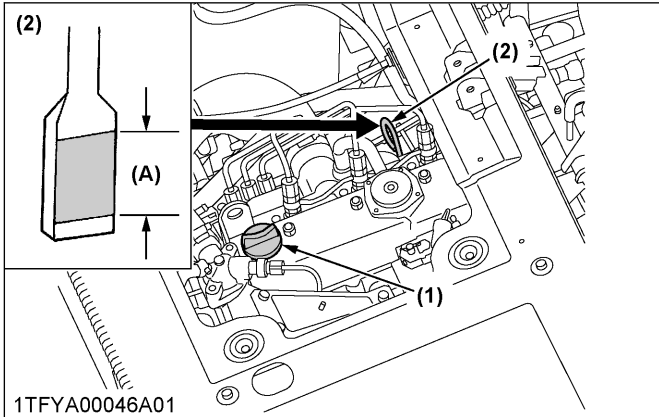

1TFYA00046A01
 (1) Oil inlet (A) Oil level
 (2) Dipstick

- Properly dispose of the used oil.


5. Replacing the transmission oil filter (VHT)

WARNING

To avoid serious injury or death:

- Stop the engine before changing the oil filter.
- Allow the engine to cool down sufficiently. Oil can be hot and can burn.

- Park the vehicle on a flat surface.
- Remove the rear guard as necessary.
- Remove the oil filter.

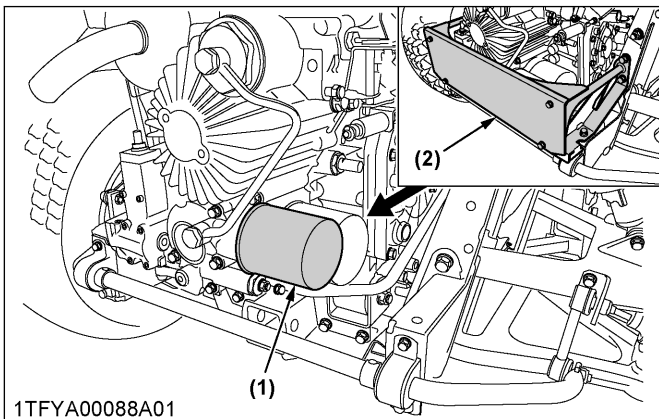

1TFYA00088A01
 (1) Transmission oil filter (VHT) (yellow color)
 (2) Rear guard

- Put a film of clean transmission oil on the rubber seal of the new filter.
- Quickly tighten the filter by hand until it contacts the mounting surface.
- Using a filter wrench, tighten the filter an additional 1/2 turn only.
- After the new filter has been replaced, fill the hydraulic tank oil up to the upper notch on the dipstick.

How to check:

- Draw out the dipstick.
 - Wipe the dipstick clean.
 - Replace the dipstick.
 - Draw out the dipstick again.
 - Check to see that the oil level lies between the 2 lines.
- Start the engine and run it for a few minutes.
 - Stop the engine.
 - Check the oil level again.
 - Add oil to the prescribed level if necessary.
 - Make sure that the transmission fluid does not leak past the seal on the filter.

IMPORTANT :

- To prevent serious damage to the transmission, use only a Kubota genuine filter.

6. Replacing the transmission oil filter (suction)


WARNING

To avoid serious injury or death:

- Stop the engine before changing the oil filter.
- Allow the engine to cool down sufficiently. Oil can be hot and can burn.

- Park the vehicle on a flat surface.
- Remove the rear guard as necessary.

3. Remove the oil filter and old seal.

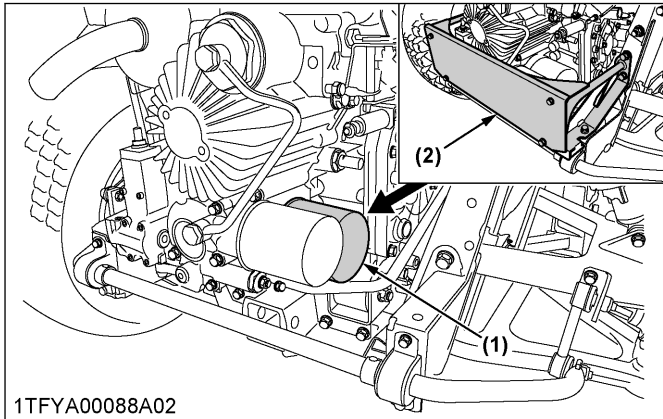

(1) Transmission oil filter (suction) (black color)
 (2) Rear guard

4. Put a film of clean transmission oil on the rubber seal of the new filter.
5. Quickly tighten the filter by hand until it contacts the mounting surface.
6. Using a filter wrench, tighten the filter an additional 1/2 turn only.
7. After the new filter has been replaced, fill the hydraulic tank oil up to the upper notch on the dipstick.

How to check:

- a. Draw out the dipstick.
 - b. Wipe the dipstick clean.
 - c. Replace the dipstick.
 - d. Draw out the dipstick again.
 - e. Check to see that the oil level lies between the 2 lines.
8. Start the engine and run it for a few minutes.
 9. Stop the engine.
 10. Check the oil level again.
 11. Add oil to the prescribed level if necessary.
 12. Make sure that the transmission fluid does not leak past the seal on the filter.
 13. Install the rear guard and the hose guard.

IMPORTANT :

- To prevent serious damage to the transmission, use only a Kubota genuine filter.

7. Changing the hydraulic tank oil


⚠ WARNING
 To avoid serious injury or death:

- Stop the engine before changing the oil.
- Allow the engine to cool down sufficiently. Oil can be hot and can burn.

Oil capacity	18.0 L (19.0 U.S.qts.)
--------------	------------------------

(See the first table of LUBRICANTS, FUEL, AND COOLANT on page 62.)

1. Park the vehicle on a level surface.
2. Open the seat.
3. Remove the utility box.
4. Remove the rubber cap.
5. Place an oil pan under the drain plug at the bottom of the hydraulic tank.
6. Remove the drain plug and the filling plug.
7. Wait until the oil is completely drained into the oil pan.

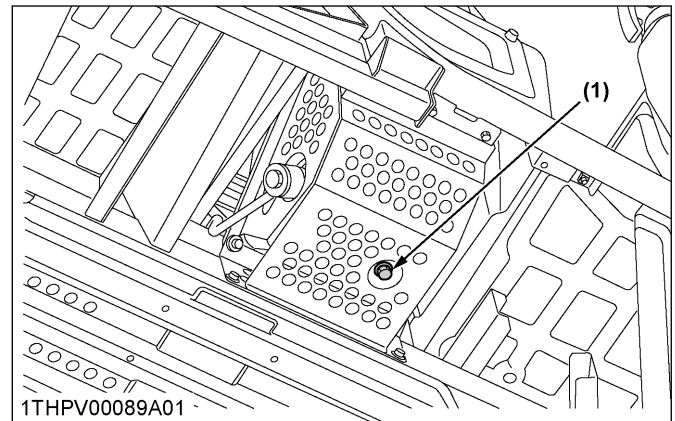


(1) Drain plug

8. After draining, reinstall the drain plug.
9. Fill with new prescribed oil up to the upper line on the dipstick. (See the following figure.)

How to check:

- a. Draw out the dipstick.
- b. Wipe the dipstick clean.
- c. Replace the dipstick.
- d. Draw out the dipstick again.
- e. Check to see that the oil level lies between the 2 lines.

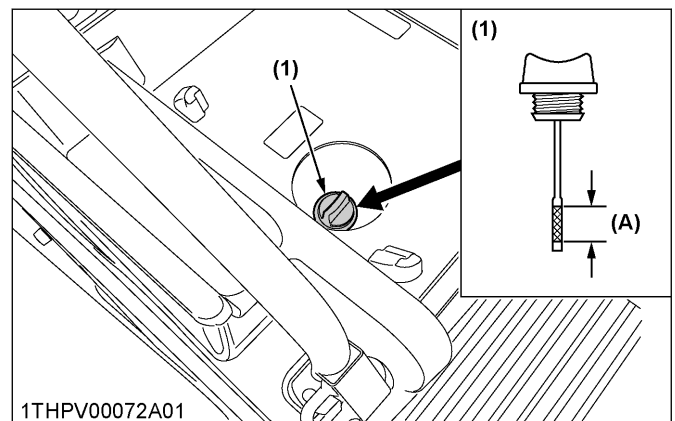

(1) Filling plug with dipstick (A) Oil level

10. After filling, reinstall the filling plug.
11. Properly dispose of the used filter.

8. Checking the brake pedal

WARNING

To avoid serious injury or death:

- Stop the engine and chock the wheels before checking brake pedal.
- If movement is outside of the specifications, contact your local Kubota dealer for adjusting the brake.

Checking the brake pedal free travel


Proper brake pedal free travel	8 mm to 18 mm (0.3 in. to 0.7 in.) on the pedal
--------------------------------	---

1. Release the parking brake.
2. Slightly depress the brake pedal and measure free travel at the top of the pedal stroke.
3. If brake pedal free travel is outside of the specifications, contact your local Kubota dealer for adjusting the brake.



Checking the brake pedal stroke

Pedal stroke	Less than 150 mm (5.9 in.) on the pedal
--------------	---

1. Release the parking brake.
2. Step on the pedal and measure the pedal stroke.
3. If brake pedal stroke is outside of the specifications, contact your local Kubota dealer for adjusting the brake.

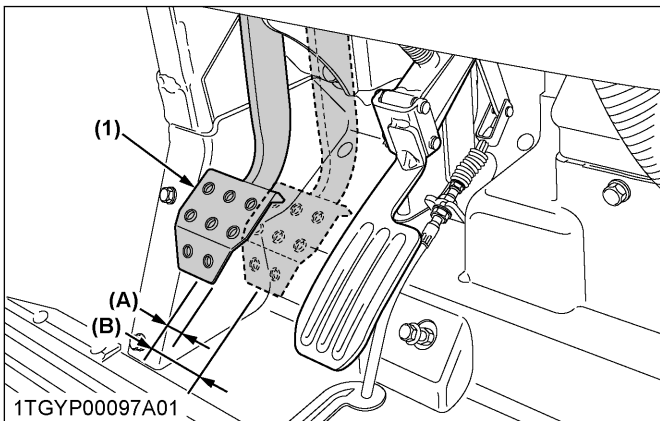

(1) Brake pedal
(A) "FREE TRAVEL"
(B) "PEDAL STROKE"

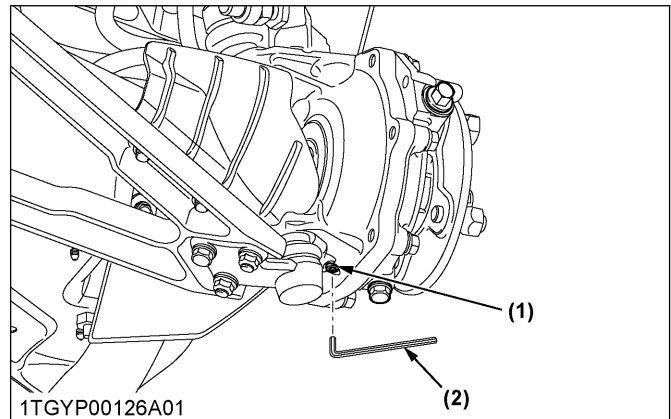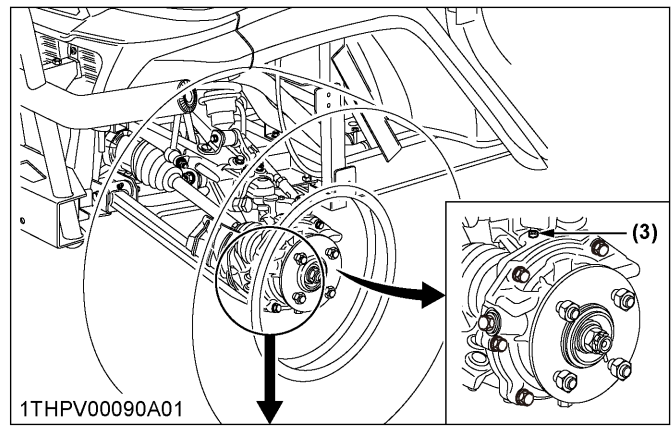

(1) Drain plug
(2) Allen key
(3) Air-bleeding hole plug

2. Check the brake case for brake fluid leak.
3. If there is brake fluid leak, contact your local Kubota dealer for this service.


10. Checking the brake light switch

1. Park the vehicle on a flat surface.
2. Depress the brake pedal to check if the brake light comes on.

9. Checking the front brake case

1. Remove the drain plugs and the air-bleeding hole plugs.

- If the brake light does not come on, check the bulb or brake light switch.
If necessary, contact your local Kubota dealer for this service.

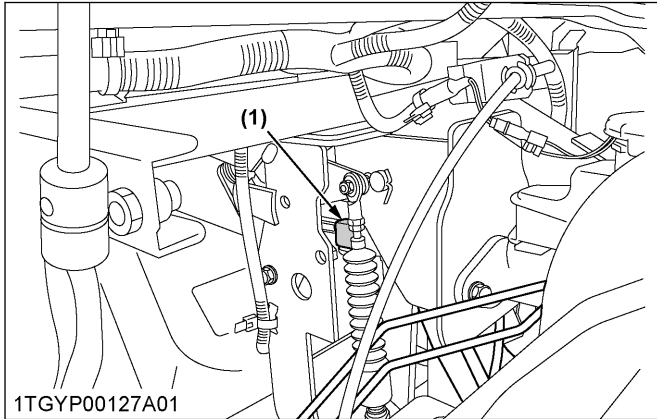

(1) Brake light switch

EVERY 200 HOURS OR 3,000 KM

1. Checking the suspension arm bushings

- Inspect the suspension arm bushings.
- Replace the bushings or the pins, if necessary.
Contact your local Kubota dealer to replace.


EVERY 300 HOURS

1. Checking the tires

- Check to see if tires are not damaged.
- If the tires are cracked, bulged, or cut, or they are worn out, replace or repair them at once.

Tire tread depth

Always replace the tires when the tread depth is worn to minimum allowable.

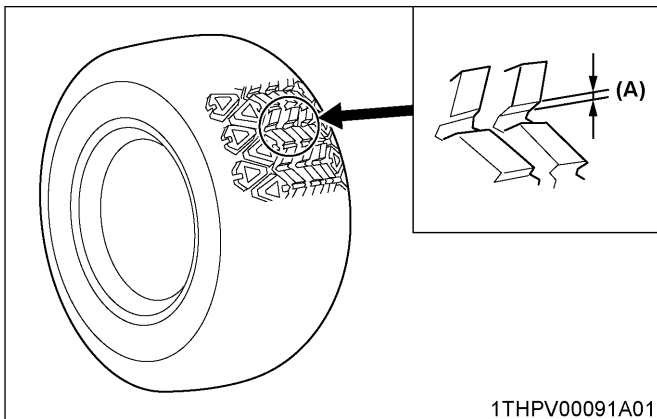

(A) Tire tread depth

Minimum allowable tire tread depth	3 mm (0.12 in.)
------------------------------------	-----------------

EVERY 400 HOURS

1. Changing the front knuckle case oil



CAUTION

To avoid personal injury, do not touch the brake cases after a prolonged use of the vehicle because there is a possible danger of burns.

Oil capacity (one side)	Ref. 0.25 L (0.26 U.S.qts.)
-------------------------	-----------------------------

(See the first table of LUBRICANTS, FUEL, AND COOLANT on page 62.)

- Park the vehicle on a firm, flat, and level surface.
- Remove the tire.
- Place an oil pan under the drain plug at the bottom of the left hand knuckle case.
- Remove the drain plug and the filling plug.
- Wait until the oil is completely drained into the oil pan.

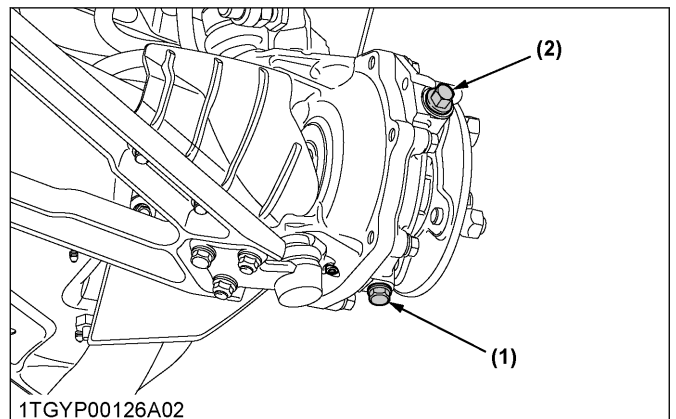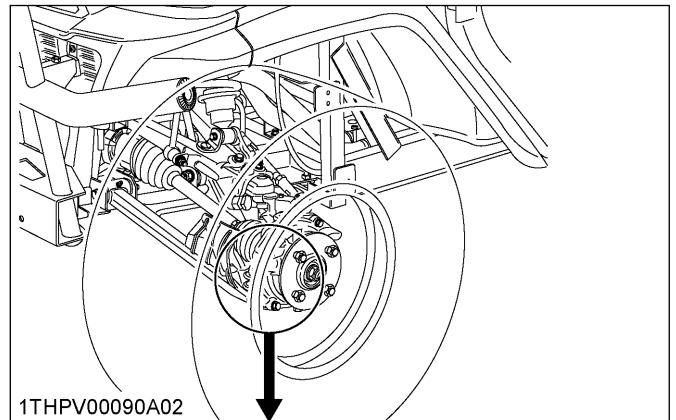

- Drain plug
- Filling plug

- After draining, reinstall the drain plug.
- Fill with the new oil up to the filling port level.

8. After filling, reinstall the filling plug.
9. Use the same procedure to change the right hand knuckle case oil.
10. Properly dispose of the used oil.

2. Changing the transmission fluid

WARNING


To avoid serious injury or death:

- Stop the engine before changing the oil.
- Allow the engine to cool down sufficiently. Oil can be hot and can burn.

Oil capacity	7.0 L (1.8 U.S.gals.)
--------------	-----------------------

(See the first table of LUBRICANTS, FUEL, AND COOLANT on page 62.)

1. Park the vehicle on a level surface.
2. Raise the cargo bed.
3. Mount the safety support.
4. Place an oil pan under the drain plug at the bottom of the transmission case.
5. Remove the drain plug.
6. Wait until the oil is completely drained into the oil pan.
7. Remove the magnet plug and clean off metal shavings.

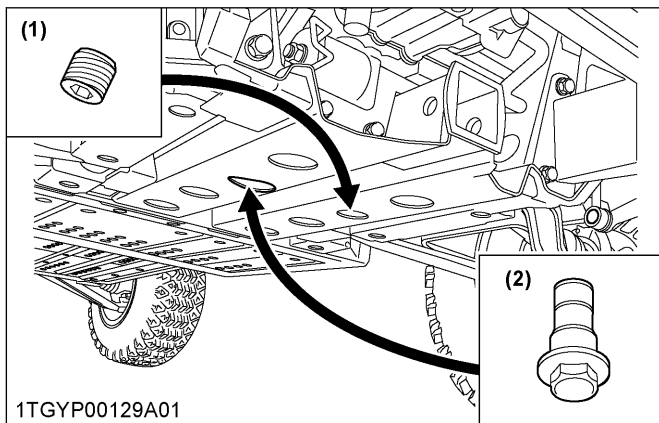


- (1) Drain plug
- (2) Magnet plug

8. After draining, reinstall the drain plug.
9. Fill with the new prescribed oil up to the upper cross hatched area on the dipstick.

How to check:

- a. Draw out the dipstick.
- b. Wipe the dipstick clean.
- c. Replace the dipstick.
- d. Draw out the dipstick again.
- e. Check to see that the oil level lies between the 2 lines.

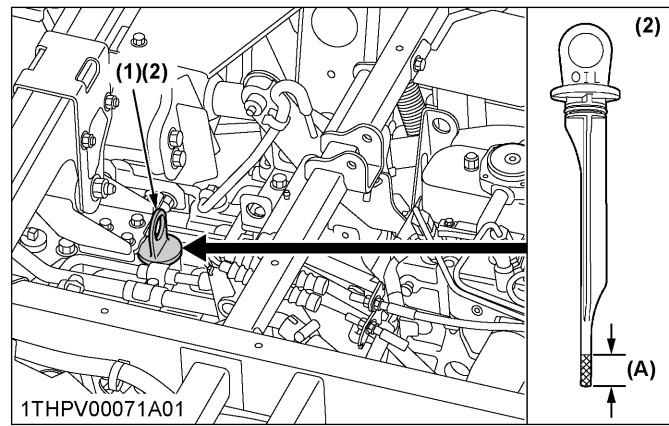

- (1) Oil inlet
- (2) Dipstick
- (A) Oil level

10. Start the engine and run it for a few minutes.
11. Stop the engine.
12. Check the oil level again.
13. Add oil to the prescribed level if necessary.
14. Properly dispose of the used oil.

IMPORTANT :

- Do not operate the vehicle immediately after changing the transmission fluid. Run the engine at medium speed for a few minutes to prevent damage to the transmission.



3. Changing the front axle case oil

Oil capacity	0.6 L (0.6 U.S.qts.)
--------------	----------------------

(See the first table of LUBRICANTS, FUEL, AND COOLANT on page 62.)

1. Park the vehicle on a level surface.
2. Turn over the rubber sheet.
3. Place an oil pan under the drain plug at the bottom of the front axle case.

4. Remove the drain plug and the filling plug.

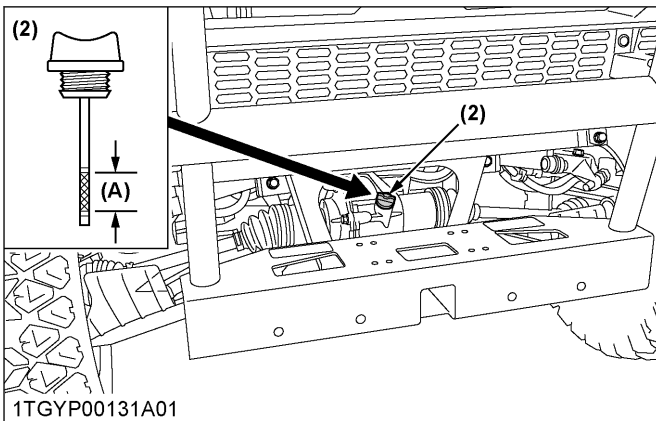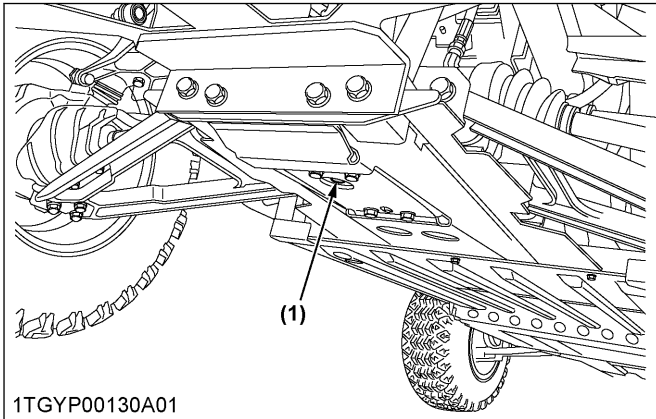

- (1) Drain plug (A) Oil level
- (2) Filling plug with dipstick

5. Wait until the oil is completely drained into the oil pan.
 6. After draining, reinstall the drain plug.
 7. Fill with the new prescribed oil up to the upper line on the dipstick.
- How to check:**
- a. Draw out the dipstick.
 - b. Wipe the dipstick clean.
 - c. Replace the dipstick.
 - d. Draw out the dipstick again.
 - e. Check to see that the oil level lies between the 2 lines.
8. After filling, reinstall the filling plug.
 9. Properly dispose of the used oil.

4. Replacing the fuel filter

Contact your local Kubota dealer for this service.

EVERY 800 HOURS

1. Adjusting the engine valve clearance

Contact your local Kubota dealer for this service.

EVERY 1000 HOURS OR EVERY 1 YEAR

1. Replacing the air cleaner primary element and the secondary element

(See Cleaning the air cleaner primary element on page 80.)

EVERY 1500 HOURS

1. Checking the fuel injection nozzle injection pressure

Contact your local Kubota dealer for this service.

EVERY 2000 HOURS OR EVERY 2 YEARS

Carry out the following service once every 2000 hours or every 2 years whichever comes faster.


1. Flushing the cooling system and changing the coolant

⚠ WARNING

To avoid serious injury or death, do not remove the radiator cap while coolant is hot. When cool, slowly rotate the cap to the first stop and allow sufficient time for excess pressure to escape before removing the cap completely.


Coolant capacity	7.6 L (8.0 U.S.qts.)
------------------	----------------------

1. Raise the cargo bed.
2. Stop the engine and let cool down.
3. Unhook the rod under the cargo bed.
4. Open the rear cover.

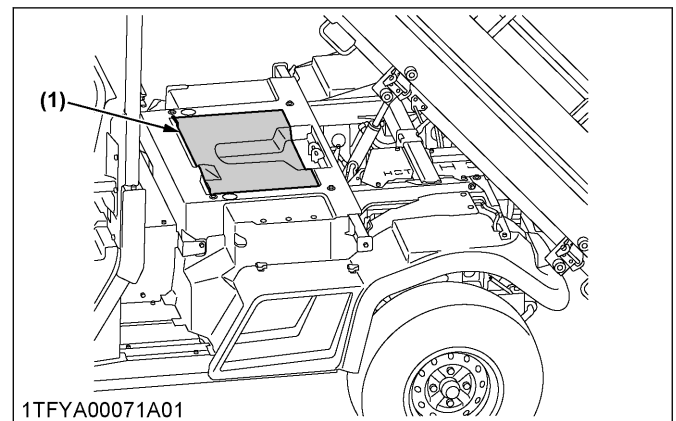


(1) Rear cover

- Draw out the coolant breather hose and secure it to the rod.

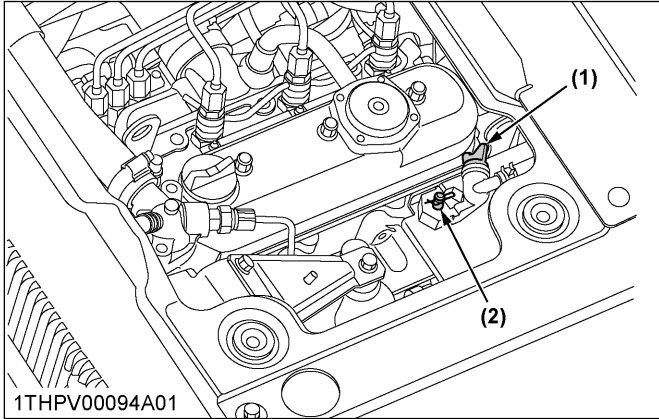


- (1) Engine coolant breather
- (2) Pin

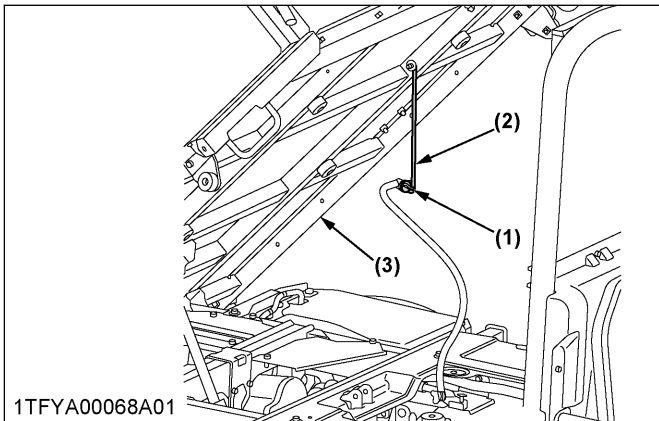

- (1) Engine coolant breather
- (2) Rod
- (3) Cargo bed


- Open the hood.
- Place a container below the drain plug.
- Open the drain plug.
- Remove the radiator cap and the engine coolant breather.
- Wait until the coolant is completely drained.

NOTE :
The radiator cap must be removed to completely drain the coolant.

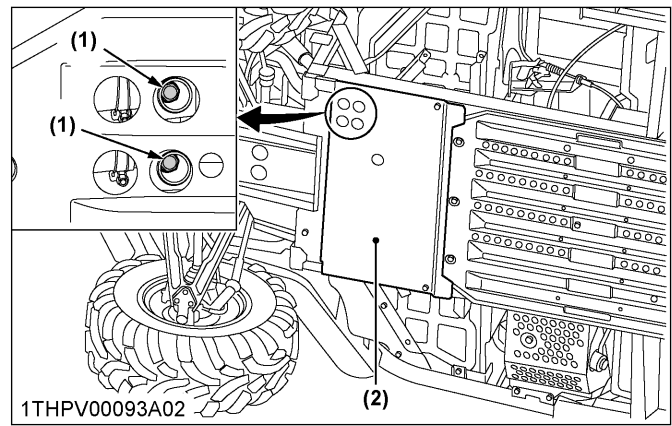

- (1) Drain plug
- (2) Front skid plate

- After all coolant is drained, close the drain plug.
- Fill with clean water and cooling system cleaner.
- Follow directions of the cleaner instruction.
- After flushing, fill with clean distilled water and antifreeze until the coolant level is just below the radiator cap.
 (See Preparing antifreeze on page 95.)
- Install the radiator cap securely.
- Fill with fresh distilled water up to the **[FULL]** mark on the recovery tank.

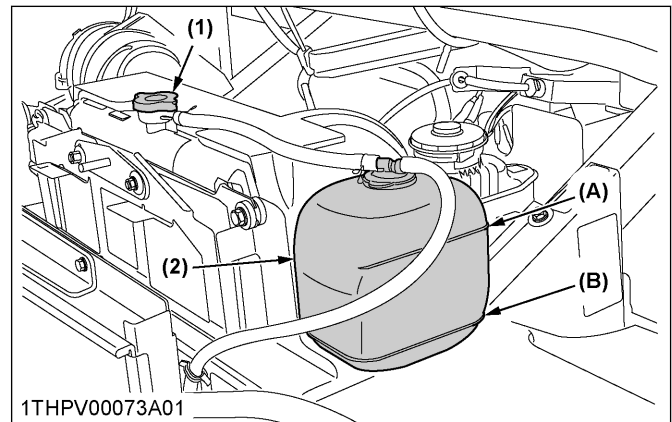

- (1) Radiator cap
- (2) Recovery tank
- (A) **[FULL]**
- (B) **[LOW]**

- Close the engine coolant breather.
- Start and operate the engine for few minutes.
- Stop the engine and let cool.
- Check the coolant level of the recovery tank and add coolant if necessary.
- Place the coolant breather hose and the rod to their original positions.
- Close the rear cover.

23. Lower the cargo bed back into position.

IMPORTANT :

- **Do not start the engine without coolant.**
- **Use clean, fresh distilled water and antifreeze to fill the radiator and recovery tank.**
- **When the antifreeze is mixed with distilled water, the antifreeze mixing ratio is 50 %.**
- **Securely tighten the radiator cap. If the cap is loose or improperly fitted, water may leak out and the engine could overheat.**
- **Make sure that the engine coolant breather is closed after filling the coolant.**

2. Preparing antifreeze

 **WARNING**

To avoid serious injury or death:

- When using antifreeze, put on some protection such as rubber gloves. Antifreeze contains poison.
- If antifreeze is swallowed, seek immediate medical help.
Do not make a person throw up unless told to do so by poison control or a health care professional. Use standard first aid and CPR for signs of shock or cardiac arrest. Call your local poison control center or your local emergency number for further assistance.
- When antifreeze comes in contact with the skin or clothing, wash it off immediately.
- Do not mix different types of antifreeze. The mixture can produce chemical reaction causing harmful substances.
- Keep fire and children away from antifreeze. Antifreeze is extremely flammable and explosive under certain conditions.
- When draining fluids from the engine, place some container underneath the engine body.
- Do not pour waste onto the ground, down a drain, or into any water source.
- Observe the relevant environmental protection regulations when disposing of antifreeze.

Always use a 50/50 mix of long-life coolant and clean soft water in Kubota engines.

Contact your local Kubota dealer concerning coolant for extreme conditions.

- Long-life coolant (hereafter LLC) comes in several types. Use ethylene glycol (EG) type for this engine.
- Before using LLC-mixed cooling water, fill the radiator with fresh water and empty it again. Repeat this procedure 2 or 3 times to clean up the inside.
- Mixing the LLC

Premix 50 % LLC with 50 % clean soft water. When mixing, stir it up well, and then fill into the radiator.

- The procedure for the mixing of water and antifreeze differs according to the make of the antifreeze and the ambient temperature. Refer to the manufacture's specifications. Refer to SAE J1034 standard, more specifically also to SAE J814c.

IMPORTANT :

- **When mixing the antifreeze with water, the antifreeze mixing ratio is 50 %.**

Vol % Antifreeze	Freezing point		Boiling point	
	°C	°F	°C	°F
50	-37	-34	108	226

Boiling temperature is at 1.013×10^5 Pa (760 mmHg) pressure (atmospheric).

A higher boiling point is obtained by using a radiator pressure cap which permits the development of pressure within the cooling system.

- Never add any long-life coolant of different manufacturer. Different brands may have different additive components, and the engine may fail to perform as specified.

NOTE :

- This data represent industry standards that necessitate a minimum glycol content in the concentrated antifreeze.
- When the LLC is mixed, do not use any radiator cleaning agent. The LLC contains anticorrosive agent. If mixed with the cleaning agent, sludge may build up, adversely affecting the engine parts.
- Kubota's genuine long-life coolant has a service life of 2 years. Change the coolant every 2000 hours or every 2 years whichever comes faster.

EVERY 3000 HOURS

1. Checking the injection pump

Contact your local Kubota dealer for this service.

EVERY YEAR


1. Checking the fuel lines

(See Checking the fuel filter on page 81.)


2. Checking the hydraulic oil line

1. Check to see if the hoses and hose clamps are tight and not damaged. If necessary, contact your local Kubota dealer for this service.


2. If hoses and clamps are found to be worn or damaged, replace or repair them at once.

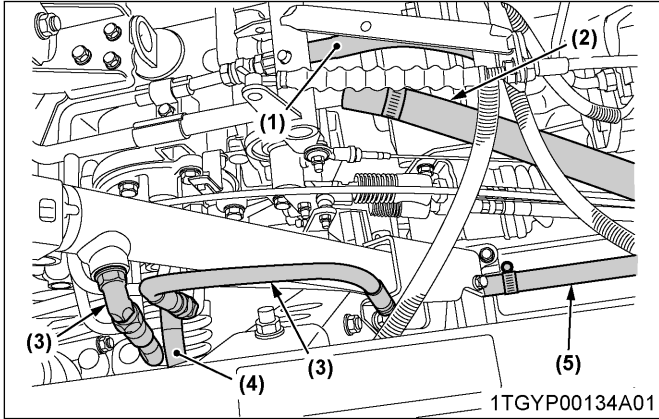


- (1) Hydraulic pump → Control valve
- (2) HST → Oil tank
- (3) Control valve ↔ Lift cylinder
- (4) Control valve → Power steering unit
- (5) Oil tank → HST

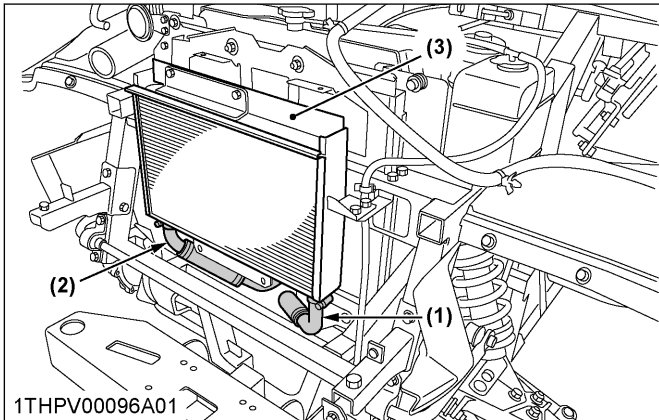

- (1) Power steering unit → Oil cooler
- (2) Oil cooler → Oil tank
- (3) Oil cooler

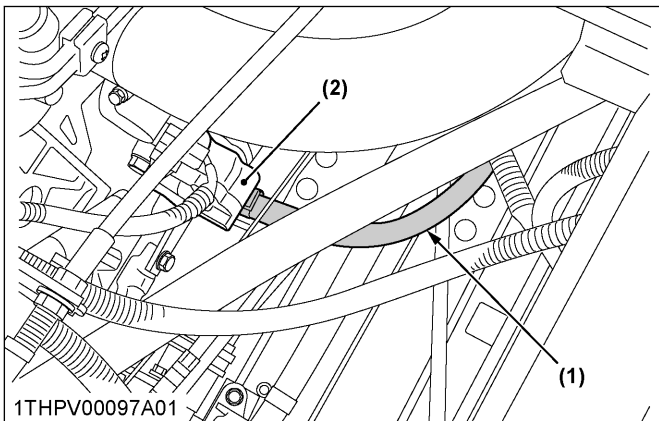


- (1) Oil tank → Hydraulic pump
- (2) Hydraulic pump

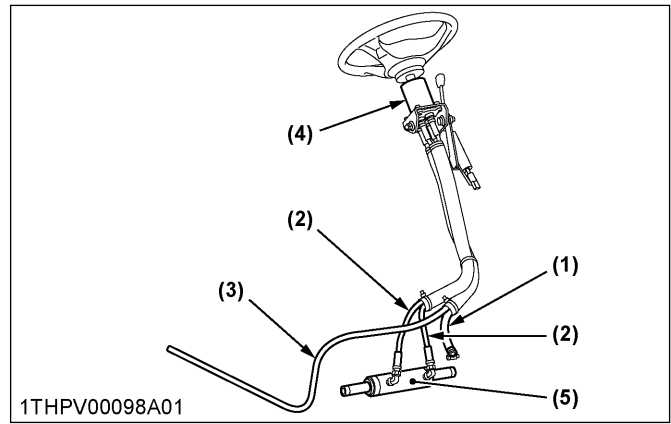


- (1) Power steering hose (Power steering unit → Oil cooler)
- (2) Power steering hose (Power steering unit ↔ Power steering cylinder)
- (3) Power steering hose (Power steering unit ← Control valve)
- (4) Power steering unit
- (5) Power steering cylinder

3. Checking the radiator hoses and clamps


1. Park the vehicle on a flat surface.
2. Raise the cargo bed.
3. Mount the safety support to the cargo bed.
4. Check to see if radiator hoses are properly fixed.
5. If hose clamps are loose or water leaks, tighten bands securely.
6. If the radiator hoses are swollen, hardened, or cracked, replace the hoses and tighten the hose clamps securely.

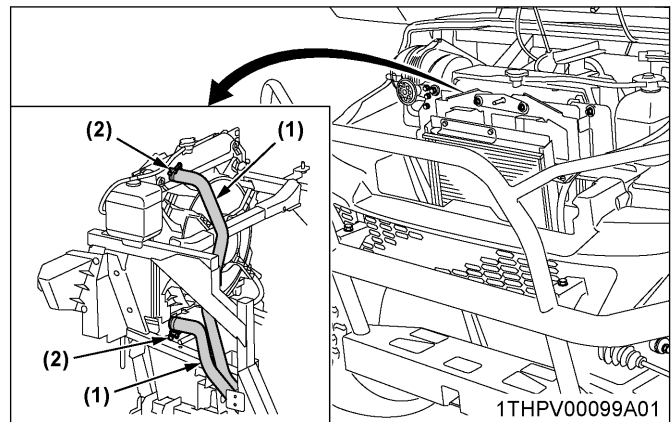


- (1) Radiator hose
- (2) Clamp band

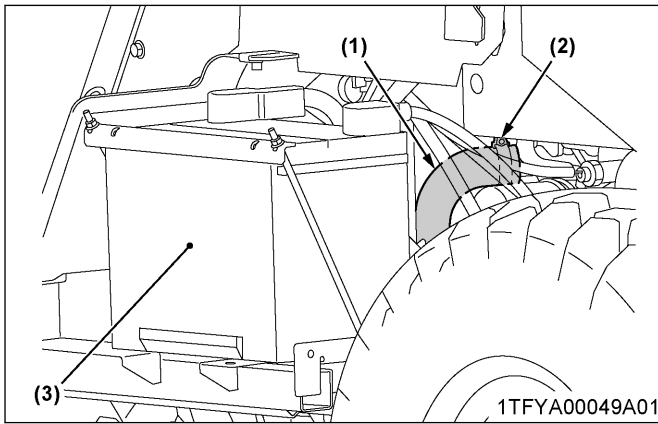

- (1) Radiator hose
- (2) Clamp band
- (3) Battery

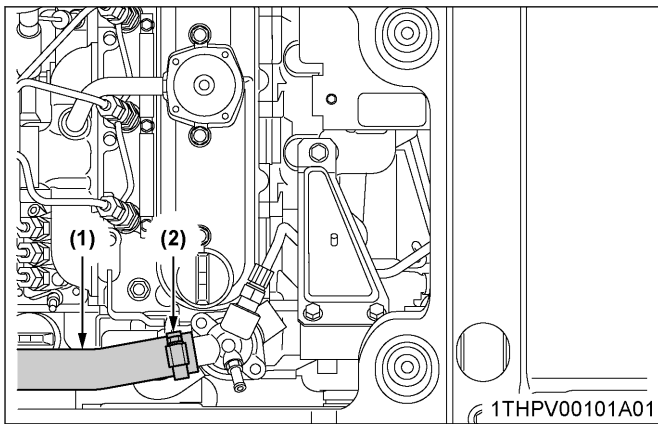

- (1) Radiator hose
- (2) Clamp band

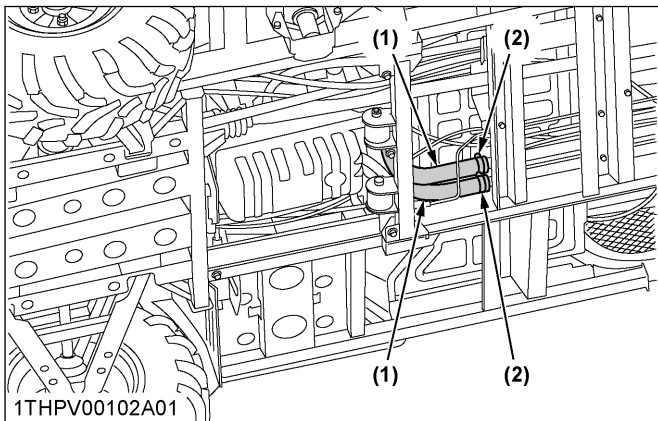

- (1) Radiator hose
- (2) Clamp band

IMPORTANT :
Do not stop the engine suddenly.

- 3. Stop the engine.
- 4. Wait for at least 10 minutes or while the steam is blowing out.

! CAUTION
To avoid personal injury, keep yourself well away from the vehicle.

- 5. Check that there is no danger from the overheat condition.
- 6. Determine the cause of the overheat and fix the cause.
 (See Troubleshooting on page 103.)
- 7. After the engine has cooled, restart the engine.

4. Checking the intake air line

- 1. Check to see if the hoses and hose clamps are tight and not damaged.


Precaution at overheating

Take the following actions in the event the coolant temperature is close to or more than the boiling point, which is called "overheating".

- 1. Stop the vehicle operation in a safe place, unload the engine and remain at idle.
- 2. Run the engine for about 5 minutes in unloaded idling.


- If hoses and clamps are found to be worn or damaged, replace or repair them at once. Contact your local Kubota dealer for this service.

Under the hood

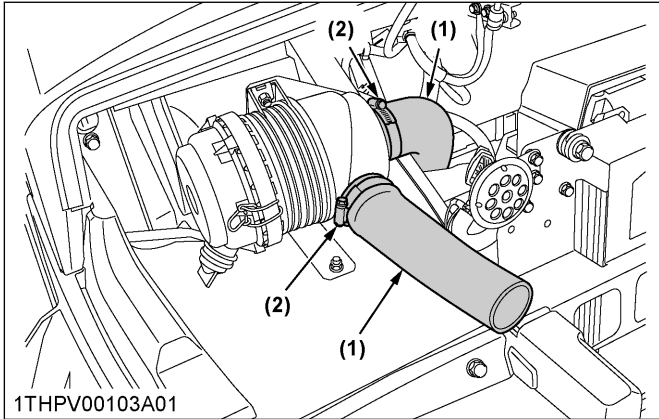


- (1) Hose
- (2) Hose clamp

Engine

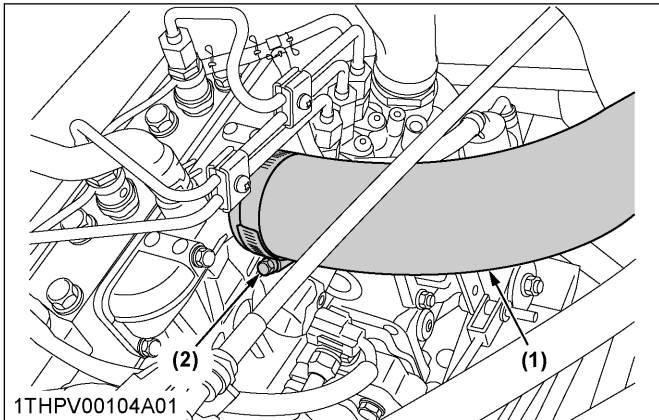

- (1) Hose
- (2) Hose clamp

Underbody

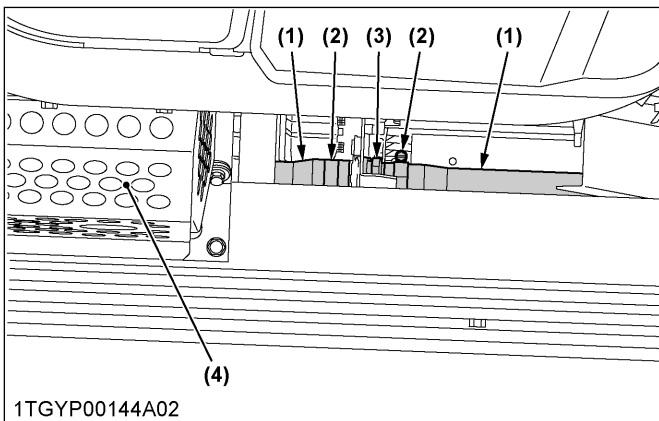


- (1) Hose
- (2) Hose clamp
- (3) Joint
- (4) Hydraulic tank

5. Checking the engine breather hose

! WARNING
 To avoid serious injury or death, stop the engine and remove the key before checking engine breather hose.

- Stop the engine and let cool down.
- Check to see if engine breather hose is properly fixed.
- Replace the hose, if engine breather hose is swollen, hardened, or cracked. Contact your local Kubota dealer for this service.

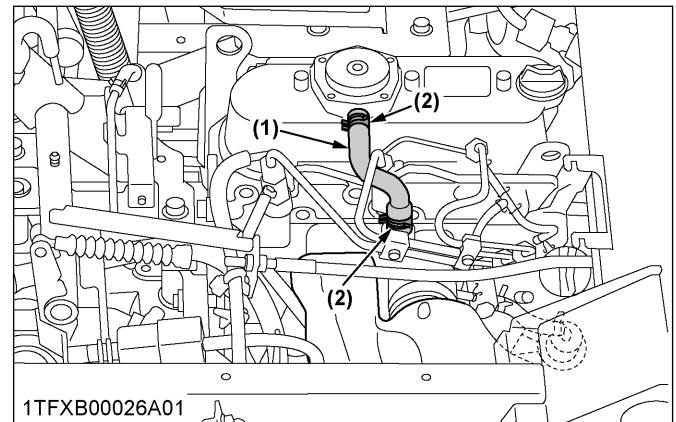


- (1) Engine breather hose
- (2) Hose clamp

6. Checking the brake hose and the brake pipe

- Check to see that the brake hose and pipe are not swollen, hardened, or cracked.
- Check the brake hose and pipe joints for oil leaks.


3. If there is any abnormality, contact your local Kubota dealer.

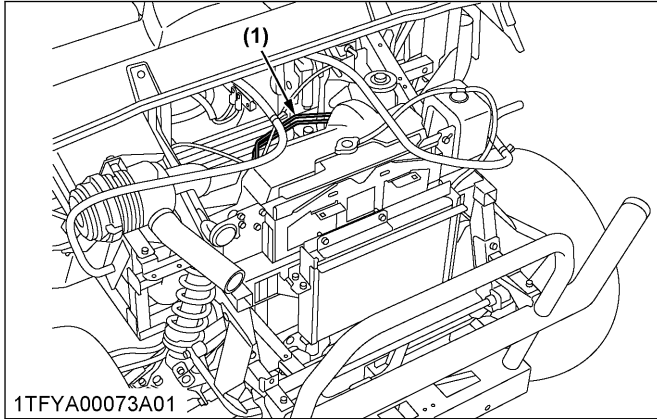

1TFYA00073A01

(1) Brake pipe


Front brake hose

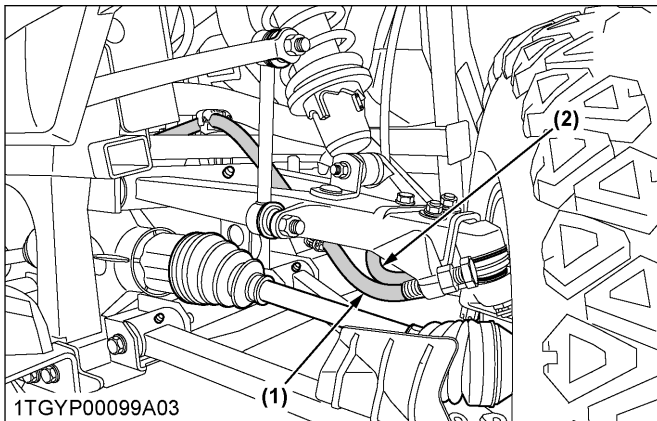

1TGYP00099A03


(1) Brake hose
(2) Breather hose

Rear brake hose

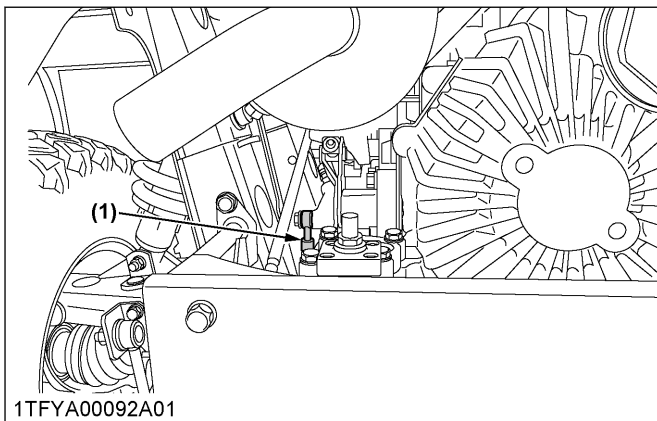

1TFYA00092A01

(1) Brake hose

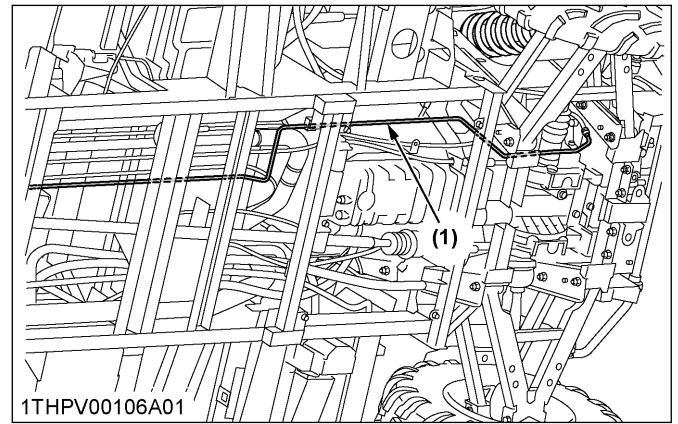

1THPV00106A01

(1) Brake pipe

EVERY 2 YEARS

1. Changing the brake fluid

Contact your local Kubota dealer for this service.
(See Checking the brake fluid level on page 75.)

2. Checking the hydraulic oil line

Contact your local Kubota dealer for this service.

3. Checking the radiator hoses and clamps

Contact your local Kubota dealer for this service.

4. Checking the engine breather hose

Contact your local Kubota dealer for this service.

5. Checking the brake hoses and pipes

Contact your local Kubota dealer for this service.

EVERY 4 YEARS

1. Replacing the fuel hose

Contact your local Kubota dealer for this service.

2. Replacing the brake master cylinder (inner parts)

Contact your local Kubota dealer for this service.

3. Replacing the front brake seal

Contact your local Kubota dealer for this service.

4. Replacing the rear brake cylinder seal

Contact your local Kubota dealer for this service.

5. Replacing the intake air line

Contact your local Kubota dealer for this service.
(See Checking the intake air line on page 97.)

SERVICE AS REQUIRED

1. Bleeding the fuel system

Air must be removed in the following cases:


- When the fuel filter or lines are removed
- When the tank is completely empty
- After the vehicle has not been used for a long period of time

Bleeding procedure

1. Fill the fuel tank with fuel.
2. Pump the fuel pump lever.

NOTE :

- The fuel pump lever will pump easily at first and with added resistance as air is purged from the system.

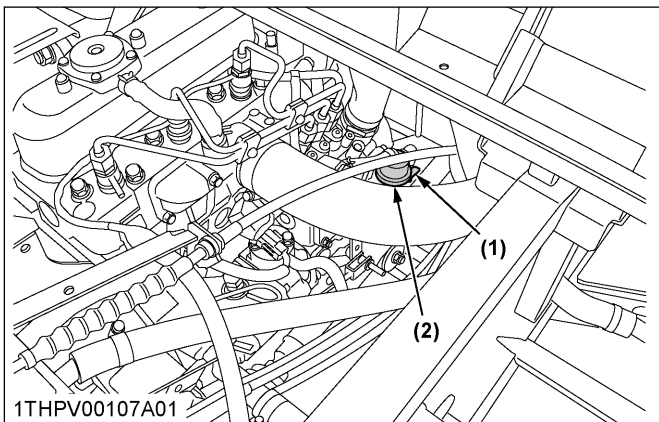

- (1) Fuel pump lever
(2) Fuel pump

3. Start the engine and run it for about 30 seconds.
4. Stop the engine.

2. Cleaning around the engine

(See Checking around the engine on page 72.)

3. Replacing a fuse

The vehicle electrical system is protected from potential damage by fuses.

A blown fuse indicates that there is an overload or short somewhere in the electrical system.


If any of the fuses should blow, replace with a new one of the same capacity.

IMPORTANT :

- Before replacing a blown fuse, determine why the fuse blew and make any necessary repairs. Failure to follow this procedure may result in serious damage to the vehicle electrical system. Contact your local Kubota dealer for specific information dealing with electrical problems.


Replacement procedure

1. Disconnect the negative cable of the battery.
2. Turn over the maintenance cover under the left side of the cargo bed.

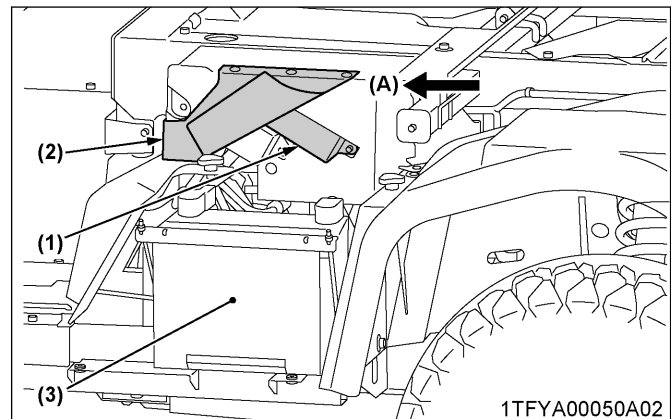


- (1) Fuse box
(2) Maintenance cover
(3) Battery
(A) Front

3. Remove the fuse box cover.
4. Pull out the blown fuse using the fuse puller in the fuse box.

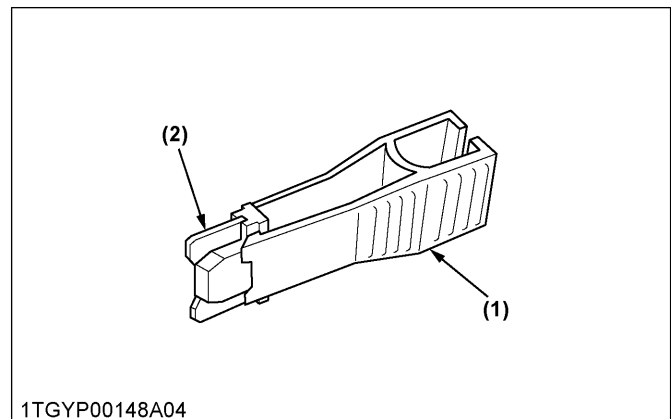

- (1) Fuse puller
(2) Fuse

5. Insert a new fuse into the fuse box.
6. Install the fuse box cover and the maintenance cover.
7. Connect the negative battery cable.

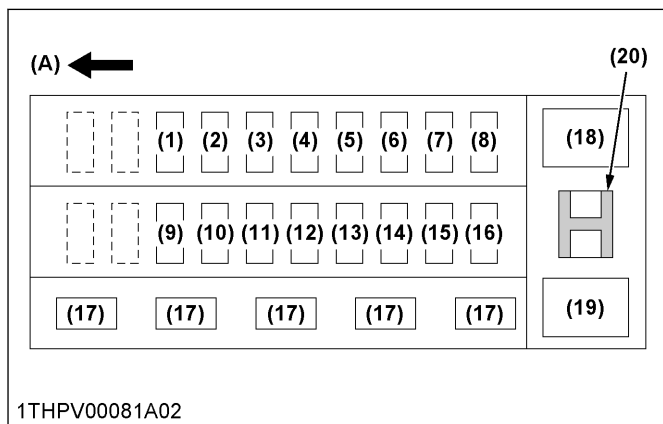

(A) Front

Protected circuit

Fuse No.	Capacity (A)	Protected circuit
1	5	Glow lamp
2	5	Starter relay
3	5	Radiator fan relay
4	10	AUX / B, Buzzer relay (option lamp)
5	5	Solenoid relay
6	5	Meter (IGN)
7	—	—
8	15	Head light blinker (F)
9	15	Blinker (R) brake lamp
10	30	Radiator fan
11	—	—
12	10	DC output
13	10	Horn
14	—	—
15	30	Solenoid
16	5	Meter (BAT)
17	30, 20, 15, 10, 5	Spare
18	Slow blow fuse (60)	Key switch
19	Slow blow fuse (60)	Alternator
20	—	Fuse puller

4. Replacing a slow blow fuse

The slow-blow fuses are intended to protect the electrical cabling. If any of them have blown out, pinpoint the cause. Never use any substitute, use only a Kubota genuine part.

Replacement procedure

1. Disconnect the negative cable of the battery.
2. Turn over the maintenance cover under the left side of the cargo bed.
3. Remove the fuse box cover.

4. Pull out the slow blow fuse.
5. Insert a new slow blow fuse into the slow blow fuse box.
6. Install the slow blow fuse box cover and the maintenance cover.
7. Connect the negative battery cable.

5. Replacing a light bulb

Replacing the head light and the turn signal light (front)

1. Take the bulb out of the light body.
2. Replace the bulb with a new one.


Replacing other lights

1. Detach the lens.
2. Replace the bulb with a new one.
3. Reattach the lens.

Light	Capacity
Head light (clear type)	37.5 W
Tail light	5 W
Brake light	21 W
Turn signal light (front)	21 W (if equipped)
Turn signal light (rear)	21 W (if equipped)
Work light (front)	35 W (if equipped)
Work light (rear)	27 W (if equipped)

6. Checking the hydraulic tank suction strainer

1. Make sure that the hydraulic tank is not damaged and the oil does not leak out of the hydraulic tank.
2. Make sure that the water is not mixed with the oil.
3. When the suction strainer is dirty, wash it with the hydraulic oil.

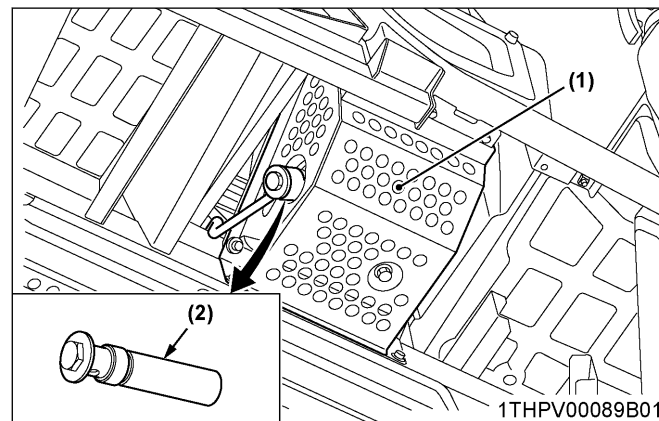

(1) Hydraulic tank
(2) Suction strainer

STORAGE

WARNING

To avoid serious injury or death:

- Do not clean the vehicle with the engine running.
- To avoid the danger of exhaust fume poisoning, do not operate the engine in a closed building without proper ventilation.
- When storing, remove the key from the ignition switch to avoid unauthorized persons from operating the vehicle and getting injured.

VEHICLE STORAGE

If you intend to store your vehicle for an extended period of time, follow the procedures outlined as follows.

These procedures will insure that the vehicle is ready to operate with minimum preparation when it is removed from storage.

1. Check the bolts and nuts for looseness, and tighten if necessary.
2. Apply grease to vehicle areas where bare metal will rust also to pivot areas.
3. Unload the cargo bed.
4. Inflate the tires to a pressure a little higher than usual.
5. Change the engine oil and run the engine to circulate oil throughout the engine block and internal moving parts for about 5 minutes.
6. With all implements lowered to the ground, coat any exposed hydraulic cylinder piston rods with grease.
7. Remove the battery from the vehicle. Store the battery following the battery storage procedures. (See Checking the battery condition on page 82.)
8. Keep the vehicle in a dry place where the vehicle is sheltered from the elements. Cover the vehicle.
9. Store the vehicle indoors in a dry area that is protected from sunlight and excessive heat. If the vehicle must be stored outdoors, cover it with a waterproof tarpaulin. Put boards under the tires to keep dampness away from tire. Keep the tires out of direct sunlight and extreme heat.

IMPORTANT :

- When washing the vehicle, stop the engine. Allow sufficient time for the engine to cool before washing.
- Do not wash with a high-pressure car-washing machine.

- Cover the vehicle after the muffler and the engine have cooled down.

REMOVING THE VEHICLE FROM STORAGE

1. Check the tire air pressure and inflate the tires if they are low.
2. Install the battery. Before installing the battery, be sure it is fully charged.
3. Check the alternator belt tension.
4. Check all fluid levels (engine oil, transmission oil, hydraulic oil, brake fluid, engine coolant and any attached implements).
5. Start the engine. Observe all gauges. If all gauges are functioning properly and reading normal, move the vehicle outside. Once outside, park the vehicle and let the engine idle for at least 5 minutes. Shut the engine off and walk around vehicle and make a visual inspection looking for evidence of oil or water leaks.
6. With the engine fully warmed up, release the parking brake and test the brakes for proper adjustment as you move forward. Adjust the brakes as necessary.

TROUBLESHOOTING

ENGINE TROUBLESHOOTING

If something is wrong with the engine, refer to the following table for the cause and its corrective measure.

Trouble		Cause	Countermeasure
The engine is difficult to start or will not start.		<ul style="list-style-type: none"> No fuel flow. 	<ul style="list-style-type: none"> Check the fuel tank and the fuel filter. Replace the fuel filter if necessary.
		<ul style="list-style-type: none"> Air or water is in the fuel system. 	<ul style="list-style-type: none"> Check to see if the fuel line coupler bolt and nut are tight. Bleed the fuel system. (See Bleeding the fuel system on page 100.)
		<ul style="list-style-type: none"> In winter, oil viscosity increases, and engine revolution is slow. 	<ul style="list-style-type: none"> Use oils of different viscosities, depending on ambient temperatures.
		<ul style="list-style-type: none"> Battery becomes weak and the engine does not turn over quick enough. 	<ul style="list-style-type: none"> Clean the battery cables and terminals. Charge the battery. In cold weather, always remove the battery from the engine, charge and store it indoors. Install it on the vehicle only when the vehicle is going to be used.
The engine power is insufficient.		<ul style="list-style-type: none"> The fuel is insufficient or dirty. The air cleaner is clogged. 	<ul style="list-style-type: none"> Check the fuel system. Clean or replace the element.
The engine stops suddenly.		<ul style="list-style-type: none"> The fuel is insufficient. 	<ul style="list-style-type: none"> Refuel. Bleed the fuel system if necessary.
Exhaust fumes are colored.	Black	<ul style="list-style-type: none"> Fuel quality is poor. There is too much oil. The air cleaner is clogged. 	<ul style="list-style-type: none"> Change the fuel and fuel filter. Check the proper amount of oil. Clean or replace the element.
	Blue white	<ul style="list-style-type: none"> The inside of the exhaust muffler is damp from fuel. The injection nozzle has a trouble. Fuel quality is poor. 	<ul style="list-style-type: none"> Heat the muffler by applying load to the engine. Check the injection nozzle. Change the fuel and fuel filter.
The engine overheats.		<ul style="list-style-type: none"> The engine is overloaded. 	<ul style="list-style-type: none"> Shift to lower gear or reduce load.
		<ul style="list-style-type: none"> Coolant level is low. 	<ul style="list-style-type: none"> Fill the cooling system to the correct level; check the radiator and the hoses for loose connections or leaks.
		<ul style="list-style-type: none"> The radiator core or the grille screens are dirty. 	<ul style="list-style-type: none"> Remove all trash.
		<ul style="list-style-type: none"> The coolant flow route is corroded. 	<ul style="list-style-type: none"> Flush the cooling system.

If you have any questions, contact your local Kubota dealer.

BATTERY TROUBLESHOOTING

Trouble	Cause	Countermeasure	Preventive measure
The starter does not function.	• The battery was overused until lights are dim.	• Charge the battery sufficiently.	• Charge the battery properly.
	• The battery has not been recharged.		
	• Terminal connection is poor.	• Clean the terminal and tighten securely.	• Keep the terminal clean and tight. Apply grease and treat with anti-corrosives.
	• The battery life has expired.	• Renew battery.	
The starter does not function from the beginning, and lights soon become dim.	• Charging is insufficient.	• Charge the battery sufficiently.	• Service the battery properly before initial use.
When viewed from the top, the top of plates look whitish. (Refillable type battery only)	• Battery was used with an insufficient amount of electrolyte.	• Add distilled water and charge the battery.	• Regularly check the electrolyte level.
	• Battery was used too much without recharging.	• Charge the battery sufficiently.	• Charge the battery properly.
Recharging is impossible.	• The battery life has expired.	• Replace the battery.	
Terminals are severely corroded and heat up.	• Terminal connection is poor.	• Clean the terminal and tighten securely.	• Keep the terminal clean and tight. Apply grease and treat with anti-corrosives.
Battery electrolyte level drops rapidly. (Refillable type battery only)	• There is a crack or pin holes in the electrolytic cells.	• Replace the battery.	
	• The charging system has a trouble.	• Contact your local Kubota dealer.	

- If you have any questions, contact your local Kubota dealer.
- The factory-installed battery is non-refillable type.

MACHINE TROUBLESHOOTING

Trouble	Cause	Countermeasure
The machine operation is not smooth.	• Hydrostatic transmission fluid is insufficient.	• Replenish oil.
	• The filter is clogged.	• Replace the filter.
The machine does not move while engine is running.	• The parking brake is on.	• Release the parking brake.
	• Transmission fluid level is insufficient.	• Replenish oil.
Brakes are not working correctly.	• The brake fluid level is low.	• Check fluid level.
	• Air is in the brake system.	• Contact your Kubota dealer.
	• The brake pads are worn.	• Contact your Kubota dealer.
Brake noise occurs.	—	• Contact your Kubota dealer.
HST oil overheats.	• The HST is overloaded.	• Reduce load.
	• Oil level is low.	• Fill oil to the correct level.
	• The cooler core or the screens are dirty.	• Remove all trash.
	• The oil flow route is corroded.	• Check the oil cooling system.
	• The hydraulic lever is positioned at the end of stroke.	• Set the lever to the "NEUTRAL" ("OFF") position.

If you have any questions, contact your local Kubota dealer.

OPTIONS

LIST OF OPTIONS

Contact your local Kubota dealer for further details.

- Backup beeper
- Fabric cover
- Front mud guard
- Front trailer hitch and pin
- Front work light
- Rear trailer hitch and pin
- Rear work light
- Front blade (72")
- Strobe light (beacon)
- Tail lamp guards
- Turn signal and hazard light kit
- Winch kit
- Cargo bed winch
- Cargo bed light panel
- Storage box
- Extended tailgate

INDEX

Symbols

12 V electric outlet.....	41
4WD lever.....	38

A

air cleaner primary element	
cleaning.....	80
replacing.....	93
air cleaner secondary element	
replacing.....	93
alternator belt tension	
adjusting.....	80
antifreeze	
preparing.....	95
applicable BDF.....	66
around the engine	
checking.....	72
cleaning.....	100

B

backup beeper (if equipped)	
checking.....	77
battery	
charging.....	83
directions for storage.....	84
jump starting.....	32
replacing.....	83
troubleshooting.....	104
battery condition	
checking.....	82
BDF B0 through B5	
when using.....	67
BDF B6 through B20	
when using.....	67
biodiesel fuel (BDF).....	66
block heater (if equipped).....	32
brake fluid	
changing.....	99
brake fluid level	
checking.....	75
brake hose	
checking.....	98,99
brake light switch	
checking.....	90
brake master cylinder (inner parts)	
replacing.....	99
brake pedal.....	37
checking.....	75,90
brake pipe	
checking.....	98,99

C

cargo bed	
hauling loads.....	9
lowering.....	51,70
operating lock.....	52
raising.....	51,70
cargo bed side gate	
opening.....	48
removing.....	49
cargo bed tailgate	
opening.....	48
removing.....	49
check during driving.....	39
clamp	
checking.....	96,97,99
cold weather starting.....	32
coolant.....	62
changing.....	93
for North American market.....	64
for other than North American market.....	65
coolant level	
checking.....	74
coolant temperature gauge.....	40
cooling system	
flushing.....	93

D

daily check.....	29,71
checking fuel level.....	72
checking the tire pressure.....	55
refueling.....	72
dealer service.....	21
differential lock.....	42
driving in 4WD.....	43
driving in high speeds.....	9
driving in reverse.....	43
driving on hills.....	44
driving on unfamiliar terrain.....	43
driving through water.....	45
dynamic braking.....	39

E

Easy Checker™	
checking.....	75
indicator.....	39
engine	
jump starting.....	32
starting.....	30
stopping.....	32
troubleshooting.....	103
warming up.....	32
engine breather hose	
checking.....	98,99

engine hand throttle.....	32
engine oil	
changing.....	87
engine oil filter	
replacing.....	86
engine oil level	
checking.....	72
engine start system	
checking.....	78
engine valve clearance	
adjusting.....	93
exhaust system	
checking.....	85

F

front axle case oil	
changing.....	92
front brake case	
checking.....	90
front brake seal	
replacing.....	99
front end.....	70
front knuckle case oil	
changing.....	91
front trailer hitch (if equipped).....	57
fuel.....	62
for North American market.....	64
for other than North American market.....	65
fuel filter	
checking.....	81
replacing.....	93
fuel gauge.....	40
fuel hose	
replacing.....	99
fuel injection nozzle injection pressure	
checking.....	93
fuel lines	
checking.....	95
fuel system	
bleeding.....	100
fuse	
replacing.....	100

G

general caution.....	47
glove box.....	42
glove box cover.....	42
greasing.....	77,86

H

hazard light	
switch (if equipped).....	35
head light	
checking.....	76
switch.....	35

hood	
opening.....	69
horn button.....	36
hourmeter.....	40
hydraulic oil line	
checking.....	95
replacing.....	99
hydraulic oil tank level	
checking.....	73
hydraulic outlet driven equipment (if equipped)	
operating.....	10
hydraulic outlet lever.....	53
hydraulic outlet valve coupler	
connecting.....	54
disconnecting.....	54
hydraulic tank oil	
changing.....	89
hydraulic tank suction strainer	
checking.....	101

I

inclement conditions.....	9
injection pump	
checking.....	95
intake air line	
checking.....	97
replacing.....	100

J

joint boot	
checking.....	76

L

label	
care.....	19
light bulb	
replacing.....	101
location of parts.....	26
long term storage.....	67
lubricant.....	62
for North American market.....	64
for other than North American market.....	65
lubricating oil	
changing.....	34

M

machine	
operating on slopes.....	9
specification table.....	23
troubleshooting.....	105
maintenance intervals.....	59
max. cargo bed load.....	47
muffler (for swirl type spark arrester)	
cleaning.....	84

N

new vehicle	
changing lubricating oil.....	34
operating caution.....	34

O

odometer.....	40
oil cooler net	
cleaning.....	74
option	
list.....	106
other miscellaneous.....	9

P

parking brake	
adjusting.....	85
applying.....	30
checking.....	75
releasing.....	30
parking brake lever.....	38,41
product warranty, emission, and other precautions.....	66

R

radiator hose	
checking.....	96,99
radiator screen	
cleaning.....	74
range gear shift lever.....	37
rear brake cylinder seal	
replacing.....	100
rear end.....	71
rear trailer hitch (if equipped).....	57
ROPS	
checking.....	76

S

safety	
general information.....	7
operating on slopes.....	9
operating the vehicle.....	8
starting the vehicle.....	8
safety concerns in Canada	
reporting.....	21
safety for children.....	8
safety label.....	12
seat	
slide lever.....	35
tilting.....	69
seat belt.....	34
checking.....	76
service intervals.....	59
shock absorber spring	
adjustment.....	56
skidding.....	45
sliding.....	45

slow blow fuse	
replacing.....	101
speed control pedal.....	39
speedometer.....	41
stationary hydraulic outlet (if equipped).....	46
steering wheel tilt lever.....	35
suspension arm bushings	
checking.....	91

T

tire	
checking.....	91
tire inflation pressure	
checking.....	76
tire type.....	55
toe-in	
adjusting.....	84
transmission fluid	
changing.....	92
transmission fluid level	
checking.....	73
transmission oil	
warming up in the low temperature range.....	32
transmission oil filter (suction)	
replacing.....	88
transmission oil filter (VHT)	
replacing.....	88
transporting the vehicle safely.....	57
traveling speed.....	24
traversing hillsides.....	45
turn signal light	
checking.....	76
switch (if equipped).....	36

U

use of power steering.....	43
utility box.....	42

V

vehicle	
cleaning.....	71
operating.....	8
parking.....	10
removing from storage.....	102
scrapping procedure.....	21
servicing.....	10
starting.....	8,34
stopping.....	39
transporting.....	10
turning.....	44
warranty.....	21
vehicle limitations.....	25
vehicle storage.....	102
VHT neutral spring	
checking.....	79

VHT pressure release
checking..... 79

W

walk around inspection.....71
warranty..... 21
wheel.....55
wheel fastener torque
checking..... 79
winch mount bracket..... 57
work light (front) (if equipped)..... 36
work light (rear) (if equipped)..... 37