

# Kubota

- U.S.A. : **KUBOTA TRACTOR CORPORATION**  
1000 Kubota Drive, Grapevine, TX 76051  
Telephone : 888-4KUBOTA
- Canada : **KUBOTA CANADA LTD.**  
5900 14th Avenue, Markham, Ontario, L3S 4K4, Canada  
Telephone : (905)294-7477
- France : **KUBOTA EUROPE S.A.S**  
19-25, Rue Jules Verceyruysse, Z.I. BP88, 95101 Argenteuil Cedex, France  
Telephone : (33)1-3426-3434
- Italy : **KUBOTA EUROPE S.A.S Italy Branch**  
Via Grandi, 29 20068 Peschiera Borrome (MI) Italy  
Telephone : (39)02-51650377
- Germany : **KUBOTA BAUMASCHINEN GmbH**  
Steinhauser str, 100, 66482 Zweibrucken Rheinlandpfalz Germany  
Telephone : (49)6332-4870100
- U.K. : **KUBOTA (U.K.) LTD.**  
Dormer Road, Thame, Oxfordshire, OX9 3UN, U.K.  
Telephone : (44)1844-214500
- Australia : **KUBOTA AUSTRALIA PTY LTD.**  
25-29 Permas Way, Truganina, VIC 3029, Australia  
Telephone : (61)-3-9394-4400
- Malaysia : **KUBOTA MALAYSIA SDN. BHD.**  
Lot 766, Jalan Subang 4, off Persiaran Subang Sungai Penaga Industrial Park,  
47500 Subang Jaya  
Telephone : (60)-3-7890-3533
- Philippines : **KUBOTA PHILIPPINES, INC.**  
232 Quirino Highway, Baesa, Quezon City 1106, Philippines  
Telephone : (63)2-422-3500
- Taiwan : **SHIN TAIWAN AGRICULTURAL MACHINERY CO., LTD.**  
16, Fengping 2nd Rd, Taliiao Shiang Kaohsiung 83107, Taiwan R.O.C.  
Telephone : (886)7-702-2333
- Thailand : **SIAM KUBOTA CORPORATION CO., LTD.**  
101/19-24 Moo 20, Navanakorn Industrial Estate, Tambon Khlongnueng, Amphur Khlongluang,  
Pathumthani 12120, THAILAND  
Telephone : (66)2-909-0300
- Japan : **KUBOTA Corporation**  
Farm & Industrial Machinery International Operations Headquarters  
2-47, Shikitsuhigashi 1-chome, Naniwa-ku, Osaka, Japan 556-8601

English (Canada)  
Code No. V0643-5811-3

# OPERATOR'S MANUAL


# KUBOTA

# CTL

Compact  
Track  
Loader

MODEL

# SVL97-2

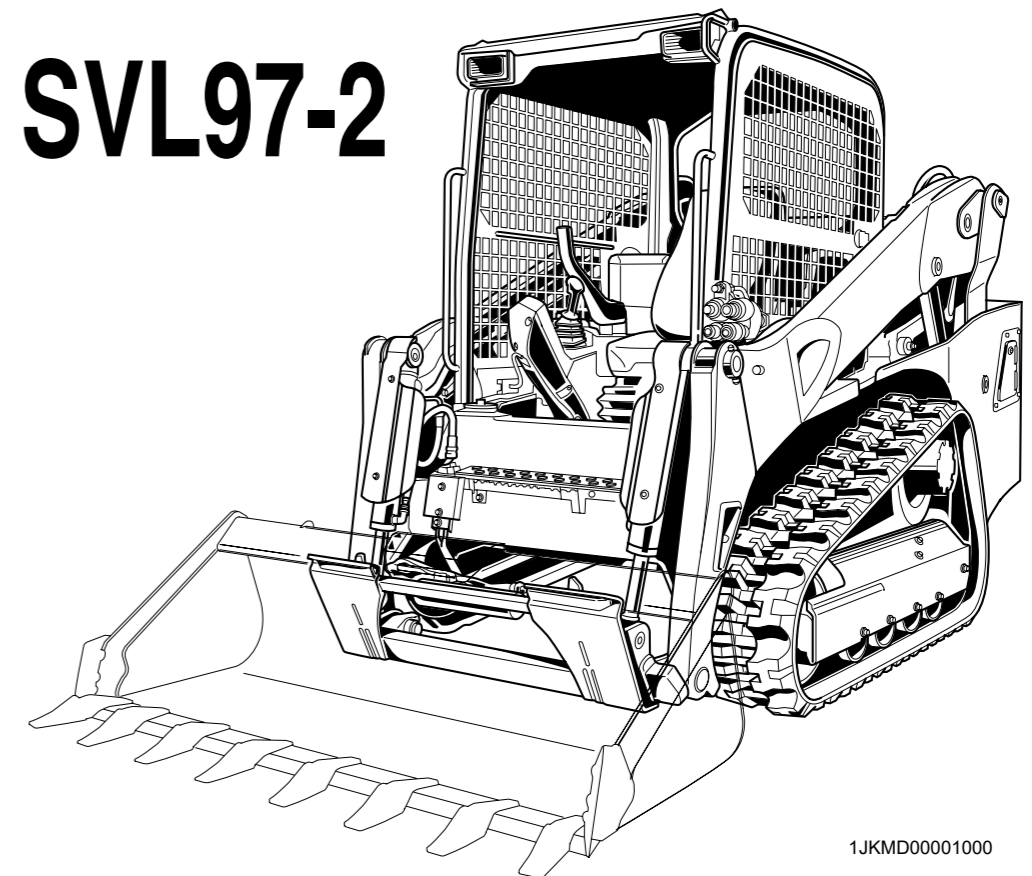

1JKMD00001000

SVL97-2

READ AND SAVE THIS MANUAL

# Kubota

# ABBREVIATION LIST

Abbreviations	Definitions
AFS	Air Flow Sensor
API	American Petroleum Institute
ASTM	American Society for Testing and Materials, USA
AUX	Auxiliary
CRS	Common Rail System
CTL	Compact Track Loader
DEF	Diesel Exhaust Fluid
DIN	Deutsches Institut für Normung, GERMANY (German Institute for Standardization)
DOC	Diesel Oxidation Catalyst
DPF	Diesel Particulate Filter
EGR	Exhaust Gas Re-circulation
EN	European Standard
FOPS	Falling Objects Protective Structure
ISO	International Organization for Standardization
JIS	Japanese Industry Standard
MAF	Mass Air Flow
MIL	Military Specification and Standard
OPC	Operator Presence Control
OSHA	Occupational Safety and Health Administration
P/L	Pressure Limiter
PCV	Positive Crankcase Ventilation
ROPS	Roll-Over Protective Structure
rpm	Revolutions Per Minute
rps	Revolutions Per Second
SAE	Society of Automotive Engineers, USA
SCV	Suction Control Valve
SMV	Slow Moving Vehicle

## California Proposition 65

### **WARNING**

Engine exhaust, some of its constituents, certain vehicle components and fluids, contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

**Canadian Electromagnetic Compatibility (EMC):  
This machine complies with Industry Canada ICES-002.**

# UNIVERSAL SYMBOLS

As a guide to the operation of your machine, various universal symbols have been utilized on the instruments and controls. The symbols are shown below with an indication of their meaning.

	Caution		Parking Brake
	Engine, Electrical Preheat		Front Working Light
	Engine Lubricating Oil Pressure		Rear Working Light
	Coolant Temperature		Lock
	Hydraulic Oil Temperature		Unlock
	Hydraulic Lock		Forward
	Hydraulic Unlock		Backward
	AUX Hydraulics		Turn Right
	High-Flow		Turn Left
	AUX Hold		Lift Arm Raise
	AUX Electrical Power		Lift Arm Lower
	Fuel		Loader Bucket, Dump
	Fast (Speed Indicator)		Loader Bucket, Rollback
	Slow (Speed Indicator)		Loader Bucket, Float
	Battery Charge		Quick Hitch Lock
	DPF Standby / Regeneration		DEF (AdBlue)
	Engine Rev up		SCR system warning
	Inhibit DPF Regeneration		DEF (AdBlue) quality warning
	Horn		Thawing DEF (AdBlue)
			AUX electrical mode change

# FOREWORD

Thank you for the purchase of a Kubota product.

Before using this product, read this manual carefully and use the product correctly. After reading, keep the manual in a safe and easy-to-access place for future reference. Note that product specifications are subject to change without prior notice. The product delivered to you may differ slightly from the product described in the manual.

## SAFETY FIRST

This symbol, the industry's "Safety Alert Symbol", is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to assemble or use this unit.



**DANGER :**

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



**WARNING:**

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



**CAUTION:**

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

**IMPORTANT:**

Indicates that equipment or property damage could result if instructions are not followed.

**NOTE:**

Gives helpful information.

# OTHERS

## ABOUT TRADEMARKS

Trademark	Owner
AdBlue®	AdBlue is a registered trademark of the VDA - Verband der Automobilindustrie e.V. (The German Association of the Automotive Industry).

Company names, product names and service names described in this manual are the trademarks or registered trademarks of their respective owners. In the text, those names are not accompanied by trademark symbols (®, ™).



# CONTENTS

<b>SAFE OPERATION</b> .....	<b>7</b>
<b>SERVICE OF THE MACHINE</b> .....	<b>23</b>
DEALER SERVICE.....	23
1. Warranty policy.....	23
2. Procedure for scrapping the machine.....	24
<b>TECHNICAL DATA</b> .....	<b>25</b>
SPECIFICATION TABLE.....	25
<b>MACHINE PARTS</b> .....	<b>26</b>
DESCRIPTION OF MACHINE PARTS.....	26
<b>INSTRUMENT PANEL AND SWITCH</b> .....	<b>28</b>
INSTRUMENT PANEL.....	28
1. Fuel gauge indicator.....	29
2. Low fuel warning light.....	29
3. Coolant temperature gauge.....	29
3.1 Checking the coolant temperature gauge.....	30
4. Glow plug indicator.....	30
5. Parking brake warning light.....	30
6. Bucket-floating indicator.....	31
7. Master warning light.....	31
8. Engine oil pressure indicator.....	31
9. Battery charge warning light.....	31
10. Hydraulic oil temperature indicator.....	32
11. Hour meter.....	32
12. Diesel-particulate-filter (DPF) regeneration indicator.....	32
13. Engine rev up indicator.....	32
14. Air cleaning warning indicator.....	33
15. CCV system freezing warning lamp.....	33
SWITCHES.....	34
1. Starter switch.....	35
2. Parking brake switch.....	35
3. Hydraulic unlock switch.....	35
4. Horn switch.....	36
5. Travel speed switch.....	36
6. Working light switch.....	36
7. Seat switch.....	37
8. Inhibit diesel particulate filter (DPF) regeneration switch.....	37
9. Float switch.....	37
10. AUX port switch [standard flow model].....	38
11. AUX port switch [High-Flow model].....	38
12. AUX port variable switch.....	38
13. AUX hold switch.....	39
14. AUX electrical control switch (option).....	39
15. AUX electrical mode change switch (option).....	39
16. Hydraulic quick switch [Hydraulic quick-hitch model only].....	39
17. Display selector switch.....	40
<b>PEDAL AND LEVERS</b> .....	<b>41</b>
CONTROL PEDALS, LEVERS, AND ELECTRICAL OUTLET.....	41
<b>SAFETY FEATURES</b> .....	<b>42</b>
HOW TO USE THE EMERGENCY EXIT.....	42
OPC FUNCTION.....	42

HOW TO USE AND CHECK THE FUNCTION OF THE ARMREST .....	42
HOW TO USE AND CHECK THE SEAT FUNCTION .....	42
HOW TO CHECK THE REVERSE ALARM .....	42
HOW TO USE THE FORCED LIFT ARMS LOWERING DEVICE .....	43
<b>EXHAUST AFTERTREATMENT DEVICE .....</b>	<b>44</b>
CATALYST-CONTAINING DIESEL-PARTICULATE-FILTER (DPF) DEVICE .....	44
REGENERATION OF DIESEL-PARTICULATE-FILTER (DPF) .....	44
SCR (SELECTIVE CATALYTIC REDUCTION) SYSTEM .....	46
1. DEF (AdBlue) .....	47
2. Handling DEF (AdBlue) .....	47
3. Quality of DEF (AdBlue) .....	47
4. DEF (AdBlue) level gauge .....	47
5. Warning display when the remaining amount of DEF (AdBlue) is low .....	48
6. Adding DEF (AdBlue) .....	48
7. Draining DEF (AdBlue) .....	48
8. Storing purchased DEF (AdBlue) .....	49
9. Storing DEF (AdBlue) in the DEF (AdBlue) tank .....	49
10. Disposing DEF (AdBlue) .....	50
11. Handling precautions after stopping the engine .....	50
12. Precautions when using in cold regions .....	50
13. Maintenance of SCR system related parts .....	50
14. SCR system warning lamp .....	50
15. DEF (AdBlue) quality warning lamp .....	51
16. Thawing DEF (AdBlue) lamp .....	51
<b>AIR CONDITIONER .....</b>	<b>52</b>
ADJUSTING THE AIR FLOW OF THE AIR CONDITIONER .....	52
AIR CONTROL VENT .....	53
HOW TO USE THE CONTROL PANEL .....	53
OPERATING THE CONTROL PANEL .....	54
<b>OPERATION .....</b>	<b>55</b>
CAB TYPE MACHINE .....	55
1. Interior lamp .....	55
2. How to use the wiper/washer switch [Closed cab model] .....	55
3. Opening and closing the cab door [Closed cab model] .....	55
4. Opening and closing the side cab window [Closed cab model] .....	57
OPERATION OF THE ENGINE .....	57
1. Starting the engine .....	58
2. Checking the machine after starting the engine .....	59
3. Starting the engine under cold conditions .....	59
STOPPING THE ENGINE .....	59
1. Starting the engine with an auxiliary battery .....	60
OPERATION OF THE MACHINE .....	60
1. Running-in of the machine .....	60
2. Start of the machine .....	61
2.1 Adjusting the operator's seat .....	61
2.2 How to use the seat belt .....	62
2.3 How to use the armrest .....	62
3. Driving .....	62
3.1 Traveling forward and backward .....	62
4. Turning the machine .....	63
4.1 How to use pivot turn .....	63
4.2 How to use spin turn .....	64
5. Operating the lift arms .....	65
5.1 How to use the lift arm stopper .....	65
6. Operating the bucket .....	66



<b>AUXILIARY HYDRAULIC .....</b>	<b>68</b>
HOW TO USE THE AUXILIARY HYDRAULIC CONTROL .....	68
1. Operating the auxiliary hydraulic control .....	68
2. Auxiliary port operation [high-flow model only] .....	70
2.1 Selecting the action modes .....	70
2.2 Setting the maximum flow volume .....	71
2.2.1 AUX port MAX. flow volume .....	72
2.2.2 AUX port (LH and RH) maximum flow volume setting flow chart .....	73
3. Operating the attachment control device (option).....	74
<b>QUICK-HITCH.....</b>	<b>75</b>
HOW TO USE THE MECHANICAL QUICK-HITCH.....	75
HOW TO USE THE HYDRAULIC QUICK-HITCH .....	77
<b>MACHINE PRECAUTION .....</b>	<b>79</b>
IMPORTANT INFORMATION ON MACHINE OPERATION .....	79
1. Caution while traveling .....	79
2. Precaution when traveling in high speed .....	79
3. Precautions for use of machine near water .....	79
4. Precautions when traveling on inclines .....	80
5. Parking on an incline .....	80
6. Prohibited actions for the machine .....	81
7. Prevention of slippage of rubber tracks .....	81
<b>LIFTING.....</b>	<b>82</b>
LIFTING THE MACHINE.....	82
<b>TRANSPORTING.....</b>	<b>85</b>
LOADING THE MACHINE ON A TRANSPORT VEHICLE .....	85
TOWING AN OPERABLE MACHINE .....	86
TOWING AN INOPERABLE MACHINE.....	87
<b>MAINTENANCE .....</b>	<b>88</b>
MAINTENANCE INTERVALS .....	88
OPENING AND CLOSING OF COMPONENTS .....	90
1. Opening and closing the rear door .....	90
2. Opening the engine hood .....	91
3. Detaching the radiator and the oil cooler .....	91
4. Where to keep the operator's manual.....	92
5. Tilting up the cab .....	93
DISCHARGING MUD FROM OPERATOR CAB AND MAIN FRAME .....	95
1. Discharging mud from the operator CAB.....	95
2. Discharging mud from the main frame .....	95
DAILY CHECKS .....	95
1. Daily check items before starting the machine .....	95
2. Checking the coolant level.....	96
3. Checking the fuel level .....	96
4. Checking the DEF (AdBlue) level and adding the fluid.....	97
4.1 Adding DEF (AdBlue) in the DEF (AdBlue) tank .....	97
5. Checking the engine oil level.....	98
6. Checking the hydraulic oil level .....	99
7. Lubrication points of the machine .....	99
8. Checking the radiator and the oil cooler .....	100
9. Checking and cleaning the engine and the electrical wiring.....	100
10. Precautions for checking the V-belt .....	100
11. Precautions for washing whole machine.....	101
12. Draining the water separator .....	101
13. Checking the evacuator valve .....	101
14. Checking the pre-cleaner .....	102

15. Checking the DPF (diesel-particulate-filter) muffler .....	102
16. Checking the washer liquid [Closed cab model] .....	102
17. Checking the battery condition .....	102
18. Cleaning the fuel tank cap .....	104
EVERY 50 SERVICE HOURS .....	104
1. Draining the water from the fuel tank.....	104
2. Checking the track tension .....	105
3. Checking the air cleaner element .....	105
4. Cleaning the air cleaner element.....	106
5. Cleaning the evacuator valve .....	106
EVERY 250 SERVICE HOURS .....	107
1. Checking the radiator hoses and the clamps .....	107
2. Checking the fuel line and the intake air line .....	107
3. Checking and adjusting the V-belt tension .....	108
3.1 Checking and adjusting the air-conditioner belt tension [Closed cab model].....	109
4. Cleaning inside of the main frame .....	109
5. Replacing the air cleaner element.....	109
6. Cleaning the fresh air filter.....	109
7. Cleaning the inner air filter.....	110
8. Checking the air-conditioner condenser .....	110
EVERY 500 SERVICE HOURS .....	111
1. Changing the engine oil.....	111
2. Replacing the engine oil filter cartridge .....	112
3. Replacing the water separator filter element .....	112
4. Replacing the fuel filter cartridge .....	113
5. Changing the drive unit oil .....	113
6. Changing the return filter .....	113
7. Replacing the breather filter .....	113
8. Replacing the hydraulic oil filter .....	114
9. Cleaning the front window roller [Closed cab model only].....	114
EVERY 1000 SERVICE HOURS .....	114
1. Changing the hydraulic oil including replacing the suction filter and the return filter in the hydraulic tank.....	114
2. Hydraulic oil check with the hydraulic hammers .....	115
3. Adjusting the engine valve clearance .....	115
4. Replacing the front window roller [Closed cab model only] .....	115
EVERY 1500 SERVICE HOURS .....	115
1. Checking the injector tip .....	115
2. Replacing the oil separator element .....	116
3. Checking the PCV (positive crankcase ventilation) valve.....	116
4. Checking the EGR cooler .....	116
5. Checking the DEF (AdBlue) injector tip .....	116
6. Checking the DEF (AdBlue) hoses .....	116
EVERY 2000 SERVICE HOURS .....	116
1. Checking the alternator and the starter motor .....	116
EVERY 3000 SERVICE HOURS .....	116
1. Checking the EGR system .....	116
2. Checking the turbocharger .....	116
3. Cleaning the diesel-particulate-filter (DPF).....	116
3.1 When the DEF (AdBlue) tank is frozen .....	117
4. Replacing the filter in DEF (AdBlue) pump.....	117
5. Checking the DEF (AdBlue) injector.....	117
EVERY 8000 SERVICE HOURS .....	117
1. Replacing the filter of DEF (AdBlue) tank.....	117
EVERY 3 SERVICE MONTHS.....	117
1. Checking the quality of DEF (AdBlue) .....	117
ANNUAL SERVICING.....	118
1. Checking the air-conditioner pipes and hoses.....	118

2. Checking the exhaust manifold for cracks, gas, leakage, and mounting screw .....	118
3. Checking the intake air line for air leaks.....	118
4. Checking the boost sensor and the AFS (air-flow-sensor).....	118
5. Checking the condition of the diesel-particulate-filter (DPF) muffler.....	118
6. Checking the diesel-particulate-filter (DPF) differential pressure sensor and piping for gas leak .....	118
7. Checking the diesel-particulate-filter (DPF) exhaust gas temperature sensor .....	118
8. Checking the EGR piping for gas leak.....	118
9. Checking the antifrost heater for oil separator (CCV heater) .....	118
10. Checking the CCV internal pressure switch .....	118
11. Checking the relief valve.....	119
<b>BIENNIAL SERVICING .....</b>	<b>119</b>
1. Replacing the hydraulic hose .....	119
2. Changing the radiator coolant .....	119
3. Replacing the fuel hose .....	120
4. Replacing the intake air line .....	121
5. Replacing the radiator hoses.....	121
6. Replacing the air-conditioner pipes and hoses.....	121
7. Replacing the closed breather related rubber piping.....	121
8. Replacing the diesel-particulate-filter (DPF) differential pressure sensor rubber piping (front and back).....	122
9. Replacing the suction pipe downstream the AFS (air-flow-sensor).....	122
10. Replacing the boost sensor pressure rubber piping .....	122
11. Replacing the EGR cooler hose.....	122
<b>SERVICING AS REQUIRED.....</b>	<b>122</b>
1. Checking the amount of refrigerant gas .....	122
2. Draining the water separator in case warning against water of the fuel filter .....	122
3. Purging of the fuel system .....	122
4. Cleaning the plastic parts and synthetic leather .....	122
<b>TRACK.....</b>	<b>124</b>
ADJUSTING THE TRACKS .....	124
<b>FUSE .....</b>	<b>126</b>
FUSES .....	126
1. Replacing the fuse.....	126
2. Fuse capacities and circuits .....	126
3. Electrical outlet .....	127
4. Slow blow fuse.....	127
5. Replacing the bolted slow blow fuse .....	128
<b>TROUBLESHOOTING .....</b>	<b>129</b>
TROUBLESHOOTING OF THE ENGINE AND OTHER SYSTEMS.....	129
LIST OF THE ERROR CODE NUMBERS .....	131
<b>COLD WEATHER .....</b>	<b>139</b>
PREPARATION FOR OPERATION OF THE MACHINE IN COLD WEATHER .....	139
STORING THE MACHINE AFTER COMPLETION OF WORK IN COLD WEATHER.....	139
<b>LONG STORAGE .....</b>	<b>140</b>
STORING THE MACHINE FOR A LONGER PERIOD OF TIME .....	140
OPERATING THE MACHINE AFTER STORING FOR A LONG PERIOD OF TIME.....	140
1. Periodic replacement of important component parts .....	140
<b>RECOMMENDED OILS .....</b>	<b>142</b>
RECOMMENDED OILS, GREASES, AND FUELS .....	142
BIODIESEL FUEL (BDF) .....	144
<b>APPENDICES .....</b>	<b>146</b>
MAIN DIMENSIONS OF THE MACHINE.....	146
<b>INDEX.....</b>	<b>148</b>



# SAFE OPERATION

Careful operation is your best safeguard against an accident.

Read and understand the *Safe operation* section carefully, before operating the machine.

Every user, however experienced, should carefully read and understand the *Safe operation* section for the machine, the attachments, and the accessories before taking the machine into operation. The owner is obliged to inform the operators of instructions to the machine, the attachments, and the accessories in detail.

Keep this manual in the storage place.


(See Where to keep the operator's manual on page 92)

## PRECAUTIONS BEFORE OPERATION OF THE MACHINE

### 1. General precautions

Know your equipment and its limitations. Read and understand this entire manual before starting and operating the machine.

- Obey the safety labels on the machine.
- Inspect the seat belt regularly and replace it if it is frayed or damaged.

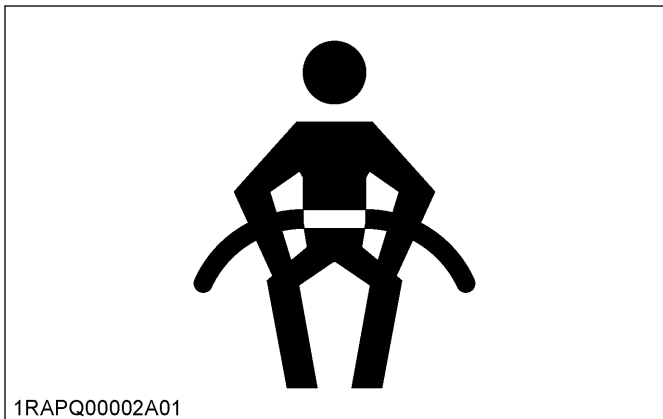


- Always sit in the operator's seat when starting the engine or operating the levers or controls.
- Do not operate the machine while under the influence of alcohol, medication, controlled substances, or while fatigued.
- Check the surrounding area carefully before using the machine or when attachments are being connected.

To avoid any danger of electrocution, never operate the machine near power lines before confirming the power is off and all local and national safety regulations. Never approach a machine or load that is contacting a power source such as power lines.

Electrocution can occur by coming into contact with a machine that is near power lines.

- Check for buried pipes and cables before digging.
- Check for hidden holes, obstacles, soft underground, and overhangs. Do not enter soft ground.

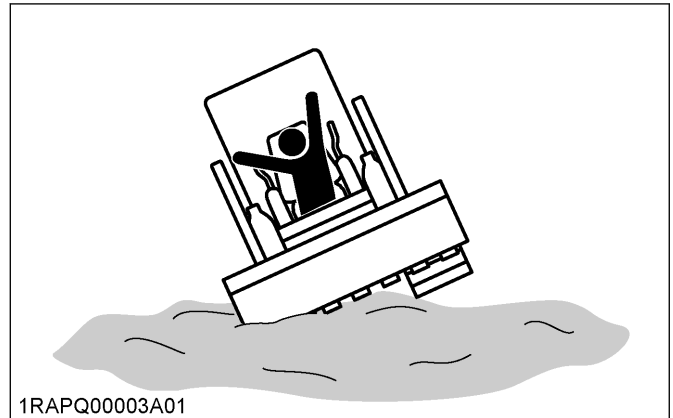

- During machine use, do not allow any persons within the working range.
- Do not allow anyone to use the machine until they have been informed of the work to be performed and they have read and understood the operator's manual.
- Do not wear baggy, torn, or oversized clothing when working with the machine. Baggy, torn, or oversized clothing can get caught in rotating parts or control elements which can cause accidents or injuries.

Wear adequate safety clothing, for example safety helmet, safety shoes, eye protection, ear protection, working gloves, and so on, as necessary and as prescribed by law or statutes.

If exposed to loud noise for long hours, you may suffer from hearing difficulty or loss. To protect your ears from unpleasant, loud noise, wear ear muffs, ear plugs or other protective ear pieces, as required.

# SAFE OPERATION



1NABN00003A01


- Do not allow passengers to ride on any part of the machine at any time. The operator must remain in the seat of the machine during operation.
- Check the levers, pedals, and mechanical parts for correct adjustments and wear. Replace worn or damaged parts immediately. Check the nuts and bolts regularly for correct torque.
- Keep your machine clean. Heavy soiling, grease, dust, and grass can cause fires, accidents, or injuries.
- Before starting the machine, be absolutely sure that the machine has been filled with fuel, lubricated, greased, and undergone all necessary maintenance.
- Do not modify the machine, otherwise it could lead to unforeseen safety problems.
- Make sure that the attachments, particularly those utilizing quick-hitch, are securely mounted. Use only attachments authorized by KUBOTA.

## 2. Precautions of ROPS and FOPS

Know your equipment and its limitations. Read and understand this entire manual before starting and operating the machine with the ROPS and FOPS.

- For your safety, KUBOTA installs a ROPS (roll-over-protective-structure) and a FOPS (falling-objects-protective-structure) with a seat belt. Always use the seat belt when the machine is equipped with the ROPS or the FOPS. Combination of the seat belt and the ROPS or the FOPS will reduce the risk of personal injury or death if the machine is upset.

Do not modify structural members of the ROPS or FOPS by welding, drilling, bending, grinding, or cutting, as this may weaken the structure.

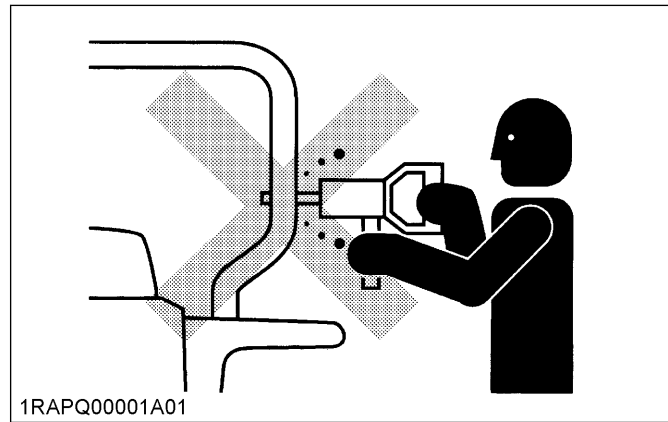

1RAPQ00001A01

If any component is damaged, replace it. Do not repair the component.

If the ROPS or FOPS is loosened or removed for any reason, make sure that all parts are reinstalled correctly. Tighten mounting bolts to proper torque.


- The ROPS and the FOPS structure complies with ISO 3471, ISO 3449, and OSHA regulations.

## PRECAUTIONS FOR OPERATING THE MACHINE

- Mount and dismount the machine safely. Always face the machine. Always use handrails and available steps at least 3 points and keep yourself well balanced.  
Do not grab or hold any of the control levers, pedals or switches. Do not jump on or off the machine, whether stationary or in motion.
- Before starting the job, run the machine for all movements in a large space and make sure the machine functions well in every action.
- Start and control the machine only from the operator's seat. The operator should not lean out of his or her seat when the engine is running.
- Before starting the engine, make sure that the armrests are in the raised position, the control levers are in their neutral position, and the seat belt is fastened correctly.
- Always thoroughly check the surrounding area for any possible conditions that could create a dangerous situation.
  - Make sure that you read the operator's manual to thoroughly understand the operating conditions and limitations of the machine.
  - To avoid damage and to prevent accidents, always use the buddy system and have the other person, check for clearances and other possible dangers that may be obstructed from view.
  - Never allow people to approach the vicinity of the turning radius of the machine.
  - Be cognizant of blind spots to the rear and always check behind you before backing up.

# ! SAFE OPERATION

- Only operate the machine in well-ventilated area to avoid poisoning from carbon monoxide, an odorless, colorless gas that is deadly.

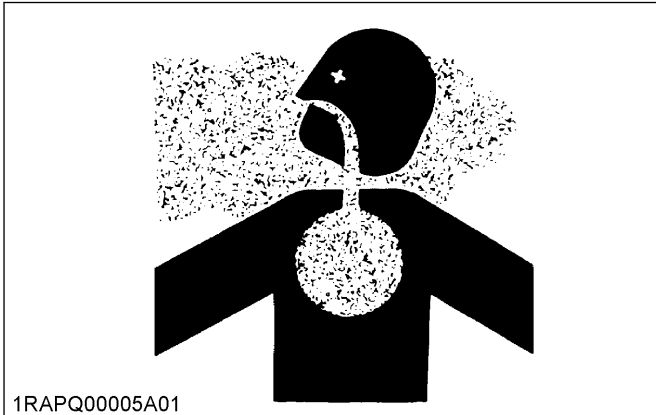

- Never remove any of the safety features on the machine.
  - Make sure that all safety features, including guards, protective devices, doors, and cabin are functioning normally, properly secured, and in good condition. Repair and replace any lost or damaged protective features.
  - Carefully read the operator's manual in order to understand the proper use of safety features such as armrest, seat belt, and other equipment. Make sure that you use the armrest, the seat belt, and other equipment properly.
  - Make sure that all safety features are in good operating condition and remove only when repair is needed.
  - Make sure to use appropriate protective doors, windows, and screens (such as polycarbonate door), depending upon application. KUBOTA recommends the use of a polycarbonate door for high impact applications such as a hammer or mulcher.
- To avoid injury, always keep hands and body inside the protective structures such as ROPS and the FOPS whenever operating the machine. Never operate the machine using control levers from outside the operator's cabin while the machine is running.
- Always keep the heavy end of the machine up when traveling up or down an incline to avoid any possibility of rolling over of the machine.
- Place the bucket at the following distance from the ground when moving up or down an incline. Prepare to lower the bucket to the ground in case of emergency.

Distance between the bucket and ground	20 cm to 30 cm (8 in. to 12 in.)
--	-------------------------------------

- To avoid injury or accidents, always operate the machine or the equipment at slow speed when

going up or down an incline by reducing the engine speed (rpm). Place the stroke of the left-control-lever at half speed or less when going down an incline.

Traveling too fast down an incline can cause the operator to lose control of the machine.


When going up or down an incline, keep the travel speed switch low speed position.

- Avoid stopping the machine suddenly on an incline, which can cause the machine to become unstable and rollover.
- Never cross an incline horizontally or at an angle, which can cause the machine to rollover. Approach inclines vertically to avoid loss of control.
- Take care when moving the machine in slippery or unstable surfaces such as grass, fallen leaves, metal plates, or ice, as it may skid out of control. Do not allow the machine to be oriented diagonally to grass, fallen leaves, metal plates, or ice surfaces.
- Watch where you are going at all times. Watch for and avoid obstacles. Remain alert for trees, wires, and other obstructions.
- Avoid any sudden movements while moving and operating the machine such as stopping, starting or turning.

Do not raise the armrests while the machine is in motion. Raise the armrests while the machine is in motion will cause the parking brake to engage and could cause an accident or injury.

- Avoid driving the machine over any obstacles, which could cause loss of control. If an obstacle cannot be avoided, always place the bucket close to the ground and move slowly over the obstacle. Do not approach an obstacle at an angle, which could cause the machine to rollover.
- Avoid performing any work with the machine when it is on an incline, which could cause the machine to become unbalanced and rollover. Always take care when moving the machine on an incline.

Always make sure that the heavy end of the machine is facing up the incline when moving the machine up or down the incline.

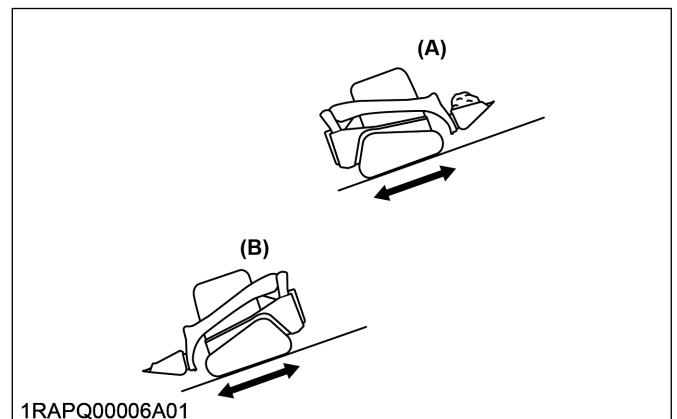

(A) With bucket full

(B) With bucket empty

# ! SAFE OPERATION

- Always use caution when floating the lift arms.
  - Always make sure that the bucket is lowered to the ground before floating the lift arms. Floating the lift arms when the bucket is raised could cause an accident or injury from the bucket falling.
  - Never move the machine forward when the lift arms are in the float position.
- Never dig or shovel at high speed, which could cause the operator to be thrown from the operator's cabin or cause injury from hitting something when the machine stops suddenly.

Always operate the machine at low speed, carefully checking the area in front of the load which you will be moving.

- Never operate the machine with the bucket raised over the heads of people. Accident or injury may occur from objects falling from the bucket or the bucket itself falling.
- Beware of material falling from the bucket. Unstable material in the bucket such as round, cylindrical, or stacked items could fall from the bucket, causing injury.

Always move an unstable load with the bucket lowered.

- Any sudden movements of the machine such as lowering or stopping of the attachment may cause it to recoil and rollover. Pay particular attention when the bucket is loaded.
- Never exceed the maximum loading capability of the bucket or put loads off-center of the bucket, which can cause the machine to become unstable and rollover.
- Never undercut a high embankment.

Always carefully check the area for conditions that could cause the ground to cave-in.


- Never operate in areas where there is a possibility of falling rock.
- Never operate or drive the machine on unstable surfaces such as cliffs, shoulder of roads, deep trenches, and so on. The machine could lose stability from unstable ground or vibration underneath, causing the machine to rollover or fall.

- Ground surfaces are especially unstable after heavy rain or explosions.
  - Embankments and trenches may cause instability of the ground around the area.
- Always operate the machine at safe, low speed, especially in congested or closed areas where there is a danger of hitting or running into something. Pay close attention to obstructions.
  - Pay particular attention when passing through tunnels or moving the machine near high walls to avoid hitting the machine and causing accident or injury.

Always check height and width dimensions of the machine against tunnels or any other narrow

spaces through which the machine is to be moved in order to avoid accident or injury from hitting an obstruction.

- The machine is not designed for operation with hanging loads and has no safety features for such circumstances. Never operate in conjunction with a crane or other device, which could cause serious injury.

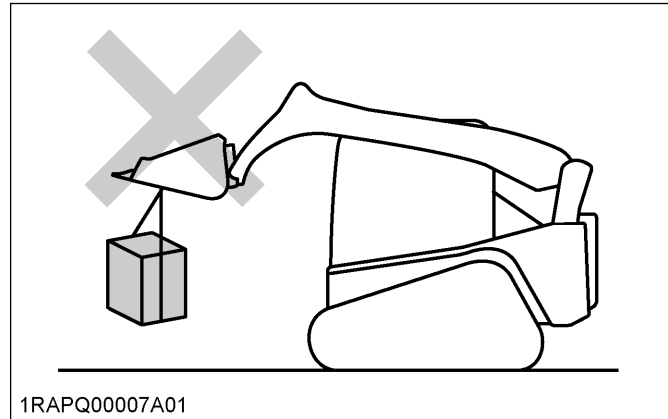

1RAPQ00007A01

## 1. Safety for children

Tragedy can occur if the operator is not alert to the presence of children. Children generally are attracted to machines and their work.


- Never assume that children will remain where you last saw them.
- Keep children out of the work area and under the watchful eye of another responsible adult.
- Be alert and shut your machine down if children enter the work area.
- Never carry children on your machine. There is not a safe place for them to ride. They may fall off and be run over or interfere with your control of the machine.
- Never allow children to operate the machine even under adult supervision.
- Never allow children to play on the machine or on the attachments.
- Use extra caution when backing up. Look behind and down to make sure that the area is clear before moving.

## PARKING THE MACHINE

**Before leaving the machine, follow the procedure.**

1. Park the machine on a firm, flat and, level surface. If parking the machine on a firm, flat and, level surface is not possible, block the machine securely to prevent movement of the machine.




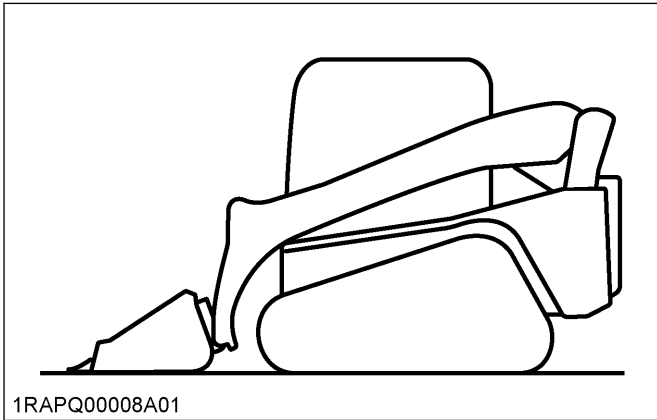

2. Lower the attachments to the ground.
3. Stop the engine.
4. Remove the key.

## PRECAUTIONS FOR SAFELY LOADING AND TRANSPORTING THE MACHINE

- Observe all regulations concerning the transport of the machine on public roads.
- Use adequately long and robust ramps when loading the machine. Block the ramps, and transport the machine appropriately. If towing is required, use proper tow lines and attachment points. For details, see **LOADING THE MACHINE ON A TRANSPORT VEHICLE** on page 85.
- To avoid tipping over, the heaviest end of the unit should proceed up the ramps first, do not change the running direction, and do not swing the attachment crosswise to the loading ramps.
- Lower the attachment on the loading bed and release the pressure from the hydraulic system. After loading the machine on the truck, secure the tracks with blocks and tie down the machine at the appropriate locations.

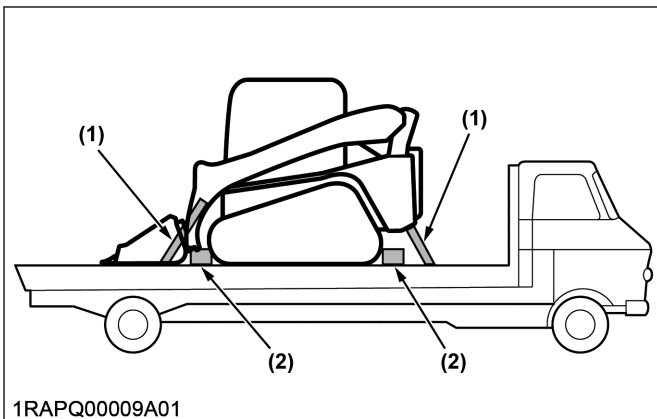

(1) Chain

(2) Block

- Avoid abrupt braking of the vehicle with the machine loaded. Sudden braking could cause the

machine to move and could cause a serious accident.

## PRECAUTIONS FOR MAINTENANCE

### 1. Preparing maintenance

Before performing maintenance work on the machine, following the procedure.


1. Place the machine on a firm, flat, and level surface.
2. Lower the lift arms slowly to the ground.
3. Stop the engine.
4. Remove the key.

Start maintenance work carefully, for example, loosen the plug slowly so that oil will not squirt out.

### 2. Checking items for maintenance


- When dismantling hydraulic parts, make sure that the hydraulic oil has cooled down sufficiently to avoid burns.
- Let the machine cool down sufficiently before working on the engine, the exhaust system, the radiator and the hydraulic system.
- Turn off the engine at all times when filling with fuel. Avoid spilling and over-filling of fuel.
- Do not smoke while refueling or using the battery. Keep sparks and fire away from the fuel tank and the battery. Flammable gases escape from the battery, especially during charging.
- Make sure that the fueling system is properly grounded.
- Read and follow the directions of Starting the engine with an auxiliary battery on page 60 when starting with an auxiliary battery.
- Keep a first-aid box and extinguisher at hand at all times.
- Do not open the radiator cap before the radiator has cooled down sufficiently.
  1. First loosen the cap to the first stop and allow the system enough time to release the remaining pressure.
  2. Then loosen the cap completely.

# ⚠️ SAFE OPERATION

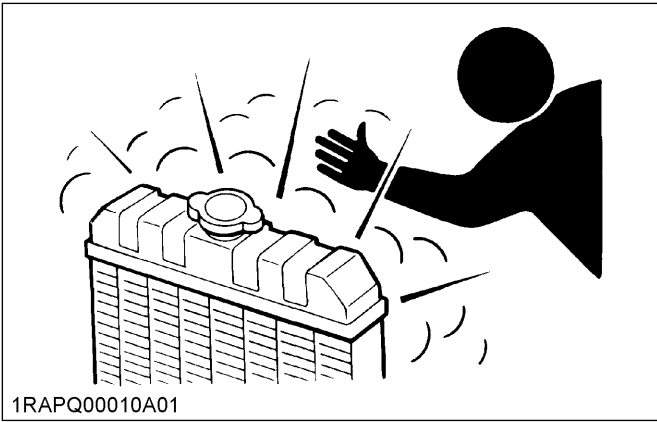


- To avoid short-circuiting the battery, always remove the ground cable first and attach the positive cable first.
- Oil under high pressure can penetrate the skin and may be harmful to your health if not treated immediately.
- Leaking hydraulic fluid has enough pressure to penetrate the skin and cause serious injuries. Leakages from pinholes can be totally invisible. Do not use hands for checking for leaks of hydraulic fluid. Always use a piece of wood or cardboard. It is strongly recommended to use a face mask or eye protection.

If injuries occur with leaking hydraulic fluid, contact a doctor immediately. This fluid can cause gangrene or serious allergic reactions. Never repair the hydraulic and air-conditioner hoses until the pressure has been relieved.

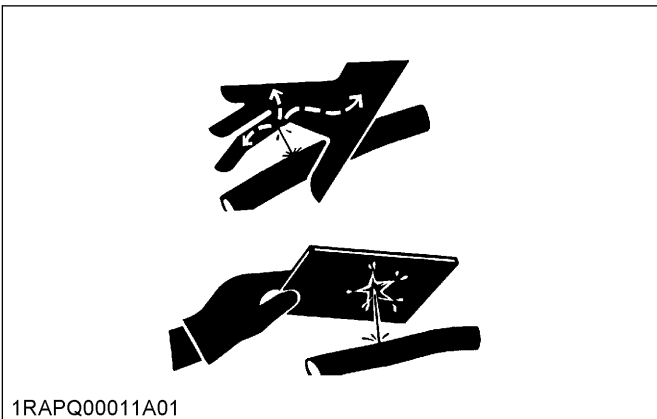


- To avoid environmental damage from acid and heavy metals, dispose of the battery appropriately.
- Observe all laws and regulations concerning the disposal of used oil, coolants, solvents, hydraulic fluids, battery acids, and the batteries.
- To avoid fire, do not heat the hydraulic components (tanks, pipes, hoses, and cylinders) before they have been drained and washed.
- Use a face mask or eye protection to protect the eyes and respiratory system against dust and other foreign particles, as appropriate, or as mandated by federal, state or local laws or regulations.

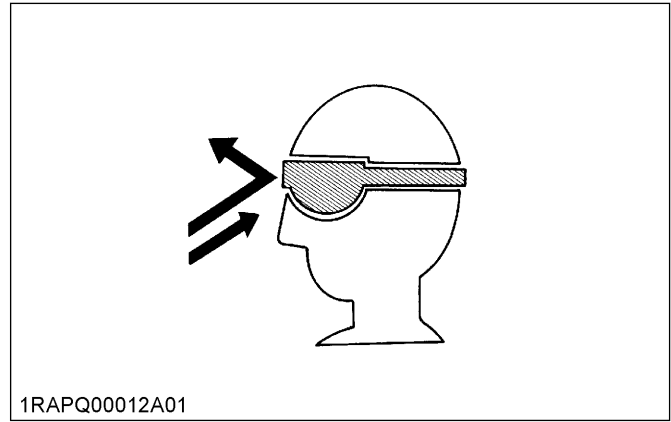


- Securely support the machine with stands or suitable blocking before working underneath. For your safety, do not work under any hydraulically supported devices. Hydraulically supported devices can settle, suddenly leak down, or be accidentally lowered.
- Do not dismantle the spring of the track tensioner. If dismantling of the spring of the track tensioner is necessary, contact your KUBOTA dealer where the machine was purchased, or a competent service shop. When you assemble the product involved, follow the KUBOTA-workshop-manual (W.S.M.).
- Always attach a **[DO NOT OPERATE]** tag whenever performing any kind of maintenance or repair.
- Make sure that you have the proper tools on hand. Do not use flawed or damaged tools, gauges, or other devices. Always use tools that are appropriate for the task to be done.
- To prevent personal injury or death, be sure to use explosion-proof lighting when working on, inspecting, or using fuel, oil, coolant, battery fluid, and so on. If you do not use the explosion-proof lighting or if it should break, it can ignite and cause fire, injury, or death.
- Prohibit unauthorized persons from entering the work area to prevent injury caused by debris flying off of machine parts during grinding, welding, using a hammer, or other tasks.
- Make sure that the work area is clear and safe. Be sure to work on a firm, level surface with adequate lighting. Work in well-ventilated area if you work indoors. Make sure that the area is free from any potentially dangerous conditions such as obstacles, slippery surfaces, and so on.
- Be sure the machine is clean and free of debris.
  - Always remove debris from the machine and clean it before performing any maintenance or repair work.
  - Before using water to wash or clean the machine, stop engine and make sure that all

# ! SAFE OPERATION

electrical parts and devices are covered. Any water seepage into electrical wiring on the machine can cause a short circuit or malfunction of controls. Never wash the battery, sensors, connectors, or operator's cabin with water or steam.

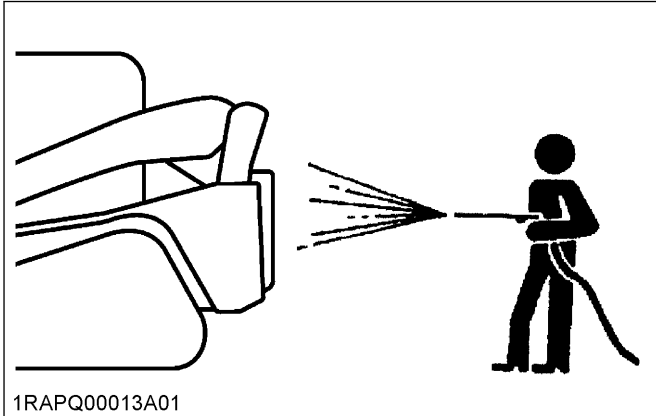


- Always make sure that the engine is stopped before performing any maintenance or repairs.
  - Do not lubricate or mechanically adjust while the machine is in motion or while the engine is running even if stationary.
  - Always stay clear of moving parts. Clothing, hands, or other parts of the body can become caught in moving parts of the machine and cause personal injury or death.
  - Make sure to avoid any rotating fans, V-belt, and other moving parts. Never insert tools, fingers, hands, and so on while these parts are running.

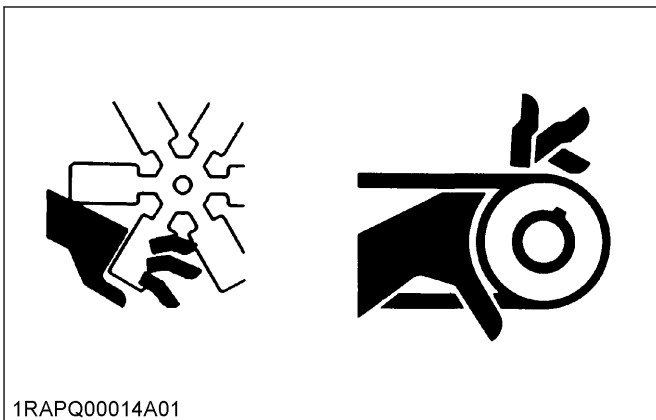

- Be sure to place blocks around the machine and place a protection where components could fall.
  - Always make sure that the bucket is at the lowest possible position or on the ground before performing any maintenance or repairs under the machine.
  - Make sure that the tracks are securely blocked off.
  - Whenever performing maintenance or repairs when the lift arms are raised, always use the lift-arm-stopper.

- Never work any kind under the machine or on the machine while it is hoisted on jack-stands or other rigid support devices unless they are well secured and stable.
- Make sure that the raised lift arms are properly and securely blocked.
  - Make sure that the lift-arm-stopper is properly engaged before performing any work beneath raised lift arms.  
Never work any kind or move under the lift arms when they are not properly supported.
  - Keep in mind that the lift arms may fall whenever hydraulic lines are disconnected, loosened, or removed. Any malfunction or failure in the hydraulics can also cause lift arms to drop.
  - Always perform the necessary repairs or service whenever the lift-arm-stopper becomes damaged or malfunctioned, or part(s) are missing. Damaged or malfunctioning lift-arm-stopper may cause the lift arms to fall causing personal injury or death.

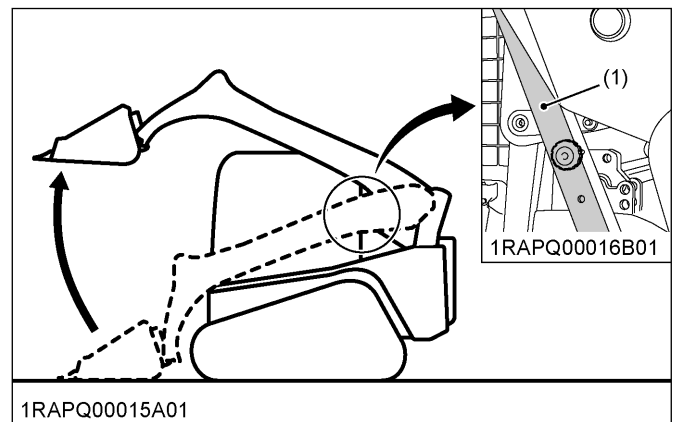

(1) Lift arm stopper


- Always secure the rear door after opening it. Avoid opening the rear door when the machine is on an incline or in strong winds.
- Precaution on tilting the cabin:
  - Do not raise or lower the cabin while the engine is running as it may move, cause the machine to become unstable, resulting in personal injury or death. Always lower the working parts of the machine to the ground and stop the engine before attempting to raise or lower the cabin.
  - Make sure that the cabin is properly and securely supported with a stopper when tilted to prevent the cabin from falling and causing personal injury.
- Use care when refueling.
  - Never smoke cigarettes or permit the use of fire while refueling or in the vicinity of refueling.
  - Always make sure that the engine is off and cool before removing the fuel cap to refuel the tank. Avoid getting fuel on any hot components.

# SAFE OPERATION

- Keep control of the fuel-filler-nozzle while refueling.
- Never overfill the tank with fuel. Leave room for thermal expansion.
- Always remove any excess or spilled fuel immediately.
- Always make sure that the fuel-tank-cap is securely reinstalled.

Replace the fuel-tank-cap only with a manufacturer-approved cap whenever it becomes damaged. Use of the wrong type of cap may not allow for proper venting, causing pressure in the tank to build up.

- Never use fuel to clean the machine.
- Always use the correct type of fuel for the machine and the temperature in which it is being operated.
- Always use a properly grounded fueling system.

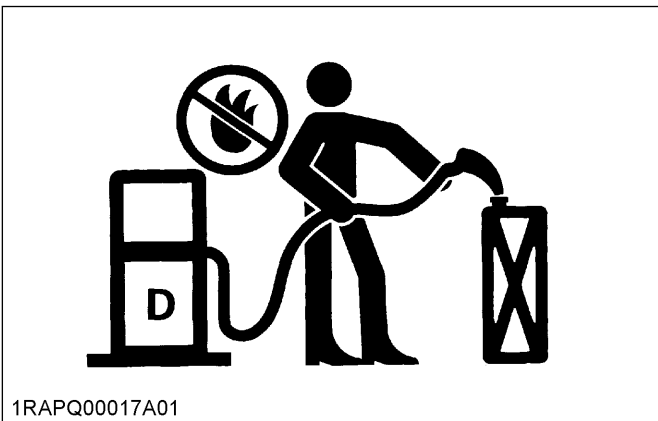

## • Hoses

- Leakage in any fuel, oil, or hydraulic line can cause fire or explosion.
- Avoid any twisting, bending, or hitting of hoses that could cause damage to the line.
- Make sure that any loose connections are secure properly before using the machine.

## • Fire prevention


Compact-track-loader and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcing or sparks.

The following fire-prevention-guidelines will help to keep your equipment up and running efficiently and keep the risk of fire to a minimum.

- Blow off all accumulated debris near hot engine exhaust components such as the turbocharger and the exhaust manifold as well as the exhaust pipes and the muffler more frequently when working in severe conditions.
- Clean out all accumulated flammable debris such as leaves, straw, pine needles, branches, bark, small wood chips, and any other

combustible materials from inside the pans of belly of the machine or lower unit structures as well as from the area in proximity to the engine.


- Inspect all fuel lines and hydraulic hoses for wear or for deterioration. Replace the fuel lines and the hydraulic hoses immediately if they begin to leak.
- Examine electrical wiring and connectors frequently for damage. Repair any wires that are loose or frayed before operating the machine. Clean all electrical connections and tighten all electrical connections as necessary.
- Inspect the exhaust system daily for any signs of leakage. Check for broken pipes and muffler, and for loose or missing bolts, nuts, and clamps.  
If you find any exhaust leaks or fractured parts, repair it completely prior to operation.
- Always keep a multipurpose fire extinguisher on or near the machine. Be familiar with the operation of the fire extinguisher.
- Take care when working around hot and pressurized components.
  - Always allow the engine to cool sufficiently before performing any maintenance, inspection, or repairs.
  - Never touch any parts such as the engine, the muffler, the radiator, the hydraulic lines, the sliding parts, and so on as they may be very hot immediately after the machine has been running and can cause burning. Allow the engine, the muffler, the radiator, the hydraulic lines, the sliding parts, and so on to cool sufficiently before touching them.
  - Always use sufficient care whenever removing the caps and plugs on the coolant, oil, and hydraulic fluid as they are hot and pressurized and can causing burning and injury from spraying of hot fluid.

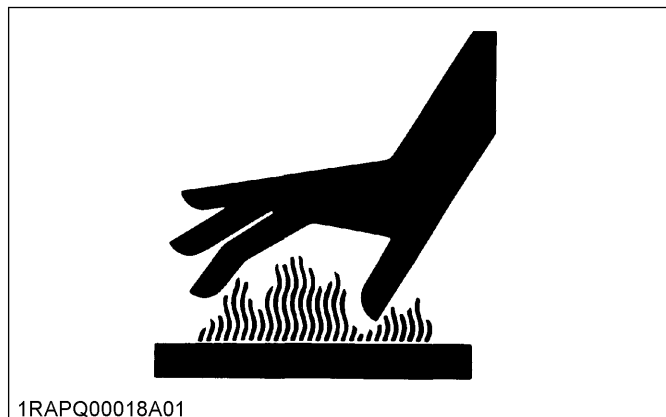


- Make certain that pressure from all of systems is sufficiently released before performing any maintenance or repairs. Oil or other fluids could be released when caps or filters are removed before

the pressure has been stabilized in the hydraulic system.

- Gradually release internal pressure build-up by standing out of the line of any possible spray and slowly removing plugs, screws, or disconnect hoses.
- Always use care whenever using grease that is pressurized.
  - Always follow the proper procedure to adjust tension.  
Grease in the track adjuster is pressurized and improper release can cause the discharge valve to fly off, causing personal injury or death.
  - Always loosen the discharge valve for the grease slowly.
  - Avoid standing in front of, or putting any parts of the body in the line of the grease-discharge-valve.
  - If no grease is released when the discharge valve is loosened, the machine has a malfunction. Do not repair any kind yourself and contact the nearest dealer for repairs. If no grease is released when the discharge valve is loosened, any operation of the machine can be very dangerous.

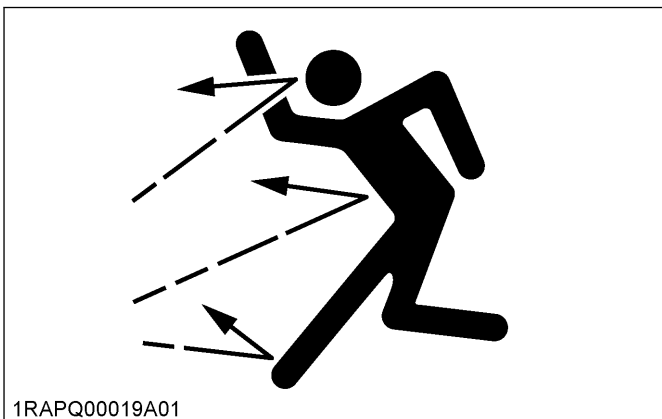

- Always carefully check the machine after performing any maintenance or repairs. Confirm that no oil, water, and so on is leaking from any parts that had been serviced by carefully inspecting the parts. Gradually speed up the engine from a low speed to higher speed to check operation.
- Waste material
  - Always make sure that any material and waste products from the repair and maintenance of the machine are collected into proper containers using a funnel, or other device. Dispose of waste material properly to avoid pollution and contamination of the environment.
  - Consult local regulations and codes when disposing of oil, fuel, engine coolant, refrigerant, solvents, filters, batteries, and any other potentially harmful and hazardous material or substance.

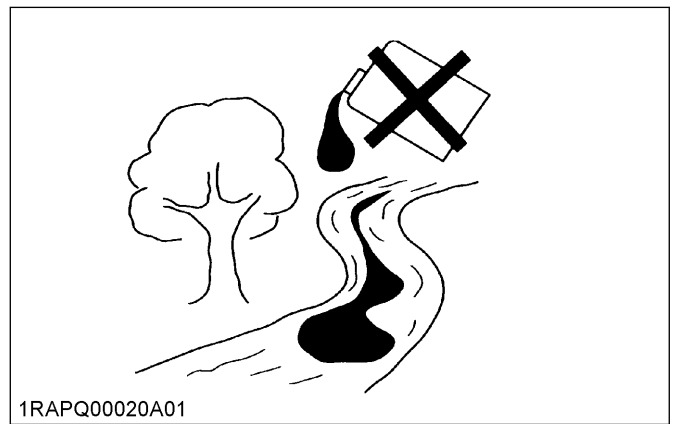

- To avoid the possibility of battery explosion, do not use or charge the refillable type battery if the fluid level is below the lower (lower limit level) mark. Check the fluid level regularly and add distilled water as required so that the fluid level is between the upper and the lower levels.
- To avoid sparks from an accidental short circuit, always disconnect the ground cable (-) of the battery first and reconnect it last.
- Do not open high-pressure fuel system. High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect nor repair fuel lines, sensors, or any other components between the high-pressure-fuel-pump and the injectors on the engines with high-pressure-common-rail-fuel-system.
- To avoid hazardous high voltage, turn the key switch to the **[STOP]** position if it is necessary to check to repair the computer, harness, or connectors.
- When the diesel-particulate-filter (DPF) is in the regenerating cycle, the exhaust gas and the DPF muffler become hot. During regeneration, take into account that the muffler will be very hot and keep the machine away from other people, animals, plants, and flammable material. Also keep the area near the DPF muffler clean and away from flammable material.

### 3. Handling DEF (AdBlue)

- DEF (AdBlue) is a transparent, colorless and non-toxic deionized water solution.
- If DEF (AdBlue) gets into your eyes, immediately rinse your eyes with a large amount of water for at least 15 minutes and consult a doctor.
- Do not swallow DEF (AdBlue). If you have accidentally swallowed DEF (AdBlue), seek medical attention immediately.
- If DEF (AdBlue) gets on your skin, rinse immediately with water. In rare cases, DEF (AdBlue) may irritate the skin.
- If DEF (AdBlue) gets on your clothes or shoes, wash it off immediately. Simply wiping off or leaving

## **SAFE OPERATION**

DEF (AdBlue) on clothes or shoes will leave a white residue.


- DEF (AdBlue) itself is nonflammable. If it gets heated due to a fire or the like, an irritating odor may be generated. If by any chance a fire breaks out, immediately evacuate yourself to a safe place.

If you spill DEF (AdBlue), immediately rinse with clean water. If left untouched, DEF (AdBlue) may rust metal parts or corrode painted surfaces. Also, resin and rubber parts may be deformed.

For more details, obtain and read the Safety Data Sheet (SDS) from the DEF (AdBlue) supplier.

## SAFETY LABELS

(1) Part No. V0511-5735-2

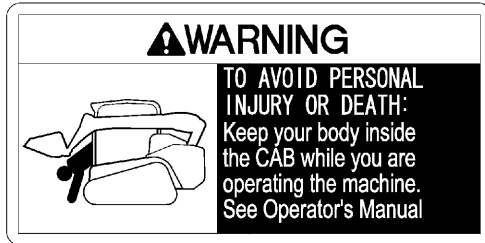


(2) Part No. V0511-5740-2



(3) Part No. V0511-5772-1



(4) Part No. V1311-5771-3  
 [High-Flow model only]

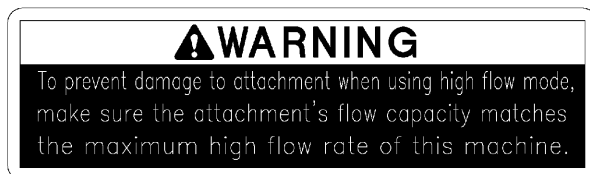




(5) Part No. V0211-5731-1



(6) Part No. V0631-5732-1





(7) Part No. V1311-5749-1

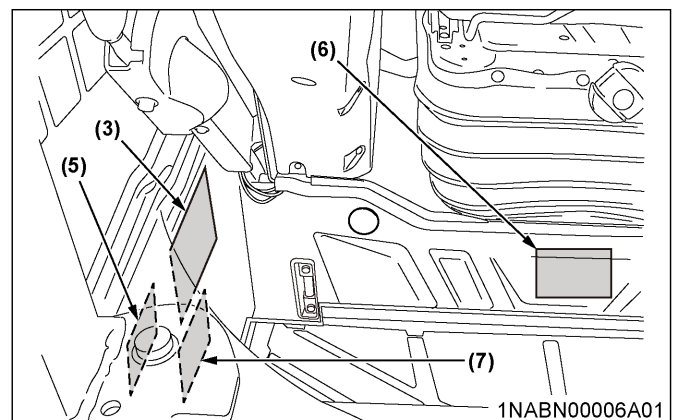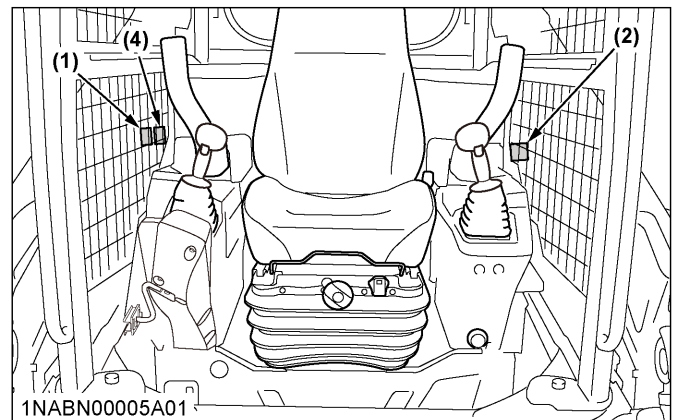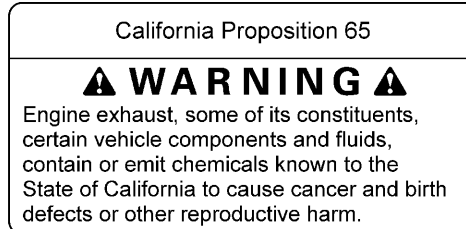



1NABN0004A01enUS

# ⚠️ SAFE OPERATION


- (1) Part No. V1311-5734-1 [Both sides]  
Do not allow hands within the working range.

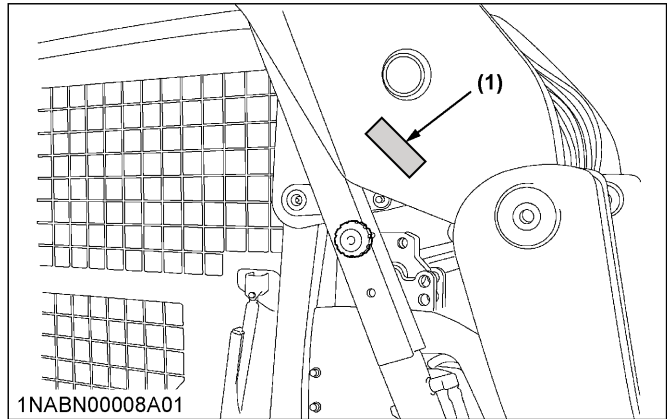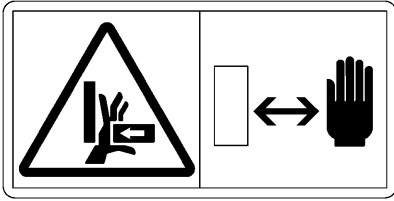



- (2) Part No. V0511-5741-2

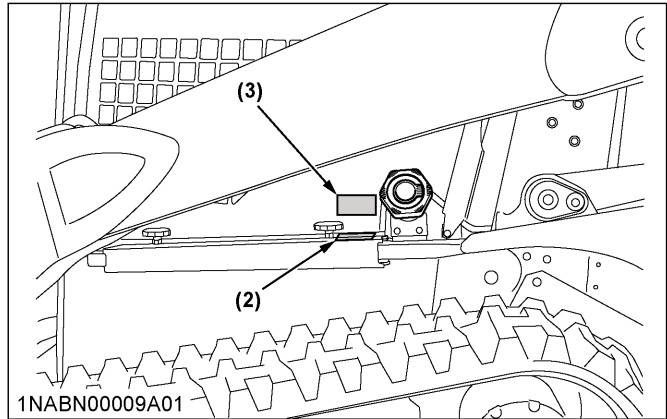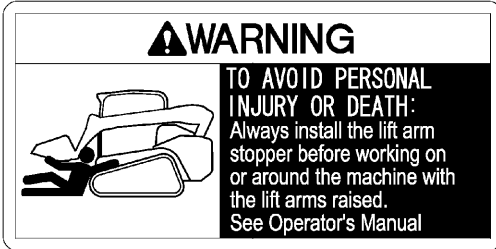

- (3) Part No. V0631-5745-1

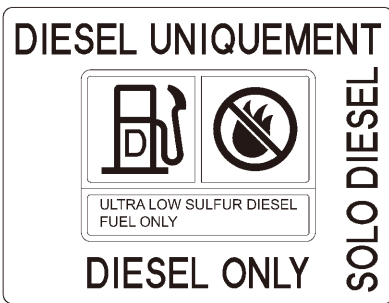

- (4) Part No. V0511-5738-1  
Do not touch hot parts such as exhaust etc.

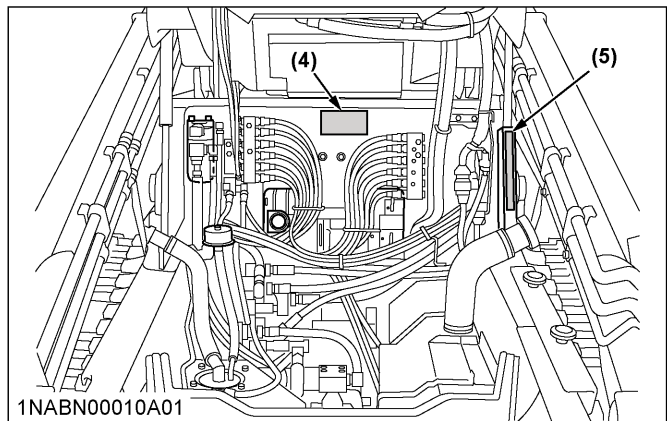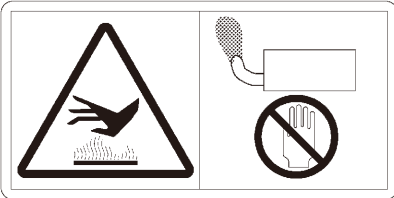

- (5) Part No. V0511-5743-1



1NABN00007A01enUS




# ! SAFE OPERATION

(1) Part No. 6C040-5559-1

**DANGER EXPLOSIVE GASES**  
Cigarettes, flames or sparks could cause battery to explode. Always shield eyes and face from battery. Do not charge or use booster cables or adjust post connections without proper instruction and training.  
**KEEP VENT CAPS TIGHT AND LEVEL**  
**POISON CAUSES SEVERE BURNS**  
Contains sulfuric acid. Avoid contact with skin, eyes or clothing. In event of accident flush with water and call a physician immediately.  
**KEEP OUT OF REACH OF CHILDREN**


(6) Part No. V0511-5764-1 [Both sides]

Do not loosen the grease fitting completely or too quickly.

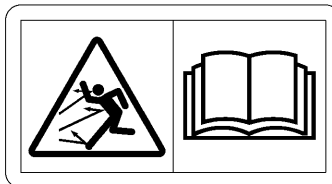



(2) Part No. V0511-5739-1

Keep away from fan and fan belt.


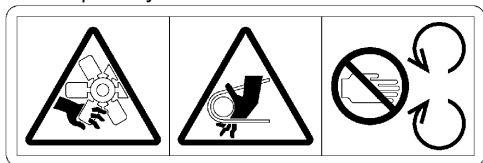


(3) Part No. V0521-5750-1

Do not open the cap when the radiator is hot.

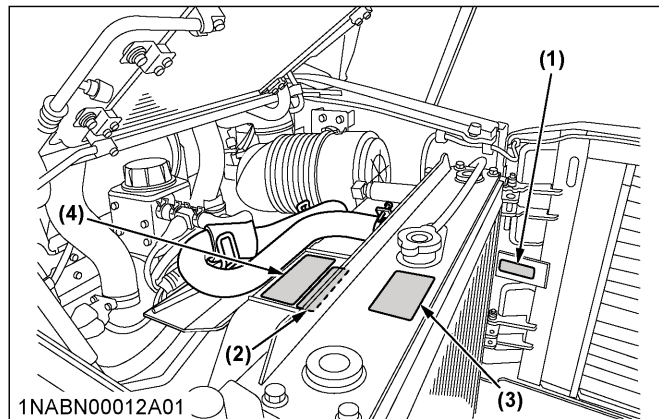
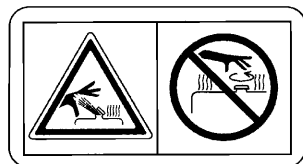


(4) Part No. V0521-5744-1

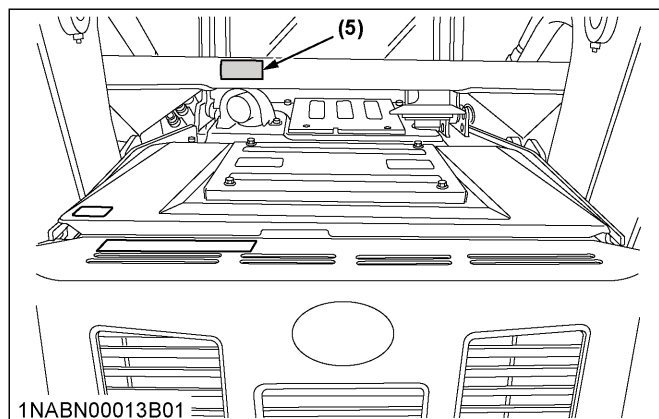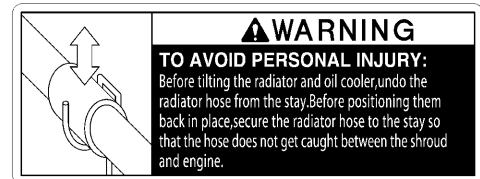

(5) Part No. V0511-5738-1

Do not touch hot parts such as exhaust etc.

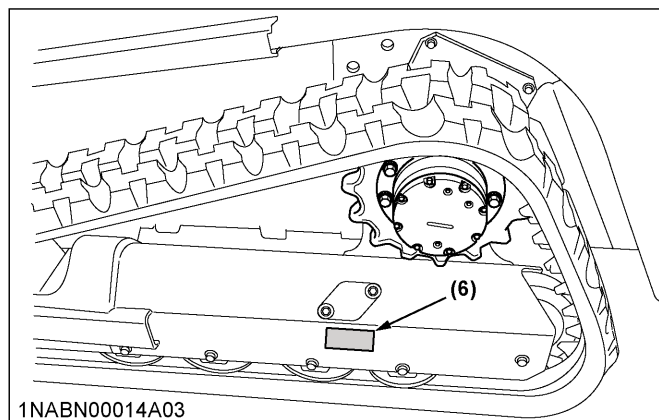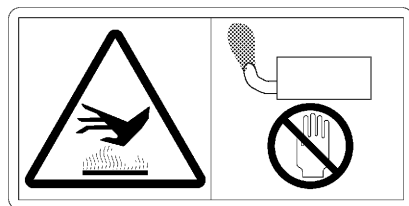

1JKMD00012A01enUS

# SAFE OPERATION

(1) Part No. V0521-5775-1

**⚠ WARNING**

**TO AVOID PERSONAL INJURY OR DEATH:**  
 When the Diesel Particulate Filter(DPF) is in the regenerating mode, the exhaust gas, the DPF muffler and the SCR(Selective Catalytic Reduction) muffler \*1 become hot. During regeneration, take into account that the mufflers will be very hot and keep the machine away from other people, animals, plants, and flammable material. Also keep the area near the DPF muffler and the SCR muffler \*1 clean and away from flammable material.  
 \*1: if equipped with SCR muffler

**⚠ WARNING**

**TO AVOID PERSONAL INJURY OR DEATH:**  
 Never open before stopping engine

(2) Part No. V1311-5763-1

**⚠ WARNING**

**TO AVOID PERSONAL INJURY:**  
 When opening and closing the engine hood, be careful not to get your hands pinched or other parts of your body caught.

(3) Part No. V0511-5736-2


**⚠ WARNING**

**TO AVOID PERSONAL INJURY OR DEATH:**  
 Do not go under the raised CAB unless the stopper pin is locked, Read Operator's Manual for Complete instructions. See Operator's Manual



(4) Part No. RB419-5793-2 (Closed cab model)



After opening, lock in place by moving both lock pins to outside to prevent door from inadvertently falling.

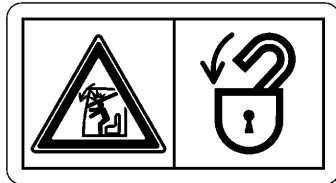

(5) Part No. V1311-5745-2 (Closed cab model)


**⚠ WARNING**

**TO AVOID PERSONAL INJURY OR DEATH:** Use warning and both hands to open / close the door to avoid contact with your head. After opening, lock in place by moving both lock pins to outside to prevent door from inadvertently falling.

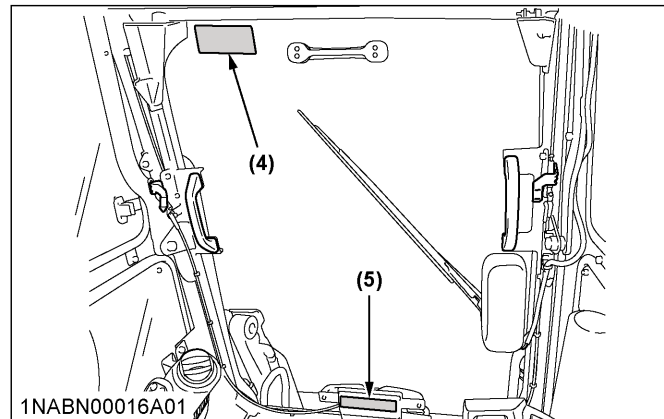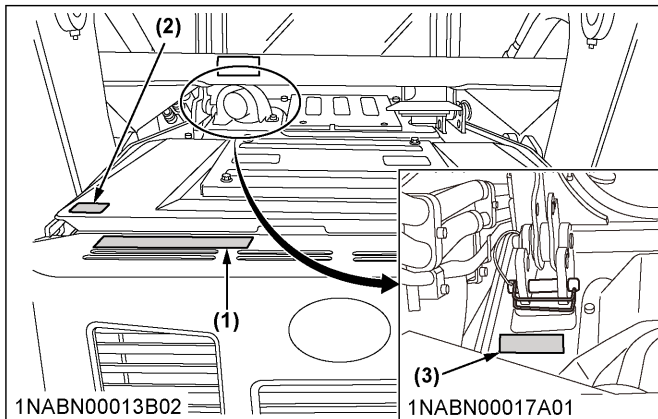

1JKMD00013A01enUS



(1) Part No. V0511-5754-1

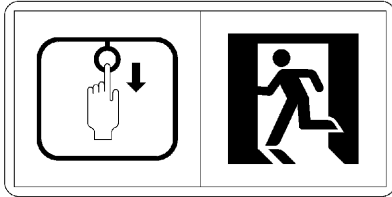


## HOW TO USE THE EMERGENCY EXIT

If you should become trapped in the cab, you can remove the rear window to get out.


- The rear window in the machine serves as the primary alternate exit.
  - You will need to remove the rear window in order to use the primary alternate exit.
1. Pull on the ring at the top of the rear window in order to remove the rear window. The ring will remove the seal that holds the rear window in place.
  2. When the seal is taken out, remove the rear window and exit the cab.

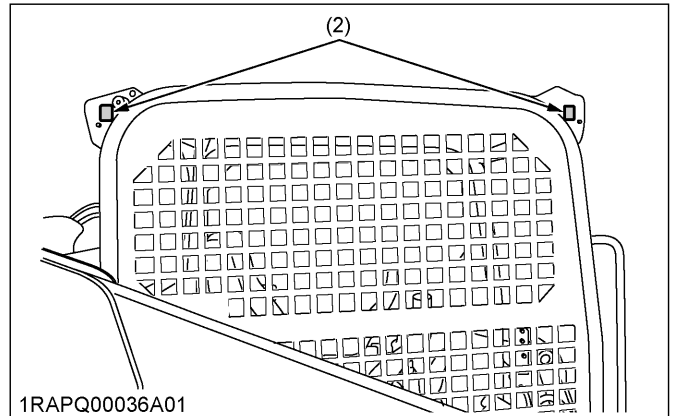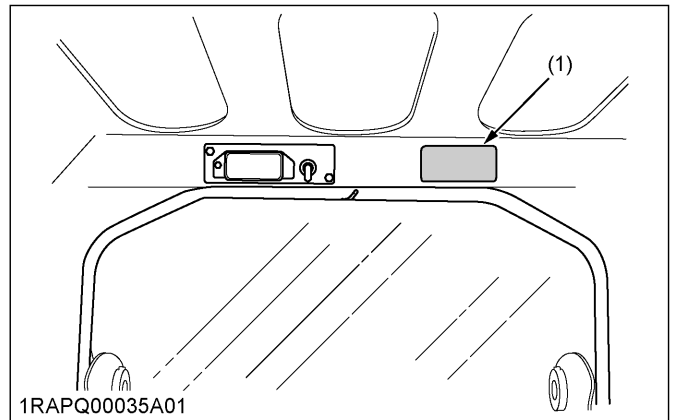

(2) Part No. RB419-5796-2 [Both sides]

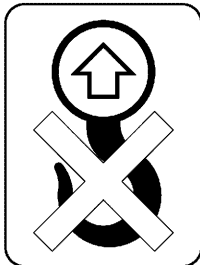

Forbidden lift point

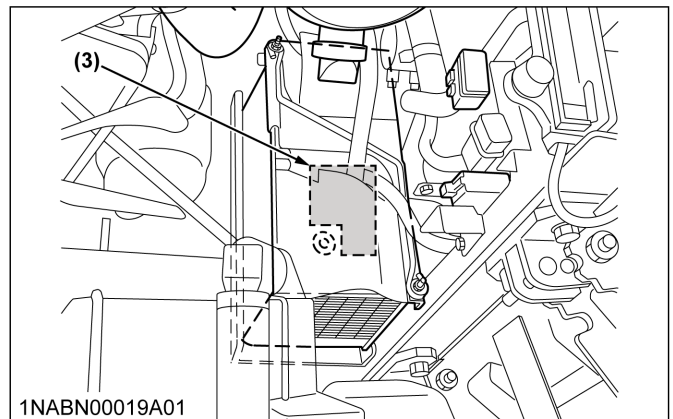





(3) Part No. V1311-5323-1

<p><b>! DANGER/POISON</b></p> <p>SHIELD EYES. EXPLOSIVE GASES CAN CAUSE BLINDNESS OR INJURY.</p> <p>NO SPARKS *FLAMES *SMOKING</p> <p>SULFURIC ACID CAN CAUSE BLINDNESS OR SEVERE BURNS.</p>		<p>KEEP OUT OF REACH OF CHILDREN. DO NOT TIP. DO NOT OPEN BATTERY.</p> <p>FLUSH EYES IMMEDIATELY WITH WATER.</p> <p>GET MEDICAL HELP FAST.</p>
<p>CALIFORNIA PROPOSITION 65</p> <p><b>! WARNING:</b> THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING LEAD, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNINGS.CA.GOV</p>		<p>RECYCLE</p> <p><b>105E41R 12V</b></p> <p>RESERVE CAPACITY (MIN) 180</p> <p>COLD CRANKING AMPS (-18°C) 900</p> <p>S.O.C Indicator</p> <p>OK Charge Replace</p> <p>DW020000</p>


1NABN00018A01enUS

# SAFE OPERATION

(1) Part No. V0521-5773-1

<p><b>⚠ WARNING</b></p> <p><b>TO AVOID PERSONAL INJURY OR DEATH</b></p> <p>Do not go under the raised CAB unless the stopper pin is locked. Read Operator's Manual for Complete instructions. See Operator's Manual</p> 	<p><b>⚠ DANGER</b></p> <p><b>TO AVOID PERSONAL INJURY OR DEATH:</b></p> <p>1. Make sure both levers (LH,RH) (A) contact the ear plates (B) at the points and are all the way down.</p> <p>2. Make sure both lock pins (LH,RH) (C) protrude through the pin slots (D).</p> 
 	<p>(A) LEVER (B) EAR PLATE (C) LOCK PIN (D) PIN SLOT</p> <p>• Attachments must comply with ISO 24410 first edition 2005-04-15.</p> <p>• Use of attachments that do not comply with ISO 24410 or the improper positioning of lever(s) or non-protrusion of pin(s) may result in detachment of the attachment or deformation, causing loss of performance, personal injury or death.</p> <p>• For information, contact your Kubota Dealer.</p>

Do not allow any persons on the bucket.

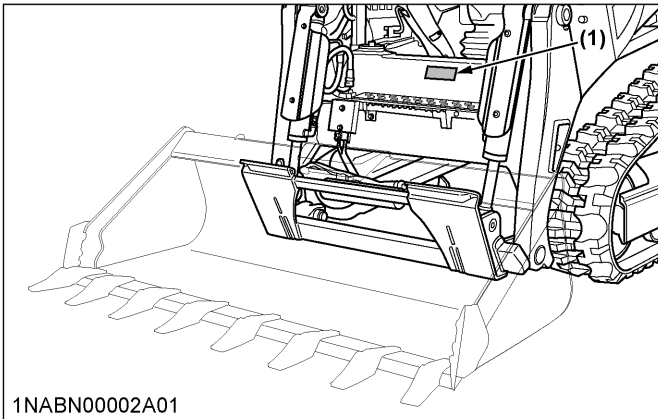

1QJKJ00006A01enUS

## 1. Care for safety labels

- Keep safety labels clean and free from obstructing material.
- Clean safety labels with soap and water, dry with a soft cloth.
- Replace damaged or missing safety labels with new safety labels from your KUBOTA dealer.
- If a component with safety label(s) affixed is replaced with new part, make sure that new safety label(s) is (are) attached in the same location(s) as the replaced component.
- Mount new safety labels by applying on a clean, dry surface and pressing any bubbles to outside edge.

# SERVICE OF THE MACHINE

## DEALER SERVICE

Your KUBOTA dealer is always ready to help you with problems with your machine and make sure that you get the most value from it.



After having carefully read these instructions, you will realize that you can perform much of the routine maintenance by yourself. For service, contact the KUBOTA Dealer shop from which you purchased your product, or your local KUBOTA dealer.

When ordering spare parts from your KUBOTA dealer, always mention the product identification number of the machine and the serial number of the engine.


Note the product identification number of the machine and the serial number of the engine right away in the supplied lines.

Machine Product identification number	
Dealer's name (To be filled in through the owner)	
Date of purchase	


	<b>Model</b>	<b>Serial No.</b>
Engine		

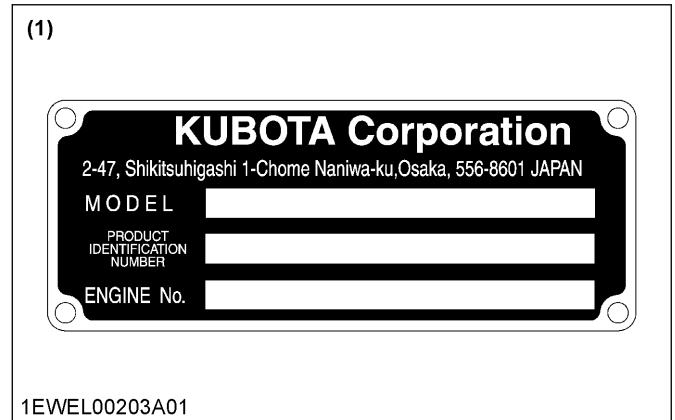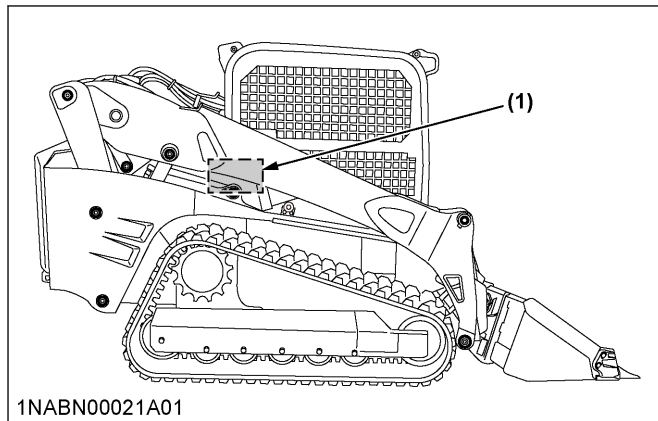

(1) Product identification number and engine number label

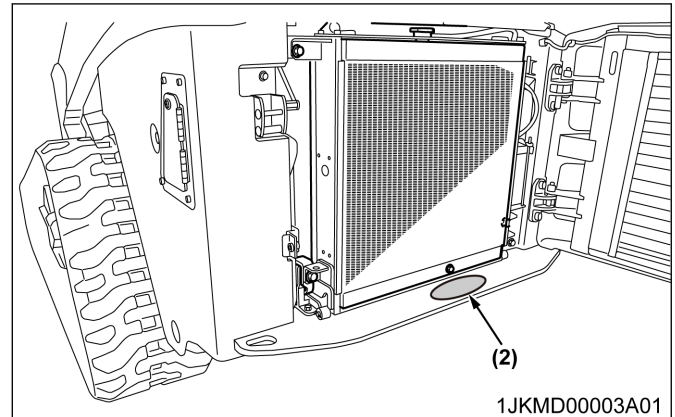

(2) Product identification number

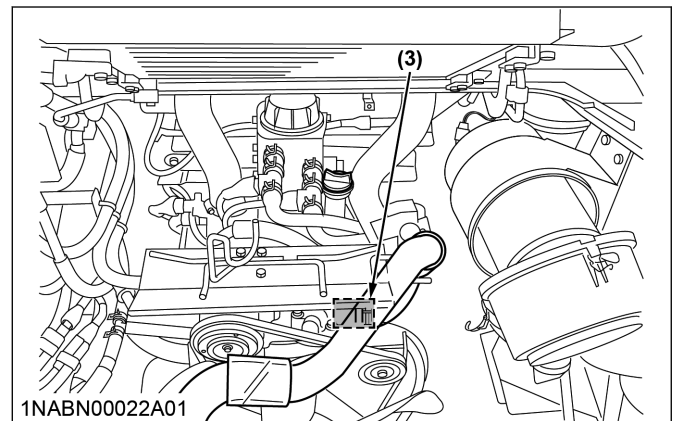

(3) Engine serial no.

## 1. Warranty policy

This machine is warranted under the *KUBOTA Limited Express Warranty*, a copy of which may be obtained from your selling dealer. No warranty shall, however, apply if the product has not been handled according to

the instruction given in the Operator's Manual even it is within the warranty period.

The product(s) described in this operator's manual are designed and manufactured only for the country in which they are initially wholesaled by KUBOTA or one of its affiliated companies.

Neither KUBOTA Corporation nor its affiliated companies provide warranty for any product which is re-sold or retailed in any country other than the country for which the product(s) were designed or manufactured.

## **2. Procedure for scrapping the machine**

To put the machine out of service, correctly follow the local rules and regulations of the country or territory where you reside.

If you ask questions, consult your local KUBOTA Dealer.

# TECHNICAL DATA

## SPECIFICATION TABLE


		<b>KUBOTA CTL (Compact Track Loader)</b>		
Model name		SVL97-2		
Type		Open Cab	Closed Cab	
Operating weight including operator's weight		5125 kg (11299 lbs.)	5250 kg (11574 lbs.)	
Engine	Type	Water cooled 4 cycle diesel engine with 4 cylinder EPA Tier 4		
	Model name	KUBOTA V3800-TIEF4		
	Total displacement	3769 cc (230.0 cu.in)		
	Engine power	SAE J1995 gross	71.9 kW (96.4 HP)	
		SAE J1349 net	64.9 kW (87.0 HP)	
	Rated speed		2400 rpm	
	Low idling speed		1150 rpm	
Performance	Rated operating capacity		1451 kg (3200 lbs.)	
	Tipping load		4147 kg (9143 lbs.)	
	Breakout force	Bucket	3611 kg (7961 lbs.)	
		Lift arm	3058 kg (6742 lbs.)	
	Travel speed	Fast	11.7 km/h (7.3 mph)	
		Slow	8.0 km/h (5.0 mph)	
	Ground pressure (With operator)		31.0 kPa (0.32 kgf/cm <sup>2</sup> ) [4.5 psi]	
Battery capacity		12V RC: 160 min, CCA 900A		
Pressure connection for attachments	Max. displacement (Theoretical)	Standard Flow	High-Flow	
		90 L/ min (24 US gal/ min)	156 L/ min (41 US gal/ min)	
	Max. pressure	24.5 MPa (250 kgf/ cm <sup>2</sup> ) [3553 psi]		
Fuel tank capacity		111 L (29.3 US gal)		
DEF (AdBlue) tank capacity		13.0 L (3.4 US gal)		

**NOTE :**


- Specifications subject to change without notice.

# MACHINE PARTS

## DESCRIPTION OF MACHINE PARTS

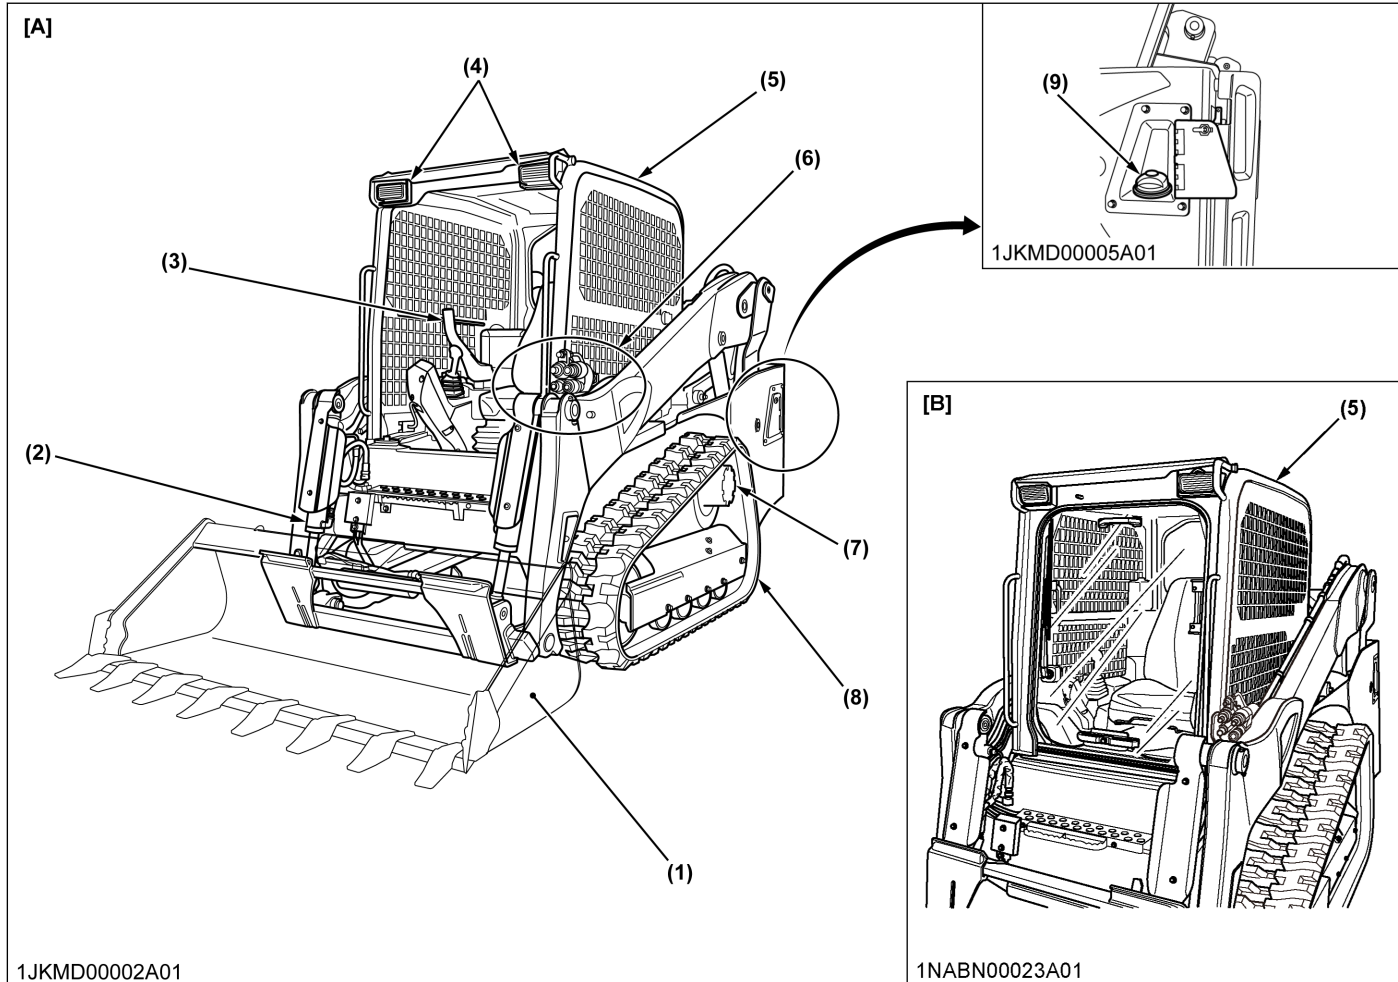


- |                   |                                   |                     |                           |
|-------------------|-----------------------------------|---------------------|---------------------------|
| (1) Bucket        | (4) Front working light           | (6) AUX supply port | (9) DEF (AdBlue) tank cap |
| (2) Tilt cylinder | (5) Cab (open cab and closed cab) | (7) Drive motor     | [A] Open cab model        |
| (3) Armrest       |                                   | (8) Rubber track    | [B] Closed cab model      |

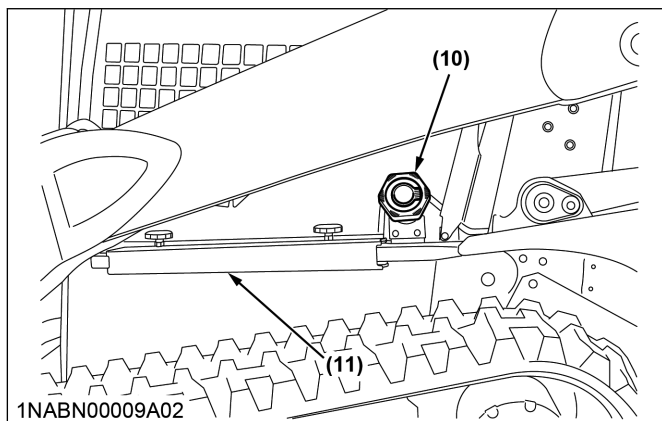

- |                       |                    |
|-----------------------|--------------------|
| (10) Lift arm stopper | (11) Fuel tank cap |
|-----------------------|--------------------|



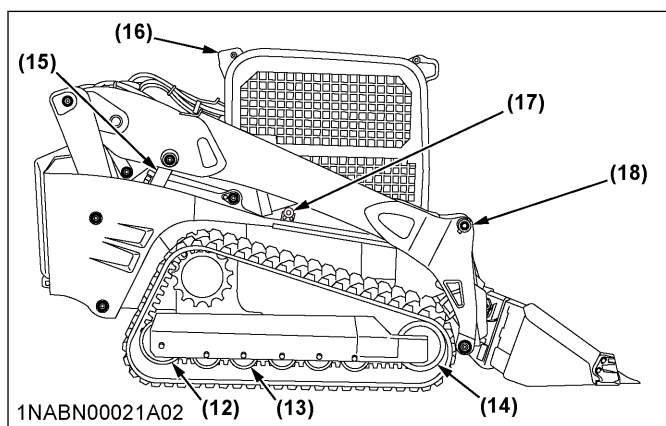

(12) Rear idler  
(13) Track roller


(14) Front idler  
(15) Lift arm cylinder

(16) Rear working light  
(17) Hydraulic tank cap

(18) Lift arm

# INSTRUMENT PANEL AND SWITCH

## INSTRUMENT PANEL

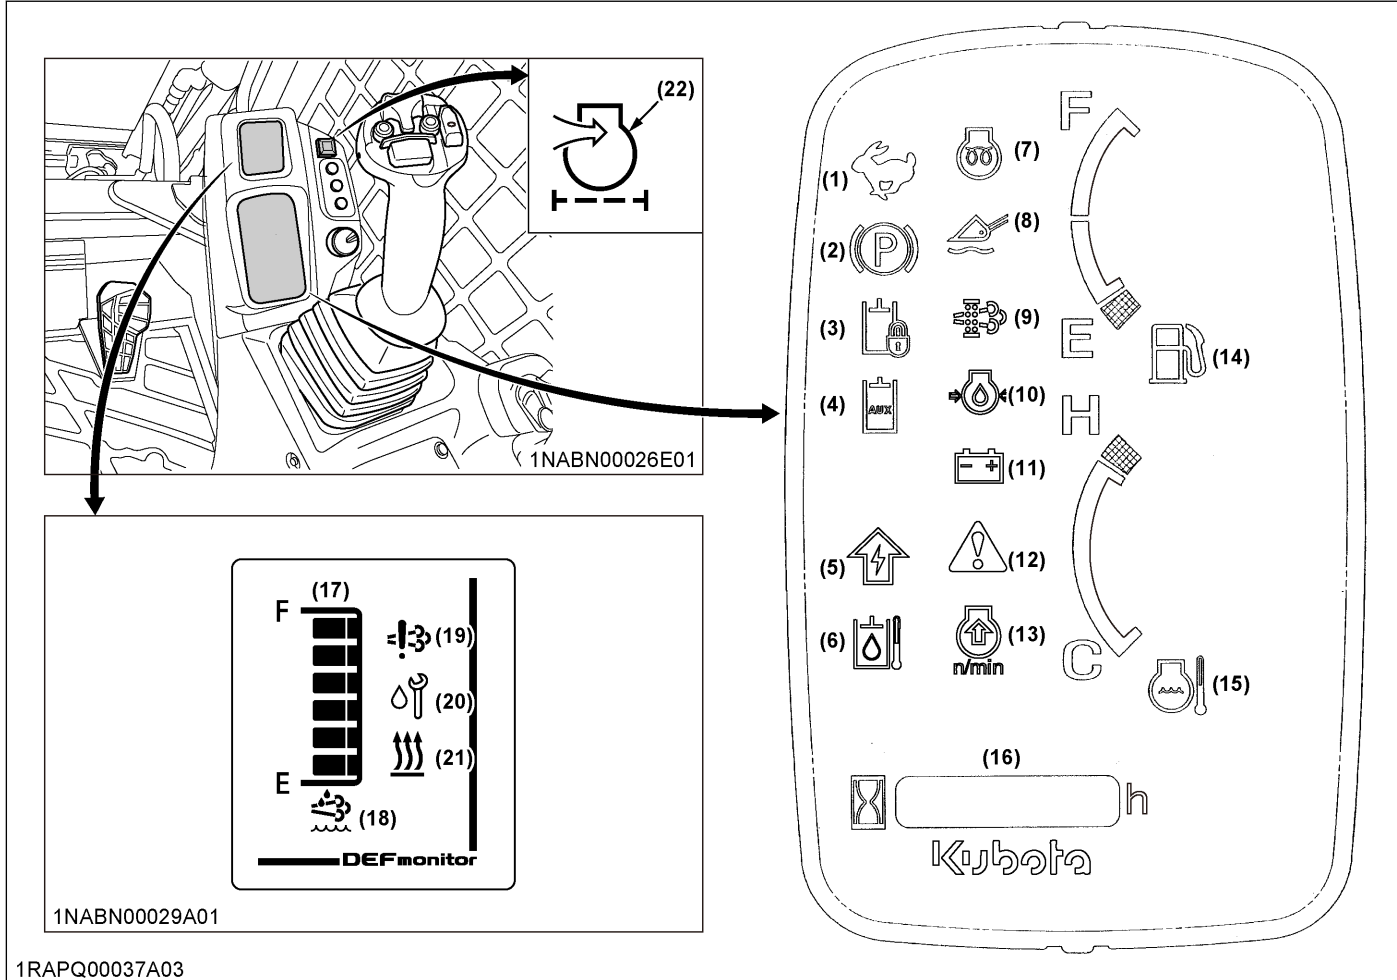

- |   |                                    |  |  |
|---|------------------------------------|--|--|
| (1) Speed indicator light                       | (7) Glow plug indicator            | (14) Fuel gauge indicator and Low fuel warning light                 | (18) Remaining DEF (AdBlue) warning lamp |
| (2) Parking brake warning light                 | (8) Bucket-floating indicator      | (15) Coolant temperature gauge and coolant temperature warning light | (19) SCR system warning lamp             |
| (3) Hydraulic lock indicator                    | (9) DPF regeneration indicator     | (16) Hour meter and error code number                                | (20) DEF (AdBlue) quality warning lamp   |
| (4) AUX operation indicator                     | (10) Engine oil pressure indicator | (17) DEF (AdBlue) level gauge  | (21) Thawing DEF (AdBlue) lamp           |
| (5) AUX electrical mode change indicator        | (11) Battery charge warning light  |  | (22) Air cleaner warning indicator       |
| (6) Hydraulic oil temperature warning indicator | (12) Master warning light          |  |  |
|   | (13) Engine rev up indicator       |  |  |

**IMPORTANT :**

- When cleaning the display screen, wipe with a soft cloth like those used for cleaning eyeglasses.
- Using a coarse cloth or rubbing too hard may damage the surface.
- Cleaning the display screen with alkaline, acidic, or organic solvents such as alcohol or benzene can damage the screen.

**NOTE :**

- Error code indicates  and number. For detail, see LIST OF THE ERROR CODE NUMBERS on page 131.

# 1. Fuel gauge indicator


With the starter key at the [RUN] position, the fuel-gauge-indicator indicates that the fuel remains in the fuel tank.

**! WARNING**  
**To avoid personal injury or death:**

- Before adding fuel, be sure to stop the engine.
- Be sure to keep open flame away from the machine. Otherwise a fire may result.
- Make sure that fuel delivery system is grounded.


**IMPORTANT :**

- If the fuel-gauge-indicator is near the [E], add the fuel as soon as possible. If the fuel-gauge-indicator is near [E] and the machine runs on a slope, the engine may run out of the fuel and get interrupted.
- Be very attentive to the remaining fuel for the engine not to stall. If the engine stalls, it may fail to get restarted for a while to protect the emission-purifying-device.

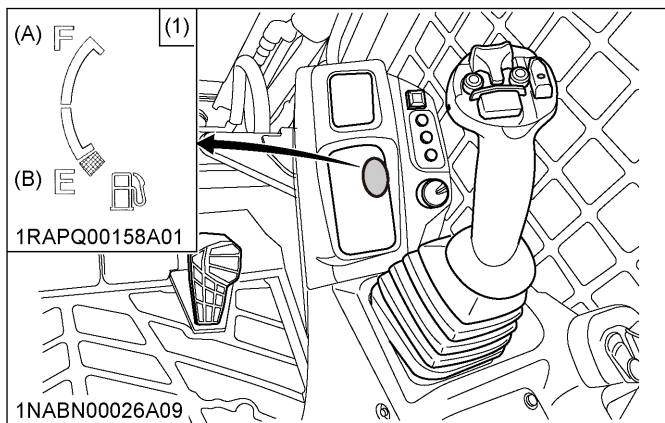

(1) Fuel gauge indicator (A) Full (B) Empty

If the fuel runs short, open the cap and refuel the tank.

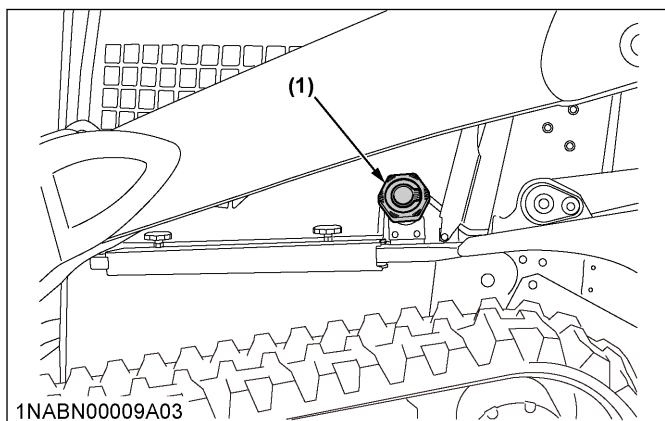


(1) Cap

**NOTE :**

- To open the fuel cap, keep the starter key inserted.

# 2. Low fuel warning light

If the fuel in the tank goes below the prescribed level, the low-fuel-warning-light will flash. If the low-fuel-warning-light should flash during operation of the machine, refuel as soon as possible.

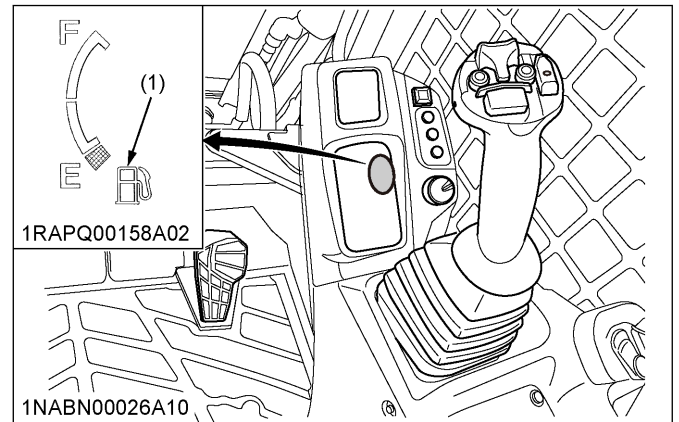

(1) Low fuel warning light

# 3. Coolant temperature gauge


**! WARNING**  
**To avoid personal injury or death:**

- Do not open the radiator cap during or just after operation. Hot coolant may gush out and scald you. Wait for the coolant to cool down before opening the cap.

With the starter key at the [RUN] position, the coolant-temperature-gauge indicates the coolant temperature. If engine coolant rises above a specified temperature level, the indicator starts blinking and the buzzer starts beeping every 6 minutes for advance warning. If the coolant temperature further rises to the critical level, the blinking intervals become shorter and the buzzer keeps on beeping.

When the coolant temperature has dropped below specified temperature level or the starter key has been moved to the [STOP] position, the warning will cease. If the coolant-temperature-gauge is near [H], check the machine.

(See Checking the coolant temperature gauge on page 30)

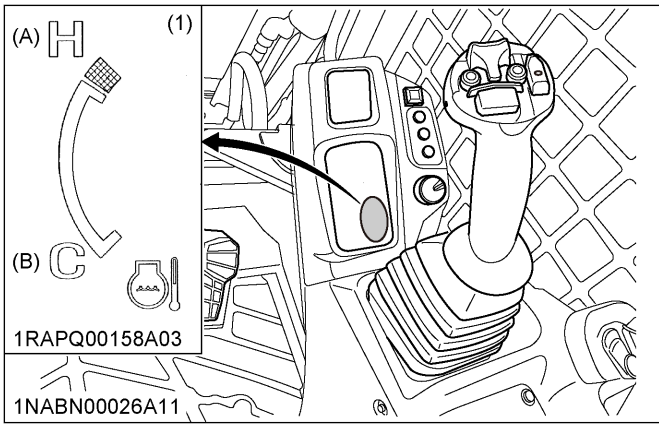

(1) Coolant temperature gauge (A) Hot (B) Cool

**IMPORTANT :**

- If the emission alarm “E:9114” or “E:9115” is displayed, the EGR valve will begin to close and EGR system will not function. Interrupt the work and lower the engine rpm, which will reduce the coolant temperature.

**3.1 Checking the coolant temperature gauge**


If the coolant-temperature-gauge is near [H], take the following steps.

1. Discontinue the job.
2. Reduce the engine rpm to idle and keep it at idle for 5 minutes.
3. Stop the engine and check the following points.
  - Low coolant level or leak
  - Tension of the V-belt
  - Deposits of mud, dust, or chaff blocking the radiator or screen
  - Leak of the hydraulic oil

**4. Glow plug indicator**

The glow-plug-indicator is displayed when the starter key is turned to the [RUN] position but the engine requires preheating.

Wait until the glow-plug-indicator goes out, and then start the engine.

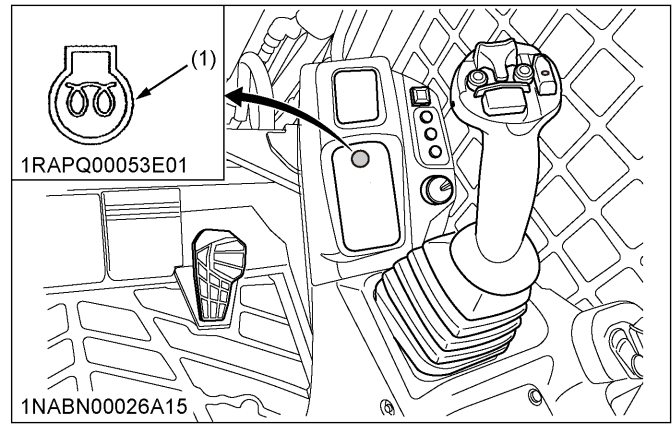


(1) Glow plug indicator

**5. Parking brake warning light**


When the parking-brake-switch is turned on, the parking-brake-warning-light on the instrument panel turns on.



(See Parking brake switch on page 35)

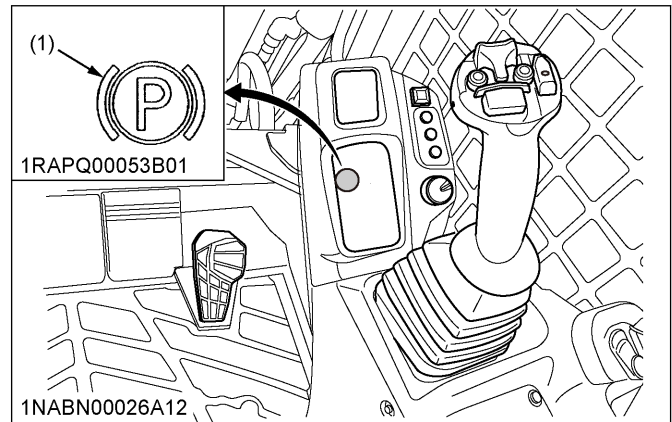

(1) Parking brake warning light

## 6. Bucket-floating indicator

While in the bucket-float mode, the  mark on the instrument panel stays on.

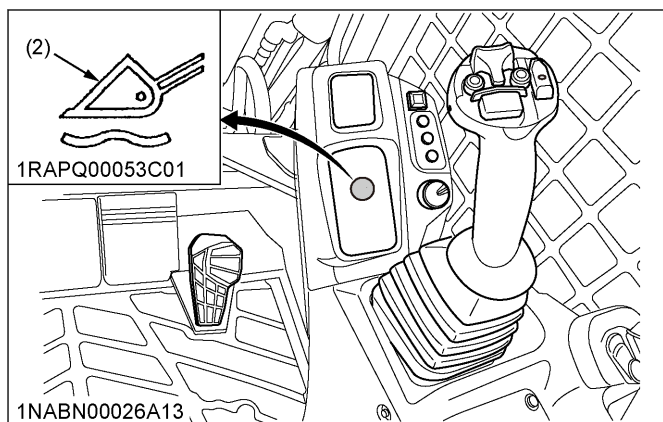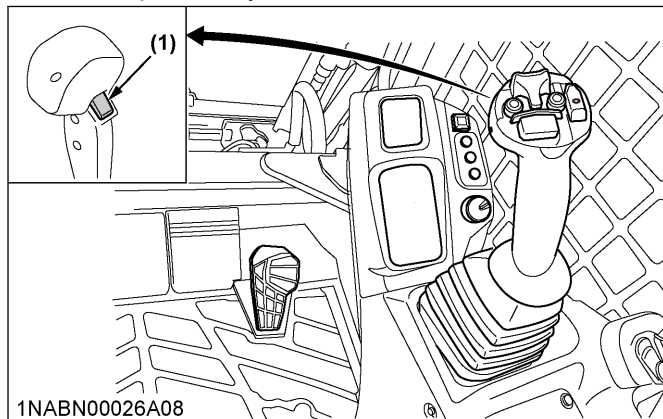

(1) Bucket-float switch

(2) Bucket-floating indicator


## 7. Master warning light

The master-warning-light is used to indicate broken wire, short-circuit, and other problems.

The master-warning-light lights up to warn you of a detection of broken or short-circuited hydraulic-lock-solenoid (or hydraulic-unlock-solenoid), AUX-port-variable-switch, and other elements.

### IMPORTANT :

- If the master-warning-light lights up, consult your local KUBOTA dealer immediately.

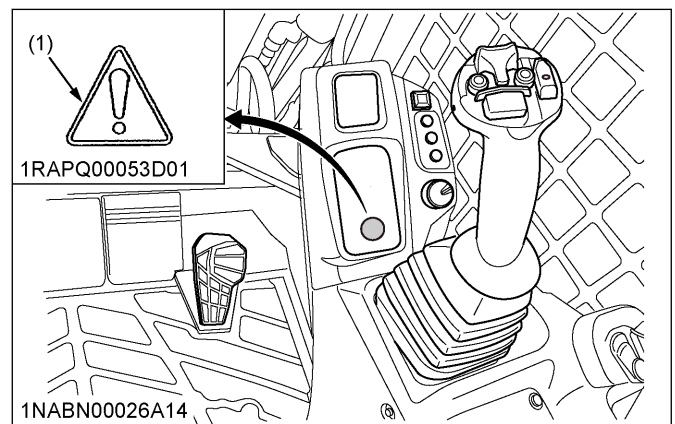

(1) Master warning light


## 8. Engine oil pressure indicator

The engine-oil-pressure-indicator lights up due to failure of the lubricating system with the engine running.

When the starter key is turned in **[RUN]** position with the engine off, the engine-oil-pressure-indicator lights up.

When the engine starts, the engine-oil-pressure-indicator goes out.

If the engine-oil-pressure-indicator stays on with the engine running, stop the engine and check the engine oil level.

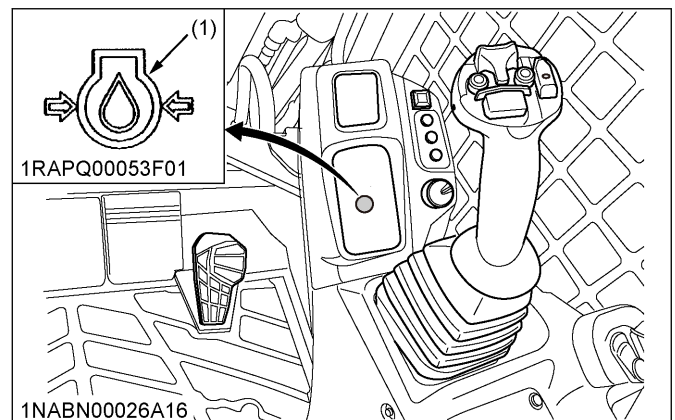

(1) Engine oil pressure indicator


## 9. Battery charge warning light

The battery-charge-warning-light lights up if the charging system fails with the engine running.


When the starter key is turned in **[RUN]** position with the engine off, the battery-charge-warning-light lights up.

When the engine starts, the battery-charge-warning-light goes out.

If the battery-charge-warning-light stays on with the engine running, stop the engine and check the V-belt.

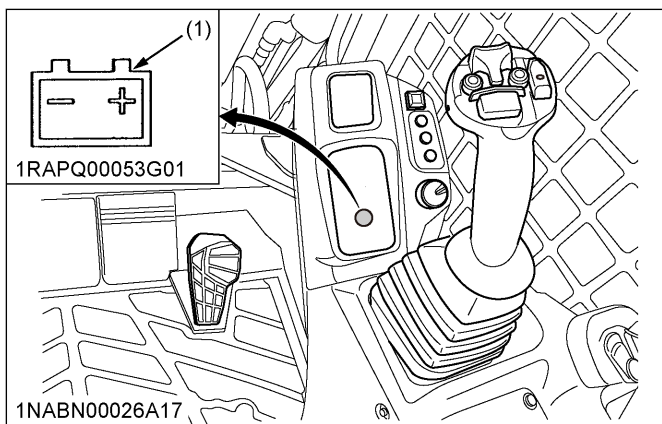

(1) Battery-charge-warning-light

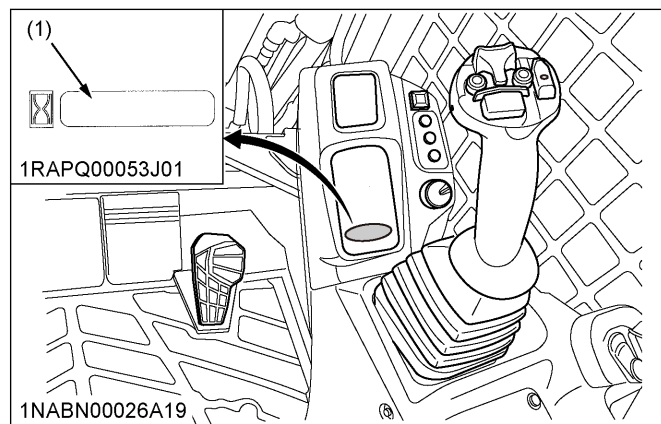


(1) Hour meter

### 10. Hydraulic oil temperature indicator

The hydraulic-oil-temperature-indicator starts blinking and the buzzer starts beeping if the hydraulic-oil-temperature has reached a specified level.

When the hydraulic-oil-temperature has dropped below the specified level or the starter key is turned off, the warning will cease.

Stop the engine and check for an unspecified level in the hydraulic-oil-tank and for leak of the hydraulic oil.

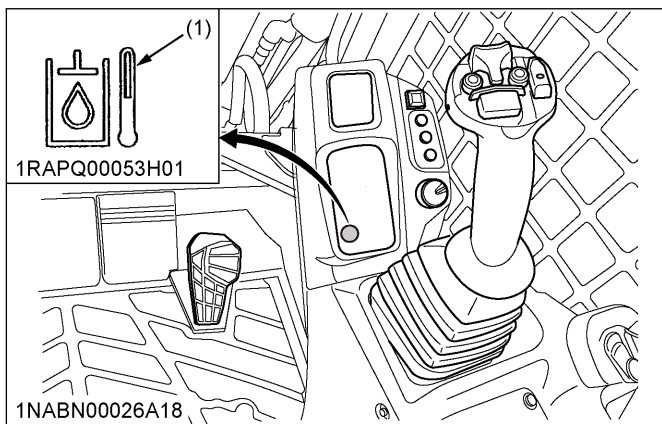

(1) Hydraulic oil temperature indicator

### 11. Hour meter


The hour meter indicates the total operating hours of the machine.

#### How the hour meter works

- The hour meter advances one hour after an hour of operation of the machine regardless of the engine rpm.

### 12. Diesel-particulate-filter (DPF) regeneration indicator


As PM (particulate-matter) build up inside the DPF, the DPF regeneration cycle starts automatically to burn away PM. During DPF regeneration, the DPF-regeneration-indicator lights up and stays on and the beep tone keeps sounding to warn the operator.

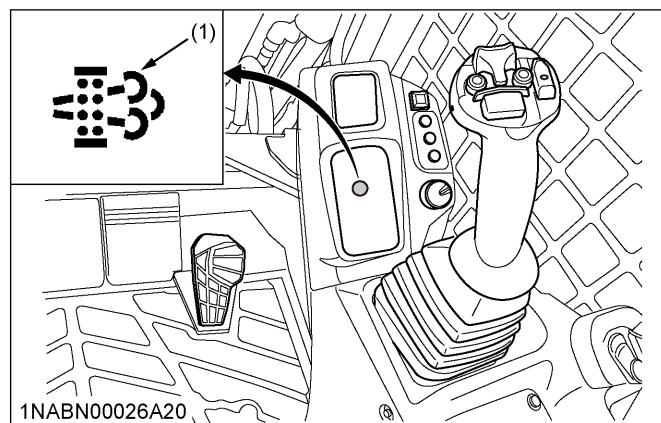

(1) DPF regeneration indicator

### 13. Engine rev up indicator


If the engine rpm is too low to start regeneration, the DPF-regeneration-indicator lights up and starts blinking, and the engine-rev-up-indicator lights up. In case that the DPF-regeneration-indicator lights up and starts blinking, rev up the engine until the engine-rev-up-indicator goes out, the DPF regeneration will automatically start.

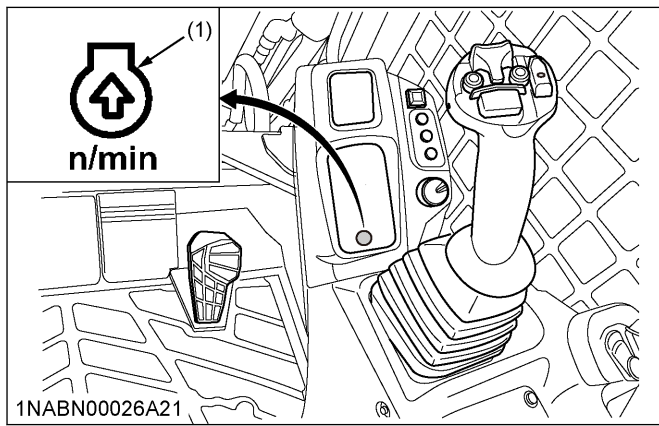

(1) Engine rev up indicator

### 14. Air cleaning warning indicator

If the air cleaner is clogged, the air cleaner warning indicator on the instrument panel will light up. If this should happen at high engine rpm, stop the engine and clean the air cleaner element. (See Checking the air cleaner element on page 105, Cleaning the air cleaner element on page 106 and Cleaning the evacuator valve on page 106.)

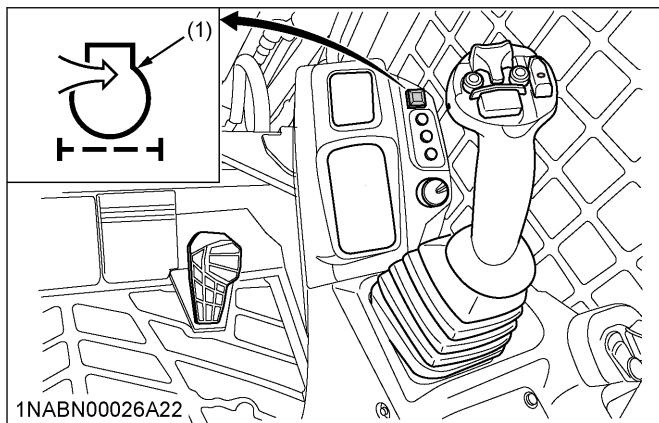

(1) Air cleaning warning indicator

### 15. CCV system freezing warning lamp

**! WARNING**  
 To avoid personal injury or death:


- Do not draw out the engine oil dipstick immediately after the warning lamp has come on. Allow engine to cool sufficiently before drawing out the engine oil dipstick. Otherwise the hot engine oil may spout and make burn.

If the CCV pipe freezes, the master warning light starts flashing, the error code (E:9126) appears in the hour meter, and the buzzer starts sounding continuously. If you continue running the engine while the error number (E:9126) appears, the error code (E:9127) appears and

the engine performance is limited. In such case, stop the engine and consult your local KUBOTA dealer immediately.






**IMPORTANT :**

- Before and after the cold season, remove the CCV internal pressure switch cover and check the terminals, CCV internal pressure switch and others. If any of them is found corroded, do not use the machine and consult your local KUBOTA dealer for repair request.
- The operator shall stop the engine immediately. Otherwise the engine oil may spout and in the worst case the engine is damaged then needs to be replaced.

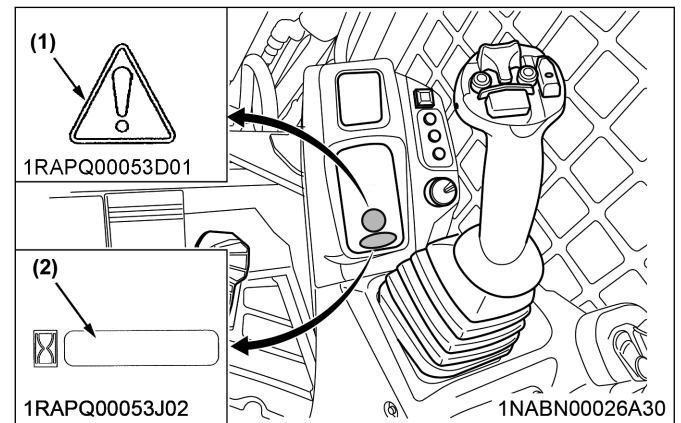

(1) Master warning light (2) Hour meter

# SWITCHES

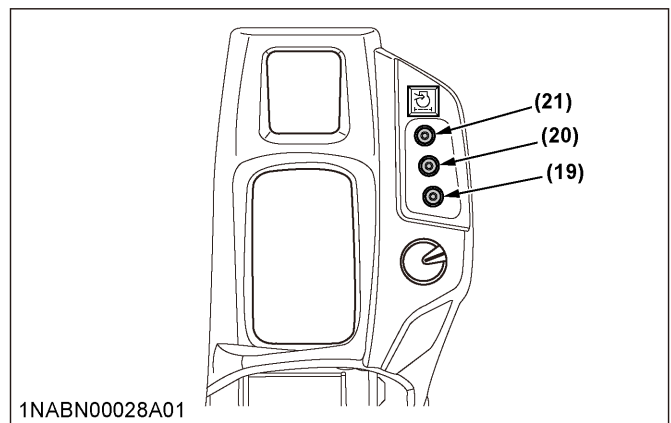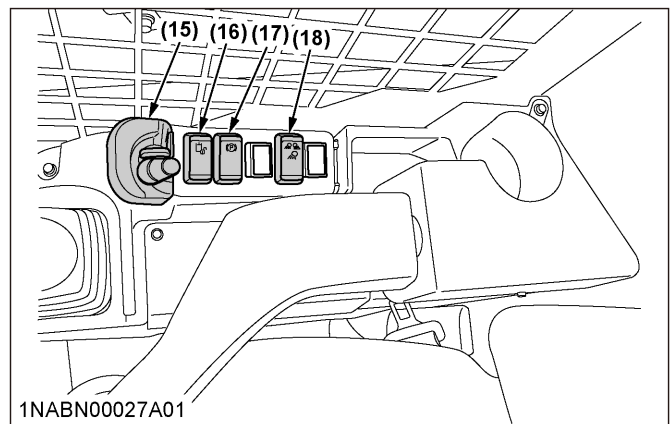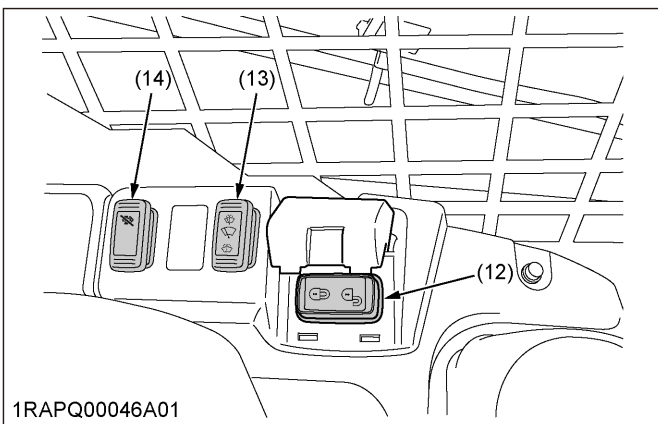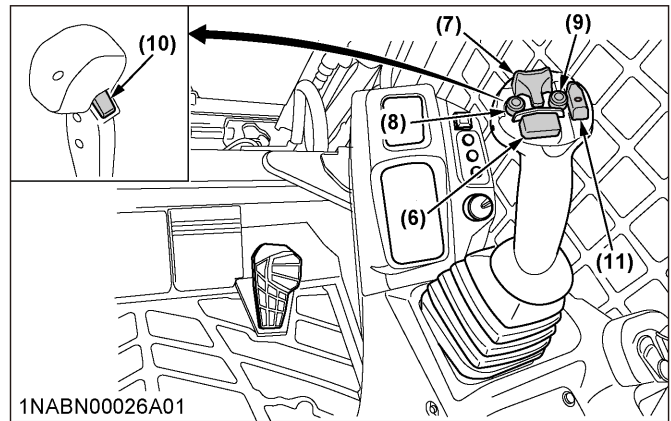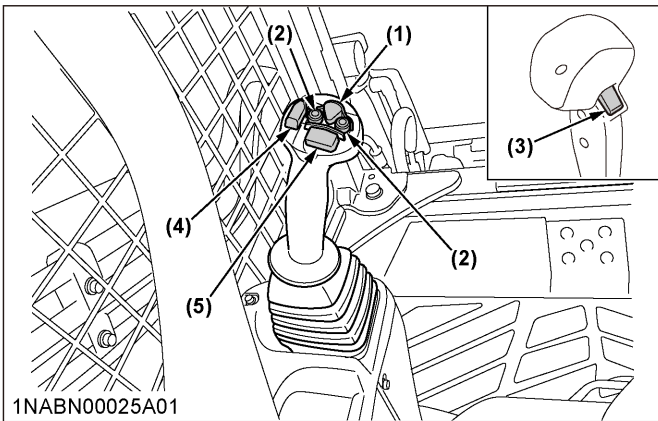


1NABN00082A01

- |   |  |  |                              |
|---|--|--|------------------------------|
| (1) Horn switch   | (7) AUX port variable switch                                       | (12) Hydraulic quick-hitch switch (hydraulic quick-hitch model only) | (16) Hydraulic unlock switch |
| (2) AUX electrical control switch                             | (8) AUX hold switch (left)   | (13) Wiper / washer switch (closed cab model)                        | (17) Parking brake switch    |
| (3) Travel speed switch                                       | (9) AUX hold switch (right)  | (14) Inhibit switch  | (18) Working light switch    |
| (4) Blank   | (10) Float switch  | (15) Starter switch  | (19) AUX port switch         |
| (5) AUX electrical control switch (Multi function model only) | (11) AUX electrical mode change switch (Multi function model only) |  | (20) User setting switch     |
| (6) AUX electrical control switch                             |  |  | (21) Display selector switch |



## 1. Starter switch

- **[STOP]**  
You can insert the starter key at the **[STOP]** position.
- **[RUN]**  
When turning the starter key one click from the **[STOP]** position to the **[RUN]** position, all the circuitry gets energized to start preheating and the glow-plug-indicator is displayed. Check for breakage of any light and indicator. The light or indicator lights up and stays on for about 1 second, if they are not broken.
- **[START]**
  1. When turning the starter key from the **[RUN]** position another click to the **[START]** position, the starter motor is activated to get the engine started.
  2. When releasing your hand from the starter key, the starter key returns itself to the **[RUN]** position.  
In other words, once the engine has started, be sure to release the starter key.

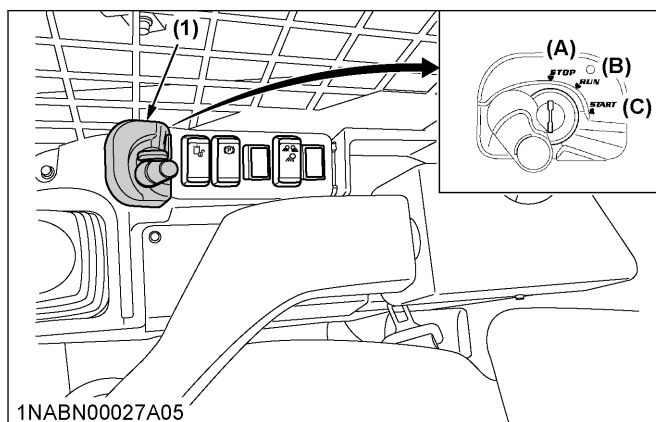

(1) Starter switch

(A) STOP  
(B) RUN  
(C) START

## 2. Parking brake switch


The parking brake is to be used when parking the machine.

### WARNING

To avoid personal injury or death:

- When dismantling the machine or when servicing or hauling, be sure to apply the parking brake.
1. When the parking-brake-switch is pressed onto the (P) marked side (the right side), the parking brake is applied and the (P) mark on the instrument panel lights on.

2. When the switch is pressed onto the left side, the parking brake is released and the (P) mark on the instrument panel lights off.

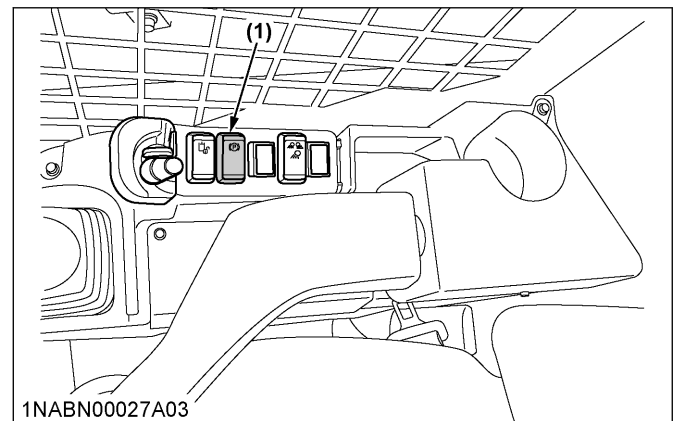

(1) Parking brake switch

### NOTE :

- Suppose that the parking brake switch is on ((P) marked side depressed). Even if the hydraulic system gets unlocked, the travel system remains out of service and the brakes are still applied. When the hydraulic system has been locked, the travel system gets locked too, and the brakes are applied.

## 3. Hydraulic unlock switch

The hydraulic-unlock-switch enables the hydraulic system.


The hydraulic-unlock-switch is intended to get ready for use of the hydraulic system (traveling and attachments), but does not equip the locking function.

To unlock the hydraulic system, meet the following requirements.

- The engine is running.
- The armrests are down.
- The operator is seated on the operator's seat.

When the hydraulic system has been unlocked, the hydraulic-lock-indicator on the instrument panel disappears.


If any of the preceding conditions is not met, the hydraulic system stays locked.

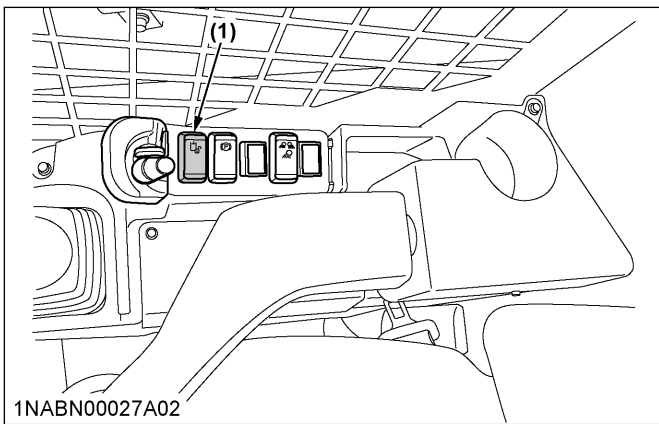



(1) Hydraulic unlock switch

#### 4. Horn switch

When pressing the horn switch, the horn will beep. The horn switch is operative even when the starter key is in the **[STOP]** position.

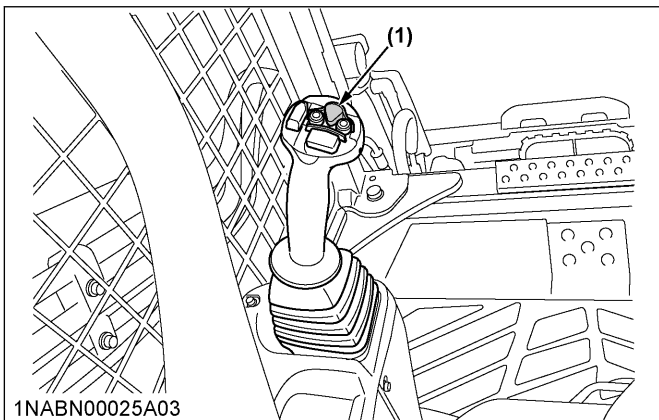

(1) Horn switch

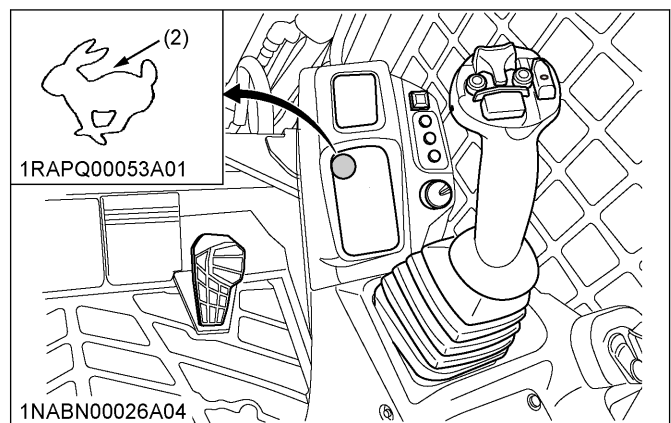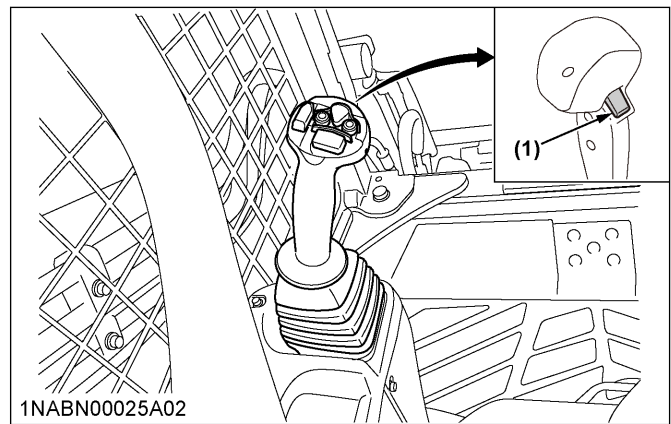

(1) Travel speed switch

(2) Speed indicator light



**NOTE :**

- When activating the travel-speed-switch, press it completely. The travel-speed-switch is operative only when the travel system is unlocked.
- Each time the travel-speed-switch is pressed, the travel speed is switched between high and low speed.

#### 5. Travel speed switch

Travel speed will increase when you press down the travel-speed-switch.

Switching the dual travel speed:


1. When pressing the travel-speed-switch, the buzzer beeps twice, the travel speed changes from low to high speed, and the  symbol lights up.
2. When pressing the travel-speed-switch again, the buzzer beeps once, the travel speed changes from high to low speed, and the  symbol goes out.

#### 6. Working light switch

The working-light-switch is operative with the starter key in the **[RUN]** position.

The working-light-switch has 3 positions.

1. When the working-light-switch is positioned on your side, the working lights stay off.
2. When moving the working-light-switch to the first position, the front working light turns on.
3. When moving the working-light-switch to the second position, both the front working light and the rear working light turn on.

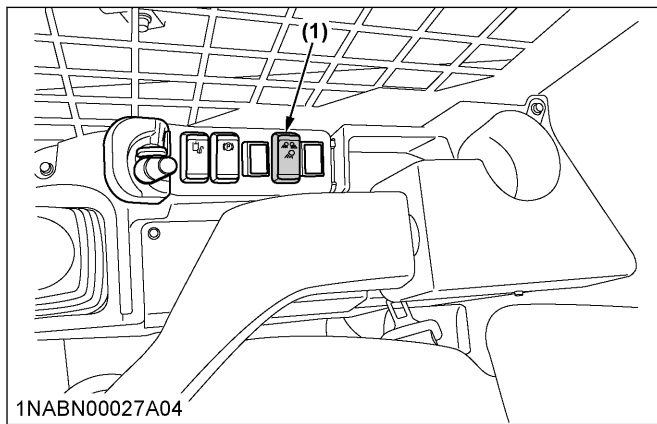

(1) Working light switch

### Night operation

#### **CAUTION**

To avoid personal injury:

- Visibility is reduced in darkness, therefore, in the event the working light alone does not provide sufficient visibility, use additional stationary artificial lighting. Observe all safety rules and any special regulations for night work.

### 7. Seat switch

The seat switch is used to detect the operator sitting on the seat and to signal the hydraulic system that it can be unlocked.


When the operator sits on the operator's seat, the seat switch turns on and the hydraulic system can be unlocked.

### 8. Inhibit diesel particulate filter (DPF) regeneration switch

The inhibit-diesel-particulate-filter (DPF)-regeneration-switch (hereinafter called inhibit-DPF-regeneration-switch) disables the auto DPF regeneration cycle.

Activate the inhibit-DPF-regeneration-switch to turn off the auto DPF regeneration when working around people, animals, plants, and flammable materials. Certain work conditions may require the auto DPF regeneration cycle to be disabled.

1. When pressing the inhibit-DPF-regeneration-switch once, the automatic mode turns off.
2. When pressing the inhibit-DPF-regeneration-switch once again, the automatic mode returns from disable.

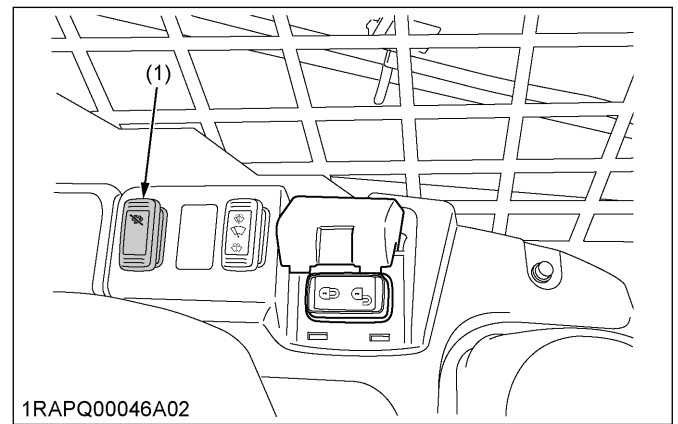

(1) Inhibit Switch

### 9. Float switch

#### **WARNING**


To avoid personal injury or death:

- Make sure that the bucket is lowered to the ground before putting the lift arms in the float position. Putting the lift arms in the float position while they are off the ground will cause the bucket and the lift arms to fall and is extremely dangerous.
- Do not drive the machine forward with the lift arms in the float position.

#### Entering the float mode

While moving down the lift arm by tilting the right-control-lever forward, press the float switch on the right-control-lever and release it no later than 1 second.


The float mode then turns on.

While in the float mode, the  mark on the instrument panel stays on.

#### Exiting the float mode

While the machine is in the float mode, perform either of the following methods.

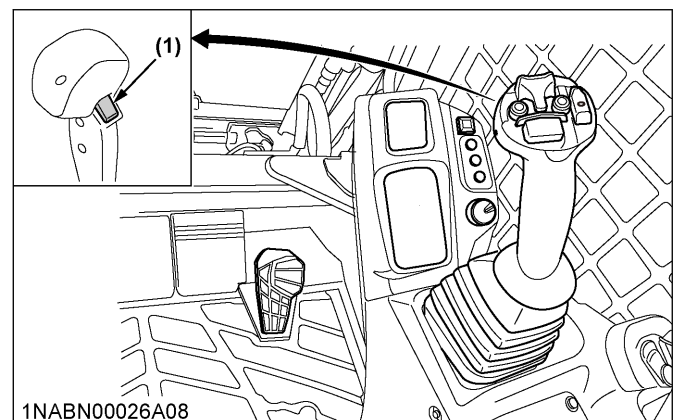

- Press the float switch on the right-control-lever.
- Move up the lift arm (pulling the right-control-lever backward).




(1) Float switch

## 10. AUX port switch [standard flow model]

The AUX-port-switch is used to enable the AUX port. The AUX-port-switch can be used only when the AUX-port-variable-switch on the right-control-lever is in the neutral position.

1. When pressing the AUX-port-switch once, the AUX port is unlocked and the  mark on the instrument panel lights up.
2. When pressing the AUX-port-switch again, the AUX port then gets locked and the  mark on the instrument panel lights off.

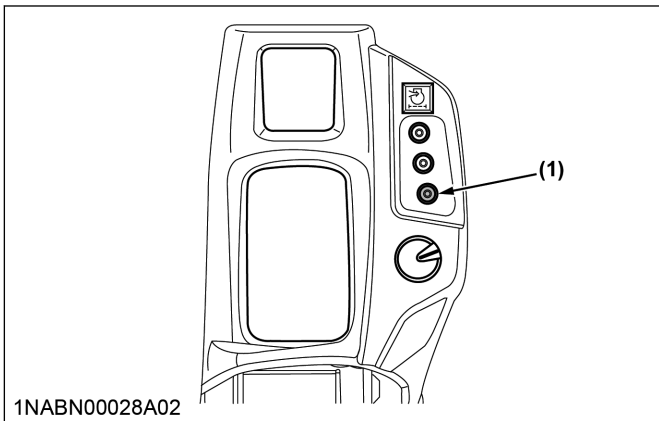




(1) AUX port switch

## 11. AUX port switch [High-Flow model]

The AUX-port-switch is used to enable the AUX port. The AUX-port-switch can be used only when the AUX-port-variable-switch on the right-control-lever is in the neutral position.

(See Auxiliary port operation [high-flow model only] on page 70)

1. When pressing the AUX-port-switch once, the AUX port is unlocked and the mark  on the instrument panel lights up.
2. When pressing the AUX-port-switch again, the AUX port then gets locked and the  mark on the instrument panel lights off.

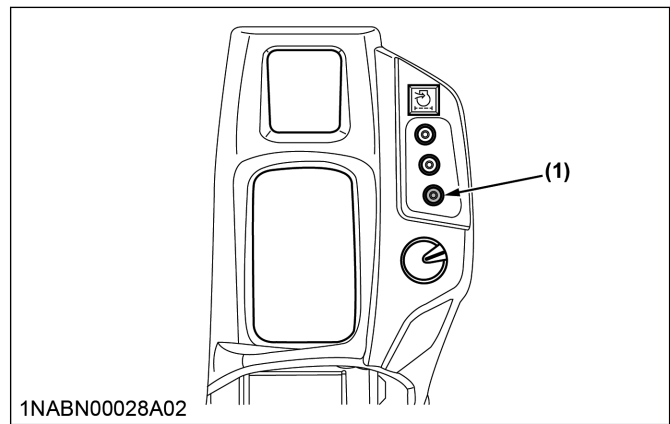


(1) AUX port switch

## 12. AUX port variable switch

With the AUX port unlocked, the flow rate of the hydraulic oil varies depending on the tilt angle of the AUX-port-variable-switch.


- Right-hand control  
The flow rate of the hydraulic oil through the right-hand port (male) varies.
- Left-hand control  
The flow rate through the left-hand port (female) varies.

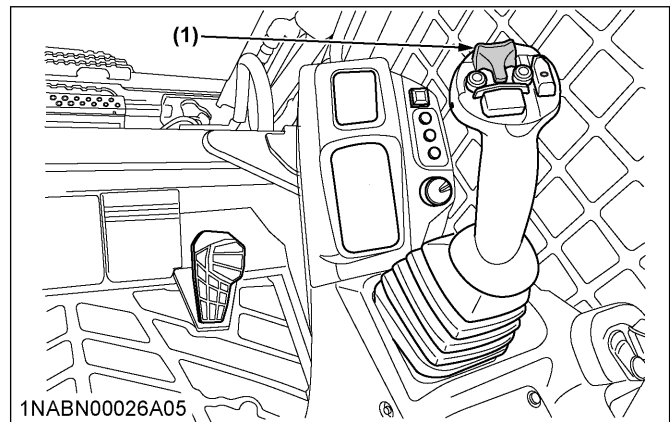

(1) AUX port variable switch

### 13. AUX hold switch


By pressing the right or left AUX-hold-switch, the flow rate of the hydraulic oil is maximized.

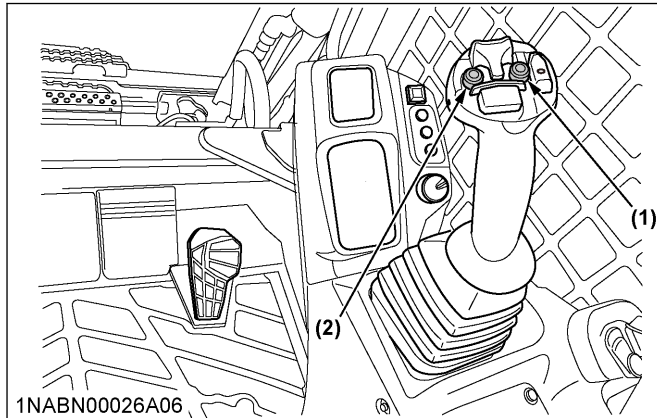

(1) AUX hold switch (Right) (2) AUX hold switch (Left)

### 14. AUX electrical control switch (option)

With the AUX port switch unlocked, the AUX-electrical-control-switch serves to feed electrical power to attachments.

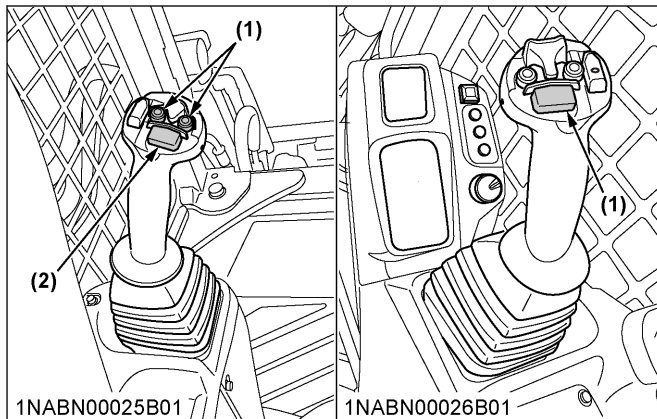

(1) AUX electrical control switch (2) AUX electrical control switch (Multi Function model only)

#### NOTE :

- Using the AUX-electrical-control-switch requires the 14-pin coupler (option).


### 15. AUX electrical mode change switch (option)

- By pressing the AUX-electrical-mode-change-switch, the AUX-electrical-mode-change-function will turn on.

The AUX-electrical-mode-change-indicator and a light on the AUX-electrical-mode-change-switch will light up.

- By pressing the AUX-electrical-mode-switch again, the AUX-electrical-mode-change-function will turn off.

The AUX-electrical-mode-change-indicator and the light on the AUX-electrical-mode-change-switch will go off.

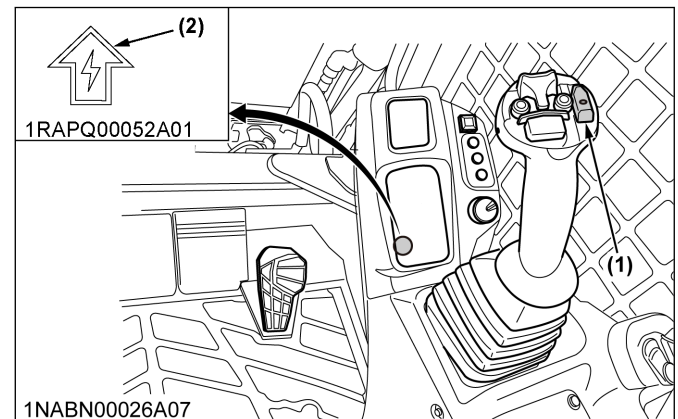

(1) AUX electrical mode change switch (Multi Function model only) (2) AUX electrical mode change indicator

#### NOTE :

- Using the AUX-electrical-mode-change-switch require the 14-pin coupler (option).



### 16. Hydraulic quick switch [Hydraulic quick-hitch model only]


The hydraulic-quick-switch is used to attach and detach an attachment by activating the hydraulic quick-hitch.

#### ⚠ WARNING

To avoid personal injury or death:

- Make sure to close the cover when not activating the hydraulic quick-hitch.


- By moving the hydraulic-quick-switch to the  (lock) mark, the hydraulic quick-hitch get locked. After cylinder is moved to locked position, always check to be sure both pins are engaged to the attachment.
- By moving the hydraulic-quick-switch to the  (unlock) marked position, the hydraulic quick-hitch get unlocked. After the hydraulic quick-hitch is unlocked, detach the bucket, for example.

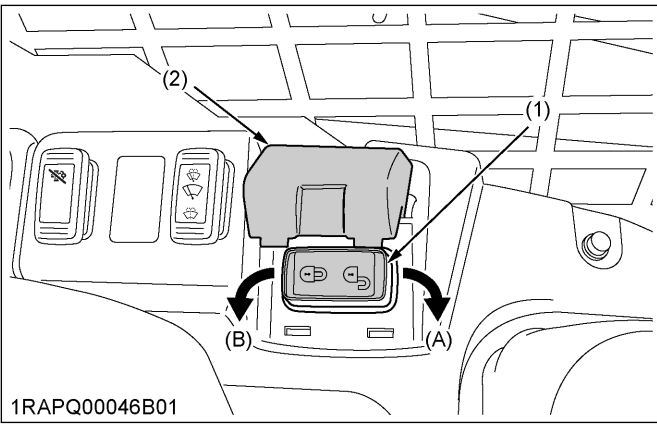

(1) Hydraulic quick-hitch switch (A) Unlock position  
 (2) Cover (B) Lock position

### 17. Display selector switch


This display selector switch is used to select the display indication.  
 Change the 2 or 3-mode display according to your jobs.

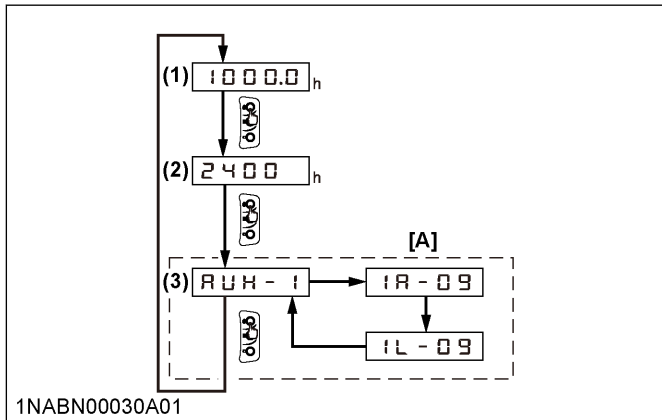


(1) Hour meter [A] High-flow model and the AUX function is activated.  
 (2) Tachometer  
 (3) Action mode selecting or maximum flow volume setting

# PEDAL AND LEVERS

## CONTROL PEDALS, LEVERS, AND ELECTRICAL OUTLET

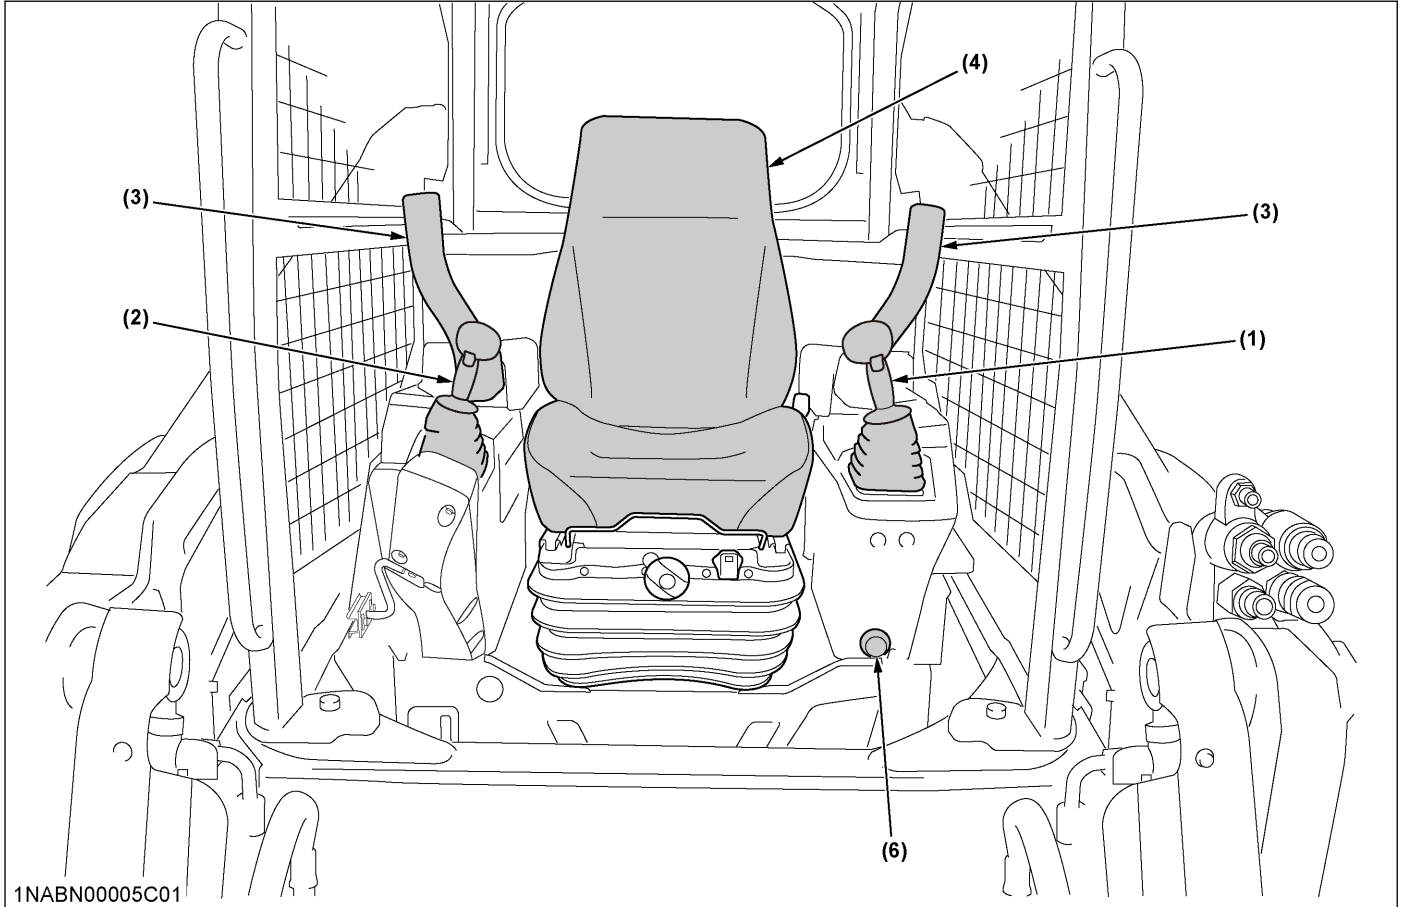

1NABN0005C01

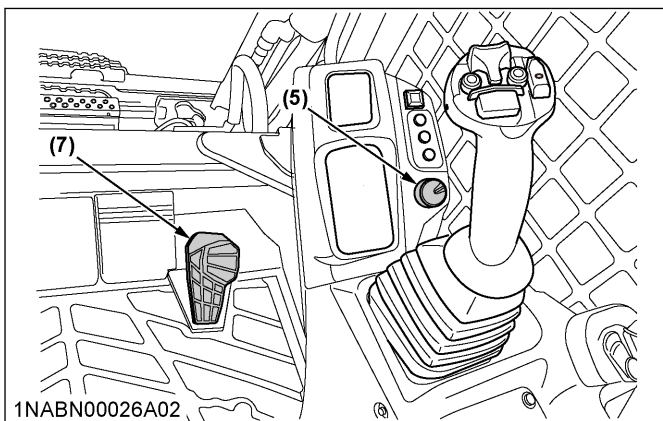

1NABN00026A02

- (1) Left control (traveling) lever
- (2) Right control (front operating) lever
- (3) Armrest
- (4) Seat
- (5) Engine speed control dial
- (6) Electrical outlet
- (7) Accelerator pedal

# SAFETY FEATURES

## WARNING


To avoid personal injury or death:

- Place the machine on a firm, flat and level surface
- Before starting the engine, make sure that no one is near the machine.

## HOW TO USE THE EMERGENCY EXIT

If you should become trapped in the cab, you can remove the rear window to get out.

- The rear window in the machine serves as the primary alternate exit.
  - You will need to remove the rear window in order to use the primary alternate exit.
1. Pull on the ring at the top of the rear window in order to remove the rear window.  
The ring will remove the seal that holds the rear window in place.
  2. When the seal is taken out, remove the rear window and exit the cab.

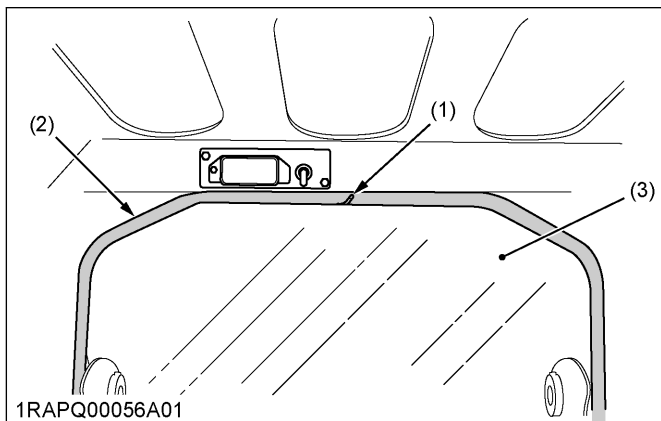

(1) Ring  
(2) Seal

(3) Window

## OPC FUNCTION

OPC function is used to detect the operator sitting on the seat and to signal the hydraulic system that it can be locked and unlocked.

When the operator sits on the operator's seat and lower the armrests, the hydraulic system can be unlocked.

## HOW TO USE AND CHECK THE FUNCTION OF THE ARMREST

1. Sit in the operator's seat.
2. Fasten the seat belt.
3. Start the engine.
4. Push down both armrests.
5. Push on the hydraulic-unlock-switch, and make sure that the hydraulic-lock-indicator on the instrument panel goes out.
6. Move the right-control-lever (front-operating-lever) slowly, and make sure that the lift arms and bucket move slowly.
7. Raise the left armrest, and make sure that the hydraulic-lock-indicator on the instrument panel lights up.
8. Move the right-control-lever (front-operating-lever), and make sure that the lift arms and bucket do not operate.
9. Push down the left armrest.
10. Push on the hydraulic-unlock-switch, and make sure that the hydraulic-lock-indicator on the instrument panel goes out.
11. Raise the right armrest, and make sure that the hydraulic-lock-indicator on the instrument panel lights up.
12. Move the right-control-lever (front-operating-lever), and make sure that the lift arms and bucket do not operate.

When checking the function of the armrest, also check the OPC function.

(See HOW TO USE AND CHECK THE SEAT FUNCTION on page 42)

## HOW TO USE AND CHECK THE SEAT FUNCTION

1. Sit in the operator's seat.
2. Start the engine.
3. Push down both the armrests.
4. Push on the hydraulic-unlock-switch, and make sure that the hydraulic-lock-indicator on the instrument panel goes out.

## HOW TO CHECK THE REVERSE ALARM


1. Start the engine.



2. If clear, engage hydraulics and start to reverse.  
Alarms should sound. If not, check by your KUBOTA dealer.

## HOW TO USE THE FORCED LIFT ARMS LOWERING DEVICE

1. Start the engine.
2. Move the right-control-lever (front-operating-lever) until the lift arms come up to your eye level.
3. Stop the engine.
4. Slide the operator's seat all the way backward.
5. Remove the rubber cap.
6. Push the lever to make sure that the lift arms descend.
7. Release the lever to make sure that the lift arms stop descending.
8. Place the rubber cap back to its original position.

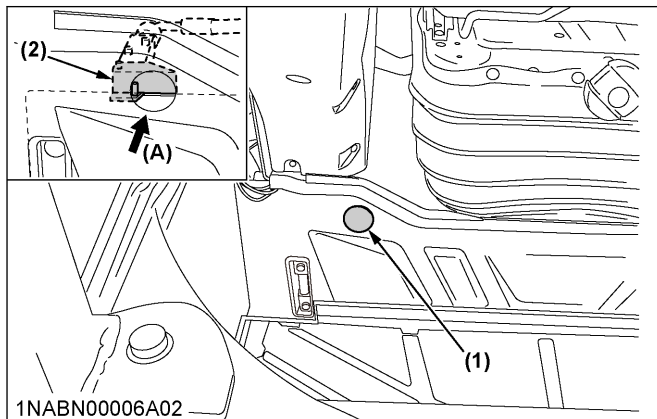

(1) Rubber cap  
(2) Lever

(A) Push

# EXHAUST AFTERTREATMENT DEVICE

## CATALYST-CONTAINING DIESEL-PARTICULATE-FILTER (DPF) DEVICE

The catalyst-containing-DPF-device has the following two functions.

- Reducing certain emissions, like hydrocarbon (HC) and carbon monoxide (CO), to harmless carbon dioxide (CO<sub>2</sub>) and water.
- Trapping and eliminating PM (particulate-matter) through the filter at the same time.

To meet EPA regulations, it is necessary to service the DPF, such as renewing or cleaning the filter at regular intervals.

Be sure to carefully read the following items before using the machine. The machine owner and operator are responsible for using the catalyst-containing-DPF-device correctly to protect the environment and to prevent damage to the DPF, and comply with federal and state regulations.

### Use instructions

#### IMPORTANT :

- **If you fail to use the specified fuel or engine oil, the cleaning interval of the DPF cannot be secured and the DPF will clog after a shorter operating time than expected.**

The cleaning interval of the DPF	3000 hours
----------------------------------	------------

#### • Fuel

Be sure to use the following fuel.

Use of other diesel fuel other than the following fuel may adversely affect the engine and the emission-control-device and may damage them.

Fuel	ULTRA LOW SULFUR FUEL (S15)
------	-----------------------------

#### • Engine oil

Use the following engine oil.

Engine oil	DPF-compatible engine oil (CJ-4 or CK-4)
------------	--

Any unspecified oil may damage the DPF earlier than expected and lower fuel economy.

### Prohibited unnecessary idling

Generally speaking, the lower the engine rpm is, the lower the exhaust gas temperature is. It is more difficult to burn PM (particulate-matter) in the DPF at low rpm. With this in mind, do not keep the engine idling unnecessarily.

If you leave the machine with the engine running, to protect the DPF, the engine may automatically stop.

### DPF regeneration system

On the Kubota CTL, the ECU prompts the DPF-regeneration cycle. When starting the engine, auto-regeneration-mode is set by default. When all the conditions are met, regeneration automatically starts, unless the inhibit switch is engaged.


## REGENERATION OF DIESEL-PARTICULATE-FILTER (DPF)

### WARNING

To avoid personal injury or death:

- When the DPF is in the regenerating mode, the exhaust gas and the DPF muffler become hot. During the DPF regeneration, take into account that the DPF muffler will be very hot and keep the machine away from other people, animals, plants, and flammable material. Also keep the area near the DPF muffler clean and away from flammable material.
- Do not leave the machine during DPF regeneration.

Indicator symbol and buzzer indicate the DPF level of PM during operation of the machine.

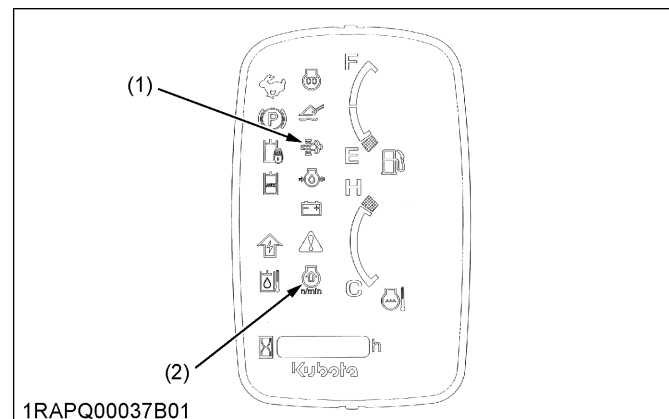

1RAPQ00037B01

(1) DPF regeneration indicator (2) Engine rev up indicator

### NOTE :

- During DPF regeneration cycle, keep the surrounding environment in mind. Do not allow the ambient temperature to rise excessively due to heat from the DPF regeneration. If the ambient temperature rises excessively, activate the inhibit switch.

- The DPF regeneration cycle only starts in the following conditions. If any of the conditions are not met, the DPF regeneration cycle may be interrupted.

Coolant temperature	above 65 °C
DPF temperature	above 250 °C
Engine rpm	above 1200 rpm

- The DPF regeneration usually takes about the following times.

DPF regeneration time	15 minutes to 20 minutes
-----------------------	--------------------------

The DPF regeneration time depends, however, on the outside air temperature, exhaust gas temperature and filter PM level.

- Do not interrupt the DPF regeneration cycle unnecessarily.

## SCR (SELECTIVE CATALYTIC REDUCTION) SYSTEM

### WARNING


To avoid personal injury or death:

- Do not allow the fluid that comes out of the muffler to contact skin. Wash or flush immediately with large quantities of water after contact with fluid.

### IMPORTANT :

- Modifying the SCR system is a violation of local laws and regulations. Do not modify the SCR system for any reason, as doing so could result in monetary sanctions and fines.
- Do not run the engine when the DEF (AdBlue) tank is empty.
- If the remaining amount of DEF (AdBlue) is insufficient, the quality is poor, or if an abnormality occurs in the SCR system, the auto regeneration and manual (parking) regeneration functions of the Diesel Particulate Filter (DPF) muffler may not operate properly.
- The SCR system is intended to reduce or eliminate nitrogen oxides (NOx) from diesel exhaust gas. The system uses Diesel Exhaust Fluid (DEF) as a reducing agent and hydrolyzes it with the heat of exhaust gas to produce ammonia (NH<sub>3</sub>). The generated ammonia reduces NOx and decomposes them into nitrogen and water for emissions reduction. Due to this NOx reduction from the exhaust gas, the odor of the exhaust gas discharged from the SCR device differs from that of conventional diesel engines.
- Diesel Exhaust Fluid (DEF) is sold under many brand names, with one of the more common ones being AdBlue. In the text, DEF is described as DEF (AdBlue).
- DEF (AdBlue) freezes below -11 °C (12 °F), but this does not affect the start-up of the engine. The frozen DEF (AdBlue) is thawed by the heat of the engine coolant while the engine is running.

### Structural drawing

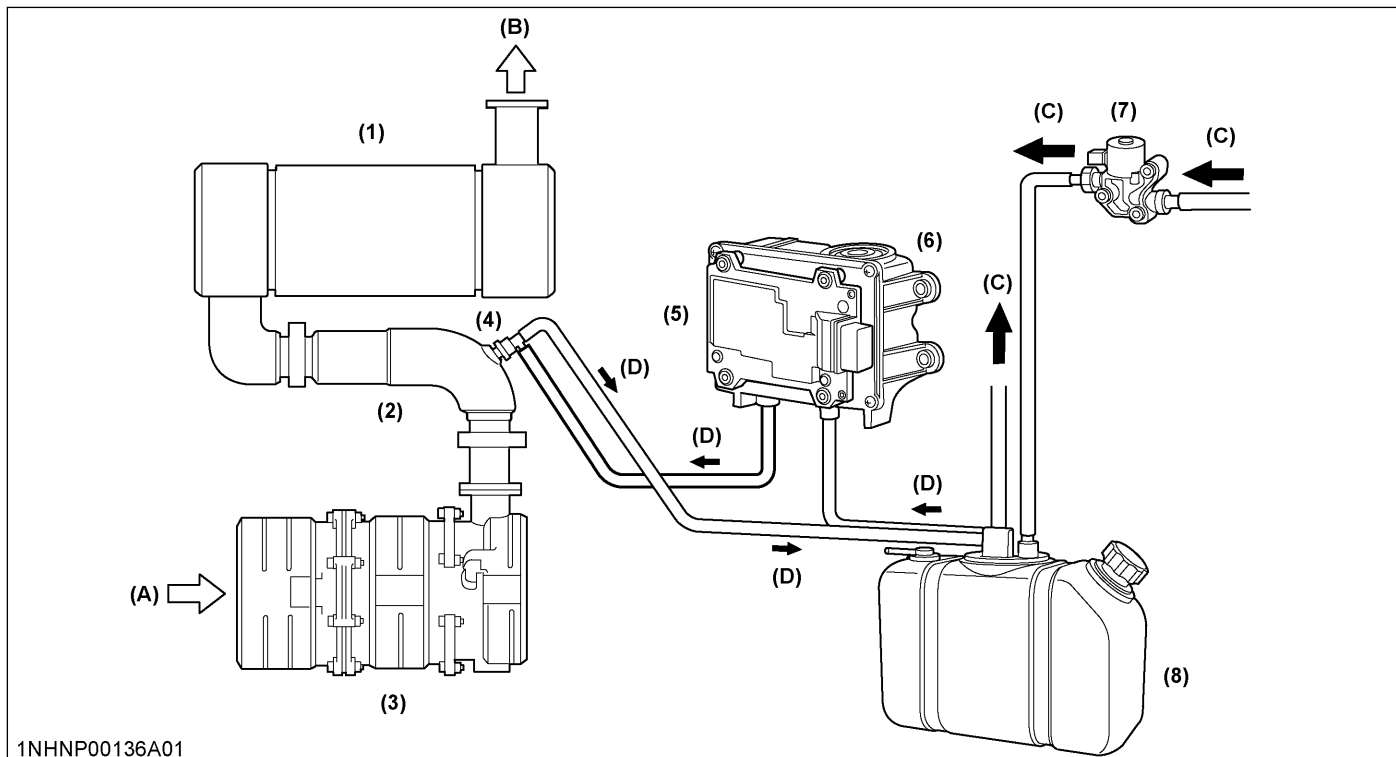

- |  |                                       |                                     |
|--|---------------------------------------|-------------------------------------|
| (1) Selective catalytic reduction (SCR) device | (5) Aftertreatment control unit (ACU) | (A) Exhaust gas before purification |
| (2) Mixing pipe                                | (6) DEF (AdBlue) pump                 | (B) Exhaust gas after purification  |
| (3) Diesel particulate filter (DPF)            | (7) Coolant valve                     | (C) Coolant flow                    |
| (4) DEF (AdBlue) injector                      | (8) DEF (AdBlue) tank                 | (D) DEF (AdBlue) flow               |

## 1. DEF (AdBlue)

- The DEF (AdBlue), used as a reducing agent for the SCR system, is a 32.5% aqueous urea solution.
- No qualification is needed for handling DEF (AdBlue). In addition, DEF (AdBlue) is not designated as a hazardous material.
- Use DEF (AdBlue) that conforms to ISO 22241.

### NOTE :

- **In North America, the high-grade NO<sub>x</sub> reducing agent (aqueous urea solution) is sold under the name of DEF (Diesel Exhaust Fluid). In Europe and in Japan, aqueous urea solution is sold under the brand name AdBlue.**

## 2. Handling DEF (AdBlue)



### CAUTION

To avoid personal injury, note the following when handling DEF (AdBlue):

- If DEF (AdBlue) gets into your eyes, immediately rinse your eyes with a large amount of water for at least 15 minutes and consult a doctor.
- Do not swallow DEF (AdBlue). If you have accidentally swallowed DEF (AdBlue), seek medical attention immediately.
- If DEF (AdBlue) gets on your skin, rinse immediately with water. In rare cases, DEF (AdBlue) may irritate the skin.
- If DEF (AdBlue) gets on your clothes or shoes, wash it off immediately. Simply wiping off or leaving DEF (AdBlue) on clothes or shoes will leave a white residue.

For more details, obtain and read the Safety Data Sheet (SDS) from the DEF (AdBlue) supplier.

If you spill DEF (AdBlue), immediately rinse with clean water. If left untouched, DEF (AdBlue) may rust metal parts or corrode painted surfaces. Also, resin and rubber parts may be deformed.

## 3. Quality of DEF (AdBlue)

### IMPORTANT :

- If the DEF (AdBlue) emits a strong ammonia odor, the quality of the fluid may have deteriorated. To check the quality of the DEF (AdBlue), check the odor of the DEF (AdBlue) in the DEF (AdBlue) tank once every 3 months.
- If the DEF (AdBlue) in the DEF (AdBlue) tank emits a strong ammonia odor, drain all DEF (AdBlue) from the DEF (AdBlue) tank into a container.  
Details regarding how to drain the DEF (AdBlue) can be found in a different section.

(See Draining DEF (AdBlue) on page 48)

After draining the DEF (AdBlue), flush the inside of the DEF (AdBlue) tank with distilled water, then refill the tank with new or high-quality DEF (AdBlue).

- **When you do not use the machine for more than 3 months, drain all DEF (AdBlue) from the DEF (AdBlue) tank.**
- Purchasing DEF (AdBlue) from a KUBOTA Dealer is recommended. The product is also available at gas stations, truck stops and specialty shops. Be sure to use an ISO 22241 compliant product. Using non-compliant products may lead to engine failure.
- The appropriate environment for storing DEF (AdBlue) is between -5 °C to 30 °C (23 °F to 86 °F). See the following table for more information about the storage life of DEF (AdBlue). Avoid storing in environments that exceed 30 °C (86 °F) to avoid shortening the storage life of the DEF (AdBlue). Details regarding the storage of DEF (AdBlue) can be found in a different section.  
(See Storing purchased DEF (AdBlue) on page 49)

Ambient temperature	Storage life
10 °C (50 °F) or below	36 months
25 °C (77 °F) or below	18 months
30 °C (86 °F) or below	12 months
35 °C (95 °F) or below	6 months
40 °C (104 °F) or below	3 months


- Do not dilute the DEF (AdBlue) fluid.
- DEF (AdBlue) of deteriorated quality may cause a drop in engine output or an engine malfunction.

### NOTE :

- **If distilled water is not available for flushing the inside of the DEF tank, rinse with clean water first, then rinse thoroughly with DEF (AdBlue) again. Afterward, replenish with new or high-quality DEF (AdBlue).**
- **Be sure to turn the starter switch to [STOP] position when replacing the DEF (AdBlue).**

## 4. DEF (AdBlue) level gauge

With the starter key at the [RUN] position, the DEF (AdBlue) remaining in the DEF (AdBlue) tank is indicated in the indicator.

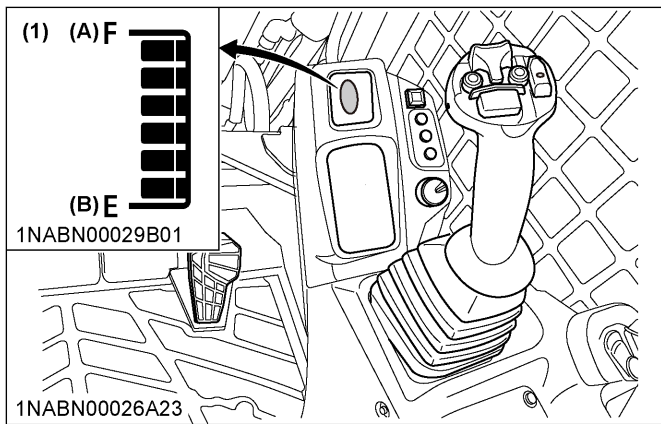


(1) DEF (AdBlue) level gauge (A) FULL  
(B) EMPTY

## 5. Warning display when the remaining amount of DEF (AdBlue) is low

This machine controls the engine output according to the remaining amount of DEF (AdBlue) to comply with emission regulations.

After starting the engine, check the remaining amount of DEF (AdBlue) with the DEF (AdBlue) gauge located on the instrument panel.

If the DEF (AdBlue) runs low, the low-level warning icon turns on and the buzzer sounds. If you continue running the machine in its current state, the engine output will be limited by about 50%. If operation is continued, the engine will be limited to idling.

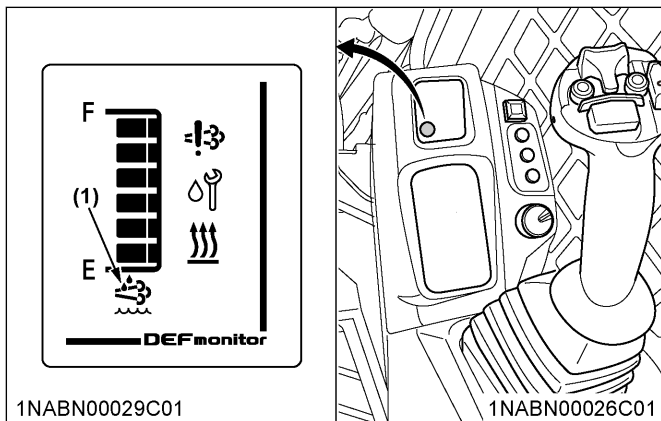

(1) Remaining DEF (AdBlue) warning lamp


## 6. Adding DEF (AdBlue)

### IMPORTANT :

- The DEF (AdBlue) tank cap is blue. Do not add DEF (AdBlue) to the fuel tank. Also, do not add diesel fuel to the DEF (AdBlue) tank.
- If anything other than DEF (AdBlue) is mixed into the DEF (AdBlue) tank and the engine is started, the SCR system may fail. Do not start

the engine if the DEF (AdBlue) is contaminated with diesel fuel. Consult your KUBOTA Dealer immediately.

- The warranty does not cover failures caused by adding or mixing anything other than DEF (AdBlue) into the DEF (AdBlue) tank. If that occurs, all repair costs will be the customer's responsibility.

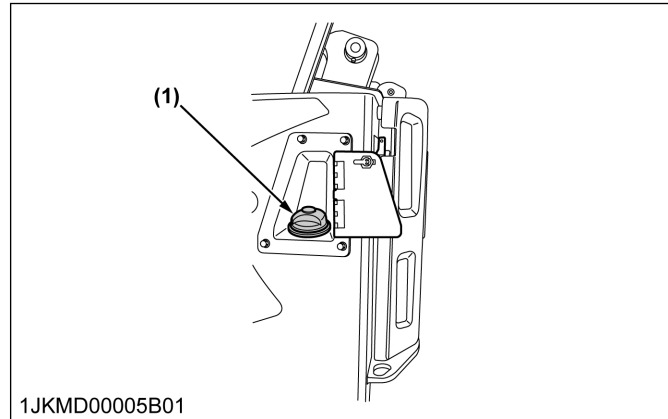

(1) DEF (AdBlue) tank cap (Blue tank cap)


- Before adding DEF (AdBlue) to the DEF (AdBlue) tank, clean the area around the nozzle and supply port to prevent foreign matter such as soil and dust from entering.
- In order to maintain the performance of the SCR system, it is recommended to refill the DEF (AdBlue) tank with DEF (AdBlue) each time the fuel tank is refueled.
- Be sure to turn the key switch to **[STOP]** position before adding DEF (AdBlue). After stopping the engine, the SCR system continues to operate for up to about 25 minutes. Do not add DEF (AdBlue) before the SCR system stops. Otherwise, DEF (AdBlue) may overflow from the breather hose of the DEF (AdBlue) tank.
- If DEF (AdBlue) is stored in a reusable container, periodically clean and refill it. If the container is dirty, wash with distilled water. If distilled water is not available for washing the container, rinse with clean water first, then rinse again with DEF (AdBlue) before refilling.

## 7. Draining DEF (AdBlue)


### IMPORTANT :

- Do not run the engine when the DEF (AdBlue) tank is empty.
- Remove the frame cover and the drain plug shown in the following illustration, then drain the DEF (AdBlue) into a container.

- Do not use a power tool when reinstalling the drain plug. Overtightening the drain plug may cause damage.
- Make sure to keep the rubber O-ring of the drain plug clean of oil.

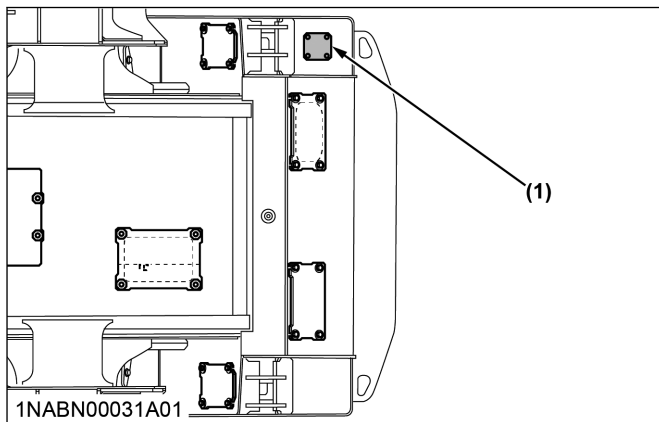

(1) Frame cover

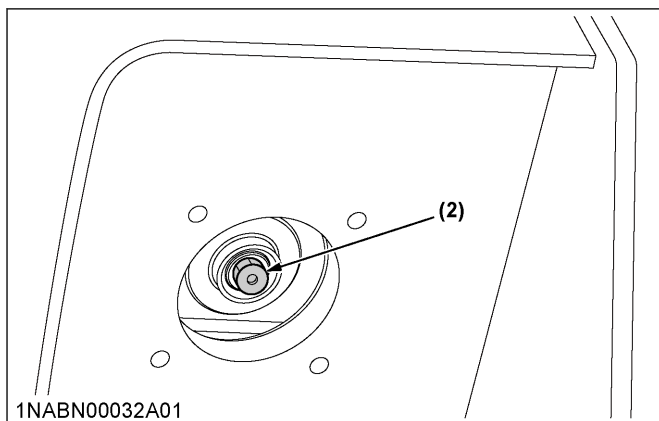

(2) Drain plug

Drain plug tightening torque	4.0 N·m to 6.0 N·m (35.4 lbf·in to 53.1 lbf·in.)
------------------------------	---

- Be sure to turn the key switch to **[STOP]** position when draining DEF (AdBlue).
- When draining and refilling the DEF (AdBlue) in the DEF (AdBlue) tank, if the refilled amount is less than the drained amount, an SCR system error (“E:9518”) could be displayed on the instrument panel. If the error/warning is displayed after running the engine for more than 30 minutes, consult your local Kubota dealer. In order to avoid the aforementioned error, it is recommended that you fully refill the DEF (AdBlue) tank every time.
- For the disposal of drained DEF (AdBlue), read the following information.  
(See Disposing DEF (AdBlue) on page 50)

## 8. Storing purchased DEF (AdBlue)

- Note the following when storing DEF (AdBlue):
  - Close the container firmly.

- Avoid direct sunlight.
- Store in a well-ventilated room.
- Store in a place with little temperature change.
- Do not use the following DEF (AdBlue) even if it is still unused. The DEF (AdBlue) may be deteriorated, which may cause SCR system failure.
  - When the storage period is unknown.
  - When the storage environment is unknown, especially in a high-temperature environment.
  - When DEF (AdBlue) has a strong ammonia odor.
- When storing and carrying DEF (AdBlue), use the original container. Otherwise, prepare a dedicated container. For the dedicated container, use a clean polyethylene resin tank (PE) or a stainless steel container free of foreign matter such as water and dust.
- Keep containers used for storing and refilling DEF (AdBlue) free from dirt and dust. Use distilled water to clean the containers. If distilled water is not available for cleaning the containers, rinse with clean water first, then rinse again thoroughly with DEF (AdBlue) before refilling.
- The appropriate environment for storing DEF (AdBlue) is between -5 °C to 30 °C (23 °F to 86 °F). See the following table for more information about the storage life of DEF (AdBlue). To prevent the shortening of the DEF (AdBlue) storage life, avoid storing the DEF (AdBlue) in environments that exceed 30 °C (86 °F).

Ambient temperature	Storage life
10 °C (50 °F) or below	36 months
25 °C (77 °F) or below	18 months
30 °C (86 °F) or below	12 months
35 °C (95 °F) or below	6 months
40 °C (104 °F) or below	3 months

### NOTE :

- The aforementioned storage life is only a guide. Depending on how DEF (AdBlue) is stored, the storage life may be shorter than indicated.
- DEF (AdBlue) freezes when the temperature drops below -11 °C (12 °F). The quality of DEF (AdBlue) will not be affected even if frozen. Thaw the DEF (AdBlue) before use.

## 9. Storing DEF (AdBlue) in the DEF (AdBlue) tank

### IMPORTANT :

- If the DEF (AdBlue) emits a strong ammonia odor, the quality of the fluid may have deteriorated. To check the quality of the DEF

(AdBlue), check the odor of the DEF (AdBlue) in the DEF (AdBlue) tank once every 3 months.

- If the DEF (AdBlue) in the DEF (AdBlue) tank emits a strong ammonia odor, drain all DEF (AdBlue) from the DEF (AdBlue) tank into a container.

Details regarding how to drain the DEF (AdBlue) can be found in a different section.

(See Draining DEF (AdBlue) on page 48)

After draining the DEF (AdBlue), flush the inside of the DEF (AdBlue) tank with distilled water. Then refill the DEF (AdBlue) tank with new or high-quality DEF (AdBlue).

- If you do not use the machine for more than 3 months, drain all DEF (AdBlue) from the DEF (AdBlue) tank. When using the machine after 3 months of inactivity, fully refill the DEF (AdBlue) tank with new or high quality DEF (AdBlue).

#### NOTE :

- DEF (AdBlue) of deteriorated quality may cause a drop in engine output or an engine malfunction.
- If distilled water is not available for flushing the inside of the DEF (AdBlue) tank, rinse with clean water first, then rinse thoroughly with DEF (AdBlue) again. Afterward, replenish with new or high-quality DEF (AdBlue).
- Be sure to turn the starter switch to [STOP] position when replacing the DEF (AdBlue).
- When draining and refilling the DEF (AdBlue) in the DEF (AdBlue) tank, if the refilled amount is less than the drained amount, an SCR system error is displayed on the instrument panel, but this is not a malfunction.  
(See Draining DEF (AdBlue) on page 48)

## 10. Disposing DEF (AdBlue)

Although not a hazardous substance, dispose the used DEF (AdBlue) properly to avoid environmental pollution. For disposal methods, consult your supplier or an industrial waste disposal contractor.

## 11. Handling precautions after stopping the engine

After stopping the engine, the SCR system automatically operates for up to about 25 minutes and returns the DEF (AdBlue) in the piping to the DEF tank to prevent freezing and clogging.

The SCR system may generate operating noise after the engine has stopped, but this is not a malfunction.

Note the following precautions after stopping the engine:

- Do not remove the battery terminal until the SCR system stops. This is to prevent damage to the system device.
- Do not refill with DEF (AdBlue) before the SCR system stops. Otherwise, DEF (AdBlue) may overflow from the breather hose of the DEF (AdBlue) tank.

## 12. Precautions when using in cold regions

- DEF (AdBlue) freezes below -11 °C (12 °F), but this does not affect the start-up of the engine.
- The DEF (AdBlue) is automatically thawed while the engine is running.
- While thawing, output may be limited to protect the SCR system.
- However, in weather conditions of under -30 °C (22 °F), the DEF (AdBlue) cannot be completely thawed and therefore, an error/warning code (“E:9517”) appears on the instrument panel.
- If the error/warning code (“E:9517”) appears on the screen, stop the engine and restart it after 10 seconds. After restarting the engine, the error/warning code (“E:9517”) will disappear and the thawing of the DEF (AdBlue) will resume.
- If the error/warning code (“E:9517”) remains on the screen even after restarting the engine several times, consult your local KUBOTA Dealer.

## 13. Maintenance of SCR system related parts

Regularly check, clean, and replace the SCR system related parts.


Details regarding maintenance can be found in a different section.

(See MAINTENANCE on page 88)


## 14. SCR system warning lamp

This lamp serves to indicate that the SCR system is having troubles. If this lamp lights up, check the error code onscreen and follow the instructions given in LIST OF THE ERROR CODE NUMBERS on page 131.



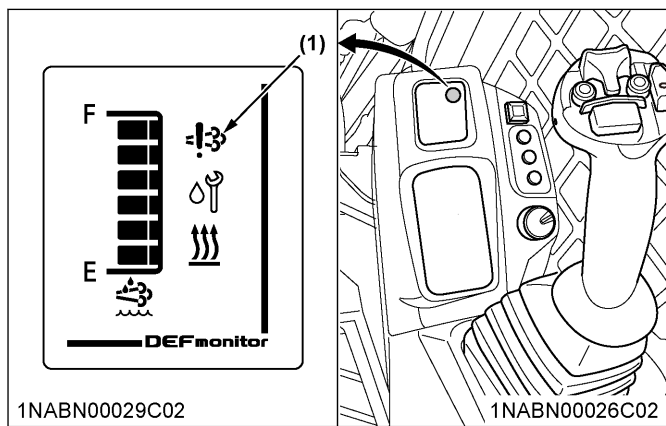


(1) SCR system warning lamp

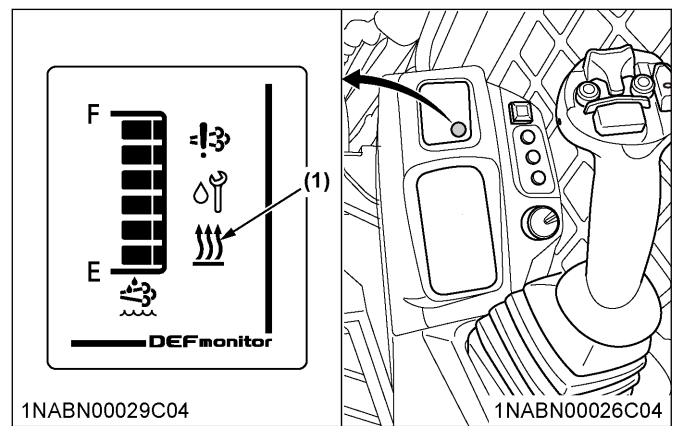

(1) Thawing DEF (AdBlue) lamp

## 15. DEF (AdBlue) quality warning lamp

This lamp serves to indicate that the quality of DEF (AdBlue) is not as specified. If this lamp lights up, check the error code onscreen and follow the instructions given in LIST OF THE ERROR CODE NUMBERS on page 131.

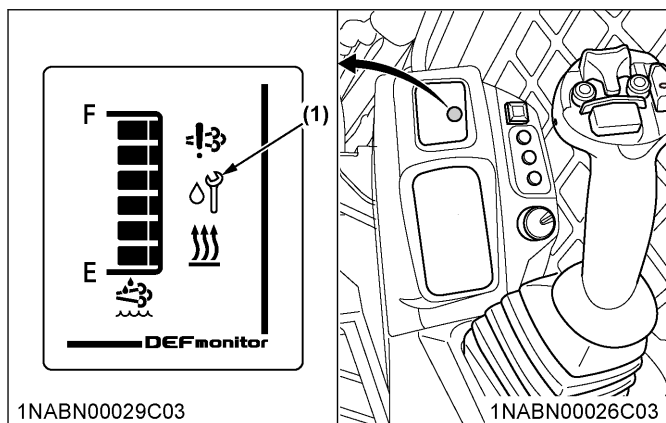

(1) DEF (AdBlue) quality warning lamp

## 16. Thawing DEF (AdBlue) lamp

This lamp serves to indicate that frozen DEF (AdBlue) is being thawed. DEF (AdBlue) freezes below  $-11^{\circ}\text{C}$  ( $12^{\circ}\text{F}$ ), but this does not affect the start-up of the engine. The DEF (AdBlue) is automatically thawed while the engine is running.

While thawing, output may be limited to protect the SCR system.

(See Precautions when using in cold regions on page 50)

# AIR CONDITIONER

## ADJUSTING THE AIR FLOW OF THE AIR CONDITIONER


**IMPORTANT :**

- Do not allow water to enter the fresh-air-inlet when washing the machine.


**NOTE :**

- The rear-air-outlet-port is for cool air only. No warm air is blown out from the rear-air-outlet-port.
- When heating, do not keep the inlet-selector-knob at the inside-air-recirculation position for a long time. The windshield can easily fog.
- To raise the air flow rate from the rear-air-outlet-port, set the inlet-selector-knob to the inside-air-recirculation position.
- While working in a dusty condition, keep the inlet-selector-knob at the fresh-air-inlet position. Keeping the inlet-selector-knob at the fresh-air-inlet position increases the pressure in the cab, which helps prevent dust from coming into the cab.
- Adjust the six air-outlet-ports to obtain the desired air flow.  
The air flow in the cab and the fresh air flow into the cab flow is shown in the following figure.

**Front air outlet port**

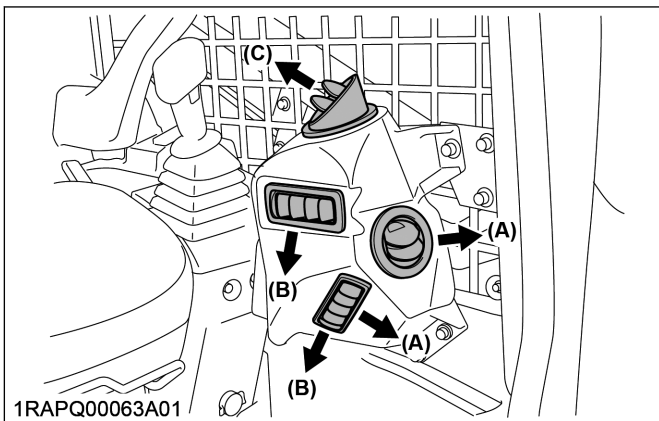



**Rear air outlet port (for cool air only)**

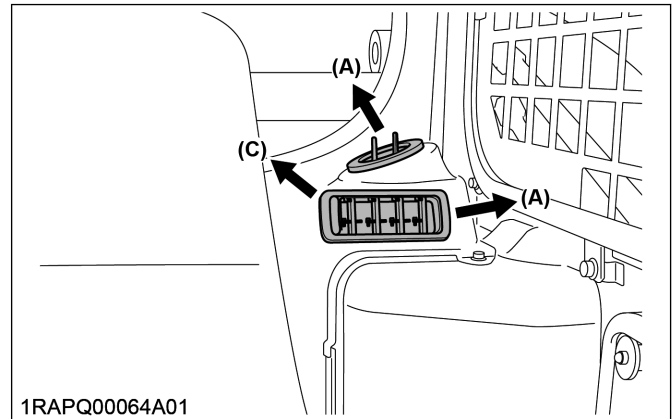

- (A) Windshield
- (B) Foot area

(C) Chest area

- Position the inlet-selector-knob to the desired position.

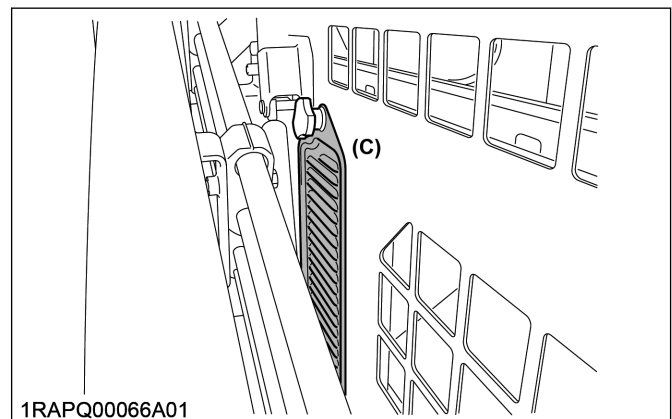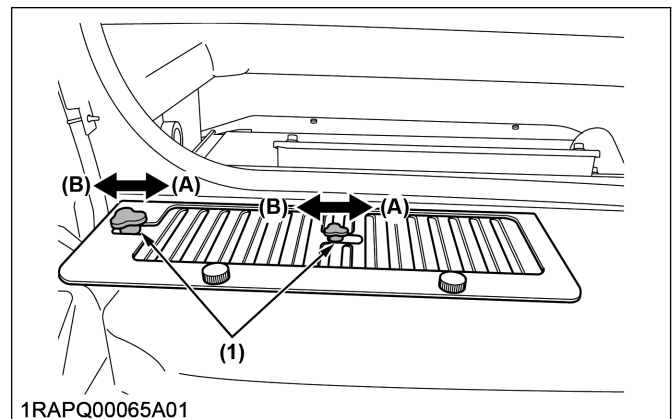

(1) Inlet selector knob

(A) Fresh air inlet position

(B) Inside air recirculation position

(C) Fresh air inlet

# AIR CONTROL VENT

## CAUTION


To avoid personal injury:

- Replace the hoses of the air-conditioner every two years.
- Inspect the air control vent daily. Have the machine repaired immediately if any of the following flaws are discovered. The following flaws may cause burns or injury, and they may also cause engine failure and serious damage.
  - Scratches, cracks, or swelling in the hoses of the air-conditioner.
  - Water leaks at joints or connecting points.
  - Missing or damaged the hoses-protective sleeve or grommet of the air-conditioner.
  - Loose mounting bolt and damaged bracket.
- Do not touch the hoses of the air-conditioner or the heater with your hand. You may get burned.
- If the window fails to defrost in extreme conditions or becomes cloudy when dehumidifying the cab, remove moisture with soft cloth.
- Never block all of the air outlets because the system malfunction may occur.


### Air outlet

You can adjust the air-outlet-ports as required independently.


To defrost the windshield, set the inlet-selector-knob to the fresh-air-inlet position and rotate the air-outlet-ports toward the windshield.

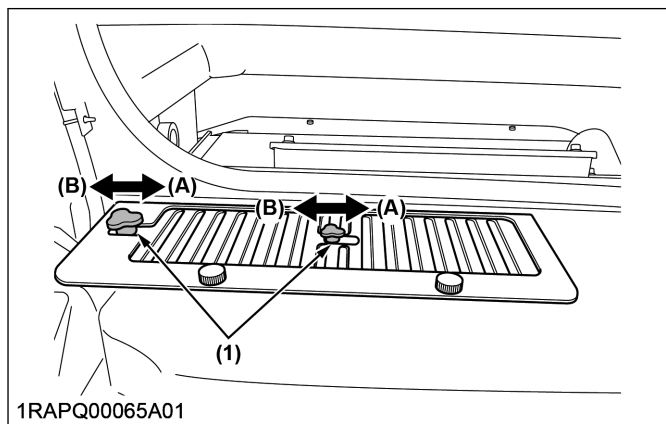

### Front air outlet port

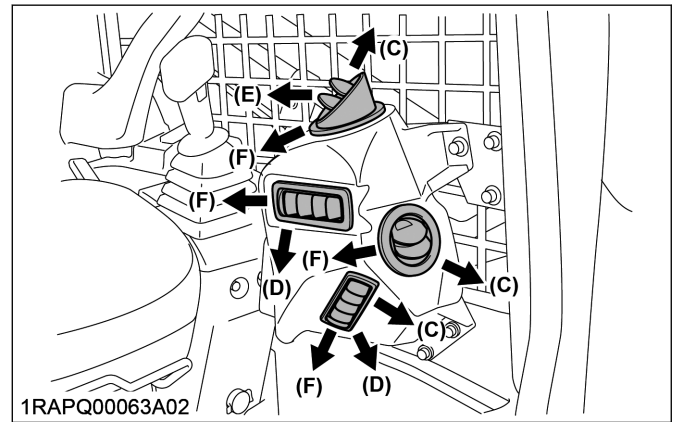


### Front air outlet port

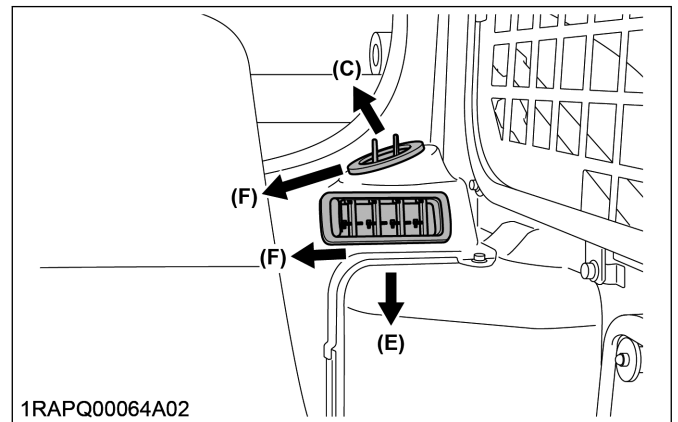

(1) Inlet selector knob

- (A) Fresh air inlet position
- (B) Inside air recirculation position
- (C) Windshield
- (D) Foot area
- (E) Chest area
- (F) Closed

## HOW TO USE THE CONTROL PANEL

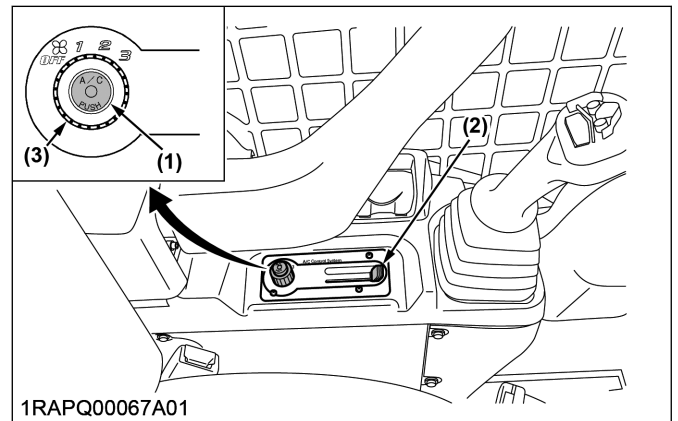

(1) Air-conditioner switch with indicator light

(2) Temperature control lever  
(3) Blower switch

**Air-conditioner switch and indicator light**

1. Push the air-conditioner-switch to activate the air-conditioner.  
An indicator light will light up when the air-conditioner-switch is set to on.
2. Push the air-conditioner-switch again to turn the air-conditioner off, in which case the indicator light will go off.

**NOTE :**

- **The air-conditioner is operable only during engine operation.**

**Temperature control lever**


1. Set the temperature-control-lever at the desired position to obtain the desired air temperature.
  - Move the temperature-control-lever to the right to obtain cooler air.
  - Move the temperature-control-lever to the left to obtain warmer air.

**Blower switch**

The air flow (fan speed) equips three levels. At the [3] position, you can obtain the largest air flow.

1. Set the blower switch at the desired position to obtain the desired air flow (fan speed).

## OPERATING THE CONTROL PANEL

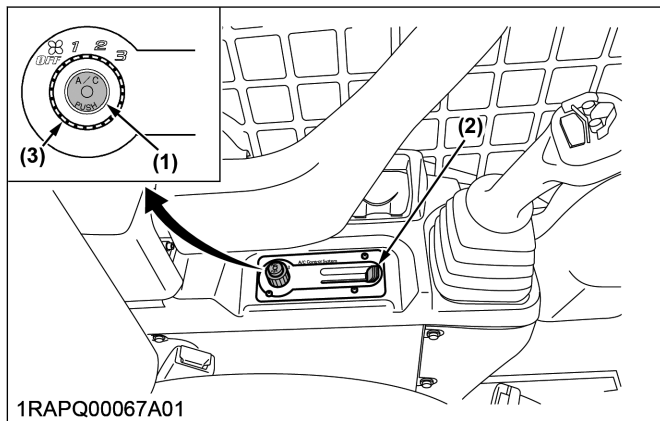

- (1) Air-conditioner switch with indicator light      (2) Temperature control lever  
(3) Blower switch

**Heating air**

1. Adjust the blower switch [1], [2], and [3] and the temperature-control-lever to achieve the desired temperature level.

**NOTE :**

- **In summer, when the heater is not used, keep the temperature-control-lever at the cool (rightmost) position. Otherwise, hot air will raise the temperature in the cab.**

**Dehumidifying-heating**

1. Press and turn on the air-conditioner-switch.

2. Turn the blower switch on [1], [2], or [3].
3. Adjust the temperature-control-lever to the cool (rightmost) or an intermediate position to achieve the desired temperature level.

**NOTE :**

- **Be sure to close the door while the air-conditioner is on.**

**Cooling**

1. Press and turn on the air-conditioner-switch.
2. Turn the blower switch on [1], [2], or [3].
3. Adjust the temperature-control-lever to the cool (rightmost) or an intermediate position to achieve the desired temperature level.

**NOTE :**

- **Be sure to close the door while the air-conditioner is on.**

**Defrosting or demisting**

To defrost or demist the windshield, take the following steps.


1. Open the front-air-outlet and direct it to the windshield.
2. Set the blower switch to the [3] position and set the temperature-control-lever to [warm] (leftmost) position.

# OPERATION

## CAB TYPE MACHINE

### 1. Interior lamp

The interior-lamp-switch is operative even when the starter key is in the **[STOP]** position.

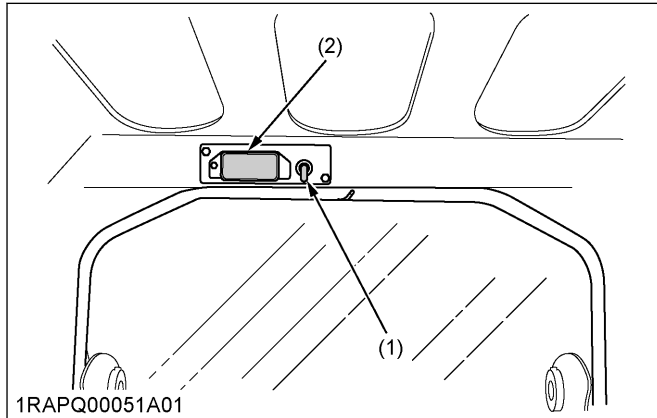

(1) Interior lamp switch (2) Interior lamp

### 2. How to use the wiper/washer switch [Closed cab model]

#### IMPORTANT :

- Do not activate the washer switch if the tank for the cleaning fluid is empty because the pump can be damaged.
- Do not activate the wiper switch if the window is dry. In this case, make sure that the cleaning fluid is applied to the pane before activating the wiper.
- In freezing conditions, make sure that the wiper blade is not frozen to the glass before switching-on of the wiper switch. The motor can be damaged if the wiper system is used under freezing conditions.

#### NOTE :


- Wiper and washer are operable only during engine operation.

#### Wiper switch

1. Move the wiper/washer switch to the wiper position when the starter key is in **[RUN]** position.  
The wiper starts.
2. Further push on the wiper/washer switch to the wiper position when spraying the cleaning fluid.  
The washer system will also be activated.

#### Washer switch

1. Move the wiper/washer switch to the washer position.  
The washer system sprays the cleaning fluid to the pane.

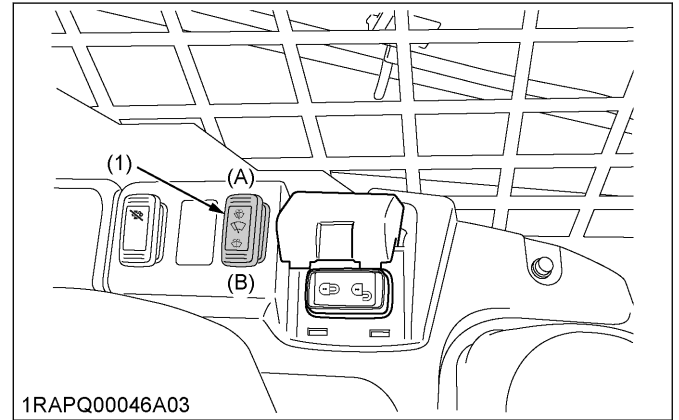


(1) Wiper/washer switch (A) Wiper (B) Washer

### 3. Opening and closing the cab door [Closed cab model]

#### WARNING

To avoid personal injury or death:


- Keep hands and feet away from the area between the cab door and the cab frame. Otherwise the risks of serious injuries by pinching or crushing to the operator increase.
- Other persons should stay away when opening the cab door.
- Do not use the lock lever at the bottom of the cab door from inside.
- Use caution and both hands to open/close the cab door to avoid contact with your head.

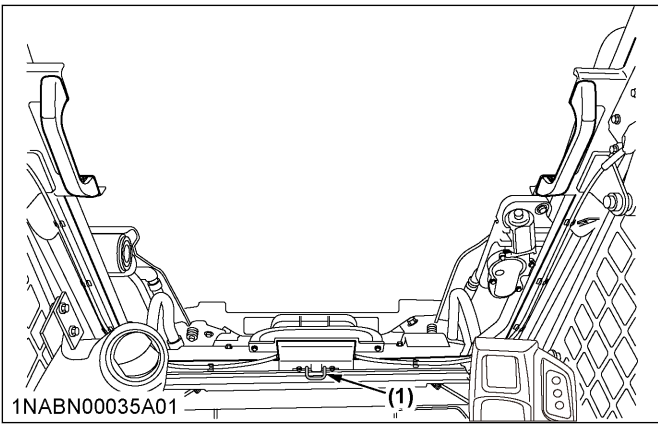

(1) Lock lever (bottom)


**Opening the cab door from outside**

1. Unlock the cab door and push the button.  
The cab door will open upward.

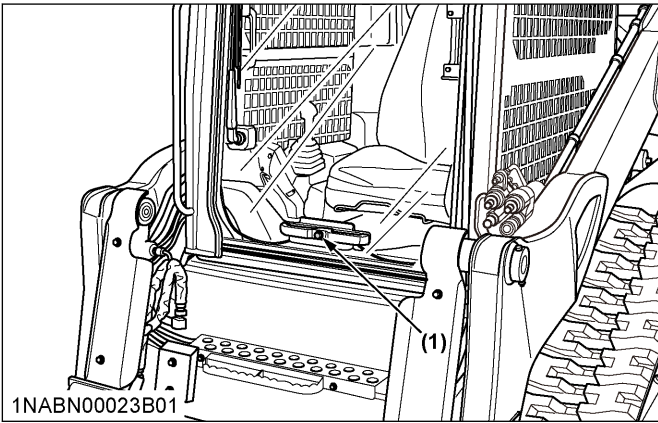

(1) Button

2. Push the cab door all the way up until it locks to the top of the cab.
3. After opening of the cab door, lock in place by moving both lock pins to outside to prevent the cab door from inadvertently falling.

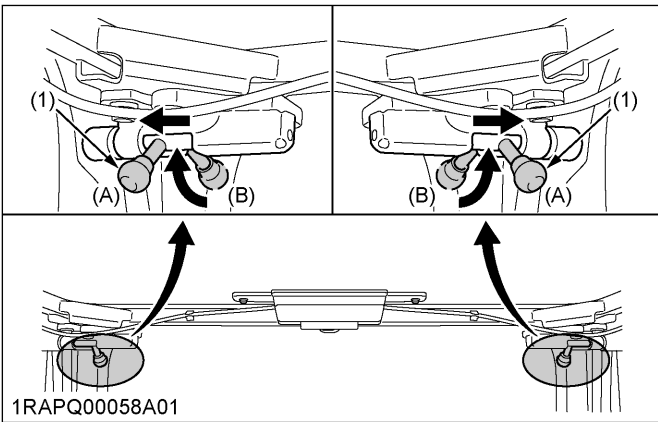


(1) Lock pin

(A) Lock  
(B) Unlock

**Closing the cab door from outside**


1. Before closing, unlock the cab door in place by moving both lock pins to inside.

2. Push the lock lever at the bottom of the cab door, and slowly lower the cab door half way.

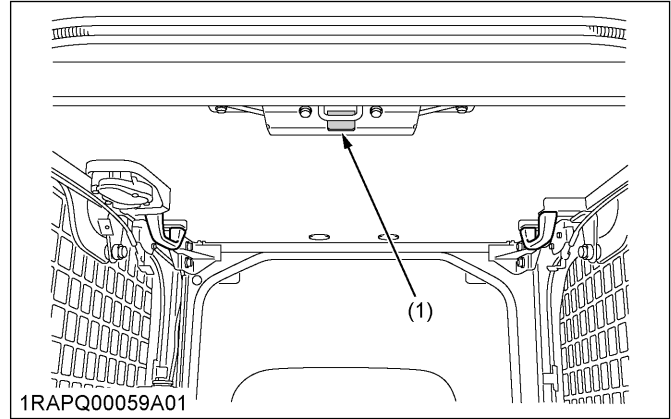

(1) Lock lever (bottom)

3. Grasp the top handle and pull it toward yourself to latch the cab door.

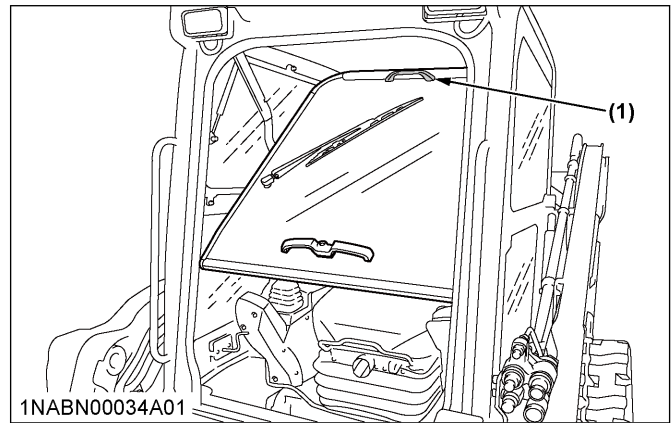


(1) Top handle

4. When leaving the machine, always lock the cab door.

**Opening the cab door from inside**

1. Hold the handles tightly with both hands, and push the lock levers beside the handles.

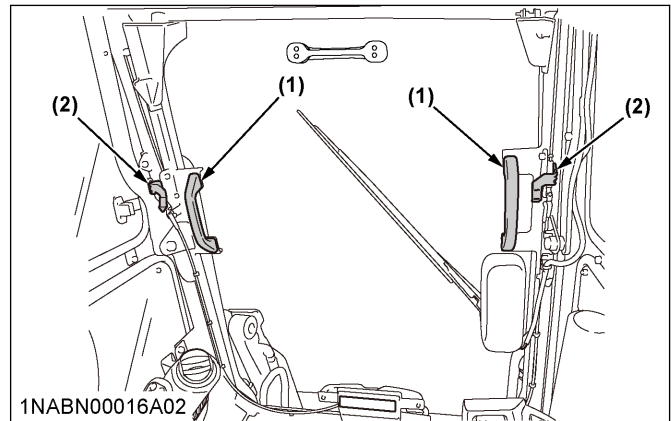


(1) Handle

(2) Lock lever


2. Pull the handles slightly upward and toward yourself to let the cab door slide inward.

3. Pull the cab door all the way to the lock at the back of cab.

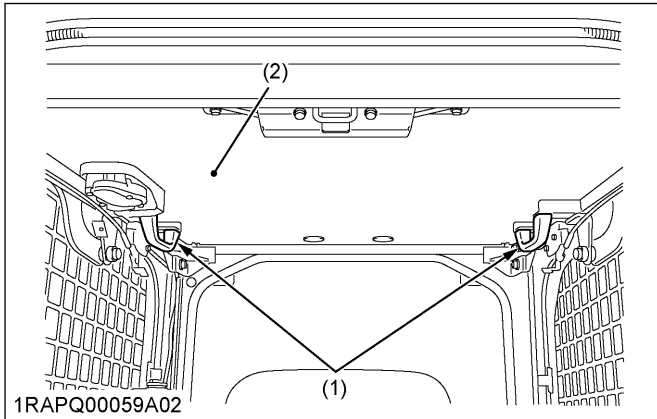

(1) Handle (2) Cab door

4. After opening the cab door, lock it in place by moving both lock pins to outside to prevent the cab door from inadvertently falling.

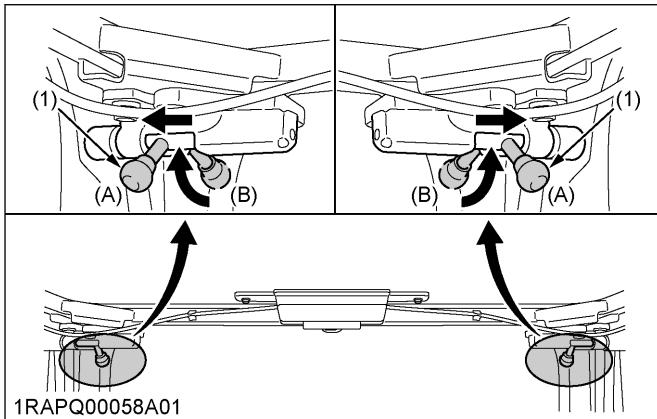


(1) Lock pin (A) Lock (B) Unlock

**Closing the cab door from inside**

1. Before closing the cab door, unlock it in place by moving both lock pins to inside.
2. Hold the handles tightly with both hands.
3. Pull the handles down and forward to move the cab door from the horizontal to the vertical position.
4. Push the cab door until it is latched in the cab door opening.

**4. Opening and closing the side cab window [Closed cab model]**

1. Pull the grip to release the lock, and pull side cab window to open it to the rear or to the front.
2. To close the side window, slide it forward or backward until the lock snaps into the window frame.

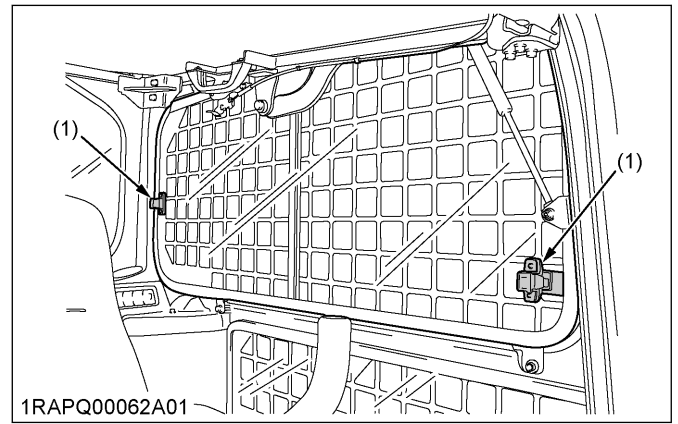


(1) Grip

**OPERATION OF THE ENGINE**

**! WARNING**

To avoid personal injury or death:

- To avoid the danger of exhaust-fumes-poisoning, do not operate the machine in a closed building without proper ventilation.
- Always start the engine from the operator's seat. Do not start the engine while standing next to the machine. Before starting the engine, sound the horn to get the attention of persons standing nearby.

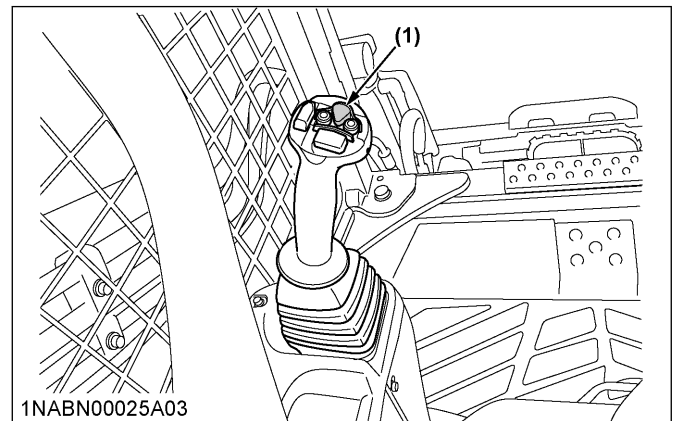

(1) Horn switch

**IMPORTANT :**

- Do not use starting fluid or ether.
- In order not to overload the battery and starter, avoid engaging the starter for more than 10 seconds.
- If the engine does not start in 10 seconds, please wait 20 seconds or more, before restarting.

# 1. Starting the engine

## CAUTION

To avoid personal injury:


- The operator should not depend solely on the warning lights, but should always conduct the routine checks section.

(See MAINTENANCE INTERVALS on page 88)

### IMPORTANT :

- The starter motor consumes large current. Avoid running it longer than 10 seconds continuously. If the engine fails to start within 10 seconds, follow the following procedure.
  - Once set the key to the [STOP] position.
  - Wait for 20 seconds or longer.
  - Repeat the following step 2. through step 5..
- If the battery is dead and must be connected to another battery with jumper cable, be sure to use a 12 V battery. Never use any 24 V batteries.
- To protect the machine, the machine is equipped with engine rpm limit control. When the engine rpm is limited, the master warning light starts blinking. If the engine rpm fails to rise enough after warm up, operate the machine to help the engine to warm up more.


Before starting the engine, make sure that the armrests are in the raised position, the control levers are in their neutral position, and the seat belt is fastened correctly.

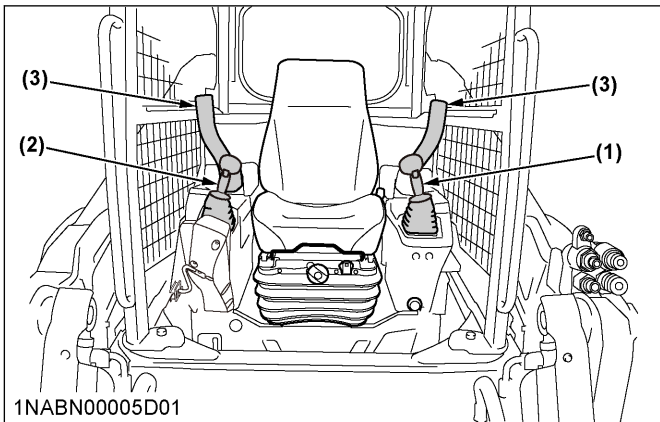

(1) Left control (traveling) lever (3) Armrest  
(2) Right (front operating) lever


Start the engine in the following manner:

- Set the engine-speed-control-dial to 1/2 position and keep the accelerator pedal free.

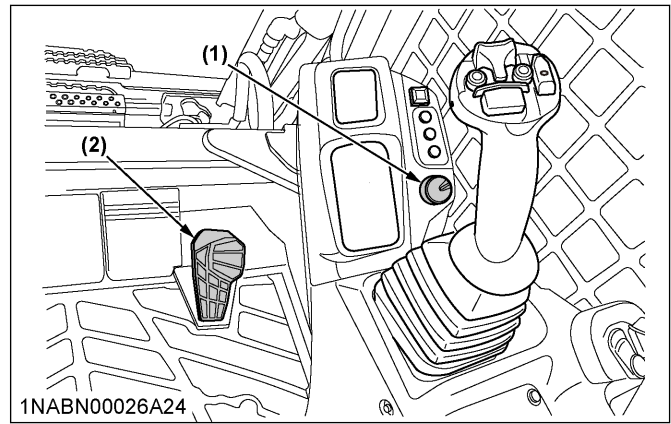

(1) Engine speed control dial (2) Accelerator pedal


- Insert the key into the starter switch and turn it to the [RUN] position.

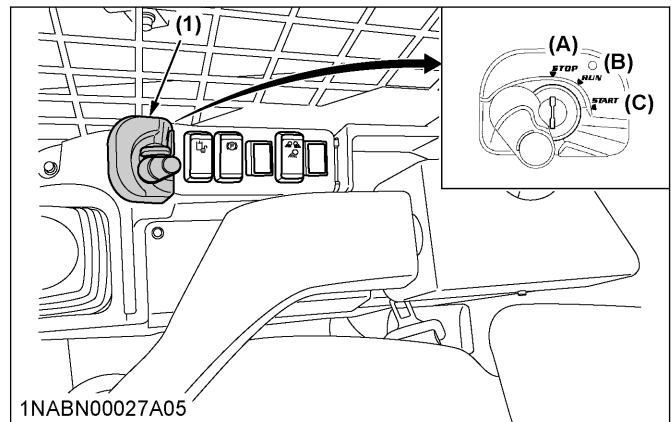

(1) Starter switch (A) STOP (B) RUN (C) START

The glow-plug-indicator will light up while the engine is preheated and will go out automatically after preheating is finished.

- Make sure that the and marks appear on the instrument panel. If not, the system is malfunctioned. Contact your local KUBOTA dealer.

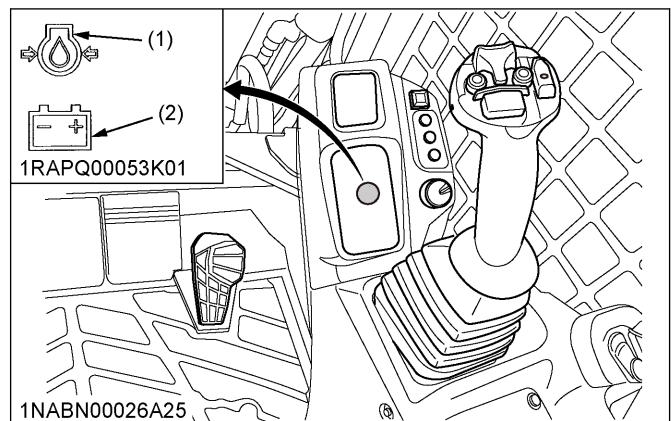

(1) Engine oil pressure indicator (2) Battery charge warning light



4. Turn the key to the **[START]** position and release after the engine has started.
5. Check if all warning lights (except the hydraulic-lock-indicator and the parking-brake-warning-light) have gone out. If a warning light still be lit up, stop the engine and then remove the key, and check for the cause.

## 2. Checking the machine after starting the engine

After starting the engine, but before starting operation of the machine, check the machine conditions.

1. Idle the engine. (warm up)  
The engine idle allows the engine lubricant to warm up and penetrate every part of the engine.
2. Once the engine has warmed up, check the following items.
  - The engine-oil-pressure-indicator has gone out.
  - The battery-charge-warning-light goes out when engine speed is increased.
  - The color of the exhaust is normal.
  - You do not hear abnormal noises and do not feel vibrations.
  - No fluid is leaking from pipes or hoses.
3. If any following conditions occur, stop the engine immediately.
  - The engine rpm increases or decreases suddenly.
  - You hear abnormal noises suddenly.
  - Exhaust is black.
  - The engine-oil-pressure-indicator lights up during operation of the machine.

### IMPORTANT :

- If any preceding conditions occur, check the machine and consult your local KUBOTA dealer for service of the machine.

## 3. Starting the engine under cold conditions



### CAUTION

To avoid personal injury:

- Make sure that the armrests are in the raised position during warm-up.

Start the engine in the following manner.

1. Turn the starter switch to the **[RUN]** position (glow position) and hold it until the glow-plug-indicator has gone out.
2. Move the starter switch to the **[START]** position. to crank and start the engine.
3. Release the starter switch after the engine has started.

The starter switch will automatically return to the **[RUN]** position.

### IMPORTANT :

- Let the engine warm up after start-up for approx. 10 minutes under no load conditions. If the hydraulic-fluid-temperature is too low, it will affect the operations or the function of the pressure sensors.  
Do not operate the machine under full load before the engine has thoroughly warmed up.
- DEF (AdBlue) freezes at temperatures below -11 °C (12 ℉). Even if it is frozen, the engine is not affected at its start-up and running.

## STOPPING THE ENGINE



### WARNING

To avoid personal injury or death:

- Lower the bucket or attachments to avoid a person accidentally touching levers and causing a serious accident.
- Place the machine on the flat ground.

1. After slowing the engine to idle, wait 3 to 5 minutes for turbo to slow down and then turn the key to **[STOP]** position.
2. Remove the key.

### IMPORTANT :

- Do not stop the engine by shutting down the battery power directly.  
Doing so may cause failure or malfunction.
- Do not remove the battery terminal until the SCR system stops. This is to prevent damage to the system device.
- Do not refill with DEF (AdBlue) before the SCR system stops. Otherwise, DEF (AdBlue) may overflow from the breather hose of the DEF (AdBlue) tank.

### NOTE :

- After stopping the engine, the SCR system automatically operates for up to about 25 minutes and returns the DEF (AdBlue) in the piping to the DEF tank to prevent freezing and clogging.
- The SCR system may generate operating noise after the engine has stopped, but this is not a malfunction.

## 1. Starting the engine with an auxiliary battery

Follow the guidelines in this section when starting the engine with an auxiliary battery.

### WARNING


To avoid personal injury or death:

- **Battery gases can explode. Do not smoke and keep sparks and flames away.**
- **Do not start the engine with an auxiliary battery if machine battery is frozen.**
- **Do not connect the black jumper cable to the negative (-) terminal of the machine battery.**

1. Bring the helping machine with the same battery voltage as near as possible to the machine.

#### IMPORTANT :

- **The machines must not come in contact with each other.**
2. Bring the levers and pedal of both machines in the neutral position.
  3. Wear eye protection and rubber gloves.
  4. Make sure that the vent caps are securely in place if equipped.
  5. Connect the terminal of the red jumper cable with the plus (+) terminal of the low battery and connect the other end of the red cable to the plus (+) terminal of the auxiliary battery.
  6. Connect the black negative cable to the minus (-) terminal of the auxiliary battery.
  7. Connect the other end of the black cable coming from the auxiliary battery to the conductive part of the machine frame as far away as possible from the low battery.
  8. Start the engine of the helping machine and let it run for a while.
  9. Start the machine with the low battery.
  10. Disconnect the jumper cables in the reverse sequence.

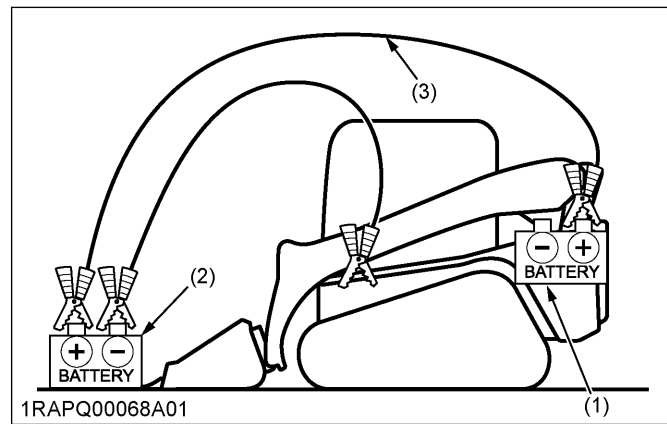

(1) Low battery  
(2) Auxiliary battery

(3) Jumper cables

#### IMPORTANT :

- **This machine is equipped with a negative (-) ground 12 Volt starting system.**
- **Only use the same voltage when using an auxiliary battery.**
- **Using a higher voltage will cause serious damage to the electrical system. When using an auxiliary battery, only the compatible (same) voltage is permissible.**

## OPERATION OF THE MACHINE

### 1. Running-in of the machine

It is most important to run-in your machine properly in order to achieve its full performance and longevity.

The operation and care of the new machine influence its life span. Your new machine has been carefully checked and tested before leaving the factory. In spite of careful check and test, all movable components must be run-in during the first 50 work hours. Do not work with full rpm and full loads during the first 50 work hours.

During the running-in period, adhere to the following points in all cases.

**Do not work with full engine rpm or full loads during the first 50 working hours**

- Let the engine warm up sufficiently in the cold season.
- Do not let the engine rev-up more than necessary.

#### Oil change in the run-in stage

The lubrication oil plays a specific and important role during the run-in phase of the machine.

The numerous movable parts are not yet run-in, so many fine metal particles can be generated and may cause damage and shorten the life of many components.

Pay attention to the oil-change intervals and complete them sooner than later.

See Changing the engine oil on page 111 for more details on the oil-change intervals.

## 2. Start of the machine

### WARNING

To avoid personal injury or death:

- Mount the machine and dismount the machine only at locations that have steps and/or handholds.  
Before you mount the machine, clean the steps and the handholds.
- Start the machine only from the operator's seat. Never short across the starter terminals or across the batteries.  
Shorting could damage the electrical system by bypassing the engine-neutral-start-system.
- Inspect the condition of the seat belt and the mounting hardware.  
Replace any parts that are worn or damaged.  
Do not use a seat belt extension on a retractable seat belt.
- Adjust the seat so that full pedal travel can be achieved with the operator's body against back of the seat.
- Make sure that the machine is equipped with a lighting system that is adequate for the job conditions.  
Make sure that all machine lights are working properly.
- Before you start the engine and before you move the machine, make sure that no one is underneath, or on or close to the machine.

### 2.1 Adjusting the operator's seat

### WARNING

To avoid personal injury or death:


- Replace the operator's seat with the new one if it is damaged and got holes. Water or dust could penetrate the hole and it causes the erroneous seat switch operation.

### CAUTION

To avoid personal injury:


- Make sure that the seat is completely secured after each adjustment.

### Suspension seat

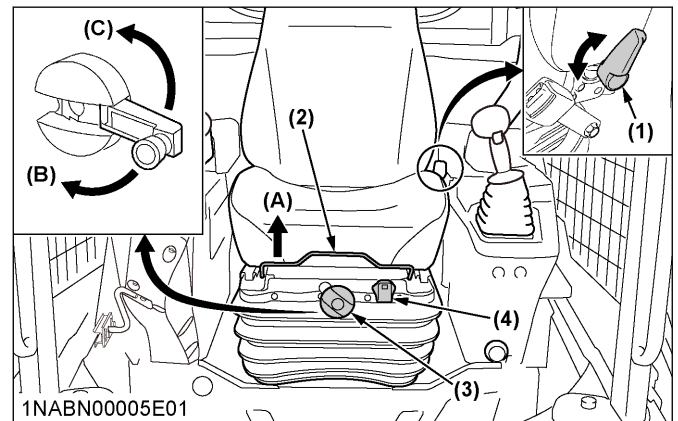

- |                                |                       |
|--------------------------------|-----------------------|
| (1) Backrest tilt adjust lever | (A) Unlock            |
| (2) Travel adjust lever        | (B) To raise the seat |
| (3) Weight adjust lever        | (C) To lower the seat |
| (4) Ride indicator             | (D) Lock              |

### Air-suspension seat

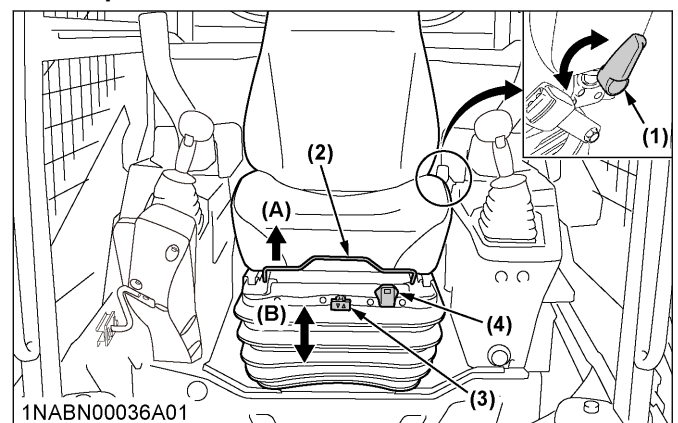

- |                                |                       |
|--------------------------------|-----------------------|
| (1) Backrest tilt adjust lever | (A) Unlock            |
| (2) Travel adjust lever        | (B) To raise the seat |
| (3) Weight adjust lever        | (C) To lower the seat |
| (4) Ride indicator             | (D) Lock              |

### Travel adjustment

1. Pull the travel-adjust-lever in the direction of unlock (A) and slide the seat backward or forward, as required.

The seat will lock in position when the lever is released.

### Weight adjustment

1. Turn the weight-adjust-lever to achieve the optimum suspension setting.
2. Make sure that the ride indicator shows green. If red, readjust the suspension setting.

### Height adjustment

1. Lift the operator's seat to the desired height of the three available positions.
2. Adjust the seat to the desired position after lifting the operator's seat to the highest position in case lowering the operator's seat.

### Tilt adjustment


1. Pull the backrest-tilt-adjust-lever in the direction of unlock (D) and move the backrest to the desired angle.

## 2.2 How to use the seat belt

### WARNING

To avoid personal injury or death:

- Always use the seat belt with a ROPS and FOPS protection structure. Adjust the operator's seat to the optimal position and buckle it up.
- Always fasten the seat belt securely before starting the engine.

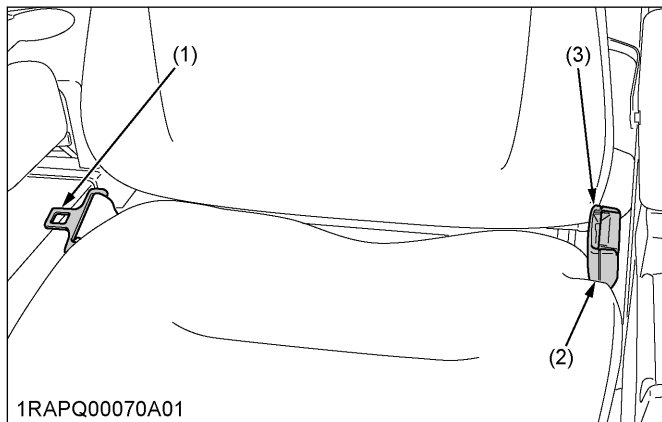

(1) Seat belt  
(2) Socket

(3) Button

### Fastening the seat belt


1. Pull the seat belt from the retractable (right) side of the operator's seat.
2. Insert the fixture of the seat belt into the socket at the left side of the operator's seat until the fixture clicks deep into position.

### Releasing the seat belt

1. Press the red button of the socket to release the seat belt.  
The seat belt reels itself and gets retracted to the right side.

## 2.3 How to use the armrest

1. Move the armrests to the raised position to lock out the hydraulic and electric systems.

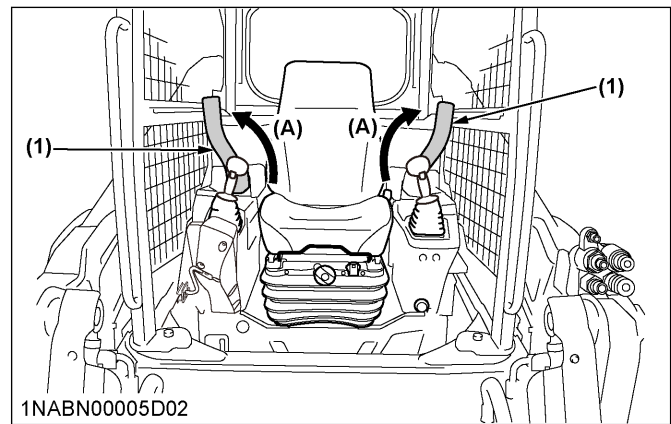

(1) Armrest

(A) Raise

### NOTE :

- When the armrests are moved to the raised position, the parking brake will engage and the hydraulic and operation system will be locked.  
Move the armrests to the lowered position and push the hydraulic-unlock-switch in order to activate the hydraulic controls.
- When you start the engine, disengage the hydraulic lock so that the hydraulic controls are activated.  
If the armrests are raised and then lowered during the operation, you must disengage the hydraulic lock so that the hydraulic controls are activated.

## 3. Driving

### WARNING


To avoid personal injury or death:

- Before starting the engine, make sure that no one is near the machine.


### 3.1 Traveling forward and backward

To move forward

1. Push the left-control-lever (traveling lever) forward.

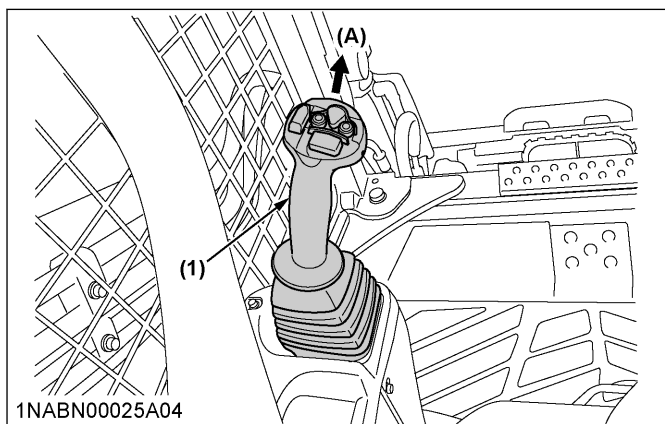

1NABN00025A04

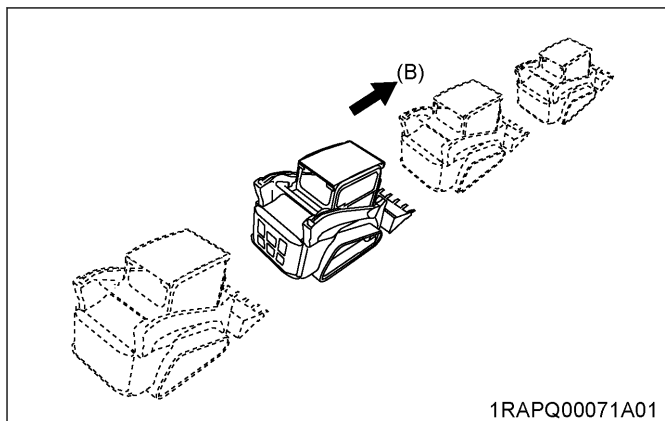


1RAPQ00071A01


(1) Left control lever (traveling lever) (A) Push (B) Forward

**To move backward**

1. Pull the left-control-lever (traveling lever) backward.

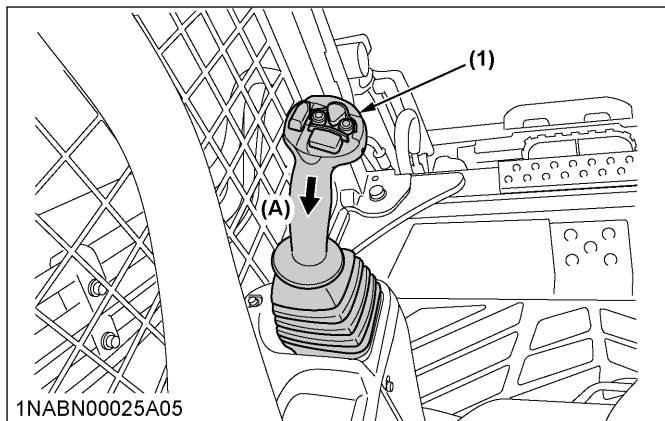

1NABN00025A05

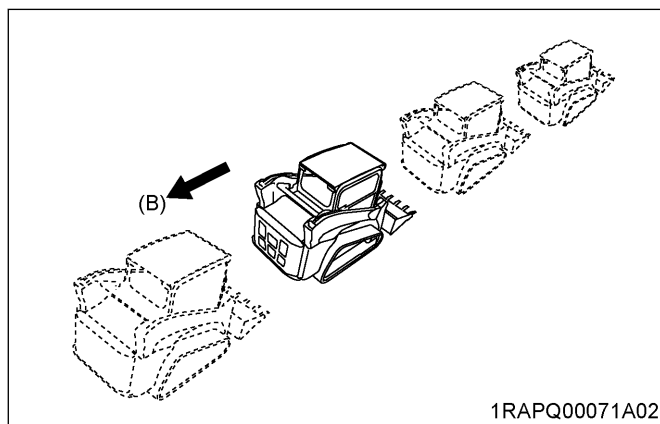

1RAPQ00071A02

(1) Left control lever (traveling lever) (A) Pull (B) Backward

**NOTE :**

- When the machine begins to travel backward, the reverse alarm starts sounding.

**IMPORTANT :**

- If the temperature of the hydraulic oil is too low, the reverse alarm may start sounding when switching from the backward to the forward travel. This alarm is not a problem. Just run for warm-up, and then the hydraulic oil temperature rises, this will stop the alarm. If the alarm still keeps sounding, contact your local dealer.

**4. Turning the machine**

**⚠ CAUTION**


To avoid personal injury:

- Before changing direction of the machine, beware of people in the work area.
- Make sure that the bucket or attachment is lowered on the ground.


**4.1 How to use pivot turn**

**To turn the machine forward to the left**

1. Tilt the left-control-lever (traveling lever) forward to the left.

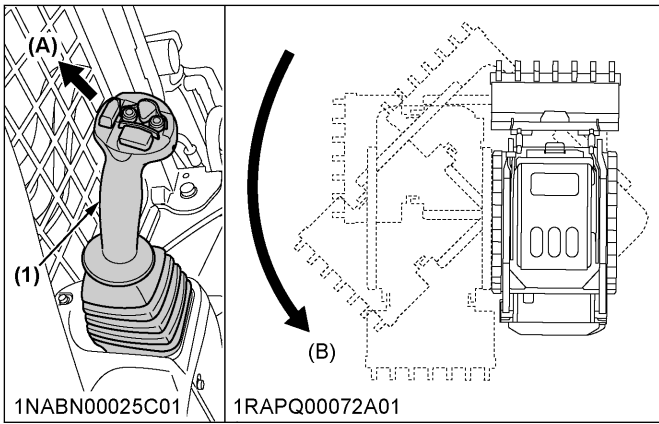


(1) Left control lever (traveling lever) (A) Tilt  
(B) Forward to the left

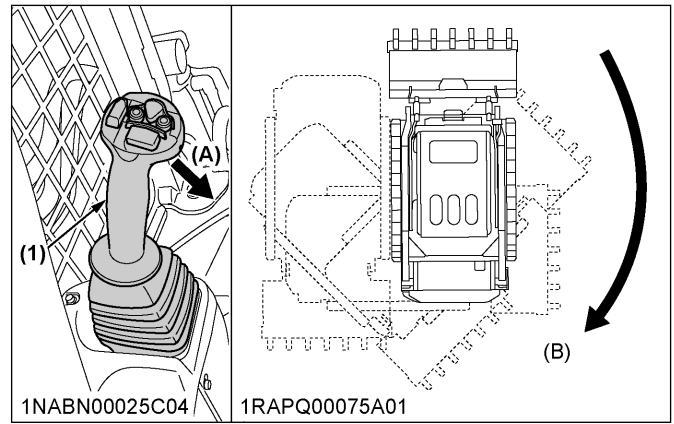

(1) Left control lever (traveling lever) (A) Tilt  
(B) Backward to the right

**To turn machine backward to the left**

1. Tilt the left-control-lever (traveling lever) lever backward to the left.

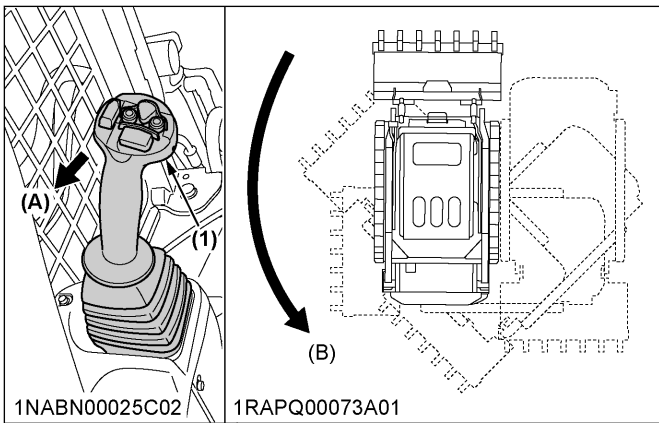


(1) Left control lever (traveling lever) (A) Tilt  
(B) Backward to the left

**4.2 How to use spin turn**

**To spin the machine left**


1. Tilt the left-control-lever (traveling lever) to the left.

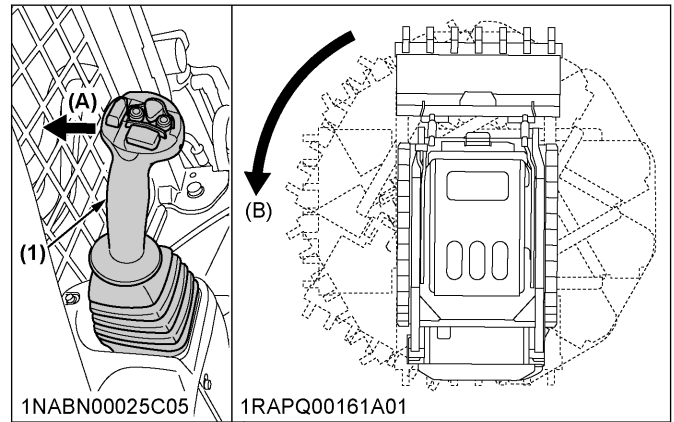

(1) Left control lever (traveling lever) (A) Tilt  
(B) Left

**To turn machine forward to the right**


1. Tilt the left-control-lever (traveling lever) forward to the right.

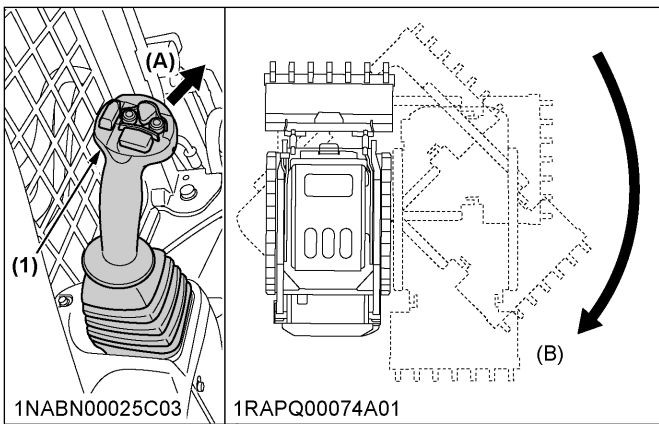

(1) Left control lever (traveling lever) (A) Tilt  
(B) Forward to the right

**To spin the machine right**

1. Tilt the left-control-lever (traveling lever) to the right.

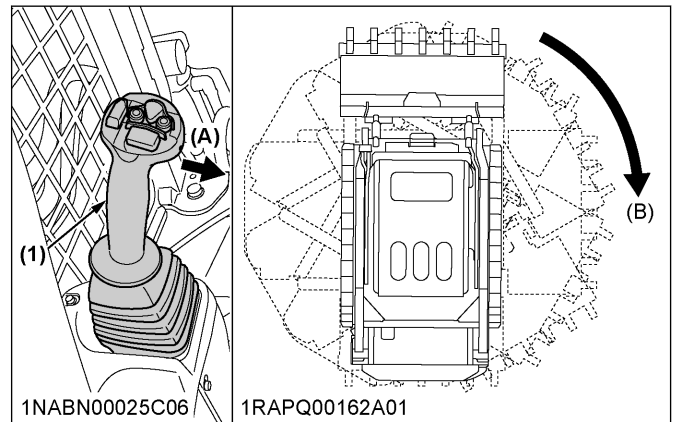

(1) Left control lever (traveling lever) (A) Tilt  
(B) Right

**To turn machine backward to the right**

1. Tilt the left-control-lever (traveling lever) lever backward to the right.

## 5. Operating the lift arms



### WARNING

To avoid personal injury or death:

- Do not exceed the rated operating capacity of the unit. If loads exceed the rated operating capacity, the unit can experience a hydraulic imbalance when half or medium "lift arms raise" and "bucket roll back" or "auxiliary hydraulic control" commands are input together, which can result in the lift arms lowering slowly. If you begin to experience a hydraulic imbalance, either place the lift arms control in neutral or input full raise control, and lift arms lowering will cease.

#### To lower the lift arms



1. Push the right-control-lever (front-operating-lever) forward.

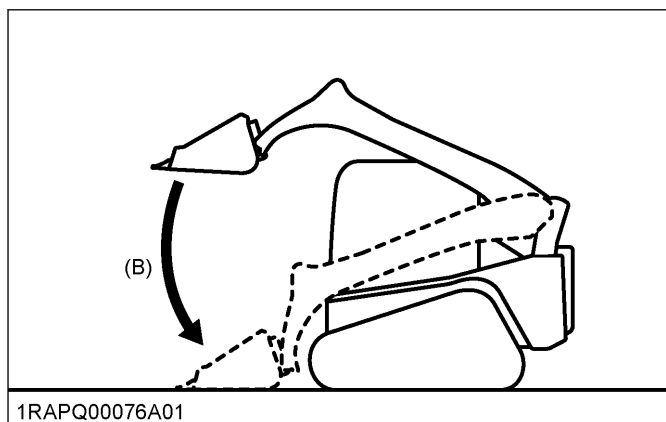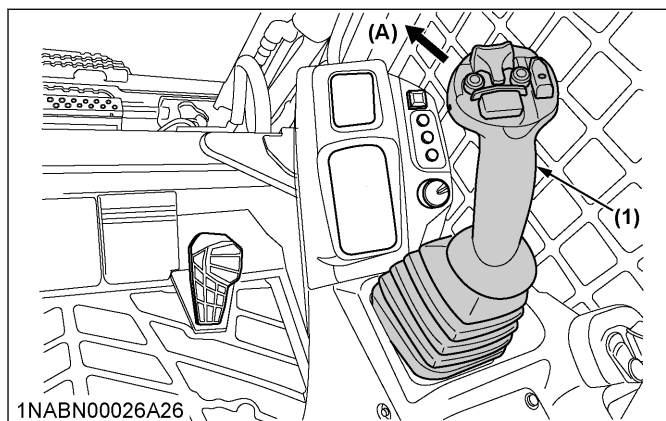

- (1) Right control lever (front operating lever) (A) Push (B) Lower

#### To raise the lift arms

1. Pull the right-control-lever (front-operating-lever) backward.

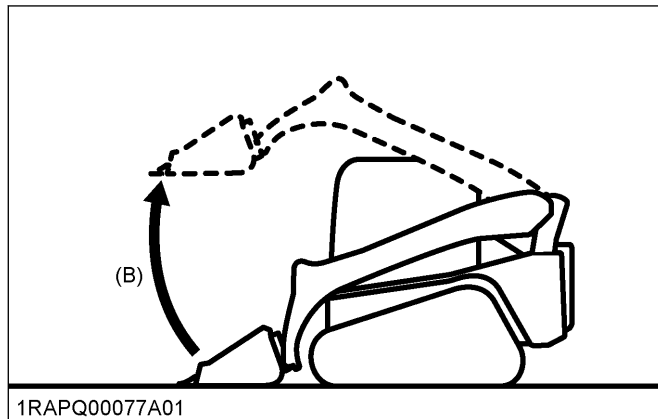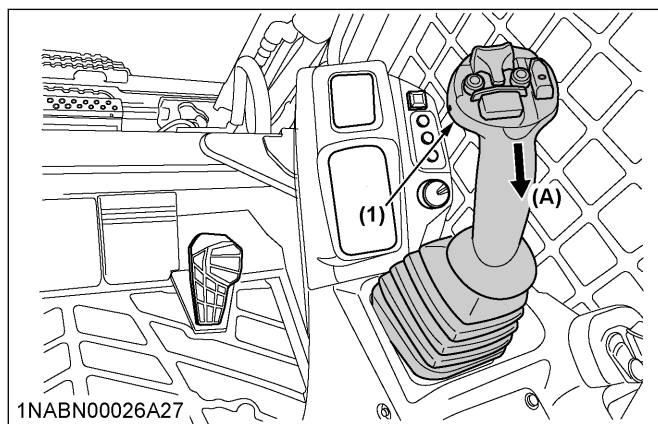

- (1) Right control lever (front operating lever) (A) Pull (B) Raise

#### NOTE :

- To stop the lift arm operation, return the right-control-lever (front-operating-lever) to the neutral position.

### 5.1 How to use the lift arm stopper

### WARNING


To avoid personal injury or death:

- Never work on a machine with the lift arms up unless the lift arms are secured by an approved lift-arm-stopper.

The lift-arm-stopper prevents the lift arms from falling when servicing the machine.


#### Installing

1. Park the machine on level and firm ground, and lower the lift arms fully to the ground.
2. Remove the front attachment.
3. Stop the engine.
4. Ask the second person to remove the lift-arm-stopper from the storage position.

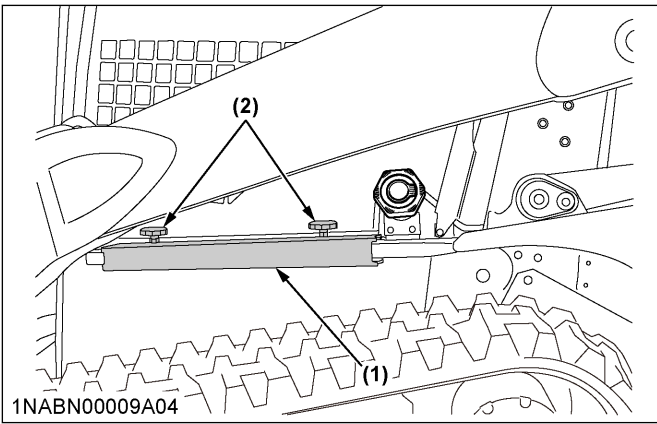

(1) Lift arm stopper (2) Knob bolt


5. Start the engine.
6. Set the parking-brake-switch to the parking position.
7. Slowly raise the lift arms to the maximum height.
8. Stop the engine.  
Operator must stay in the operator's seat with the seat belt fastened.
9. Ask the second person to install the lift-arm-stopper.
10. Place the top (dented) of lift-arm-stopper upward, and cover the rod with the lift-arm-stopper from front.  
Using one of the knob bolts, secure the lift-arm-stopper in position.

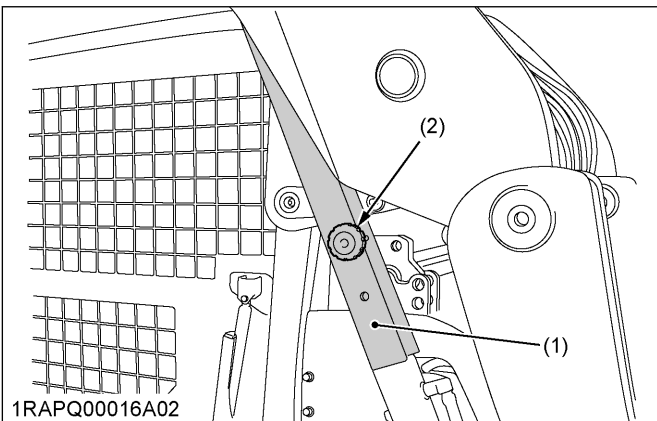

(1) Lift arm stopper (2) Knob bolt

**IMPORTANT :**

- Make sure that the dent on top of the lift-arm-stopper fits the round part of the lift arm and that the flat bottom of lift-arm-stopper fits the flat top of the arm-cylinder-tube. Do not allow any gap in both locations top and bottom of the lift-arm-stopper.

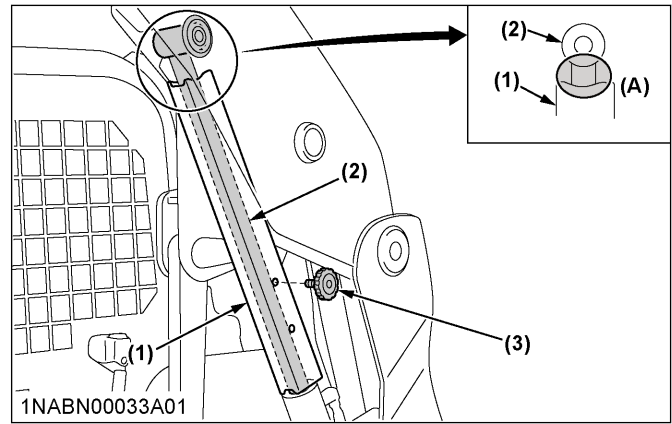

(1) Lift arm stopper (2) Arm cylinder tube (3) Knob bolt (A) Fit

11. Start the engine.
12. Set the parking brake switch to the parking position.
13. Slowly lower the lift arms against the lift-arm-stopper.

**Removing**

1. Sit in the operator's seat with the seat belt fastened.
2. Start the engine.
3. Set the parking-brake-switch to the parking position.
4. Slowly raise the lift arms to the maximum height.
5. Stop the engine.
6. Ask the second person to remove the lift-arm-stopper.
7. Start the engine.
8. Lower the lift arms fully to the ground.
9. Stop the engine.
10. Return the lift-arm-stopper to the storage position and secure it with two knob bolts.

**6. Operating the bucket**

**! WARNING**



To avoid personal injury or death:

- Do not exceed the rated operating capacity of the unit. If loads exceed the rated operating capacity, the unit can experience a hydraulic imbalance when half or medium "lift arms raise" and "bucket roll back" or "auxiliary hydraulic control" commands are input together, which can result in the lift arms lowering slowly. If you begin to experience a hydraulic imbalance, either place the lift arms control in neutral or input full raise control, and lift arms lowering will cease.


**To roll the bucket back**

1. Tilt the right-control-lever (front-operating-lever) to the left.



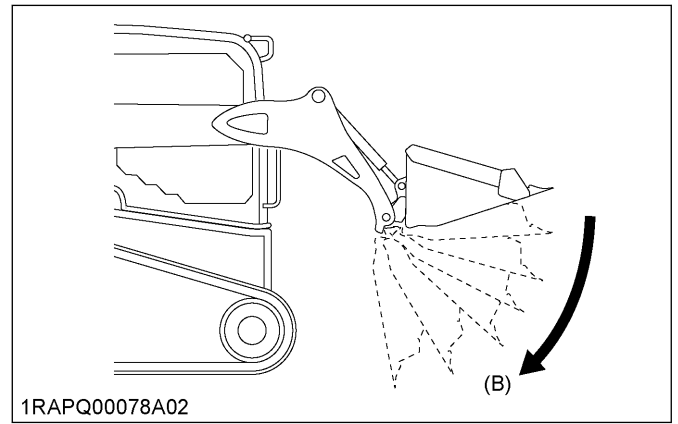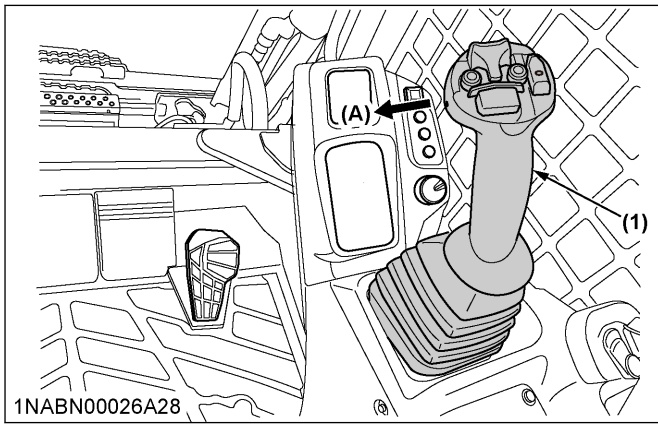


(1) Right control lever (front operating lever) (A) Tilt (B) Dump

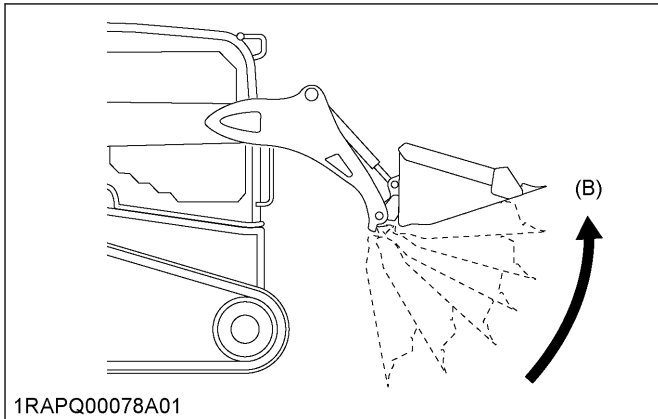

(1) Right control lever (front operating lever) (A) Tilt (B) Roll back

**To dump the bucket**

1. Tilt the right-control-lever (front-operating-lever) to the right.

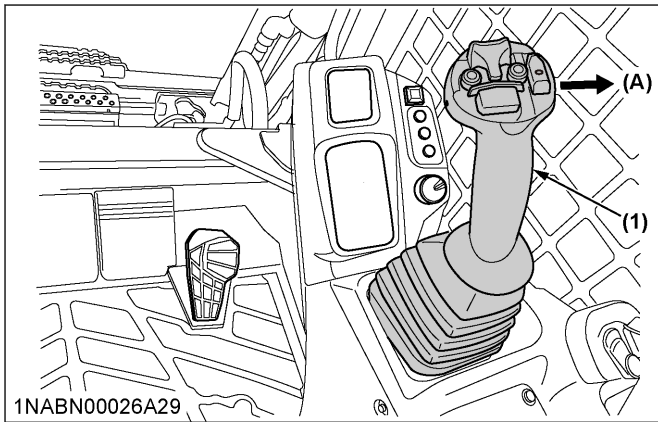

# AUXILIARY HYDRAULIC

## HOW TO USE THE AUXILIARY HYDRAULIC CONTROL


### WARNING

To avoid personal injury or death:

- Do not exceed the rated operating capacity of the unit. If loads exceed the rated operating capacity, the unit can experience a hydraulic imbalance when half or medium "lift arms raise" and "bucket roll back" or "auxiliary hydraulic control" commands are input together, which can result in the lift arms lowering slowly. If you begin to experience a hydraulic imbalance, either place the lift arms control in neutral or input full raise control, and lift arms lowering will cease.
- Stop the engine and relieve pressure before connecting or disconnecting lines.
- Do not use your hand to check for leaks.

### Connecting

1. Remove dirt or debris from the surface of both the male and female couplers, and from the outside diameter of the male coupler.
2. Visually check the couplers for corroding, cracking, damage, or excessive wear. If any of these conditions exist, the coupler must be replaced.
3. Push the quick couplers tightly and hold for a few seconds, the pressure is relieved automatically. (Pressure relief system.)
4. Connect the couplers.

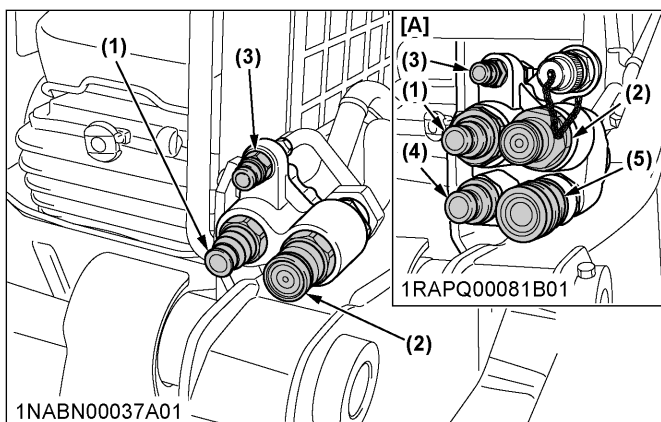

- (1) Male coupler (small)      [A] High-Flow model  
 (2) Female coupler (small)  
 (3) Male case drain coupler  
 (4) Male coupler (large)  
 (5) Female coupler (large)

### IMPORTANT :

- Use long enough hoses when connecting the attachment. Otherwise the couplers could be damaged due to the frequent side load and impact to them during working.

### IMPORTANT :

[High-Flow model only]

- When relieving pressure, use the couplers of (1) and (2) in the preceding figure.
- Depending on the attachment coupler size and flow rate, select the proper coupler socket size, large or small in diameter.
- The standard-flow mode functions in a bidirectional way, whereas the High-Flow mode runs in one way.
- When an attachment is connected, Keep in mind that oil flows through the male port in the High-Flow mode.

### Disconnecting

1. Push the quick couplers tightly and hold it for a few seconds, the pressure is relieved automatically (Pressure relief system).
2. Detach the couplers.

## 1. Operating the auxiliary hydraulic control

### CAUTION

[High-Flow model only]


To avoid personal injury:

- Be careful not to use any High-Flow-incompatible attachment in the High-Flow mode. Otherwise the attachment may be damaged.
- Certain high-flow attachments may require the use of a protective door (polycarbonate) such as a hammer or mulcher.

If you use a High-Flow model, see AUX port switch [High-Flow model] on page 38.

1. Start the engine.  
(See Starting the engine on page 58 and Start of the machine on page 61)
2. Press the hydraulic-unlock-switch.


3. Press the AUX port switch [High-Flow model only].

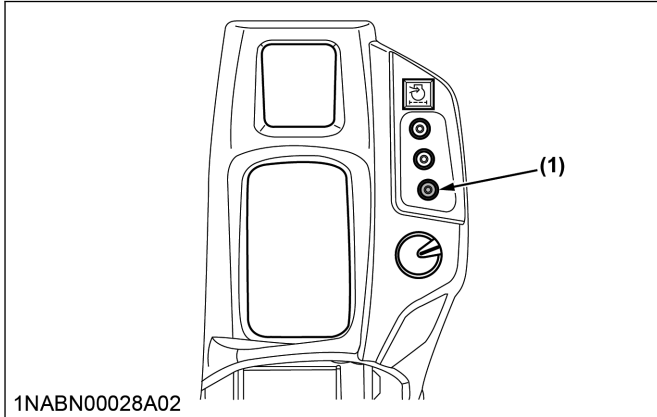

(1) AUX port switch (High-Flow model only)


4. Tilt the AUX-port-variable-switch toward side (A) or press the right AUX-hold-switch. Oil starts flowing out of the male port.

5. Tilt the AUX-port-variable-switch toward side (B) or press the left AUX-hold-switch. Oil starts flowing out of the female port.

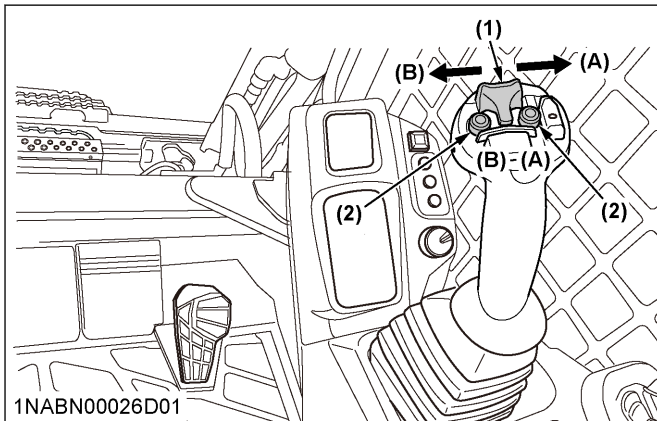

(1) AUX port variable switch (A) Male port  
(2) AUX hold switch (B) Female port

6. If the tank must be drained, depending on an attachment in use, use the male-case-drain-port.

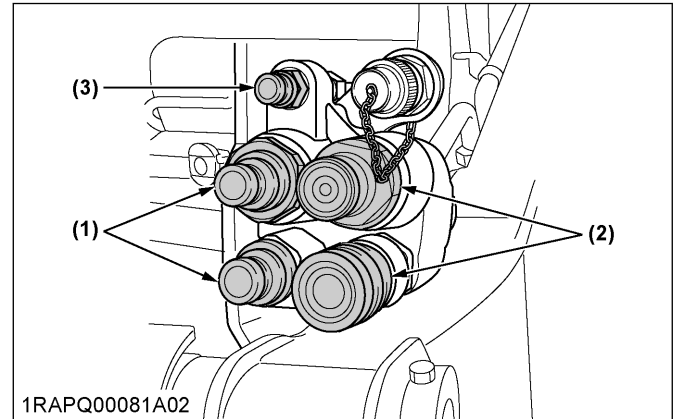

(1) Male port (3) Male case drain port  
(2) Female port

**IMPORTANT :**

**[High-Flow mode only]**

- In the High-Flow mode, operate the machine with the male-port-switch (A) of the right-control-lever.
- When operating the machine with the female-port-switch (B) of the right-control-lever, standard-flow oil passes through the female port.

**NOTE :**

- The oil flow rate responds to the tilt of the AUX-port-variable-switch.
- Press the AUX-hold-switch, and the oil continues to flow at its highest flow rate. To interrupt the oil flow, press AUX-hold-switch again.

## 2. Auxiliary port operation [high-flow model only]


The AUX port switch is used to operate hydraulic attachment such as hammers.

### 2.1 Selecting the action modes

The AUX port has been factory-set to three action modes. You can select one of them. Up to six action modes can be preset.

Each time the AUX port switch is pressed, the action modes change over one after another. And the icon and action mode number on the screen change accordingly.

- When setting flow volume is within the standard flow range, the indicator "AUX" lights up.
- When setting flow volume is within the High-Flow range, the indicator "AUX" blinks.

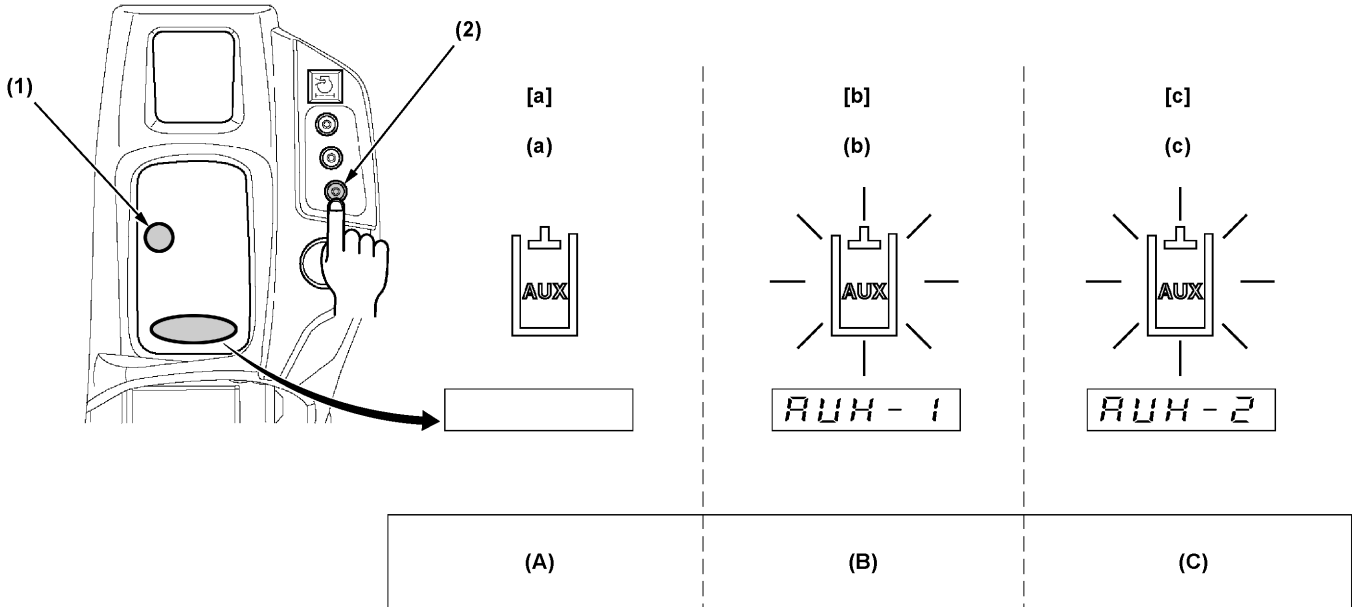

1NABN00038A01

- (1) Indicator
- (2) AUX port switch


- [a] Mode 0 (AUX disable (normal screen))
- [b] Mode 1
- [c] Mode 2

- (a) No lighting
- (b) Lighting
- (c) Blinking

- (A) No activation
- (B) Standard flow volume
- (C) Max flow volume

#### • Checking the setting volume

Pressing the display selector switch when the action mode number "AUX-1" is displayed on the screen, the screen will vary per second.

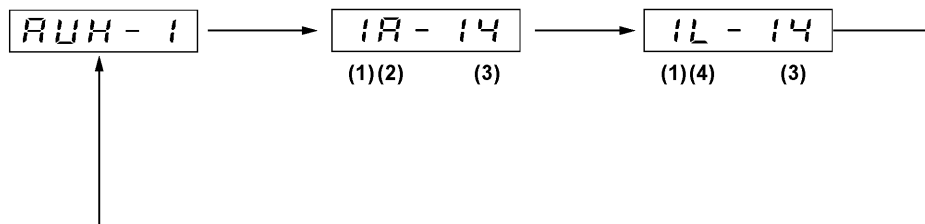

1NABN00039A01

- (1) Memory number
- (2) Lever side (right side)

- (3) Flow volume
- (4) Lever side (left side)


#### NOTE :

- When turning the starter key to the [RUN] position, the action mode will return to the last action mode used.

## 2.2 Setting the maximum flow volume


The AUX port has been factory-set to three action modes 1, 2 and 3. The action modes 4 and 5 can also be preset.

1. With the starter key at the **[RUN]** position, press the user setting switch.

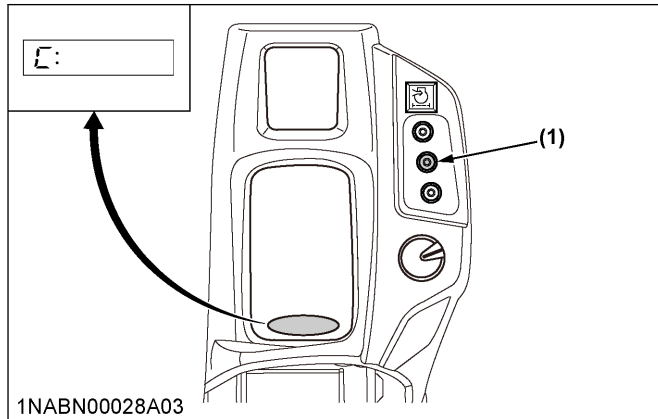


(1) User setting switch

2. Choose the AUX setting mode by pressing the display selector switch.

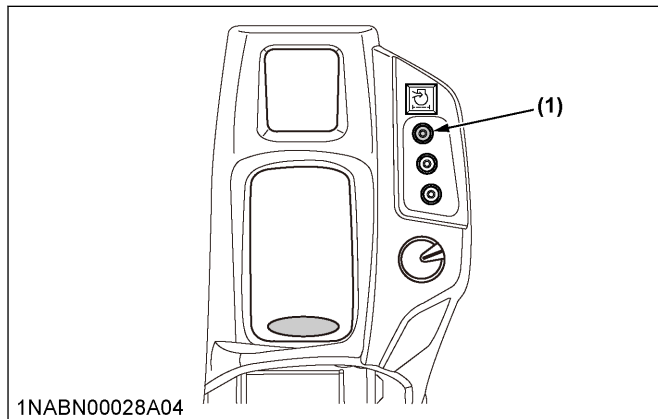



(1) Display selector switch

- a. Press the display-selector-switch for a long time.
- b. Press the display-selector-switch to select your desired AUX-setting-mode number.
- c. Press the display-selector-switch for a long time again.

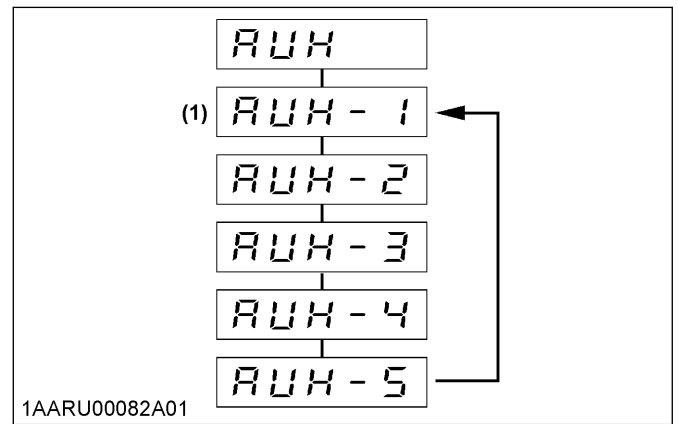

(1) AUX setting mode number


3. After setting the mode, press the display selector switch to increase the volume or press the user setting switch to decrease the volume.

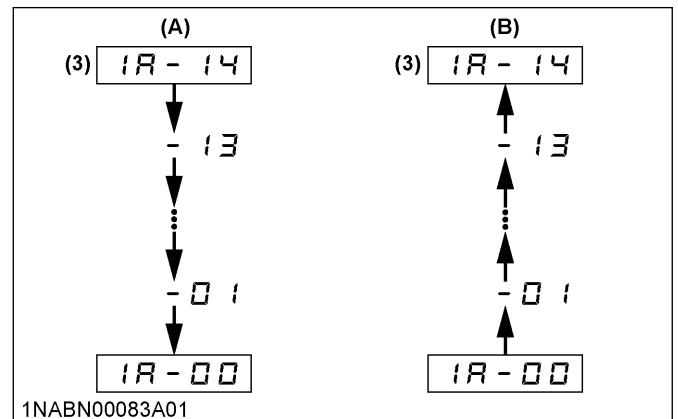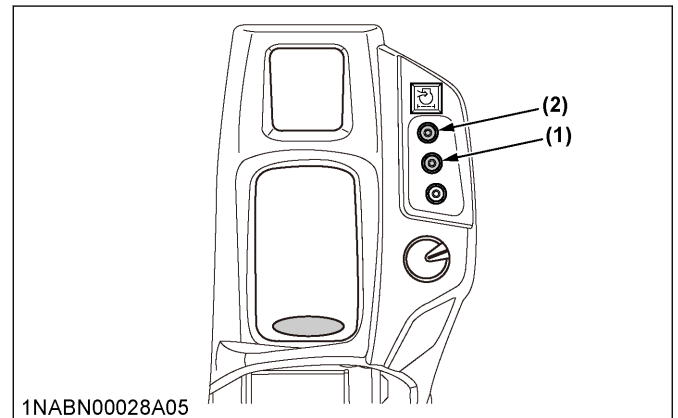

(1) User setting switch  
 (2) Display selector switch  
 (3) Max. flow volume value

(A) Press user setting switch to decrease the volume.  
 (B) Press display selector switch to increase the volume.

- Press the display selector switch for a long time to go to the next port and make the settings for this port.

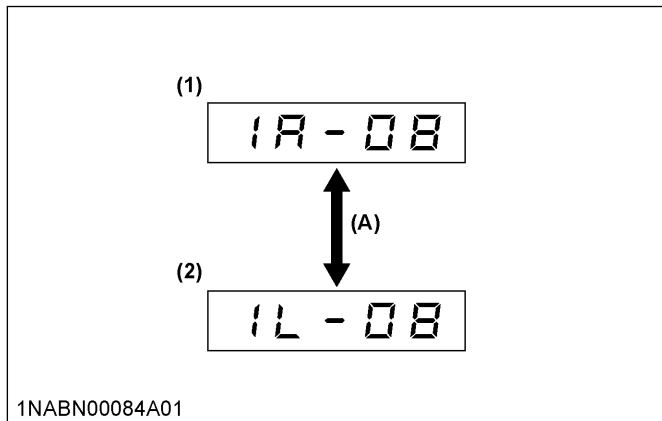

- (1) Value of left side port      (A) Press display selector switch for a long time.  
 (2) Value of right side port

- Press the user setting switch for a long time to go back to step 2 to make settings for the next action mode.

When all the settings of all the action modes have been made, press the display selector switch for a long time to return to step 1 and press the user setting switch to return to the normal screen.


**NOTE :**

- In an action mode each volumes are set to zero, such action mode is skipped even if selected.

Take an example of the following settings:

Action mode 1	1R-09, 1L-09
Action mode 2	2R-14, 2L-09
Action mode 3	3R-00, 3L-00
Action mode 4	4R-00, 4L-00
Action mode 5	5R-00, 5L-00

Each time the AUX port switch is pressed, the display changes from action mode 1, action mode 2 to normal mode in this order.

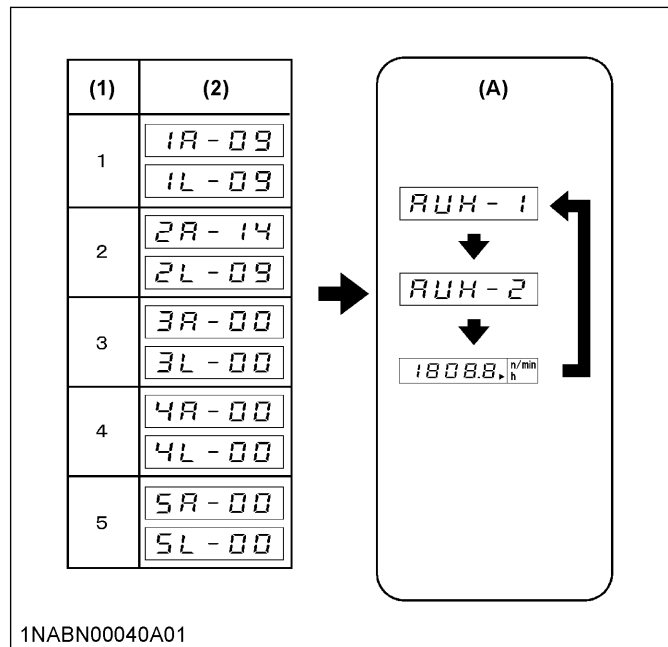

1NABN00040A01

- (1) Mode No.      (A) Display sequence in selecting the modes  
 (2) Setting icon


**2.2.1 AUX port MAX. flow volume**

MAX. flow volume (Theoretical L (US gal)/ min)	Standard Flow	90 (24)
	High-Flow	156 (41)
MAX. pressure MPa (kgf/cm <sup>2</sup> ) [psi]	24.5 (250) [3553]	

**NOTE :**

- Suppose that the same attachment is mounted on another machine. Even if the same limit setting is made, the same speed cannot be achieved. Make an optimum setting on each machine.
- The AUX port speed fluctuates by getting an attachment relieved at the limited flow volume. Determine the limit level with combined operations of attachments in mind.

2.2.2 AUX port (LH and RH) maximum flow volume setting flow chart

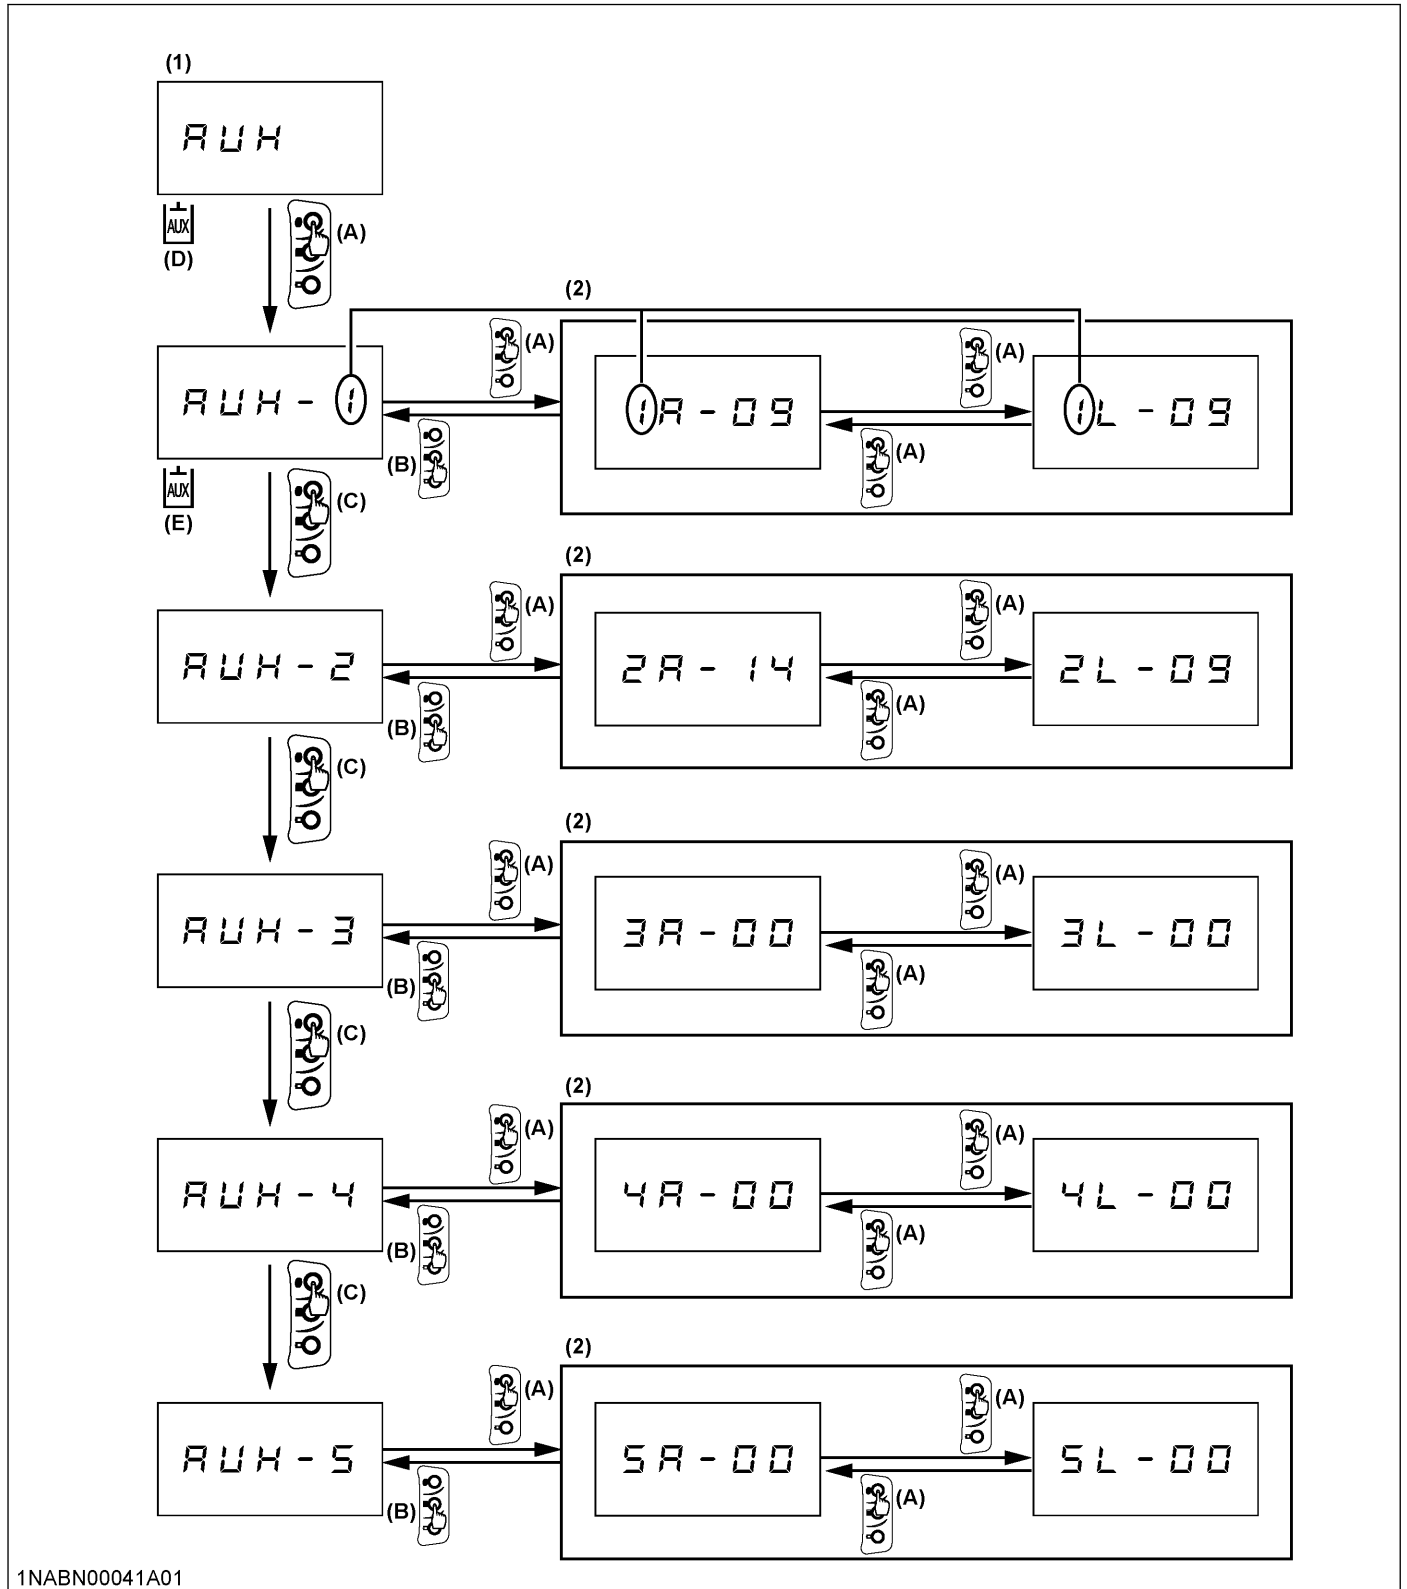

1NABN00041A01

- (1) AUX setting
- (2) AUX port (LH and RH) maximum flow volume setting (0 to 14)
- (A) Push and hold the display selector switch.
- (B) Push and hold the user selector switch.
- (C) Push the display selector switch.
- (D) Lighting
- (E) Lighting or blinking


### 3. Operating the attachment control device (option)

You can use the attachment-control-device to feed electrical power for an attachment. For instance, to drive a valve.

With the AUX port ready for use, you can supply power. Use K (+12 V) and B (GND) of the 14-pin coupler attached on the arm. See the following figures and table.


**NOTE :**

- The K (+12 V) of the 14-pin coupler turns on when the starter switch is in [RUN] position.

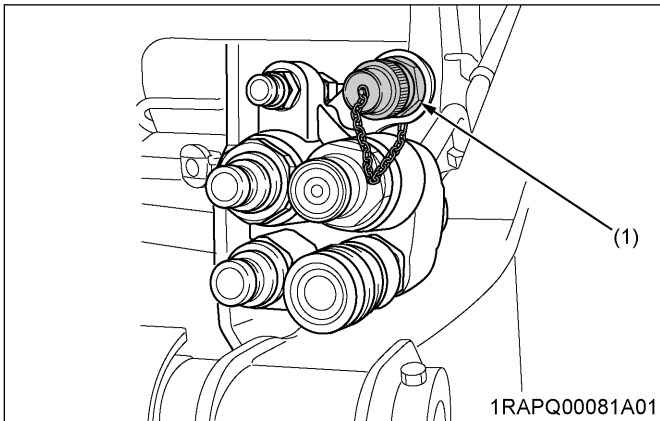


(1) 14-pin coupler

1. Press the numbered electrical control switch on the left or right lever that corresponds with the desired valve function, to be powered at +12V.

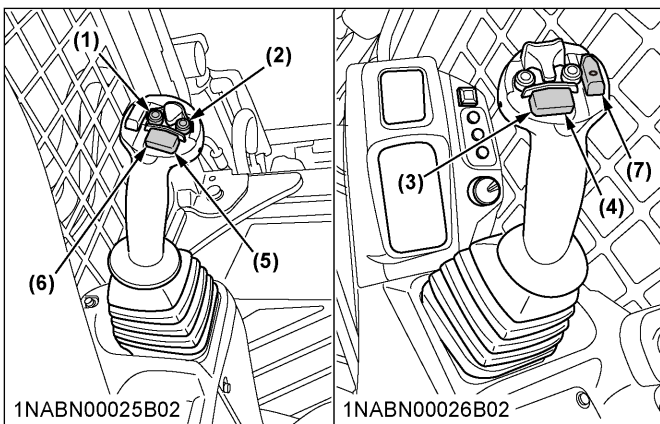

- |                |                |
|----------------|----------------|
| (1) Ref. no. 1 | (5) Ref. no. 5 |
| (2) Ref. no. 2 | (6) Ref. no. 6 |
| (3) Ref. no. 3 | (7) Ref. no. 7 |
| (4) Ref. no. 4 |                |

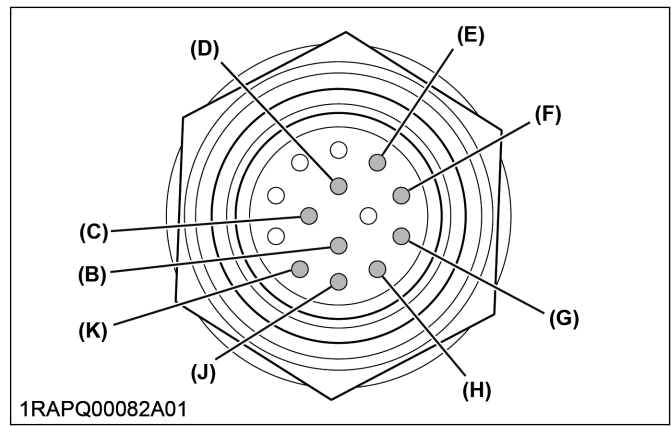

- |                |                |
|----------------|----------------|
| (B) Pin port-B | (G) Pin port-G |
| (C) Pin port-C | (H) Pin port-H |
| (D) Pin port-D | (J) Pin port-J |
| (E) Pin port-E | (K) Pin port-K |
| (F) Pin port-F |                |

**14-pin coupler harness connection chart**

Ref. no.	Pin port	Remarks
-	B	GND
1	C	AUX 1st func.
2	D	AUX 1st func.
3	E	AUX 2nd func.
4	F	AUX 2nd func.
5	G	AUX 3rd func.
6	H	AUX 3rd func.
7	J	AUX electrical mode change
-	K	+12 V

**NOTE :**

- AUX 3rd func. is momentary action.
- AUX electrical mode change is alternate action.



# QUICK-HITCH

## HOW TO USE THE MECHANICAL QUICK-HITCH

This machine utilizes a quick-hitch for easy connection and disconnection of various attachments. By replacing the front attachments, you can use this machine in agriculture, raising stock, landscaping, gardening, and snow removal as well as general civil engineering and construction work.

### DANGER

To avoid personal injury or death:

- Use of attachments that do not comply with ISO24410, the improper positioning of lever(s), or non-protrusion of pin(s) may result in detachment of the attachment or deformation, causing loss of performance, personal injury, or death.

### WARNING

To avoid personal injury, death or machine damage:


- Never operate or transport attachments which are not attached completely.
- Always replace damaged hardware immediately.

### NOTE :

- Locate the attachments on a level, firm surface when attaching and detaching them from the quick-hitch.

### Attaching attachments


1. To mount an attachment, pull the levers of the quick-hitch lock pins to the unlocked position. Pull the quick-hitch levers all the way up to ensure that the lock pins are fully retracted.
2. Position the machine squarely in front of the attachment and tilt the quick-hitch forward with the tilt cylinders.

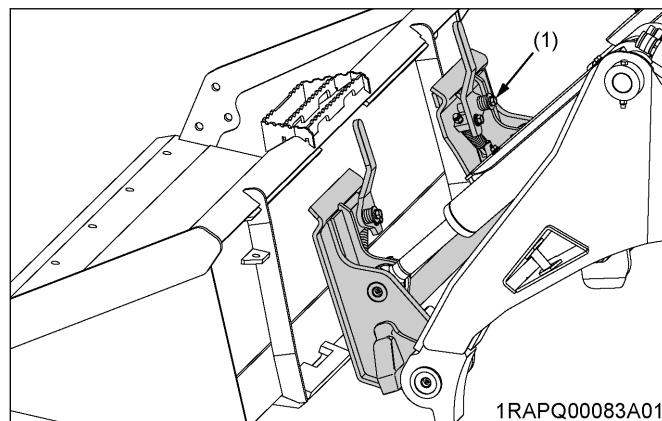

(1) Quick-hitch


3. Ease the quick-hitch mounting plate into the saddle of the attachment.
4. Roll the quick-hitch back using the tilt cylinders and raise the lift arms slightly.

The back of the attachment should rest against the front of the quick-hitch mounting plate, and you should support the weight of the attachment by the lift arms.

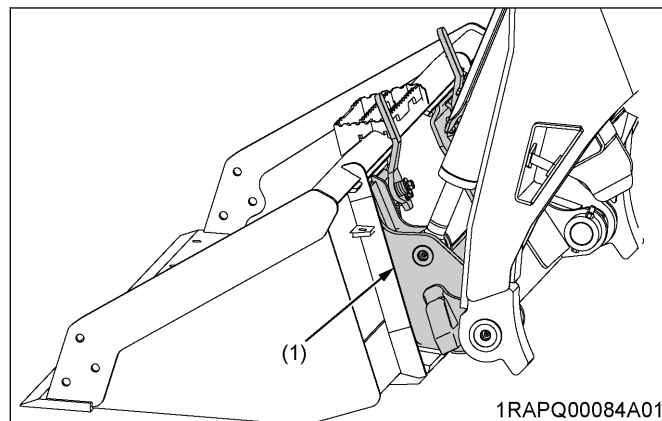

(1) Quick-hitch

5. When the attachment is properly seated in the saddle of the attachment and against the front of the quick-hitch mounting plate, turn off the engine and set the parking brake.
6. Push the quick-hitch levers to the fully locked position.

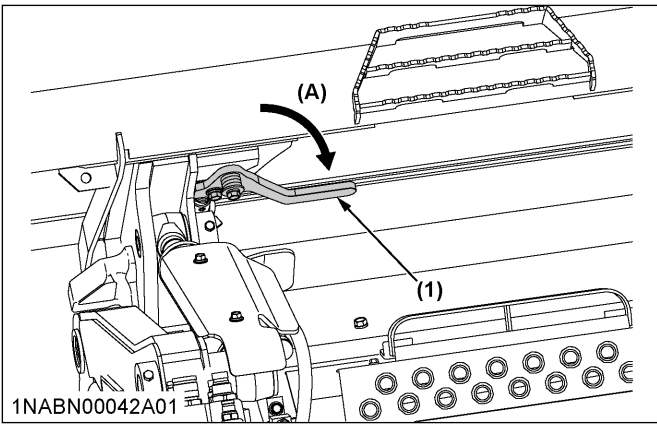

(1) Quick-hitch lever (A) Lock


7. Verify that both lock pins are completely engaged in the base of the attachment.
8. With an attachment in place, lift the lift arms and empty out the bucket.
9. Tilt the bucket downwards and verify that the lock pins are fully engaged.



**DANGER**

To avoid personal injury or death:

- The following engagement points are critical.
  - The lock pins of the quick-hitch have to protrude into and through the pin slots of the attachment on both sides. It is critical that the pins are in good condition and without visible signs of wear or damage and that the operator align the quick-hitch with the attachment to allow the pins to go through the pin slots.
  - You have to push down both levers until the levers contact the ear plates near the points where the pin bolt goes through the lever, as (A) of the following figure.
- Do not operate the machine or attachment unless all of the preceding conditions are met.

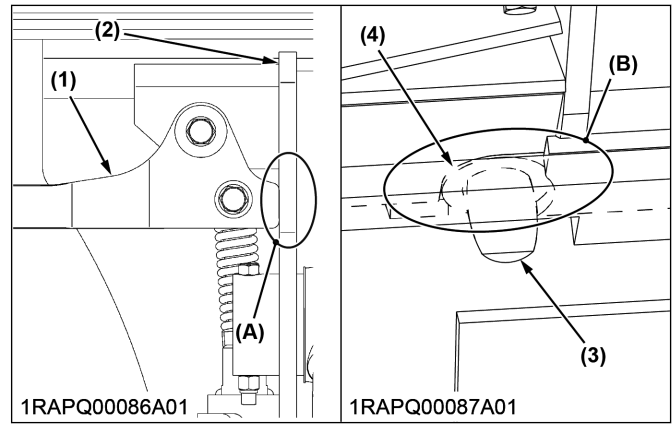

(1) Lever (2) Ear plate (3) Lock pin (4) Pin slot  
 (A) The lever contacts the ear plate at the points (B) The pin protrudes through the slot

10. When pushing the quick-hitch levers into the locked position, visually verify that the lock pins protrude through the slot.
11. When attaching different attachments, visually inspect for broken or damaged pins. If broken or damaged pins are found, replace them before using. Use of broken pins may result in detachment or deformation, causing loss of performance, personal injury or death.

You are now ready to use the attachment.



**WARNING**

To avoid personal injury or death:

- After attaching the attachments of mechanical quick-hitch, make sure that the attachment is securely attached to the quick-hitch, or the attachment may be detached.
- When handling the control lever, you should make sure that the attachment is securely attached to the quick-hitch after setting the change lever to the neutral position, setting the parking-brake-switch to the parking position, lowering the lift arm, and locking all control levers in the neutral position.

**Detaching the attachments**

1. Lower the attachment to ground level with the attachment slightly in the rolled back position.
2. Stop the engine. The parking brake automatically engages.
3. Disconnect the electrical harness and hydraulic lines of the attachment from the lift arms if equipped.
4. Pull the quick-hitch lever up to the unlocked position to release the lock pins.
5. While sitting in the machine operator's seat, start the engine and slowly move the right-control-lever (front-operating-lever) to the dump position until the attachment is pushed away from the quick-hitch.

6. Lower the lift arms so that the quick-hitch mounting plate clears the saddle of the attachment.
7. Back the machine away from the attachment slowly.
8. If an attachment is not going to be attached to the quick-hitch immediately, push the lever of the quick-hitch to the locked position to prevent damage to the lever assembly.

## HOW TO USE THE HYDRAULIC QUICK-HITCH

### WARNING


To avoid personal injury, death or machine damage:


- Never operate or transport attachments which are not attached completely.
- Always replace damaged hardware immediately.

### NOTE :


- Locate the attachments on a level, firm surface when attaching and detaching them from the quick-hitch.

### Attaching attachments

1. Push the hydraulic quick-hitch switch in the unlocked  position and hold it to make sure that the quick-hitch levers are up (unlocked position).

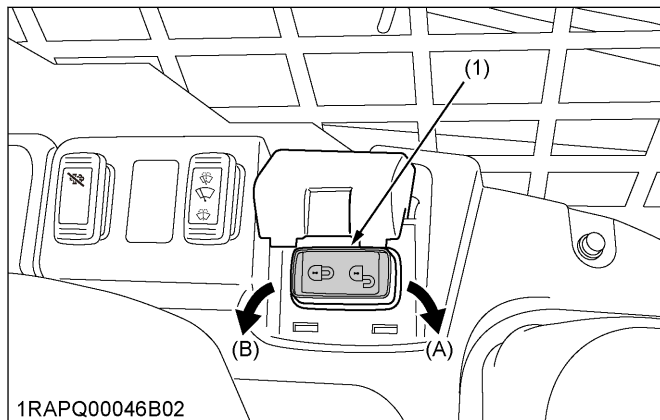


1RAPQ00046B02  
 (1) Hydraulic quick-hitch switch (A) Unlock position  
 (B) Lock position

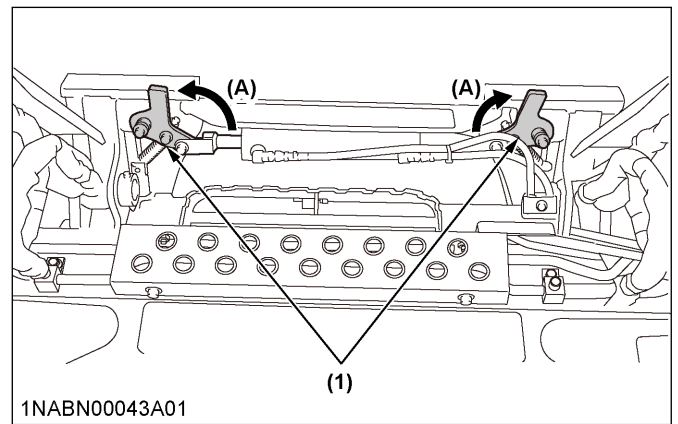


1NABN00043A01  
 (1) Quick-hitch lever (A) Unlock

2. Position the machine squarely in front of the attachment and tilt the quick-hitch forward with the tilt cylinders.

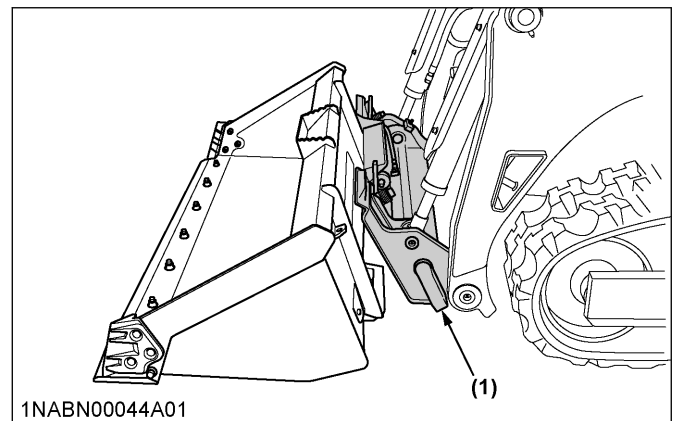

1NABN00044A01  
 (1) Quick-hitch

3. Ease the quick-hitch mounting plate into the saddle of the attachment.
4. Roll the quick-hitch back using the tilt cylinders and raise the lift arms slightly. The back of the attachment should rest against the front of the quick-hitch mounting plate and you should support the weight of the attachment by the lift arms.

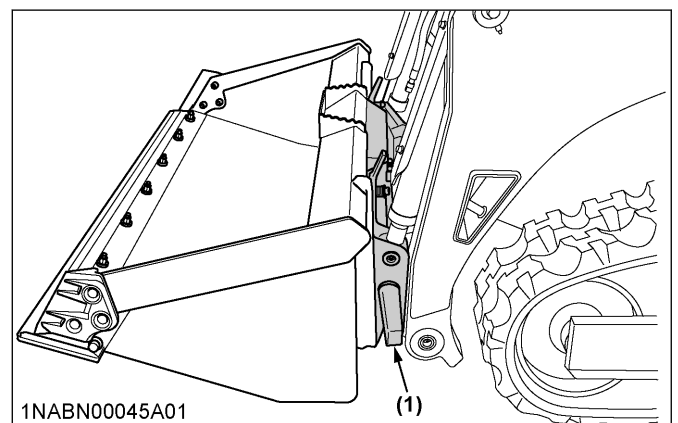


1NABN00045A01  
 (1) Quick-hitch

5. When the attachment is properly seated in the saddle of the attachment and against the front of

## QUICK-HITCH

the quick-hitch mounting plate, push and hold the hydraulic quick-hitch switch in the locked position until the quick-hitch levers are fully in locked position.

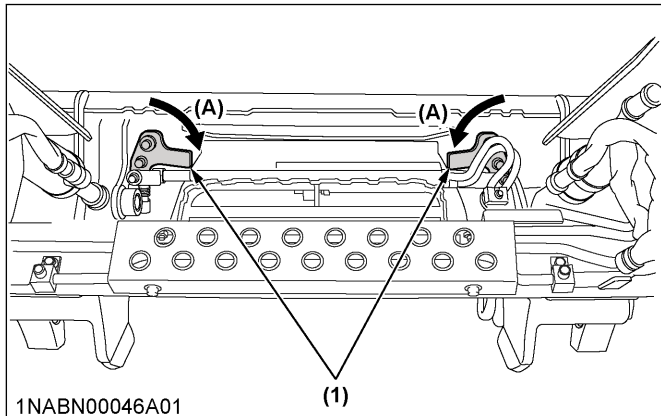

(1) Quick-hitch lever (A) Lock


6. Verify that both lock pins are completely engaged in the base of the attachment.
7. With an attachment in place, lift the lift arms and empty out the bucket.
8. Tilt the bucket downwards and verify that the lock pins are fully engaged.



### DANGER

To avoid personal injury or death:

- The following engagement points are critical.
  - The lock pins of the quick-hitch have to protrude into and through the pin slots of the attachment on both sides. It is critical that the pins are in good condition and without visible signs of wear or damage and that the operator align the quick-hitch with the attachment to allow the pins to go through the pin slots.
  - You have to push down both levers until the levers contact the ear plates near the points where the pin bolt goes through the lever, as (A) of the following figure.
- Do not operate the machine or attachment unless all of the preceding conditions are met.

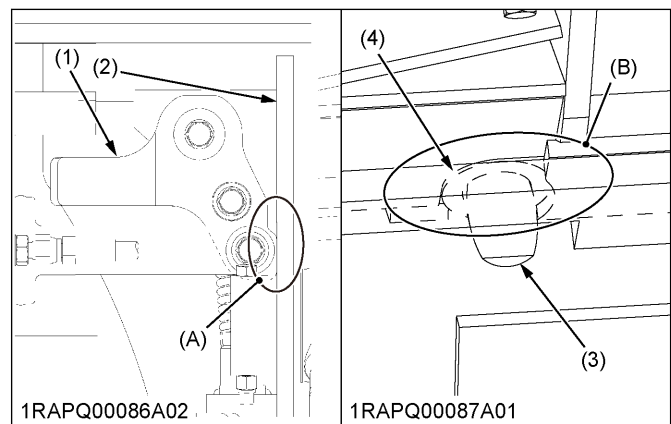

(1) Lever  
(2) Ear plate  
(3) Lock pin  
(4) Pin slot

(A) The lever contacts the ear plate at the points.  
(B) The pin protrudes through the slot.

9. When pushing the quick-hitch levers into the locked position, visually verify that the lock pins protrude through the slot.
10. When attaching different attachments, visually inspect for broken or damaged pins. If broken or damaged pins are found, replace them before using. Use of broken pins may result in detachment or deformation, causing loss of performance, personal injury or death.

You are now ready to use the attachment.

### Detaching attachments

1. Lower the attachment to ground level with the attachment slightly in the rolled back position.
2. Stop the engine. The parking brake automatically engages.
3. Disconnect the electrical harness and hydraulic lines of the attachment from the lift arms if equipped.
4. Start the engine and push the hydraulic quick-hitch switch in the unlocked position. Hold the hydraulic quick-hitch switch in the unlocked position to make sure that the quick-hitch levers are up.
5. While sitting in the operator's seat, slowly move the right-control-lever (front-operating-lever) to the dump position until the attachment is pushed away from the quick-hitch.
6. Lower the lift arms so that the quick-hitch mounting plate clears the saddle of the attachment.
7. Back the machine away from the attachment slowly.

# MACHINE PRECAUTION

## IMPORTANT INFORMATION ON MACHINE OPERATION

- Do not operate the machine on loose rock or gravel (hard or soft).
- Avoid moving the machine when the lift arms and the bucket are in the raised position. If you must move the machine when the lift arms and the bucket are raised, take care to travel at low speeds in order to maintain control of the machine at all times.
- Always avoid working on an incline as the machine can become unstable and rollover, causing serious injury or death.
- Whenever the machine is in motion, keep the bucket as close to the ground as possible. Never change directions when the bucket is in the raised position.
- Always move the machine at speeds that are appropriate to the conditions. Take particular care if you are ever moving through areas where view may be obstructed or when transporting hazardous material.
- Never operate the machine in the vicinity of explosive gases. Always keep exhaust from machine away from any combustible material.
- Never turn or spin the machine at high speed.
- Never approach an incline horizontally, which can cause the track to slide off and cause excessive wearing of tracks.
- Never exceed the operating capacity of the machine.
- Never use the machine to move material or perform work that exceeds the capacity of the bucket or attachments.
- Never use the bucket as a hammer to drive poles or studs into the ground.
- Never dig too deeply with the bucket, which can damage the bucket or the lift arms.
- Avoid hitting the bucket against rocks or similar solid material, which will damage the bucket or the bucket cylinder.
- Never fully extend cylinders to perform an operation. Working while cylinders are fully extended can cause damage from excessive force.
- Never scoop or grade areas while the tilt cylinders are fully extended. Extremely heavy loads apply excessive traction force to the bucket cylinders and can cause damage. Avoid loads that are too heavy.

## 1. Caution while traveling


- Running over large debris as rocks, stumps, blocks, and so on may cause such debris to fly up and damage the machine. Avoid debris whenever possible.
- If obstacles cannot be avoided, travel slowly over them with the bucket in the lowered position. Approach the obstacles so that it is at the center of the tracks.

## 2. Precaution when traveling in high speed

- Whenever traveling over uneven ground surfaces, travel at low speed. Avoid any sudden movements with the machine such as accelerating, stopping, or turning quickly.

## 3. Precautions for use of machine near water


- Whenever working near water, pay particular attention not to submerge any part of the machine especially the rear where the radiator fan could be exposed to water. Exposing the radiator fan to water could damage the parts of machine. Always take care to keep working machine parts out of water, especially when coming out of a shoreline, for example, at a sharp angle.

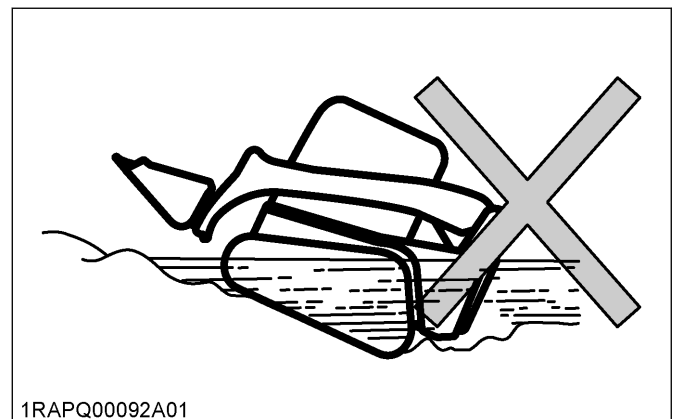

1RAPQ00092A01

### • Permissible water depth

- Never allow the machine to become submerged in water above the bottom of the body.

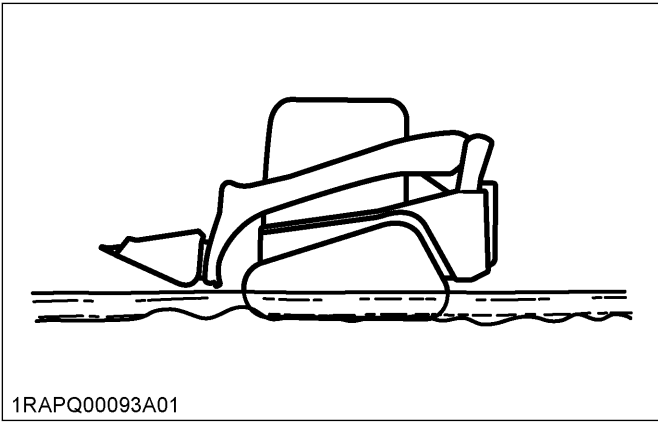

- If parts that require lubrication are exposed to water for long periods of time, make sure that they are re-lubricated with grease to remove old grease.
- After working in the mud and in the water, make sure that there is no invasion of the soil inside the frame. If soil is deposited, clean the internal frame. (See Cleaning inside of the main frame on page 109)
- Never allow the main body of the machine to become submerged in water or sand. Contact your KUBOTA Dealer or Service Outlet if the main body of the machine is exposed to water.

#### 4. Precautions when traveling on inclines

##### WARNING

To avoid personal injury or death:

- Know and understand the machine capabilities and operating conditions, and never exceed any of these conditions. Keep in mind that poor or difficult working conditions may reduce the capability of the machine, requiring a reduction in speed to maintain stability.
- Always lower the bucket to the following height from the ground whenever traveling on an incline. Lower the bucket completely to the ground and stop the machine in case of emergency.


Bucket height	20 cm to 30 cm (8 in. to 12 in.)
---------------	-------------------------------------

- Always travel at low speed when moving on an incline. When moving down a incline, reduce the engine speed (rpm) and set the engine stroke to half or less using the left control lever. Traveling too fast down an incline can lead to loss of control and accident or injury.
- Always make sure that the heavy end of the machine is facing up the incline when traveling either direction on a hill inclined at the following angle or more.

Gradient of a hill	15 degrees
--------------------	------------

- Whenever traveling on an incline, be careful of the possibility of sliding sideways or rolling over.
- Never travel down an incline in reverse.
- Never approach an incline horizontally or diagonally. Always return to a flat surface and redirect the machine.
- Beware of unstable and slippery surfaces such as grass, leaves, wet metal, or ice. The machine can slide very easily even on low grade inclines.

#### Orientation of machine when traveling on an incline

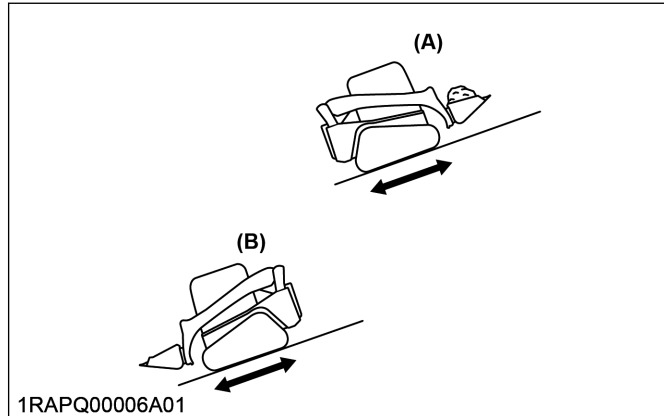

(A) With bucket full (B) With bucket empty

- Braking is automatic with the HST system when the left-control-lever is in the neutral position. Raise the armrests for parking brake.

#### What to do when engine stops suddenly

- If the engine stops suddenly when moving down an incline, follow the following procedure.
  1. Put the control levers into the neutral position.
  2. Stop the machine.
  3. Then restart the machine in the normal manner.

#### 5. Parking on an incline

- It is best to park the machine on firm, level ground using the parking brake. But if you must park the machine on an incline, make sure that you block the tracks to prevent any movement.
- Make sure that the machine is highly visible when parking near streets by using barriers, appropriate caution signs, lights, and so on to avoid any accident or collision with other vehicles.
- Always raise the armrests to the raised position and stop the engine before leaving the operator's seat.
- Never leave the machine running unattended or with the lift arms raised. Whenever the lift arms are raised, always restrain them using the lift-arm-stopper.

Whenever leaving the machine, perform the following procedure.

1. Put the control levers into the neutral position.

2. Reduce the engine speed using the engine-speed-control-dial.
3. Lower the bucket to the ground.
4. Move the armrest in the raised position.
5. Turn off the engine and remove the key.

## 6. Prohibited actions for the machine



### CAUTION

To avoid personal injury:

- Whenever operating the machine, adhere to the following:
  - Always avoid sudden changes in direction or spinning on concrete surfaces. Excessive friction on the tracks will cause them to wear out or become damaged.
  - Always avoid sudden impact to the tracks such as allowing the machine to drop down or hit objects.
  - Chemical such as salt, potassium chloride, ammonium sulfate, potassium sulfate, triple-super phosphate of lime, and so on can damage the track belts. If the tracks are exposed to any of chemical such as salt, potassium chloride, ammonium sulfate, potassium sulfate, triple-super phosphate of lime, and so on, immediately wash thoroughly with water.
  - Avoid scraping the rubber tracks along concrete and other rough surfaces.
  - Take particular care when operating, transporting material, or traveling in snowy conditions or on ice because tracks may slip.
  - Operate the machine between the following temperature for proper functioning of rubber track belts.
  - If machine must be stored for three months or longer, keep it indoors and out of direct sunlight and prevent exposure to the elements to prevent wear on the rubber tracks.

Temperature for proper functioning of rubber track belts	-20 °C and +50 °C (-4 °F to +122 °F)
--	---

### Actions that must not be performed with the machine

- Never move, transport material, or operate the machine in the following places: mud, broken stone, jagged or unstable base rock, iron beams, iron scrapes, iron sheets, and so on.  
Navigating, turning, and moving the machine over sharp material may damage or break the tracks.
- When traveling on riverbeds and other areas where loose gravel can get into the tracks, gravel can cause the tracks to slip off or become damaged.

- Do not use near the oceanfront where salt water can corrode the various parts of the machine.
- Always prevent fuel, oil, salt, or other chemical agents from getting into the tracks, which can cause corrosion to the metal track cores. If the track and its parts are exposed to such material, immediately remove by using water.
- Always avoid traveling on roads directly after they have been resurfaced or on other hot surfaces such fire or metal surfaces under direct sunlight. Excessive heat can cause irregular wear and damage to tracks.
- Do not move material where the surface is unstable and could cause slippage in the tracks. Unnecessary and excessive slipping of tracks will damage and cause abnormal wearing of the tracks.

## 7. Prevention of slippage of rubber tracks

Always follow the following to prevent slippage of rubber tracks.

- Make sure that the tracks are kept at the proper tension.  
Never change directions when there is excessive slack in the track belts.
- When ascending an incline, never change direction at the base of the incline.
- Always avoid operating the machine with one track on a different surface than the other track, or with one track partially on an incline. Make sure that both tracks are on stable, firm surfaces when in motion.

# LIFTING

## LIFTING THE MACHINE

### DANGER

To avoid personal injury or death:

- The instructions for safe lifting are described in the *Lifting the machine* section. Read instructions in the *Lifting the machine* section carefully before lifting the machine. Make sure that the operating personnel read the operator's manual carefully before lifting.

### WARNING

To avoid personal injury or death:

- Do not use damaged chains and lifting hardware.

### IMPORTANT :

- Follow the procedure so the unit cannot roll.
  1. Select a firm, level surface.
  2. Lower the working equipment to the ground.
  3. Stop the engine.
  4. Set the arm rest to the locked position.
  5. Apply the parking brake switch.
- Do not lift loads that exceed the maximum rated capacity of the hoist and attaching hardware.
- Refer to the specifications for attaching hardware and choose hardware suitable for the weight, size, and configuration of the load.
- Assess the center of gravity of the load, position the hook directly over the load, and lift the load so that it remains horizontal.
- Do not enter and do not allow others to enter the working area under the suspended load, and do not move the load over people. Only move the load in an area where the equilibrium can be maintained.
- Always inspect the attaching hardware, including chains, hooks, and master links before each use. Do not use any worn or damaged attaching hardware or if the safety latch is missing.
- Do not use attaching hardware, including chains, hooks, and master links, in extreme temperature or other environmental conditions that exceed the manufacturer's specifications.
- Disengagement of the load can cause severe injury or death. The use of a hook with a safety latch or other master link device does not preclude inadvertent detachment of a slack sling load from the hook or master link. Visually

verify proper engagement of hook or shackle in all instances.

- Comply with all federal, state, and local regulations and safety standards before lifting the machine.
- Do not use the holes on the roof structure to lift the machine.
- Make sure that the lifting chains, hooks, and master links are strong enough to withstand the load being lifted.
- Be sure that the hooks have safety latch.
- Before lifting the machine, be sure that attachments are properly attached.

### Preparations

- Lifting chains (with hook at each end)

Approximate overall length	3.58 m (141 in.)
	2 pc.
Approximate overall length	8.84 m (348 in.)
	1 pc.

- Pads (to protect the machine and lifting chain)
- Master links, 2pc.

Model name	SVL 97-2	
Model type	Open Cab	Closed Cab
CTL weight* <sup>1</sup>	5140 kg* <sup>2</sup> (11332 lbs.)	5250 kg* <sup>2</sup> (11574 lbs.)
Recommended chain working load limit > 2565 kg (5655 lbs.)* <sup>3</sup>	3/8 in. lifting grade 80 alloy	
Recommended master link working load limit > 5125 kg (11300 lbs.)* <sup>3</sup>	Size not specified	
Recommended attachment hardware working load limit > 2565 kg (5655 lbs.)* <sup>3</sup>	Size not specified	

\*1 SVL weight with standard (non-hydraulic) bucket

\*2 CTL weight shown with standard track (320 mm) [12.6 in.].

\*3 Recommended chain, master link, and attachment hardware shall meet OSHA regulations and applicable ANSI (American-national-standards-institute), NACM (national-association-of-chain-manufacturers), and federal standards

### Procedure for connecting chains


#### 1. Locate the chain and position the hook.

- **Front of the machine**

Pass the chain between the front idler and the front track roller, under the machine on each side, as shown in Fig. 1 and Fig. 2.




**Fig. 1 (Chain location at front of the machine)**

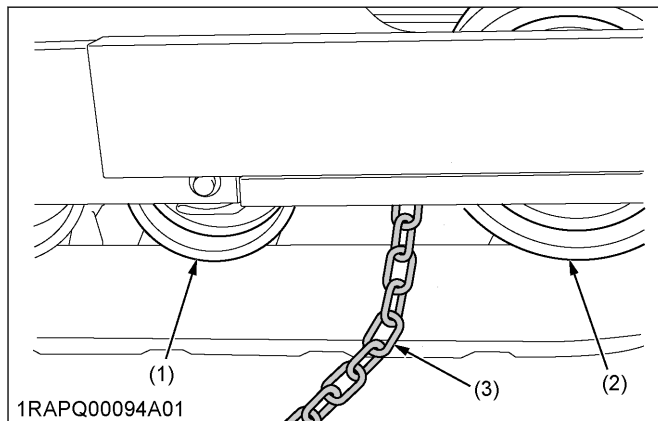

- (1) Front track roller
- (2) Front idler
- (3) Front lifting chain


**Fig. 2 (Front view)**

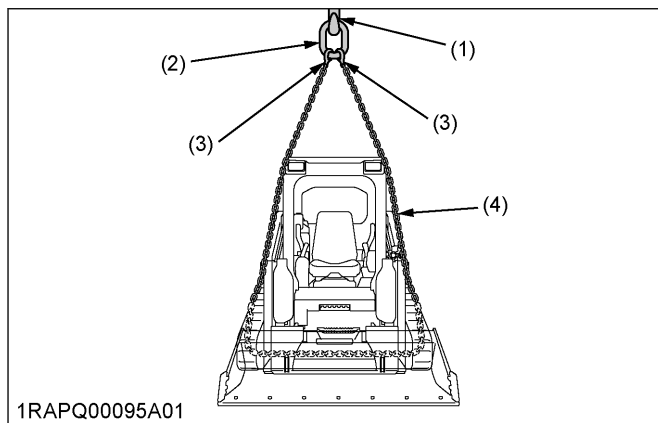

- (1) Hoist hook
- (2) Front master link
- (3) Hook
- (4) Front lifting chain

- **Hook positions at rear of the machine**  
Lifting fixture mount at rear corners of the machine.

**Fig. 3 (Hook positions at rear of the machine)**

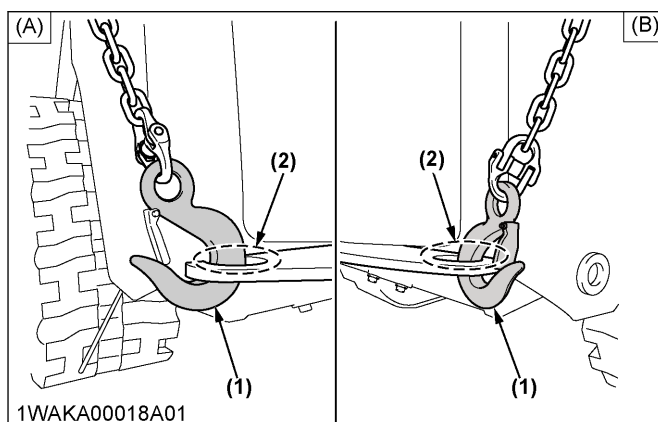

- (1) Hook
- (2) Lifting fixture mount (Rear tie down point)
- (A) LH
- (B) RH

**2. Connect the hook.**

- At the front of the machine, use the following chain length.


Chain length	8.84 m (348 in.)
--------------	---------------------

- a. Pass the lifting chain and the hook between the front-track-roller and the front idler under machine.
  - b. Pass the lifting chain and the hook again between front track roller and front idler at other side.
- Connect both hooks to the front-master-link, and connect the master link to the hoist hook as shown in Fig. 4.
  - At the rear of the machine, use the following chain length.

Chain length	3.58 m (141 in.)
--------------	---------------------

- a. Attach one end at the rear-lifting-fixture-mount and attach the other hook to master link.
- b. Then connect the master link to the hoist hook as shown in Fig. 3 and Fig. 4.

**Fig. 4 (Hoist hook and master links)**

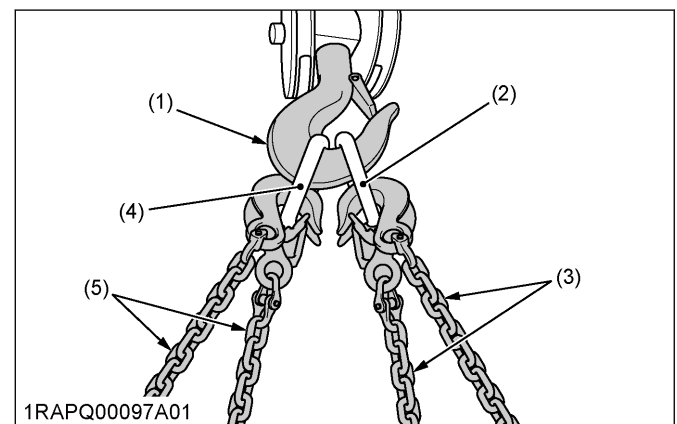

- (1) Hoist hook
- (2) Front master link
- (3) Front lifting chain
- (4) Rear master link
- (5) Rear lifting chain

**IMPORTANT :**

- Be sure to pass the rear-lifting-chains to the sides of the machine body as shown in Fig. 3 and Fig. 5.

**3. Apply the pads.**


Apply the pads at locations shown in Fig. 5 and Fig. 6, where the chains come in contact with the machine to reduce damage of the machine and the chains.

- **Locations to apply the pads**
  - Cab top
  - Lift arm
  - Track


## LIFTING

- Track frames
- Rear lifting chains contact locations (frame and lift arm)

**Fig. 5 (Lifting chain with pads)**

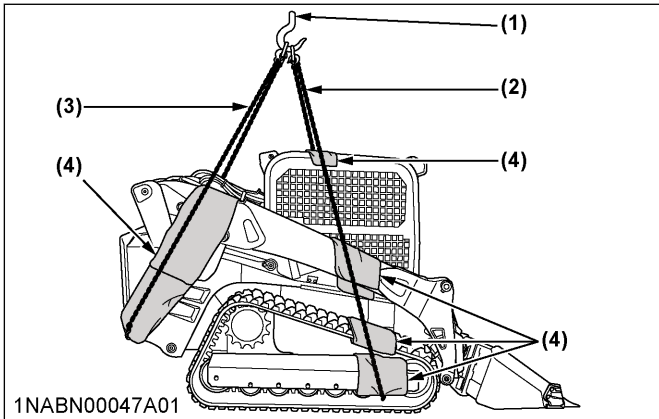

**Fig. 6 (Front lifting chain location)**

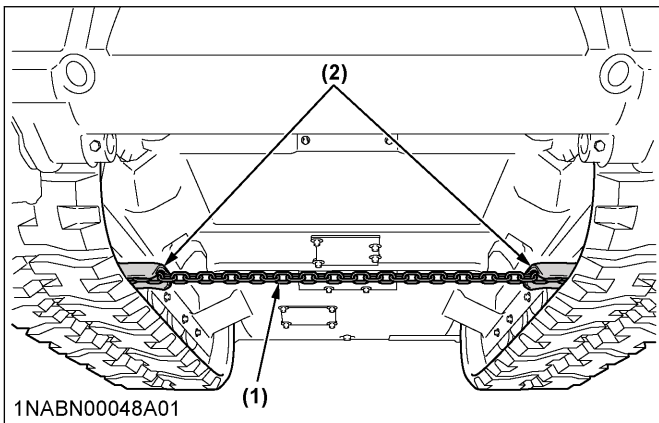

- (1) Hoist hook  
 (2) Front lifting chain  
 (3) Rear lifting chain  
 (4) Pads

Front lifting chain (2)	8.84 m (348 in.)
Rear lifting chain (3)	3.58 m (141 in.)

4. Before lifting the machine, locate the hoist hook at the point which is shown in Fig. 5 and Fig. 6.

### IMPORTANT :

- **Never put yourself around the machine when it is lifted.**
- **Never lift the machine with person in operator station or on the attachment.**

### Procedure for lifting the machine

1. Lift the machine slowly and vertically.
2. Move the machine slowly into place.

# TRANSPORTING

## DANGER

To avoid personal injury or death:

- Make sure that the load capacity of the ramps is greater than the machine and attachment weight.
- Make sure that the ramps are clean, not damaged, and properly secured to the transport bed.
- Position the machine so that the heaviest end of the machine is going up the ramps first.
- Do not change directions when the machine is on the ramp. If a change of direction be necessary, drive off the ramp completely and turn the machine.
- When the machine reaches the point between the ramps and the bed, move the machine very slowly until it reaches the horizontal position on the bed.


## LOADING THE MACHINE ON A TRANSPORT VEHICLE

## WARNING


To avoid personal injury or death:

- When preparing to load or unload the machine, follow the steps in the “Loading the machine on a transport vehicle” section.
- Use a truck or trailer with sufficient size and weight capacity to transport the machine with attachment. Use of truck or trailer with an underrated capacity can cause unpredictable handling and loss of control. Always comply with government transportation laws and regulations.

1. Apply the parking brakes on the truck, and block the drive wheels both sides as shown in the following figure.

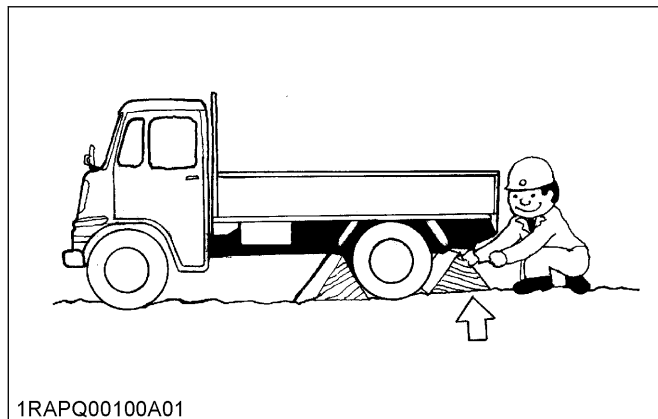


2. Use the mounting brackets to secure the ramps properly to the truck or the trailer.
3. Determine and use the correct length of the ramps to avoid a steep angle of approach as shown in the following figure.

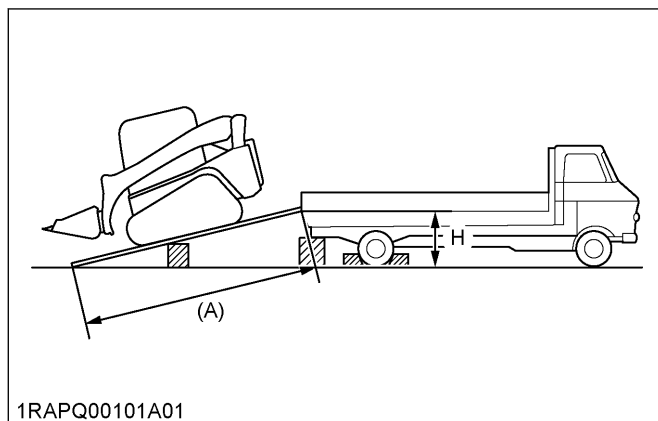


(A)  $4 \times H$  or more

4. If necessary, support the rear end of the bed to prevent front of the truck or trailer from rising.
5. Align the machine with the ramps before traveling on ramps. If the ramps are wet, use caution during loading the machine.
6. Load the machine with empty bucket or no attachment installed, and with the rear of machine going up the ramp first.
7. If the bucket or attachment is installed, avoid the bucket or attachment contact with ramps during travel.
8. Once the machine is loaded, lower the bucket or attachment completely.
9. Stop the engine, remove the key, and set the parking brake.


10. Block the tracks and tie down the machine using two tie-downs at the front and two tie-downs at the rear.

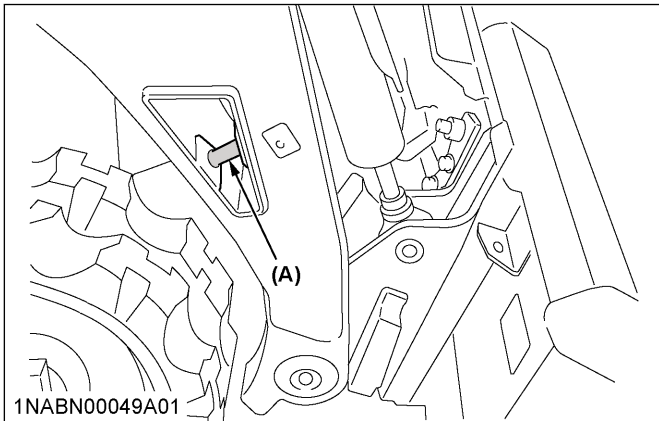

(A) Front tie-down locations (both sides)

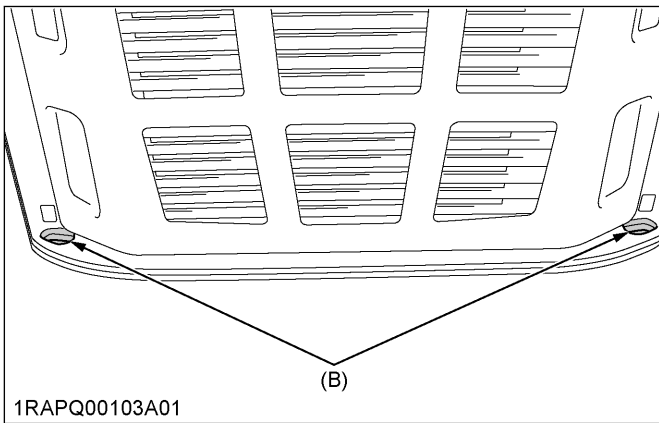


(B) Rear tie-down locations

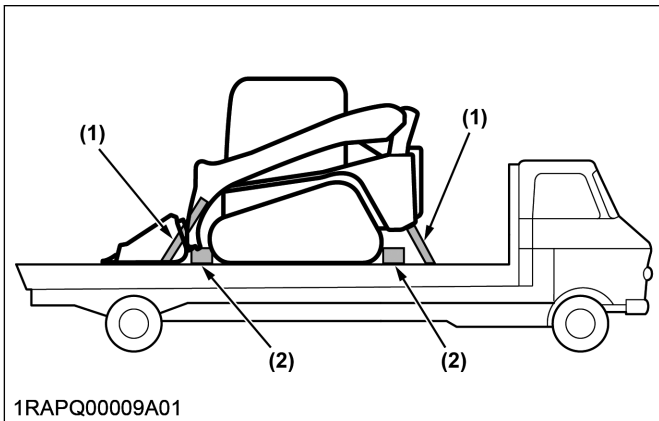

(1) Chain or strap (2) Blocks

11. Depending on the attachment installed, the loader arms may not come in contact with rest stop. Therefore it may be necessary to use the alternate front center tie-down for securement of the machine. Use two separate straps or chains as shown in the following figure and secure the attachment with a separate strap or chain. Consult

your government transportation laws and regulations.

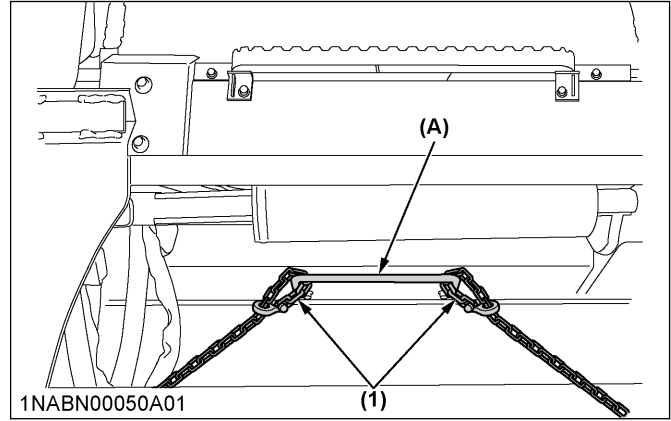

(1) Chain or strap (A) Alternate front tie-down

12. When installing the chains or the strap from tie-down location of the machine to tie-down points of the truck or trailer, maintain proper angles to provide lateral and downward securement.

13. When using alternate or standard tie-down points, be sure to also tie-down the attachment in addition to the machine.

## TOWING AN OPERABLE MACHINE

### WARNING

To avoid personal injury or death:


- Tow only from both rear tie-downs as shown in the figure.
- Towing is only allowed for a short distance at walking speed.
- Use a tow chain or rope and hardware that is rated at least 1.5 times the machine weight. See the *Technical data* section in this operator's manual to find machine weight.

(See SPECIFICATION TABLE on page 25)

### CAUTION


To avoid personal injury:

- Do not tow the machine using the front tie-down points of the attachment located on each side of the lift arms or tie-down point at center of machine.

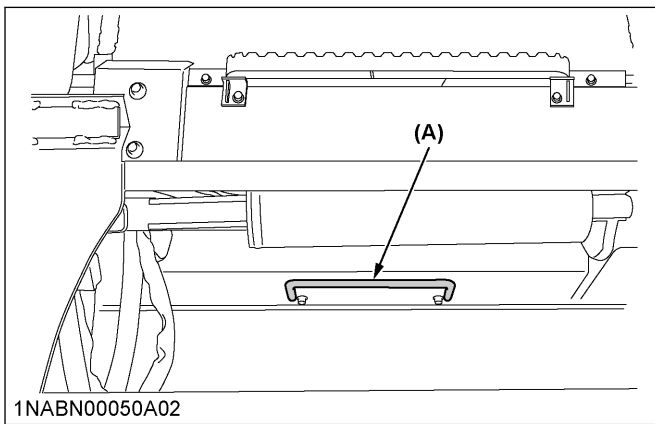

(A) Tie-down point (Do not tow here.)

1. Attach towing hardware using both rear tow points and to the towing machine as shown in the following figure.

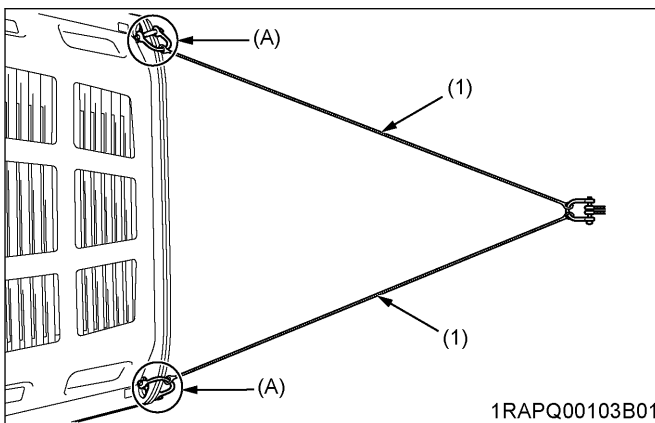

(1) Chain or strap

(A) Rear tow and tie-down points

2. Sit on the operator's seated in the towed machine with the seat belt connected during the recovery process, and assist when towed using the machine movement in the direction of towing. Keep the parking brake released while towing.
3. Tow slowly at a walking pace with recovery machine and towed machine, avoid abrupt loads while towing.

## TOWING AN INOPERABLE MACHINE



### WARNING

To avoid personal injury or death:

- Towing an inoperable machine will damage the hydraulic drive or track system. Contact your local KUBOTA dealer for towing an inoperable machine.

# MAINTENANCE

 **WARNING**

To avoid personal injury or death:

- Before performing maintenance on the machine, place the machine on a firm, flat, and level surface, lower the lift arms slowly to the ground, and stop the engine.

Whether the machine is properly lubricated and maintained directly determines the trouble frequency and service life of the machine. Periodically check and maintain your machine, and you will find in the long run that the jobs can be finished earlier and more economically.

## MAINTENANCE INTERVALS

Shown in the Service Interval Chart below are the hours indicated on the hour meter, practically, it will be convenient to schedule the time of inspection and maintenance according to the calendar (day, week, and month) on the basis of the chart. If the machine is used in harder-than-usual working conditions, check and maintain the machine at shorter intervals.

No.	Check points	Measures	Hour meter indicator							Interval	Ref. page			
			50	250	500	1000	1500	2000	3000					
1	Coolant	check	Daily check							(every 10 hrs)	96			
		change								every 2 years	119			
2	Fuel	check	Daily check							(every 10 hrs)	96			
3	DEF (AdBlue)	check	Daily check							(every 10 hrs)	97			
4	Engine oil	check	Daily check							(every 10 hrs)	98			
		change			○	○	○	○	○	every 500 hrs	111			
5	Hydraulic oil	check	Daily check							(every 10 hrs)	99			
		change				○		○	○	every 1000 hrs	114	*1		
6	Greasing	grease	Daily check							(every 10 hrs)	99			
7	Radiator and oil cooler	check	Daily check							(every 10 hrs)	100			
8	Engine and electrical wiring	check	Daily check							(every 10 hrs)	100			
9	V-belt tension	check	Daily check							(every 10 hrs)	100			
		adjust		○	○	○	○	○	○	every 250 hrs	108			
10	Water separator	drain	Daily check							(every 10 hrs)	101			
11	Evacuator valve	check	Daily check							(every 10 hrs)	101			
		clean	○	○	○	○	○	○	○	every 50 hrs	106			
12	Pre-cleaner	check	Daily check							(every 10 hrs)	102			
13	DPF muffler	check	Daily check							(every 10 hrs)	102			
14	Washer liquid	check	Daily check							(every 10 hrs)	102			
15	Battery condition	check	Daily check							(every 10 hrs)	102			
16	Fuel tank cap	clean	Daily check							(every 10 hrs)	104			
17	Fuel tank	drain	○	○	○	○	○	○	○	every 50 hrs	95			
18	Track tension	check	○	○	○	○	○	○	○	every 50 hrs	105			
19	Air cleaner element	Outer element	clean	○	○	○	○	○	○	○	every 50 hrs	105	*2	@
			replace		○	○	○	○	○	○	every 250 hrs	109	*2	
		Inner element	replace		○	○	○	○	○	○	every 250 hrs	109	*2	

(Continued)

No.	Check points	Measures	Hour meter indicator							Interval	Ref. page			
			50	250	500	1000	1500	2000	3000					
20	Radiator hoses and clamps	check		○	○	○	○	○	○	○	every 250 hrs	107		
		replace									every 2 years	121		
21	Fuel line and intake air line	check		○	○	○	○	○	○	○	every 250 hrs	107		
		replace									every 2 years	121		
22	Inside of main frame	clean		○	○	○	○	○	○	○	every 250 hrs	109		
23	Engine oil filter cartridge	replace			○	○	○	○	○	○	every 500 hrs	112		
24	Water separator filter element	replace			○	○	○	○	○	○	every 500 hrs	112		
25	Fuel filter cartridge	replace			○	○	○	○	○	○	every 500 hrs	113		@
26	Drive unit oil	change		◎	○	○	○	○	○	○	every 500 hrs	113		
27	Hydraulic return filter	replace		◎	○	○	○	○	○	○	every 500 hrs	113		
28	Breather filter	replace			○	○	○	○	○	○	every 500 hrs	113		
29	Hydraulic oil filter	replace	◎		○	○	○	○	○	○	every 500 hrs	114		
30	<b>[Closed cab model only]</b> Front window roller	clean			○	○	○	○	○	○	every 500 hrs	114	*3	
		replace				○		○	○	○	every 1000 hrs	115	*3	
31	Hydraulic suction filter	replace				○		○	○	○	every 1000 hrs	114		
32	Engine valve clearance	adjust				○		○	○	○	every 1000 hrs	115	*3	
33	Injector tip	check						○		○	every 1500 hrs	115	*3	@
34	Oil separator element	replace						○		○	every 1500 hrs	116		@
35	PCV valve	check						○		○	every 1500 hrs	116	*3	
36	EGR cooler	check						○		○	every 1500 hrs	116	*3	@
37	DEF (AdBlue) injector tip	check						○		○	every 1500 hrs	116	*3	
38	DEF (AdBlue) hoses	check						○		○	every 1500 hrs	116		
39	Alternator and starter motor	check							○		every 2000 hrs	116		
40	EGR system	check								○	every 3000 hrs	116	*3	@
41	Turbo charger	check								○	every 3000 hrs	116	*3	@
42	DPF	clean								○	every 3000 hrs	116	*3	@
43	Filter in DEF (AdBlue) pump	replace								○	every 3000 hrs	117		@
44	DEF (AdBlue) injector	check								○	every 3000 hrs	117	*3	@
45	Filter of DEF (AdBlue) tank	replace								○	every 8000 hrs	117	*3	@
46	Quality of DEF (AdBlue)	check									every 3 months	117	*3	
47	Exhaust manifold (crack, gas, leakage and mounting screw)	check									every 1 year	118	*3	
48	Intake air line for air leaks	check									every 1 year	118	*3	
49	Boost sensor and AFS (Air flow sensor)	check									every 1 year	118	*3	
50	Condition of DPF muffler	check									every 1 year	118	*3	
51	DPF differential pressure sensor and piping for gas leak	check									every 1 year	118	*3	
52	DPF exhaust gas temperature sensor	check									every 1 year	118	*3	
53	EGR and piping for gas leak	check									every 1 year	118	*3	
54	Antifrost heater for oil separator (CCV heater)	check									every 1 year	118	*3	
55	CCV internal pressure switch	check									every 1 year	118		
56	Relief valve	check									every 1 year	119	*3	
57	Hydraulic hose	replace									every 2 years	119	*3	

(Continued)

No.	Check points	Measures	Hour meter indicator						Interval	Ref. page			
			50	250	500	1000	1500	2000					3000
58	Radiator system	rinse								every 2 years	119		
59	Closed breather related rubber piping	replace								every 2 years	121	*3	
60	DPF differential pressure sensor rubber piping (Front and back)	replace								every 2 years	122	*3	
61	Suction pipe downstream the AFS (Air flow sensor)	replace								every 2 years	122	*3	
62	Boost sensor pressure rubber piping	replace								every 2 years	122	*3	
63	EGR cooler hose	replace								every 2 years	122	*3	
64	Plastic parts and synthetic leather	clean								service as required	122		

**IMPORTANT :**

- Perform the job indicated by © at the first operation.
- The listed items (@ marked) are registered as emission related critical parts by KUBOTA in the U.S.EPA non-road emission regulation.  
As the engine owner, you are responsible for the performance of the required maintenance on the engine according to the preceding instruction.  
Please see the *Warranty Statement* in detail.
- When using biodiesel, be sure to check the maintenance requirements of biodiesel fuel as the intervals will change in some of the items.

\*1 When using a hydraulic hammer, change hydraulic oil and return filter according to the table on Changing the hydraulic oil including replacing the suction filter and the return filter in the hydraulic tank on page 114.

\*2 Clean and replace the air cleaner element more frequently if used under dusty conditions. When the filter is very dirty from dusty conditions, replace the filter.

\*3 Consult your local KUBOTA dealer for this service.

**Air-conditioner**

No.	Check points	Measures	Hour meter indicator						Interval	Ref. page			
			50	250	500	1000	1500	2000					3000
1	Air filter	clean		○	○	○	○	○	○	every 250 hrs	109	*1	
		replace				○		○	○	every 1000 hrs	-	*1	
2	Air-conditioner condenser	check		○	○	○	○	○	○	every 250 hrs	110		
3	Air-conditioner pipes and hose	check								every 1 year	118		
		replace								every 2 years	121		
4	Refrigerant (gas)	check								service as required	122		

\*1 Clean and replace the air cleaner element more frequently if used under dusty conditions. When the filter is very dirty from dusty conditions, replace the filter.

# OPENING AND CLOSING OF COMPONENTS

## 1. Opening and closing the rear door

**WARNING**

To avoid personal injury or death:

- When opening the rear door, open it firmly to the locked position.
- When opening and closing the rear door, be careful not to get your hands or other parts of your body caught.


**Opening**

1. Pull the lever and open the rear door.
2. Insert the pin into the locked position to fix the rear door.


**Closing**

1. Be sure to close the engine hood before closing the rear door.
2. Support the rear door by hand, remove the pin from the locked position, and insert it into original position.
3. Close the rear door firmly until the lever is fully returned.




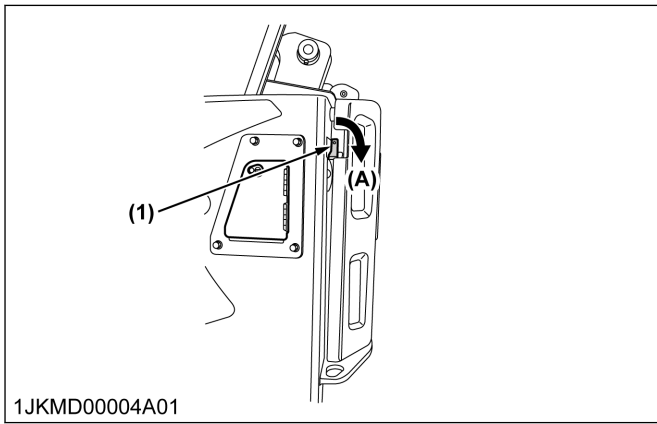

(1) Lever (A) Pull

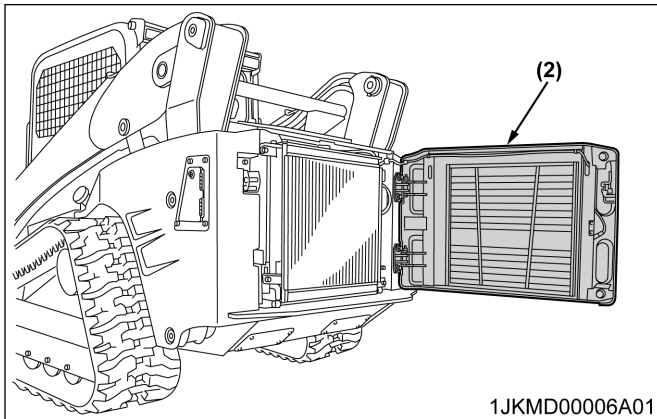

(2) Rear door

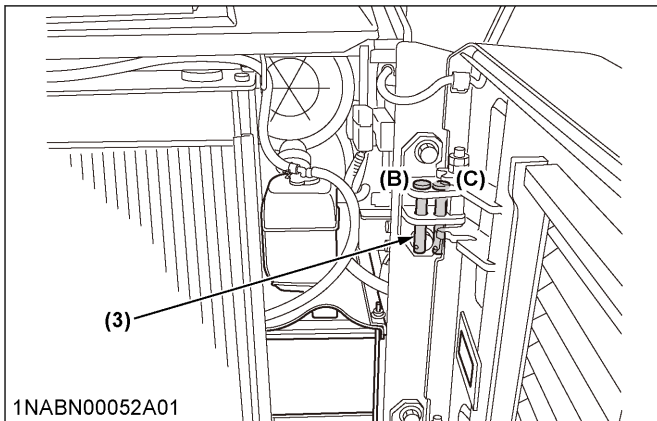

(3) Pin (B) Original position (C) Locked position

## 2. Opening the engine hood


### **! WARNING**

To avoid personal injury or death from contact with moving parts:

- Never open the engine cover while the engine is running.
- Do not touch the muffler or the exhaust pipes while they are hot. Severe burns could result.

- When opening and closing the engine hood, be careful not to get your hands pinched or other parts of your body caught.

1. Hold up the engine hood and fix it with the stay rod.

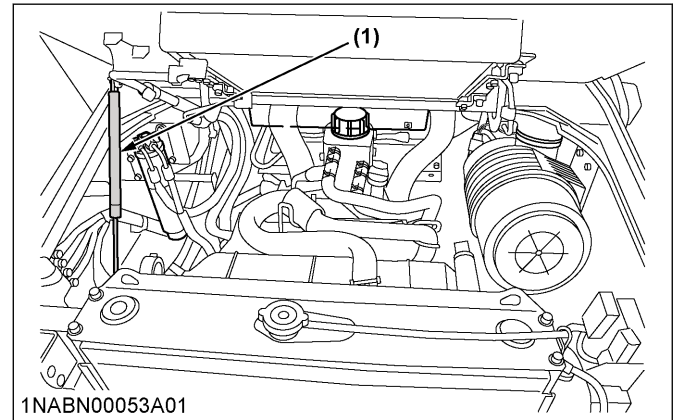

(1) Stay rod



## 3. Detaching the radiator and the oil cooler

### **! WARNING**

To avoid personal injury or death:

- Always stop the engine and remove the key before checking the radiator and the oil cooler.
- Wear the eye protection when cleaning with compressed air.
- Allow the engine and radiator to cool down completely before attempting maintenance on the radiator or oil cooler. A hot radiator can cause severe burns and/or injury.

1. Remove the 3 bolts and detach the radiator and the oil-cooler-tilt-stopper.

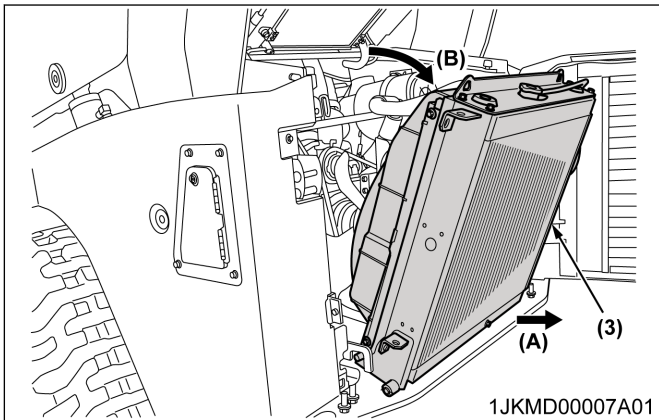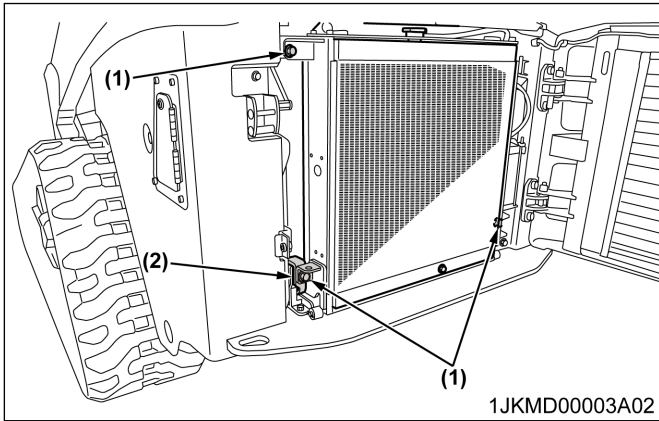


- (1) Bolts
- (2) Radiator and oil cooler tilt stopper
- (3) Radiator and oil cooler
- (A) Pull backward
- (B) Tilt down

- a. At first pull the radiator and the oil cooler backward (A).
- b. Tilt it down (B).


**IMPORTANT :**

- Before tilting the radiator and the oil cooler, unhook the radiator hose from the stay. Before positioning the radiator and oil cooler back in place, secure the radiator hose to the stay so that the hose does not get caught between the shroud and the engine.

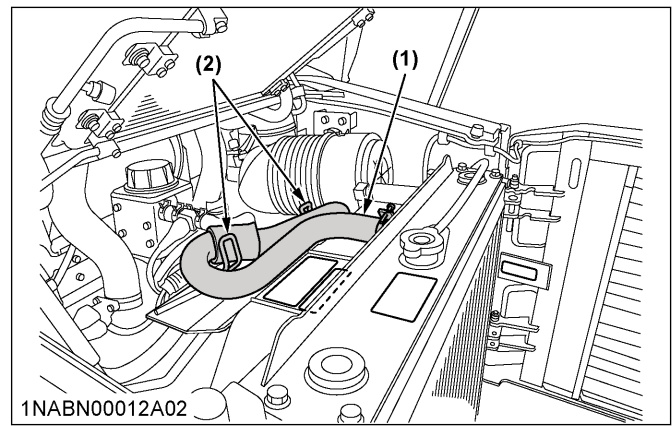

- (1) Radiator hose
- (2) Stay

2. Place the radiator and the oil-cooler-tilt-stopper to prevent the tilted radiator and oil cooler from falling forward.

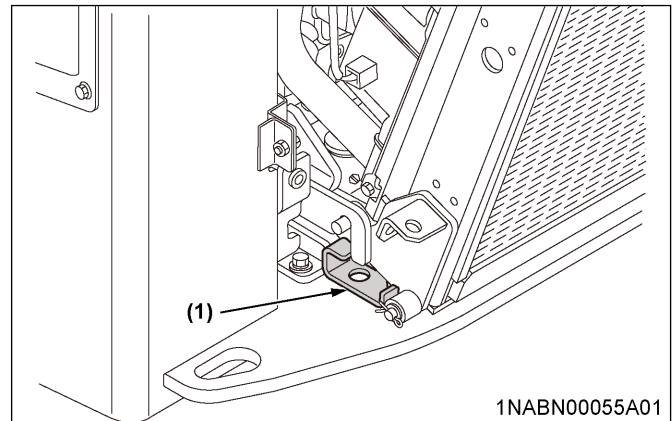


- (1) Radiator and oil cooler tilt stopper

**4. Where to keep the operator's manual**


Keep the operator's manual in the operator's-manual-storage-box at the back of the operator's seat.

[Open cab]


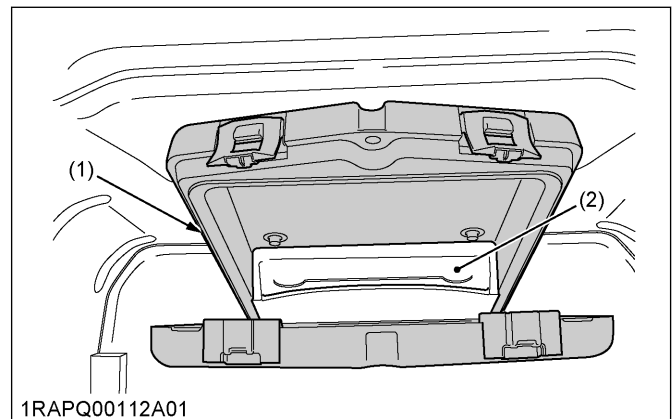


- (1) Operator's manual storage box
- (2) Storage space box

**[Closed cab]**

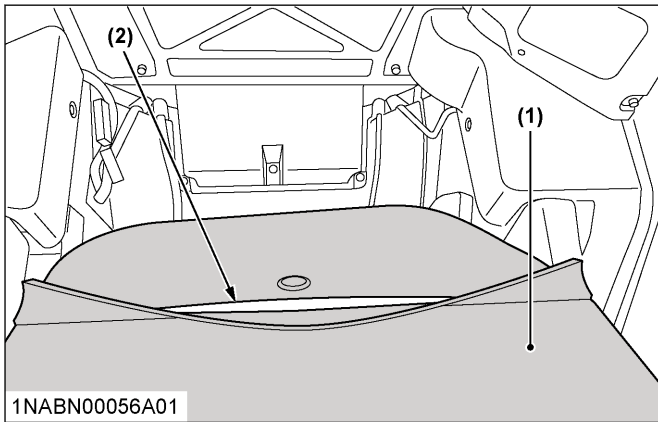

(1) Seat (2) Storage space

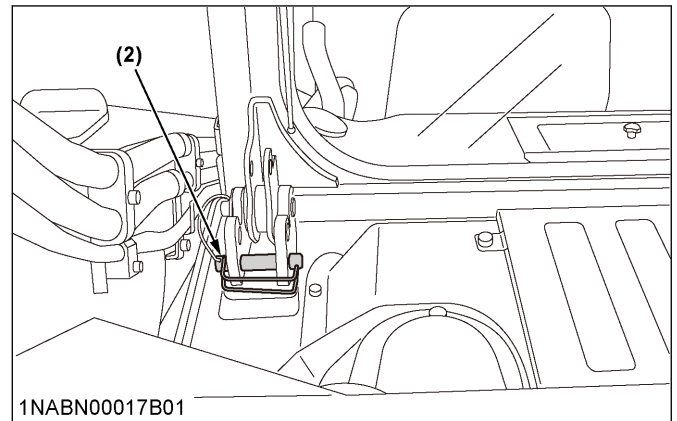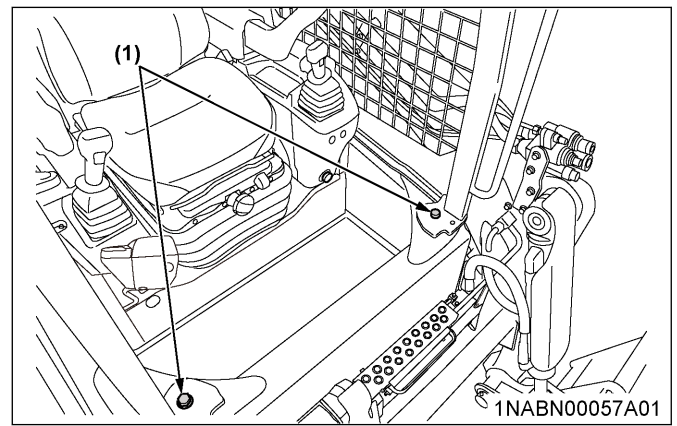

(1) Lock bolt (2) Stopper pin

### 5. Tilting up the cab

**! WARNING**

To avoid personal injury or death:


- Raising or lowering the cab while the engine is running may cause the machine to move, and cause personal injury or death. Place the machine on a firm, flat and level surface, lower the lift arms slowly to the ground and stop the engine before raising or lowering the cab.
- When tilting the cab up, support it firmly with the stopper pin to prevent it from falling.
- Do not enter beneath the cab, while raising or lowering the cab.
- More than one person may be needed to tilt the cab.

For inspection and maintenance, the cab is designed so that you can tilt up it.

**Raising (Tilt up)**


1. Select a firm, level surface, lower the lift arms fully to the ground, and stop the engine.
2. Set the armrest to the raised position.
3. Remove the stopper pin from rear of the machine and remove the lock bolts from the front of the machine.

4. Slowly raise the cab until the cab is all the way up and the latching mechanism engages.

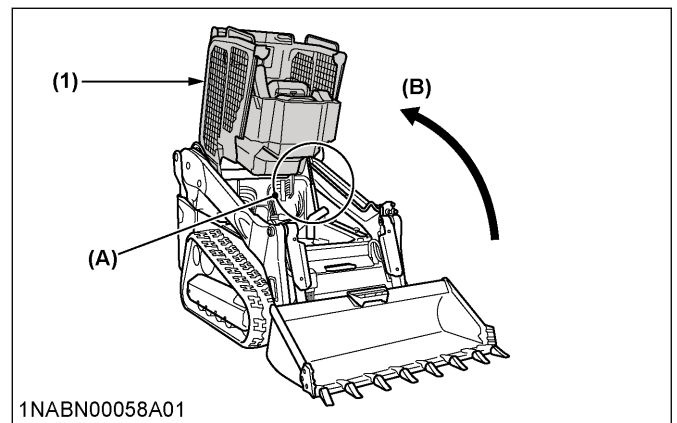


(1) Cab (A) Fig [A] (B) Raise

Fig [A]

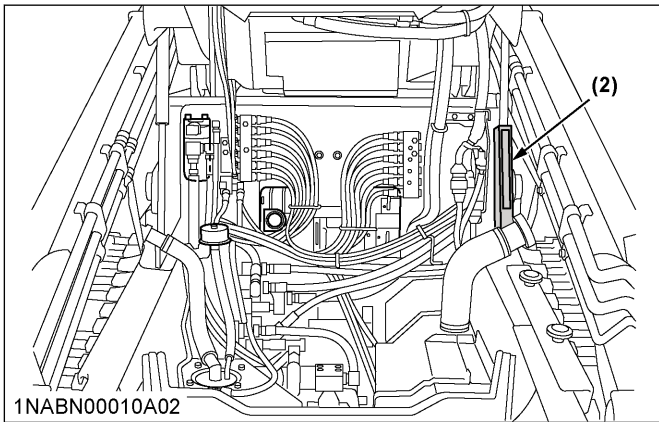

(2) Latching mechanism


5. Insert the stopper pin into the locked position to fix the cab.

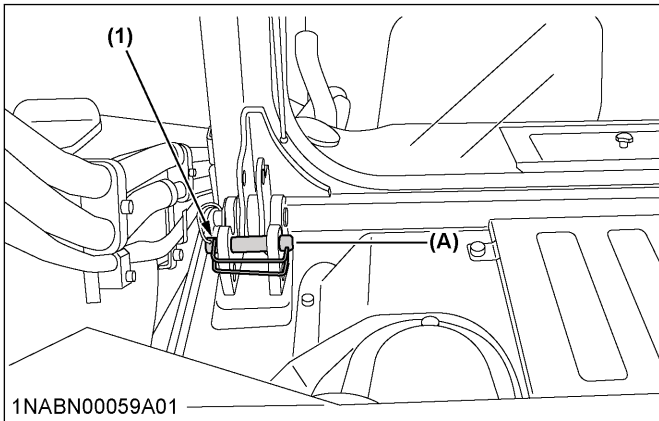

(1) Stopper pin (A) Locked position



**Lowering (Tilt down)**

1. Remove the stopper pin.
2. Support the cab and release the latching mechanism.

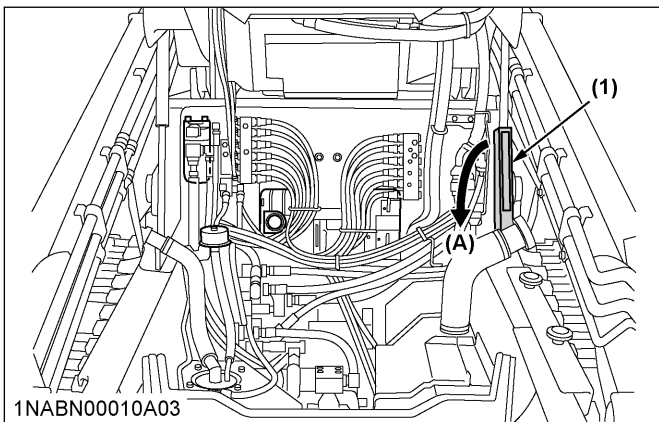

(1) Latching mechanism (A) Release

3. Lower the cab slowly all the way down.
4. Tighten the lock bolts with correct tightening torque, and reinsert the stopper pin into the storage position.

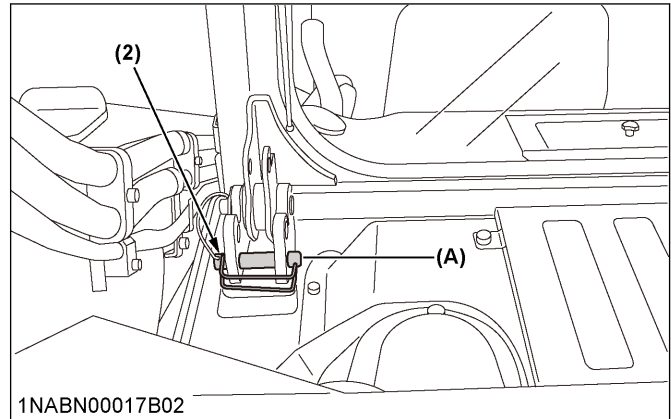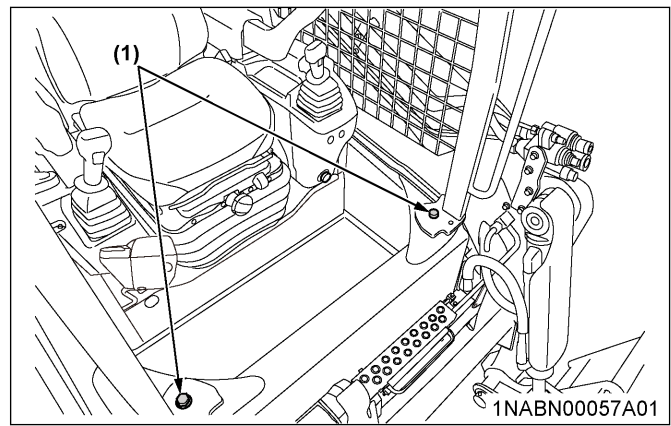

(1) Lock bolt (A) Storage position (2) Stopper pin


Tightening torque	77.5 N · m to 90.2 N · m (57.2 ft · lbf to 66.5 ft · lbf)
-------------------	--

## DISCHARGING MUD FROM OPERATOR CAB AND MAIN FRAME

### 1. Discharging mud from the operator CAB


1. With loosening the bolts, remove the floor outlet.

#### Open cab

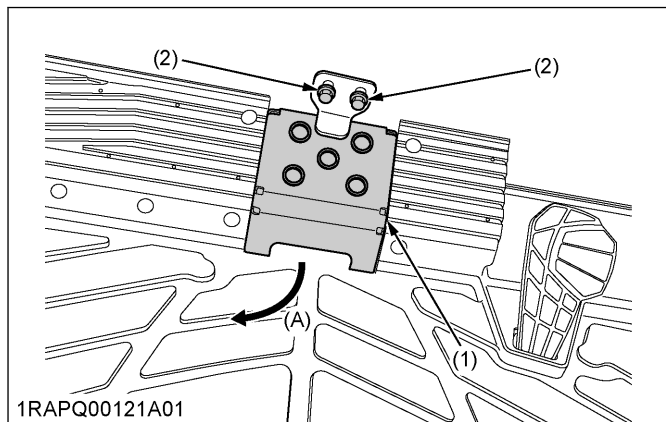

- (1) Floor outlet  
(2) Bolts  
(A) Remove

#### Closed cab

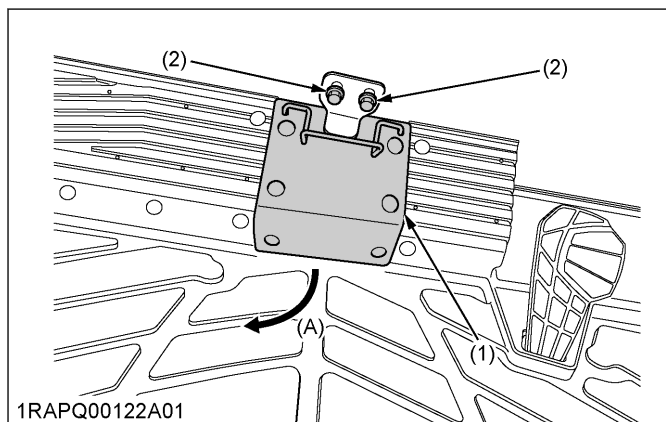

- (1) Floor outlet  
(2) Bolts  
(A) Remove

2. Discharge mud on the floor through the hole.

### 2. Discharging mud from the main frame


#### **! WARNING**

To avoid personal injury or death:

- Before entering underneath the machine, check your surroundings, ensure its safety and remove the key.
- The plate on the bottom of the main frame may get heavy with accumulated mud. In case plate of the bottom of the main frame suddenly falls,

do not get under the plate and remove with much care.

1. Tilt the cab.
2. Open the rear door and tilt the radiator.
3. Open the plates on the bottom of the main frame.

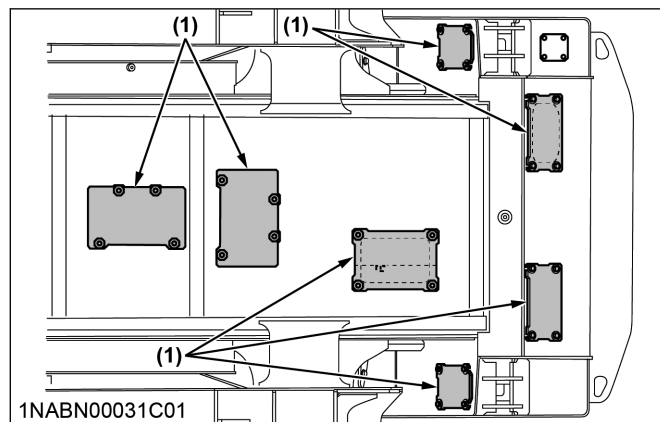

- (1) Plates

4. Discharge mud on the main frame to the hole.

## DAILY CHECKS

For your own safety and to assure the long life of your machine, carry out a careful check before each operation.

### 1. Daily check items before starting the machine

In order to avoid damage, it is important to check the condition of the machine before starting.

#### **! WARNING**

To avoid personal injury or death:

- Perform the maintenance work on the machine only on level ground with the engine off and the armrest in the raised position.

#### Checks

- Go around the machine and check for visual damage and wear.
- Check the coolant level.  
(See Checking the coolant level on page 96)
- Check the fuel level.
- Check the DEF (AdBlue) level.
- Check the engine oil level.
- Check the hydraulic fluid level.
- Check the air cleaner warning indicator.
- Check all control lamps, indicators, and the hour meter.
- Check the light system.
- Check the seat belt and the ROPS and FOPS safety device.
- Check the diesel-particulate-filter (DPF) muffler.
- Check the condition of the safety labels.

(See Care for safety labels on page 22)


## 2. Checking the coolant level

### WARNING

To avoid personal injury or death:

- Place the machine on a firm, flat, and level surface, lower the lift arms slowly to the ground, and stop the engine.
- Do not open the radiator cap right after the engine has been stopped. Serious burns can occur from contact with escaping hot coolant fluid.
- Check the coolant level in the recovery tank only after the engine has cooled down.
- Remove the radiator cap only if absolutely necessary.

1. Check to see that the coolant level is between the **[FULL]** and **[LOW]** marks of recovery tank.  
When the coolant level drops due to evaporation, add water only up to the full level.  
In case of leakage, add antifreeze and water in the specified mixing ratio up to the full level.

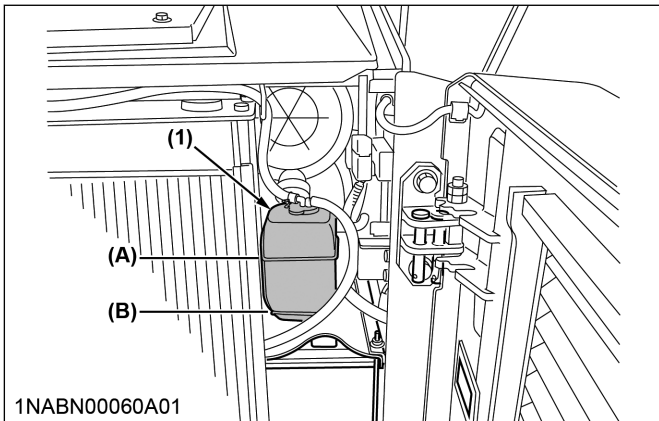

1NABN00060A01

- (1) Recovery tank  
(A) FULL  
(B) LOW

### IMPORTANT :

- Do not fill the recovery tank over the **[FULL]** marking.
- Do not fill with dirty or salty water.

## 3. Checking the fuel level

### WARNING

To avoid personal injury or death:

- Stop the engine and remove the key before fueling.
- Do not smoke while fueling.
- Be sure to tighten the fuel cap after refueling.


### IMPORTANT :

- According to the temperatures, use the proper diesel fuel as follows.

Temperatures	Diesel fuel
Over -5 °C (+23 °F)	No.2-D diesel fuel
Under -5 °C (+23 °F)	No.1-D diesel fuel

- Make sure that the fuel tank will not run empty. Air will enter the fuel system, and must be purged before restarting engine.
- Be very attentive to the remaining fuel for the engine not to stall. If the engine stalls, it may not restart for some time to protect the emission purifying device.
- See Purging of the fuel system on page 122.
- To prevent condensation (water) accumulations in the fuel tank, fill the fuel tank full before parking overnight.
- The DEF (AdBlue) tank cap is blue. Do not add DEF (AdBlue) to the fuel tank. Also, do not add diesel fuel to the DEF (AdBlue) tank.


1. Turn the starter key to the **[RUN]** position.
2. Check the fuel level by the fuel gauge indicator.

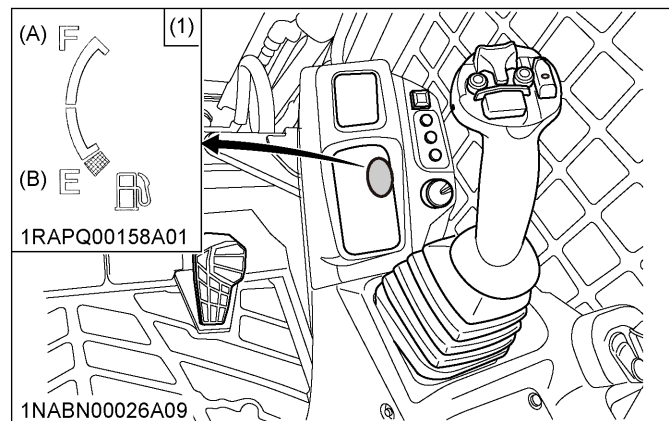

1RAPQ00158A01

- (1) Fuel gauge indicator  
(A) Full  
(B) Empty

- If necessary, open the fuel tank cap with the starter key and fill the fuel.  
(See Fuel gauge indicator on page 29)

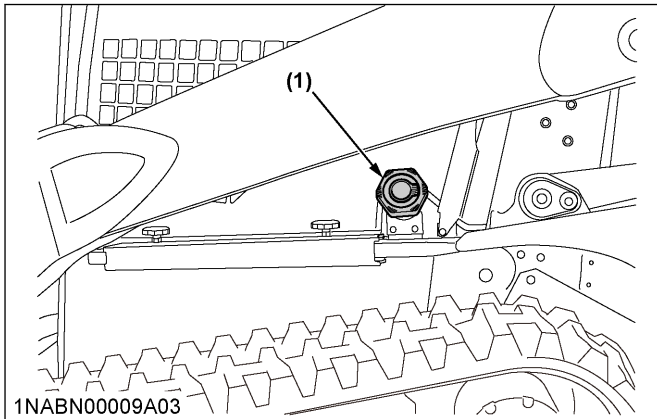

(1) Fuel tank cap

Fuel tank capacity	111 L (29.3 US gal)
--------------------	------------------------

### 4. Checking the DEF (AdBlue) level and adding the fluid

#### **WARNING**

To avoid personal injury or death:

- Before adding DEF (AdBlue), stop the engine.

#### **CAUTION**

To avoid personal injury, note the following when handling DEF (AdBlue):


- If DEF (AdBlue) gets into your eyes, immediately rinse your eyes with a large amount of water for at least 15 minutes and consult a doctor.
- Do not swallow DEF (AdBlue). If you have accidentally swallowed DEF (AdBlue), seek medical attention immediately.
- If DEF (AdBlue) gets on your skin, rinse immediately with water. In rare cases, DEF (AdBlue) may irritate the skin.
- If DEF (AdBlue) gets on your clothes or shoes, wash it off immediately. Simply wiping off or leaving DEF (AdBlue) on clothes or shoes will leave a white residue.

For more details, obtain and read the Safety Data Sheet (SDS) from the DEF (AdBlue) supplier.

Before starting the operation, check the DEF (AdBlue) level in the DEF (AdBlue) tank. The remaining amount of DEF (AdBlue) is shown on the DEF (AdBlue) level indicator on the meter panel.

If the DEF (AdBlue) runs low, the low-level warning icon turns on and the buzzer sounds. If you continue running the machine in its current state, the engine

output will be limited by about 50%. If operation is continued, the engine will be limited to idling. Purchasing DEF (AdBlue) from a KUBOTA Dealer is recommended. The product is also available at gas stations, truck stops and specialty shops. Be sure to use an ISO 22241 compliant product. Using noncompliant products may lead to engine failure.

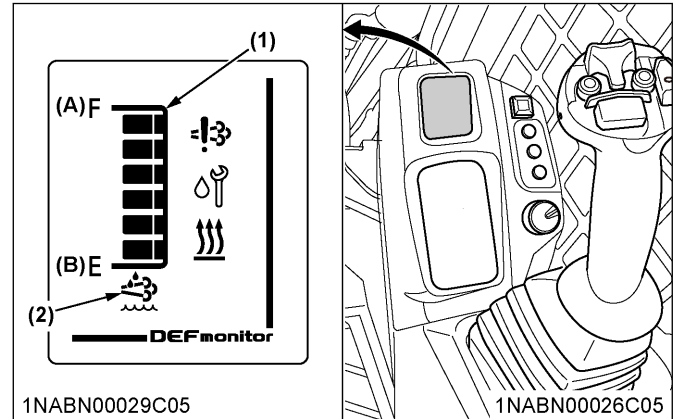

(1) DEF (AdBlue) level gauge (A) Full  
(2) Remaining DEF (AdBlue) warning lamp (B) Empty

- Before adding DEF (AdBlue) to the DEF (AdBlue) tank, clean the area around the nozzle and supply port to prevent foreign matter such as soil and dust from entering.
- In order to maintain the performance of the SCR system, it is recommended to refill the DEF (AdBlue) tank with DEF (AdBlue) each time the fuel tank is refueled.
- Be sure to turn the key switch to **[STOP]** position before adding DEF (AdBlue). After stopping the engine, the SCR system continues to operate for up to about 25 minutes. Do not add DEF (AdBlue) before the SCR system stops. Otherwise, DEF (AdBlue) may overflow from the breather hose of the DEF (AdBlue) tank.
- If DEF (AdBlue) is stored in a reusable container, periodically clean and refill it. If the container is dirty, wash with distilled water. If distilled water is not available for washing the container, rinse with clean water first, then rinse again with DEF (AdBlue) before refilling.

#### 4.1 Adding DEF (AdBlue) in the DEF (AdBlue) tank


- Set the starter switch to the **[STOP]** position.
- Open the cover, slightly remove the DEF (AdBlue) tank cap and wipe clean the cap and filler port to remove dust and mud. (The cap is colored in blue.)
- Slowly remove the tank cap to fully open it.
- Replenish the tank with DEF (AdBlue) to its specified level.

5. Screw the tank cap to tighten it up to the DEF (AdBlue) tank.
6. Make sure the tank cap is tight, and close the cover.

DEF (AdBlue) tank capacity	13.0 L (3.4 US gal)
----------------------------	---------------------

**IMPORTANT :**

- The DEF (AdBlue) tank cap is blue. Do not add DEF (AdBlue) to the fuel tank. Also, do not add diesel fuel to the DEF (AdBlue) tank.
- If anything other than DEF (AdBlue) is mixed into the DEF (AdBlue) tank and the engine is started, the SCR system may fail. Do not start the engine if the DEF (AdBlue) is contaminated with diesel fuel. Consult your KUBOTA Dealer immediately.
- The warranty does not cover failures caused by adding or mixing anything other than DEF (AdBlue) into the DEF (AdBlue) tank. If that occurs, all repair costs will be the customer's responsibility.

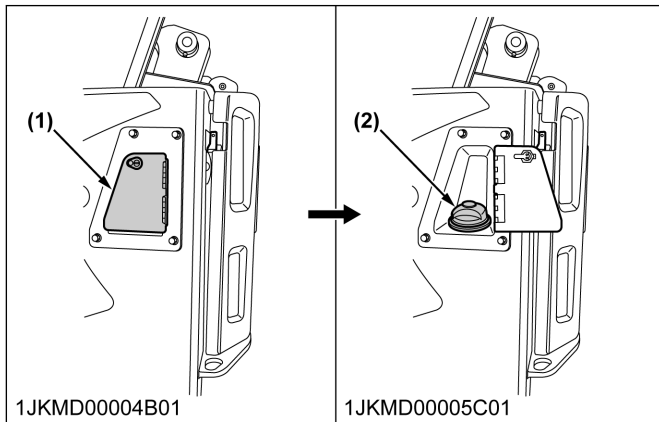

(1) Cover  
(2) DEF (AdBlue) tank cap (Blue tank cap)

- If contamination such as above has occurred, inspection of the SCR system by your local dealer is necessary. Repair or overhaul as needed.
- When removing the DEF (AdBlue) tank cap, be careful not to allow mud or any debris into the DEF (AdBlue) tank. Otherwise, the DEF (AdBlue) filter may become clogged or the DEF (AdBlue) quality degraded, possibly resulting in a SCR system failure.
- Do not stand on or place anything on the DEF (AdBlue) tank as the tank, piping and sensor damage may result.
- Do not tamper with the exhaust pipe and muffler. Do not relocate the DEF (AdBlue) tank, either. Such action may adversely affect the exhaust gas purifying performance.
- When DEF (AdBlue) stuck on the filler port has dried up, white powder may be found. This is nothing unusual. Wipe it off carefully

so as not to allow it into the DEF (AdBlue) tank.

## 5. Checking the engine oil level

**! WARNING**

To avoid personal injury or death:


- Stop the engine and remove the key before checking the oil level.

**IMPORTANT :**

- Use the engine oil with the correct viscosity according to the outside temperature.
- After stopping the engine and remove the key, wait five minutes, then check the oil level. Park the machine on level ground.
- A small amount of fuel that is used for the DPF-regeneration may get mixed with the engine oil, which can increase the oil level slightly.
- Do not repeat or interrupt the DPF-regeneration process unnecessarily. Repetition and interruption of the process may increase the small amount of fuel that gets mixed with the engine oil, thereby degrading it.
- If the oil rises above the oil level gauge upper limit, it means that the oil has been diluted too much, resulting in a trouble. In such case, immediately change the oil for new one.

To check the oil level, follow the following procedure.

1. Draw out the dipstick.
2. Wipe the dipstick clean.
3. Replace the dipstick.
4. Draw the dipstick out again.
5. Check to see that the oil level lies between the two notches.
6. If the level is too low, add new oil to the prescribed level at the oil filling port.

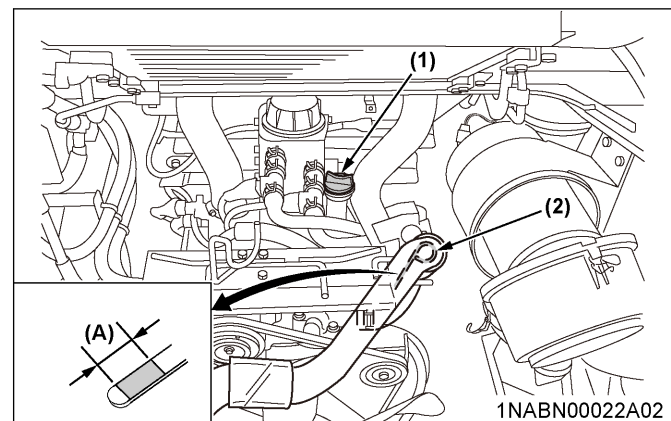

(1) Oil filling port  
(2) Engine oil dipstick  
(A) Required oil level range



## 6. Checking the hydraulic oil level

**⚠ WARNING**

To avoid personal injury or death:

- Stop the engine and remove the key before checking the oil level.

**IMPORTANT :**


- Before filling oil, wipe away all sand and dust from around the oil port. Make sure to use an identical type of hydraulic fluid.
- The machine has been filled with hydraulic fluid before delivery.

(See **RECOMMENDED OILS, GREASES, AND FUELS** on page 142)


**Do not mix different oils.**

1. Park the machine on a firm, flat, and level surface.
2. Lower the lift arms slowly to the ground.
3. Tilt down the attachments.
4. Stop the engine.
5. Check the oil level as to whether it lies on the center of the gauge at normal temperature.

Normal temperature	10 °C to 30 °C (50 °F to 86 °F)
--------------------	------------------------------------

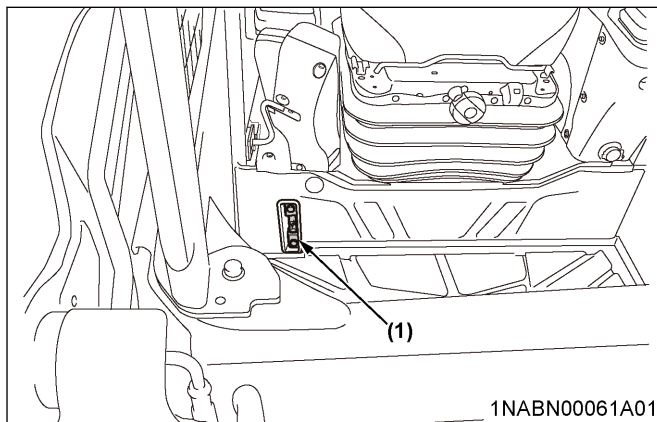

(1) Gauge

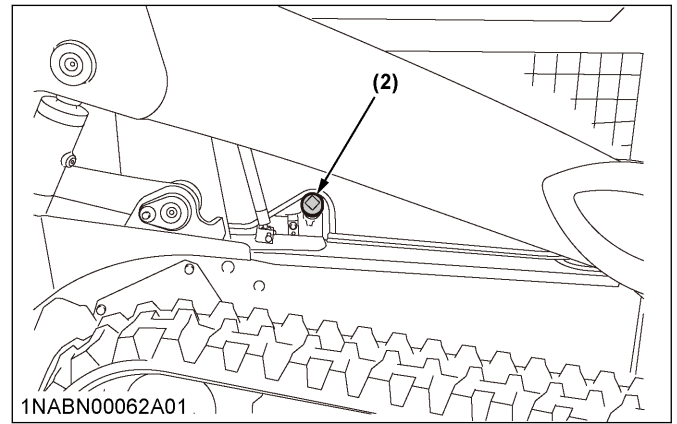

(2) Hydraulic tank cap (Oil filling port)

Enough oil is present if the oil level lies near the center of the gauge.

6. If the oil level is too low, fill up with oil through the oil port before starting the engine.

This step is important for the protection of the hydraulic system.

## 7. Lubrication points of the machine

**⚠ WARNING**

To avoid personal injury or death:


- First lower all attachments on the ground, and then stop the engine and remove the key.

**IMPORTANT :**

- When using the loader in water, generously grease the following points. After ending work with the loader, grease again.


Grease the marked grease fittings (both sides) shown by arrows in the following illustration.

**Lubrication points**

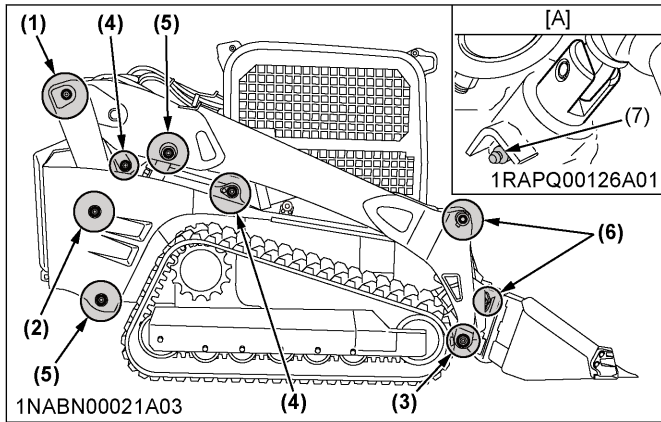

- (1) Lift arm linkage [A] Quick-hitch model
- (2) Link 1
- (3) Bucket link pin
- (4) Control link
- (5) Lift arm cylinder boss
- (6) Tilt cylinder boss
- (7) Quick-hitch pin

(1)	Lift arm linkage	1 place
(2)	Link 1	1 place
(3)	Bucket link pin	1 place
(4)	Control link	2 places
(5)	Lift arm cylinder boss	2 places
(6)	Tilt cylinder boss	2 places
(7)	Quick-hitch pin	1 place

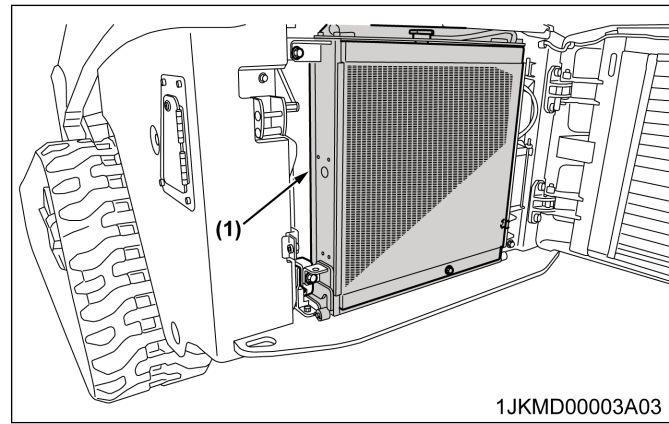

(1) Radiator and oil cooler

**IMPORTANT :**

- Keep the fins and ribs of the radiator and oil cooler clean in order not to overheat the engine and not to allow free flow of air through the cooling elements.
- Keep the pressure of compressed air under the following values.

Pressure of compressed air	205 kPa (2.1 kgf/cm <sup>2</sup> ) [30 psi]
----------------------------	---

- When cleaning the radiator and oil cooler with compressed air, the fins can be damaged. Pay attention not to damage the fins of the radiator and oil cooler.

**8. Checking the radiator and the oil cooler**

**⚠ WARNING**

To avoid personal injury or death:

- Always stop the engine and remove the key before checking the radiator and the oil cooler.
- Wear eye protection when cleaning the radiator and the oil cooler with compressed air.
- Allow the engine and radiator to cool down completely before attempting maintenance on the radiator or oil cooler. A hot radiator can cause severe burns and injury.

- Check if the fins and ribs of the radiator and oil cooler are clogged.  
If the fins and ribs of the radiator and oil cooler are clogged, clean them with compressed air or steam.
- Check the rubber hoses for damage and replace them if they are cracked or old. Check if the hose clamps are tight enough.

**9. Checking and cleaning the engine and the electrical wiring**

**⚠ WARNING**

To avoid personal injury or death:

- Always stop the engine and remove the key before cleaning the wiring, the cables, and the engine.
- Before starting the machine, check whether flammable substances have gathered on the battery, the cables and wiring, the muffler, or the engine. Remove the flammable substances thoroughly.
- Check the electrical circuitry for disconnections, shorts, or loose terminals.

**10. Precautions for checking the V-belt**

**⚠ WARNING**

To avoid personal injury or death:

- Stop the engine and remove the key before checking the V-belt.
- Check the V-belt for cracks and proper tension. See the *Adjusting the V-belt tension* section.

(See Checking and adjusting the V-belt tension on page 108)

## 11. Precautions for washing whole machine

### IMPORTANT :


- Do not wash the machine with the engine running. Water could enter the air cleaner and damage the engine. Make sure that the air cleaner is kept dry.
- Remove the mud before washing the machine.

## 12. Draining the water separator

### IMPORTANT :

- When water is collected, the red float goes up. When the float has reached the specified line, immediately drain the water separator.
- If the water-separator-error-code ("E:9120") appears on the meter panel, immediately drain the water separator.

1. Open the rear door.
2. When the separated water is entering the sediment cup, the red float moves upwards. If the float is 1 inch above the bottom, close the shutoff-valve so that no fuel can run out.
3. Then loosen the drain plug and let out water until the float drops down to the bottom.
4. Finally, tighten the drain plug and turn the shutoff-valve back to its original position.

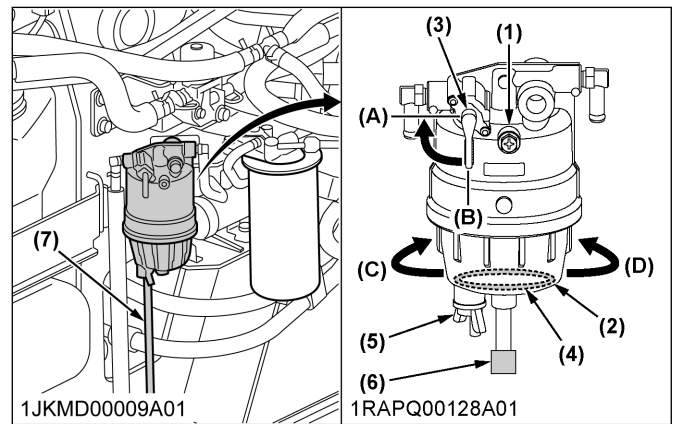

- 1JKMD00009A01
- 1RAPQ00128A01
- (1) Screw  
(2) Cup  
(3) Shutoff-valve  
(4) Float  
(5) Drain plug  
(6) Connector of water level sensor  
(7) Hose


- (A) Close  
(B) Open  
(C) Loosen  
(D) Tighten

### IMPORTANT :

- In reattaching the water separator, be careful to keep off dust and dirt.
- Be sure to purge the fuel system before getting the machine restarted. (See Purging of the fuel system on page 122)

## 13. Checking the evacuator valve

1. Open the evacuator valve.
2. Get rid of large particles of dust and dirt.

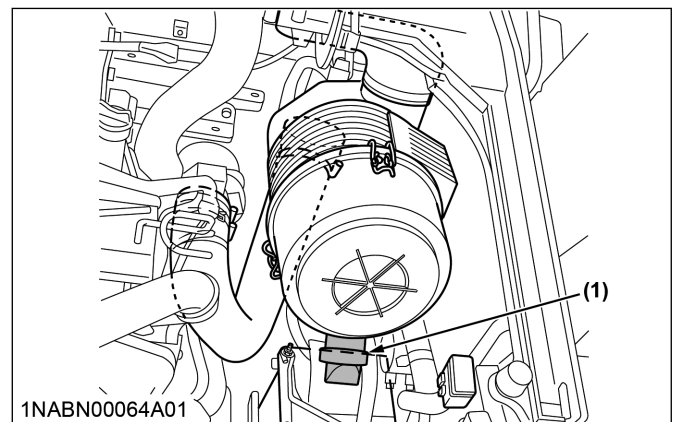


(1) Evacuator valve

### NOTE :

- If the evacuator valve is missing or damaged, the air cleaner does not function properly. Accordingly, its element's service life will get shorter.

### 14. Checking the pre-cleaner

1. Check to see if the clamp is loose.  
If loose, retighten it up.
2. Check the appearance of the pre-cleaner for noticeable damage or cracks.  
In such a case, replace the pre-cleaner with new one.
3. Check to see if the pre-cleaner's suction and discharge ports are blocked with foreign matters.  
If so, remove such matters.
4. Check around the pre-cleaner for sand, mud, dust, snow and such deposits.  
Remove them as required.

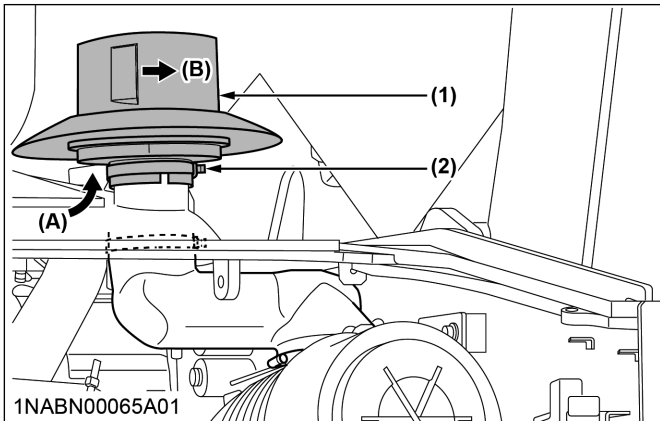

(1) Pre-cleaner (A) Suction port  
(2) Clamp (B) Discharge port


### 15. Checking the DPF (diesel-particulate-filter) muffler

**WARNING**

To avoid personal injury or death:

- Before checking or cleaning the DPF muffler, stop the engine and wait long enough until it is cooled down.


1. Check to see if flammable material is deposited around the DPF muffler.  
If so, clean it out, otherwise a fire may result.

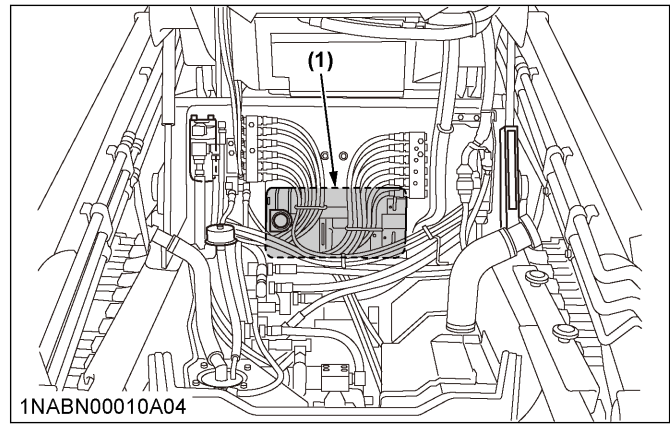

(1) DPF muffler

### 16. Checking the washer liquid [Closed cab model]

If the window washer is switched on with the washer liquid tank empty, the motor may be damaged. Always keep the tank filled.

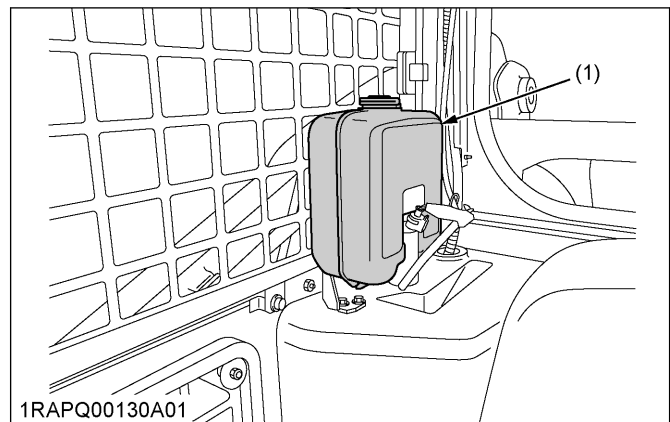

(1) Washer liquid tank

**IMPORTANT :**

- The washer-liquid-tank should be half filled before working on a slope or a rough ground, otherwise the liquid may leak out when the machine bounces.

Half filled of the washer-liquid-tank	about 0.8 liter
---------------------------------------	-----------------

### 17. Checking the battery condition

**DANGER**

To avoid the possibility of a battery explosion: For refillable type battery, follow the following instructions.

- Do not use or charge the refillable type battery if the fluid level is below the [LOWER] (lower limit level) mark. Otherwise, the component parts of the battery may prematurely

deteriorate, which may shorten the service life of the battery or cause an explosion. Check the fluid level regularly and add distilled water as required so that the fluid level is between the [UPPER] and [LOWER] levels.

**! WARNING**

To avoid personal injury or death:

- Never remove the vent caps while the engine is running.
- Keep electrolyte away from eyes, hands, and clothes. If you are splattered with electrolyte, wash it away completely with water immediately and get medical attention.
- Wear eye protection and rubber gloves when working around the battery.
- Before inspection or dismantling the battery, be sure to turn off the engine and turn the starter switch to the [STOP] position.
- When removing the battery, always disconnect the negative ground cable first. When installing a battery, always connect the ground cable last. Connecting and disconnecting the cables in proper order prevents a possible explosion caused by sparks.
- Always wear eye protection when working with the battery.


**IMPORTANT :**

- The battery of non-refillable type is factory-installed. If the indicator turns white, do not quick charge the battery but replace it with new one.

Mishandling the battery shortens the service life of it and adds to maintenance costs.

The original battery is maintenance free, but must be checked periodically.

If the battery is weak, the engine will be difficult to start and the lights will be dim. It is important to check the battery periodically.

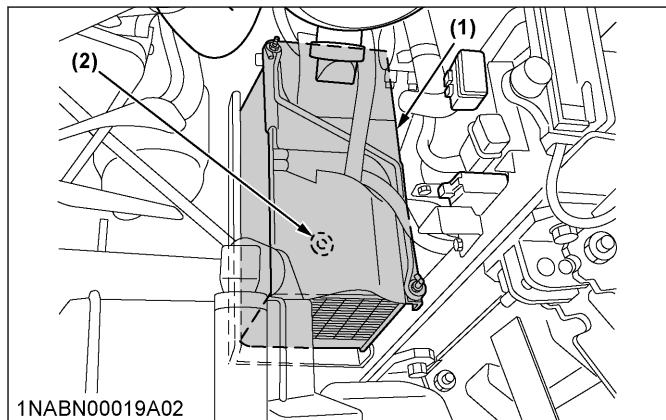

(1) Battery

(2) Indicator

**How to read the indicator**

Check the battery condition by reading the indicator.


State of indicator display	
Green	Specific gravity of electrolyte and quality of electrolyte are both in good condition.
Black	Needs charging battery.
White	Needs replacing battery.

**Battery charging**

**! WARNING**

To avoid personal injury or death:

- When the battery is being activated, hydrogen and oxygen gases in the battery are extremely explosive. Keep open sparks and flames away from the battery at all times, especially when charging the battery.
- When charging the battery, ensure that the vent caps are securely in place if equipped.
- When disconnecting the cable from the battery, start with the negative terminal first. When connecting the cable to the battery, start with the positive terminal first.
- Never check the battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

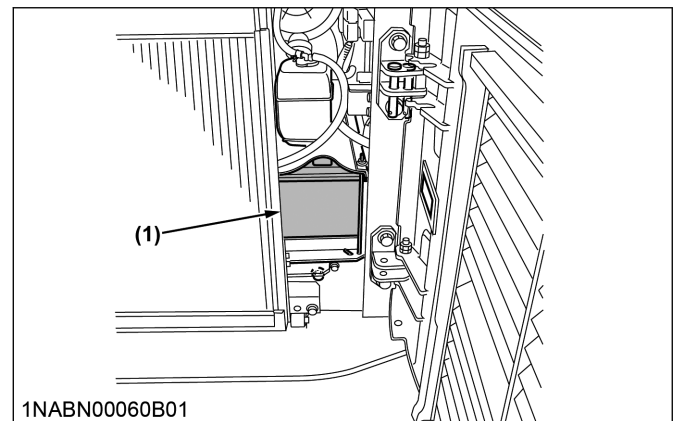

(1) Battery

- To slow charge the battery, connect the battery positive terminal to the charger positive terminal and the negative to the negative, then recharge in the standard fashion.
- A boost charge is only for emergencies. The boost charge will partially charge the battery at a high rate and in a short time. When using a boost-charged battery, it is necessary to recharge the battery as early as possible. Failure to recharge may shorten the battery's service life.
- The battery is charged if the display of the indicator turns green from black.

- When exchanging an old battery for a new one, use a battery of equal specification.

Battery Type	Volts	Capacity
GP31 (105E41R)	12 V	85.3 A.H (at 5H.R)

Battery Type	Reserve capacity	Cold cranking amps	Normal charging rate
GP31 (105E41R)	160 min	900	11 A

**Direction for storage**

- When storing the machine for long periods of time, follow the following procedure.
  1. Remove the battery from machine.
  2. Adjust the electrolyte to the proper level.  
Store the battery in a dry place out of direct sunlight.
- The battery self-discharges while it is stored. Recharge the battery once every three months in hot seasons and once every six months in cold seasons.

**Handling precautions after stopping the engine**

After stopping the engine, the SCR system automatically operates for up to about 25 minutes and returns the DEF (AdBlue) in the piping to the DEF tank to prevent freezing and clogging.

The SCR system may generate operating noise after the engine has stopped, but this is not a malfunction.

**IMPORTANT :**

- Do not remove the battery terminal until the SCR system stops. This is to prevent damage to the system device.
- Do not refill with DEF (AdBlue) before the SCR system stops. Otherwise, DEF (AdBlue) may overflow from the breather hose of the DEF (AdBlue) tank.


**18. Cleaning the fuel tank cap**

**⚠ WARNING**


To avoid personal injury or death:

- Stop the engine and remove the key before fueling.
- Do not smoke while fueling.

1. Remove the fuel tank cap.
2. Using compressed air, brush or the like, remove dust and dirt off the back of the fuel tank cap.
3. Reinstall the fuel tank cap.

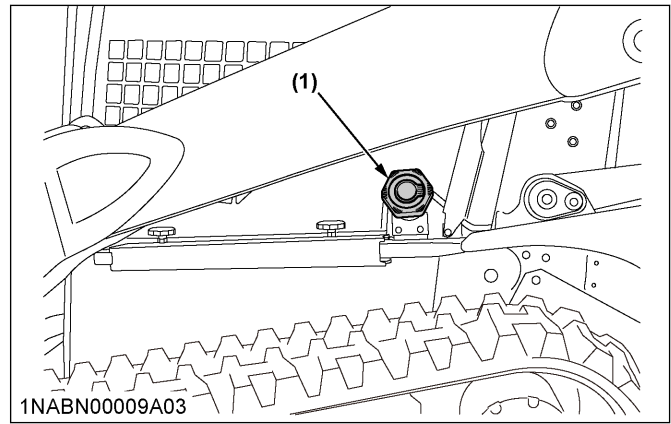

(1) Fuel tank cap

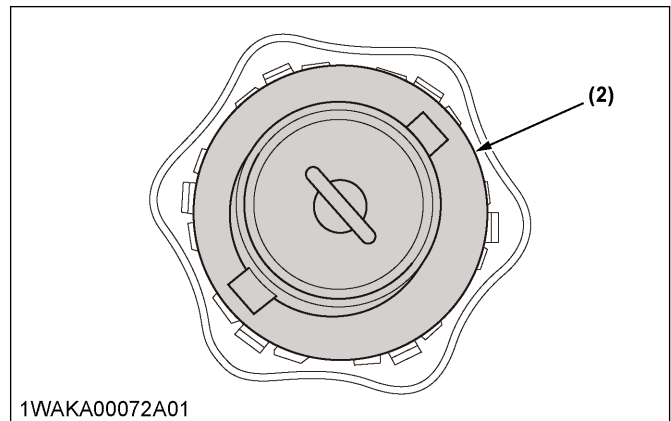

(2) Fuel tank cap (Back side)

**IMPORTANT :**

- If dust or dirt is stuck in the fuel tank cap, the fuel tank may fail to allow in air, possibly getting deformed.
- While cleaning, be careful not to allow dust or dirt into the fuel tank.

**EVERY 50 SERVICE HOURS**

**1. Draining the water from the fuel tank tank**


**⚠ WARNING**

To avoid personal injury or death:

- Before draining the water from the fuel tank, be sure to stop the engine and remove the key.
- Do not smoke during inspection.

1. Open the cover.
2. Open the drain plug.

3. Drain the water from the fuel tank.

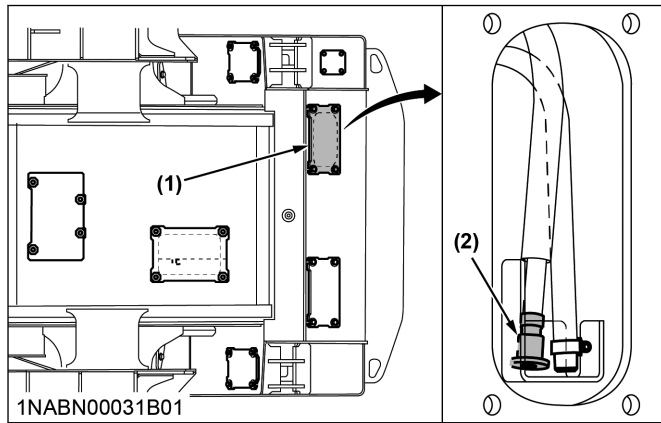

(1) Cover (2) Drain plug

## 2. Checking the track tension


**WARNING**  
 To avoid personal injury or death:  
 • When lifting the machine itself with an attachment, place the jack stands under the main frame to prevent the machine from turning over.

**IMPORTANT :**  
 • Make sure that no obstacles such as stones are caught in the track. Remove obstacles such as stones before adjusting the track tension. (See ADJUSTING THE TRACKS on page 124)

1. To check the track tension, put the machine on the jack stand.


**DANGER**  
 To avoid personal injury or death:  
 • Do not work under the machine when putting the machine on the jack stand.  
 • For your safety, do not rely on hydraulically supported devices. They may leak down and suddenly drop or be accidentally lowered.

2. Lift the track from the ground as shown.

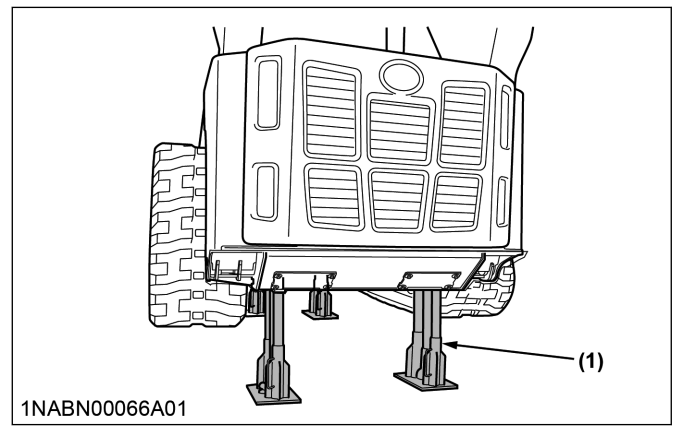

(1) Jack stand

3. If necessary, adjust the track tension. The track tension is correct if the distance of clearance between the outer end of the track roller and the track interior surface (A) corresponds to the dimension specified in the following table.

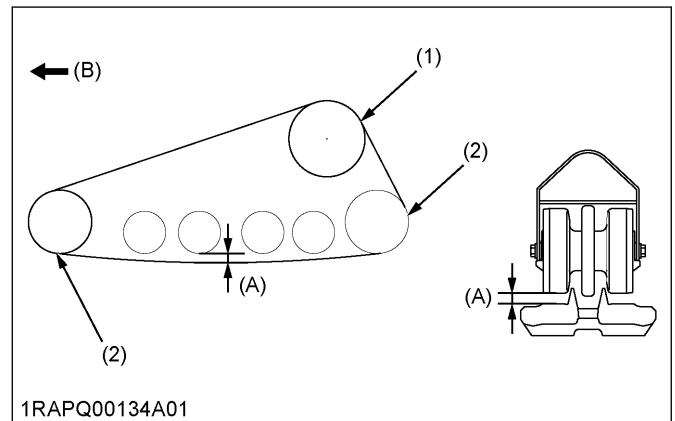

(1) Drive sprocket (2) Idler (A) Clearance between outer end of track roller and track interior surface (B) Front

Clearance between outer end of track roller and track interior surface (A)	20 mm to 30 mm (0.8 in. to 1.2 in.)
--	-------------------------------------

## 3. Checking the air cleaner element


**IMPORTANT :**

- If the machine is used in extremely dusty areas, inspect and clean the air-cleaner-element more frequently than in the specified maintenance periods.
- As some elements of air cleaner must be dry, keep them free from oil.
- Do not run the engine without the air cleaner.
- Once every 250 hours or after every sixth cleaning, whichever comes first, replace the air cleaner elements.
- Do not remove the inner element. If removed, replace it with new one.

(See Replacing the air cleaner element on page 109.)

- Clean up the case inside with clean wet cloth. After cleaning, wipe it dry with clean dry cloth.
- Do not blow air to clean the case inside. It allows dust come into the inner element.

1. Open the rear door and remove the dust-cover.
2. Remove only outer element.  
Do not remove the inner element.
3. Clean the outer element, the case inside and the evacuator valve.
4. Wipe the case inside.
5. Reassemble the outer element.  
During reassembly, take care to install the dust-cover so that its top-indicating-mark (arrow) faces up-wards.

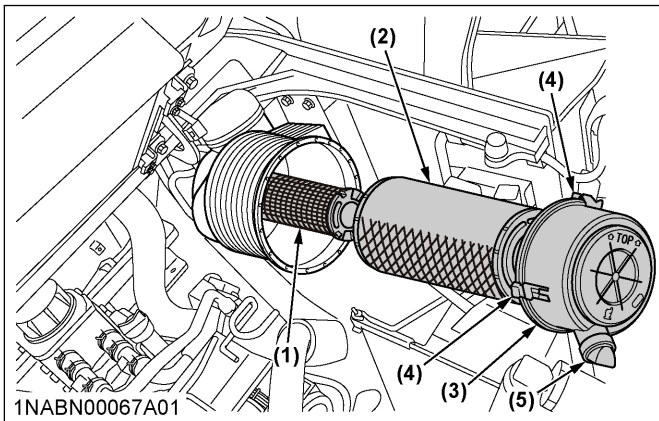


- (1) Inner element
- (2) Outer element
- (3) Dust-cover
- (4) Clamps
- (5) Evacuator valve

#### 4. Cleaning the air cleaner element

##### **WARNING**

To avoid personal injury or death:

- Wear eye protection.

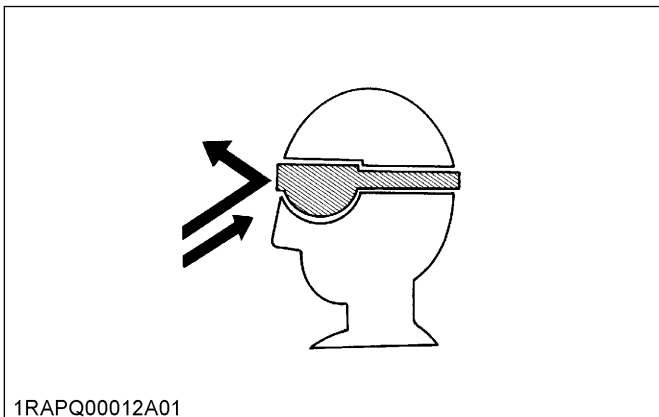

1RAPQ00012A01

##### **IMPORTANT :**

- Clean the air cleaner element regularly or foreign materials will accumulate, which will shorten the DPF filter cleaning interval (3000 hours).


The quickest and safest method of maintenance is the exchange of the element. However, there are different methods for cleaning the element.

##### **Cleaning with compressed air**

1. Blow the element clean from the inside to the outside until the dust deposits are noticeably reduced.

Keep the pressure of compressed air as follows.

Pressure of compressed air	Under 205 kPa (2.1 kgf/ cm <sup>2</sup> ) [30 psi]
----------------------------	---

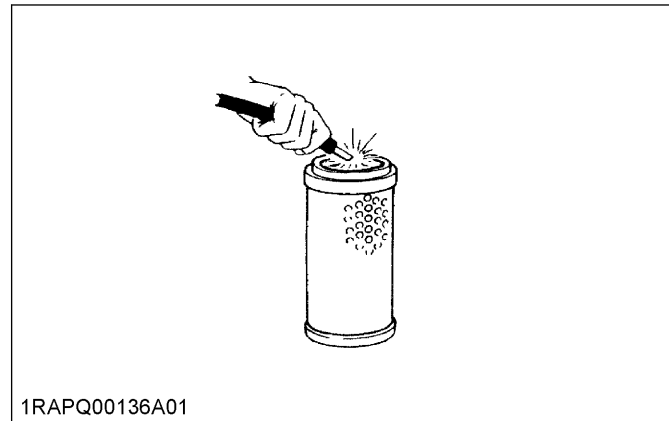

1RAPQ00136A01

##### **IMPORTANT :**

- If the air suction is still inadequate or the color of the exhaust gases is abnormal even after the cleaning, replace the air-cleaner-element.
- Do not tap-clean the element. The element may get deformed, which may adversely affect the air cleaner performance.

#### 5. Cleaning the evacuator valve

##### **WARNING**



To avoid personal injury or death:

- Wear eye protection.
- While cleaning, foreign matters may drop out of the evacuator valve.

1. Open the rear door and engine hood.
2. Remove the dust-cover.



- From behind the dust-cover, remove foreign matter from the evacuator valve.

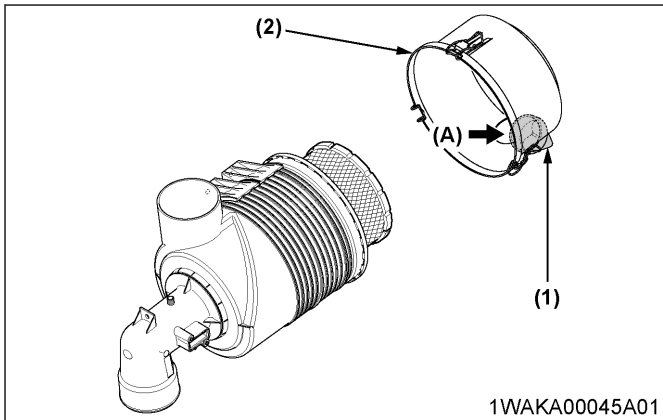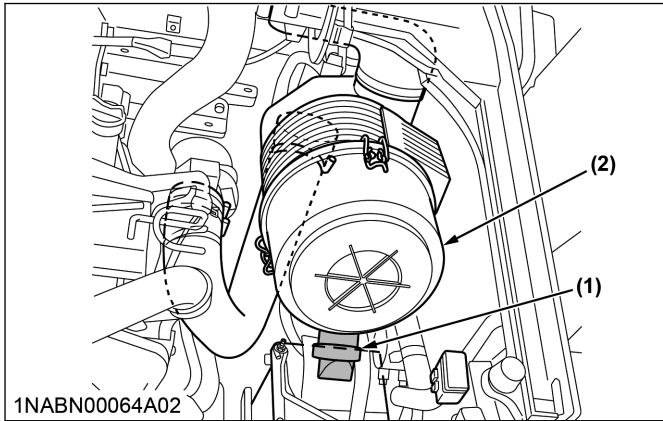

- (1) Evacuator valve (A) Clean from behind  
 (2) Dust cover

**IMPORTANT :**

- Failure to clean the evacuator valve may shorten the air cleaner element's service life.

**EVERY 250 SERVICE HOURS**

Carry out all 50 hour servicing at the same time.

**1. Checking the radiator hoses and the clamps**

Check the water hoses for proper connection.

**! WARNING**



To avoid personal injury or death:

- Wait long enough for the radiator coolant to cool down.

Carry out the check of the radiator hoses and the clamps of every 250 hours or every six months, whichever comes first.

- Tilt the radiator.
- If the hose clamps become loose or water leaks, tighten the hose clamps properly.

- If the radiator hoses become swollen, aged, or cracked, replace the radiator hoses and re-tighten the hose clamps properly.


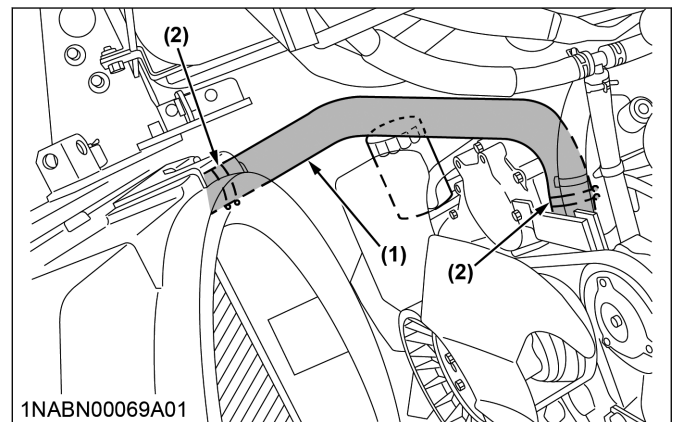
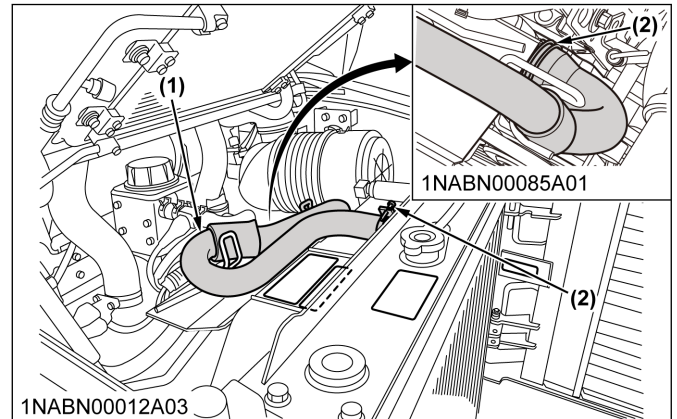


- (1) Radiator hose (2) Hose clamps

**2. Checking the fuel line and the intake air line**

- Check to see that all fuel lines and hose clamps are tightened and not damaged.

- If hoses and clamps are found worn or damaged, replace or repair them at once.

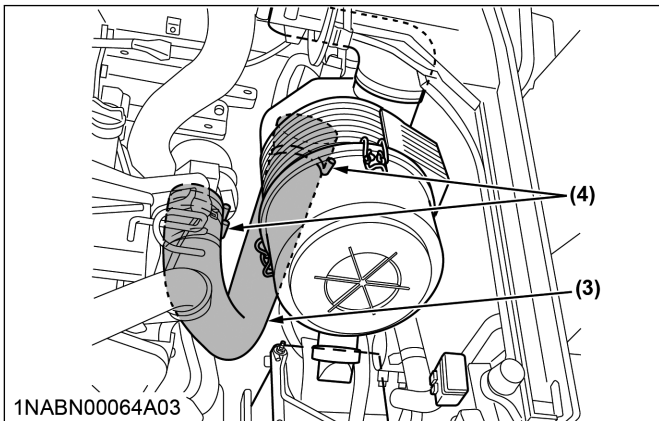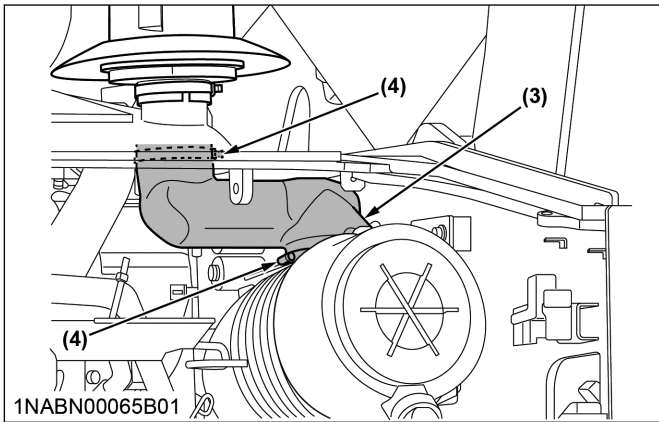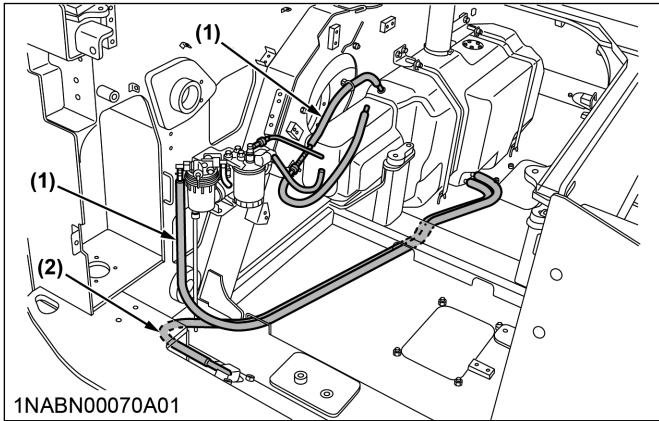

- (1) Fuel lines
- (2) Fuel drain line
- (3) Hose
- (4) Hose clamps

### 3. Checking and adjusting the V-belt tension


#### WARNING

To avoid personal injury or death:

- First stop the engine and remove the key.
- After servicing, make sure to replace the belt cover in its original position.

#### IMPORTANT :

- If the engine is run with a loose alternator belt, the belt could slip and cause insufficient battery charging. Check V-belt tension regularly.
- If the alternator belt breaks or jumps off, the indicator light for battery charge will light up. Stop the engine and remove the key immediately.

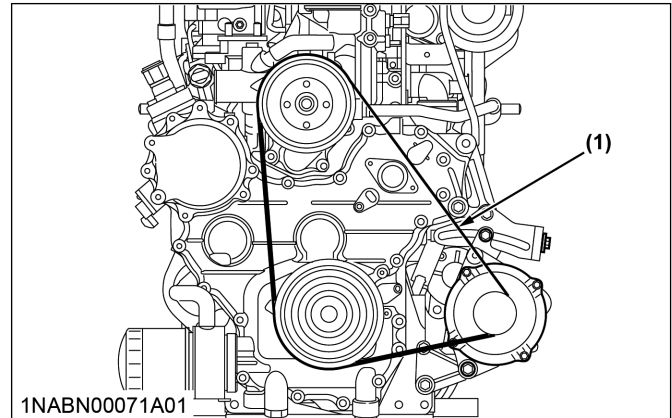

- (1) V-belt


- Press the V-belt (5) down in the middle, with the following force.

Pressing force (B)	Approx. 50 N to 60 N (11.0 lbf to 13.5 lbf)
--------------------	---

The belt tension is correct if it deflects the following length.

Belt deflection (A)	About 4.0 mm to 5.0 mm (0.16 in. to 0.20 in.)
---------------------	---

- If the belt tension is not correct, loosen bolt (1), (2), and (3) and shift the alternator (4) in the direction shown by the arrow (C) in the following figure.

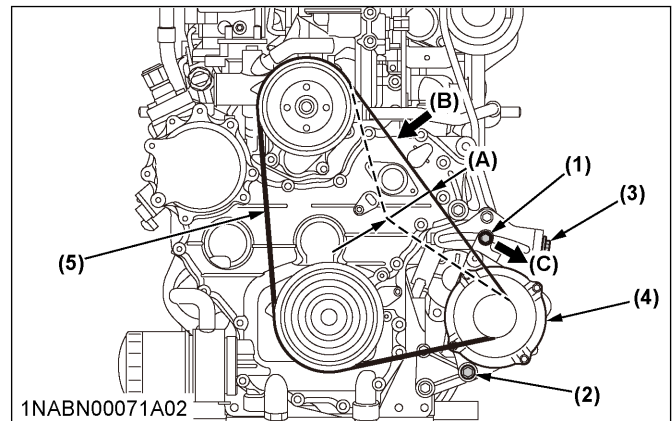

- (1) Bolt
- (2) Bolt
- (3) Adjuster bolt
- (4) Alternator
- (5) V-belt
- (A) Belt deflection
- (B) Pressing force
- (C) Shift

- After adjustment of the V-belt tension, tighten all the bolts.

- Replace the V-belt if worn out, cracked, or torn.

### 3.1 Checking and adjusting the air-conditioner belt tension [Closed cab model]


- Press the air-conditioner belt down in the middle, with the following force.

Pressing force	Approx. 50 N to 60 N (11.0 lbf to 13.5 lbf)
----------------	---

The belt tension is correct if it deflects the following length.

Belt deflection (A)	About 7 mm to 9 mm (0.27 in. to 0.35 in.)
---------------------	---

- If the belt tension is not correct, loosen bolt of the tension pulley and shift the tension pulley in the direction shown by the arrow (C) in the following figure.

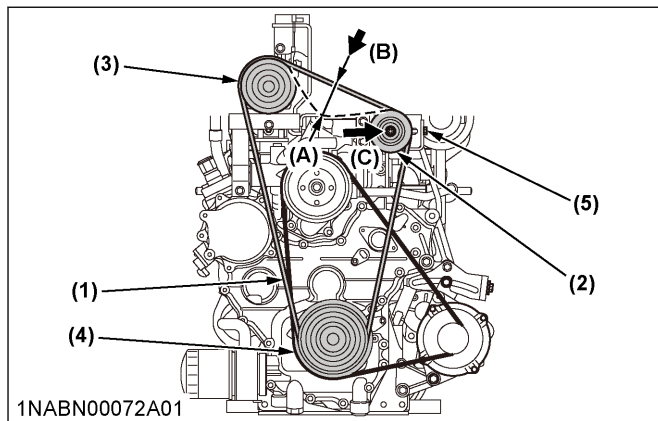


- |                                |                     |
|--------------------------------|---------------------|
| (1) Air-conditioner belt       | (A) Belt deflection |
| (2) Tension pulley             | (B) Press           |
| (3) Air-conditioner compressor | (C) Shift           |
| (4) Pulley                     |                     |
| (5) Bolt                       |                     |

- Replace the air-conditioner belt if worn out, cracked, or torn.

### 4. Cleaning inside of the main frame

If mud, leaves, or any debris are accumulated inside of the main frame, it may cause damage on parts of the main frame.

- Open the plates of the bottom of the main frame. (See Discharging mud from the main frame on page 95 for detail procedure)
- Remove mud, leaves, and any debris from the inside of the main frame.
- After removing mud, leaves, and any debris, close the plates of the bottom of the main frame.

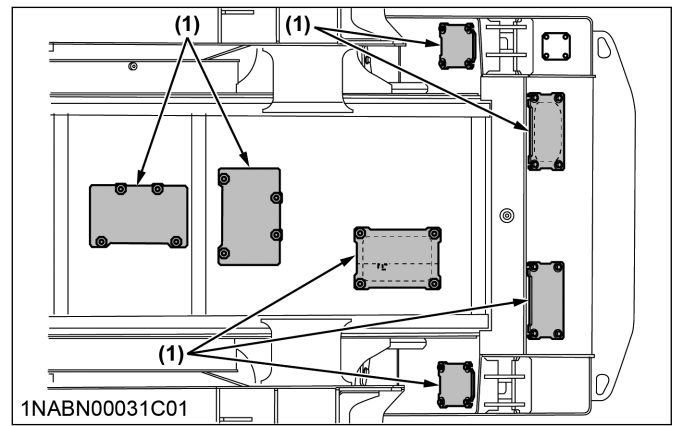


- (1) Plate

### 5. Replacing the air cleaner element

**IMPORTANT :**

- Shorten the replacement period if the machine is used in dusty or sandy areas.
- Replace the air cleaner element regularly or foreign materials will accumulate, which will shorten the DPF filter cleaning interval (3000 hours).
- Use KUBOTA genuine inner and outer element.
- Do not blow air to clean the case inside. It allows dust come into the inner element.
- Clean up the case inside with clean wet cloth. After cleaning, wipe it dry with clean dry cloth.

- Open the rear door and the engine hood.
- Remove the dust-cover.
- Remove and replace the outer element and the inner element with new them. When reassembling, install the dust-cover so that its top-indicating-mark (arrow) faces up-wards.

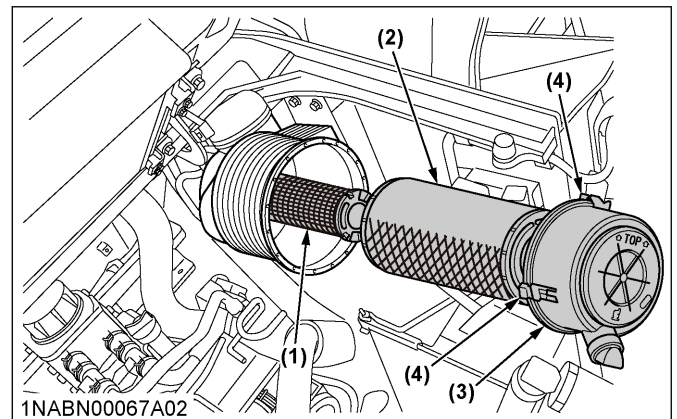


- |                   |            |
|-------------------|------------|
| (1) Inner element | (4) Clamps |
| (2) Outer element |            |
| (3) Dust-cover    |            |

### 6. Cleaning the fresh air filter

- Remove the fresh-air-filter.

- Blow air from the direction opposite to the normal air flow of the fresh-air-filter.  
Keep pressure of compressed air as follows.

Pressure of compressed air	Under 205 kPa (2.1 kgf/cm <sup>2</sup> ) [30 psi]
----------------------------	--

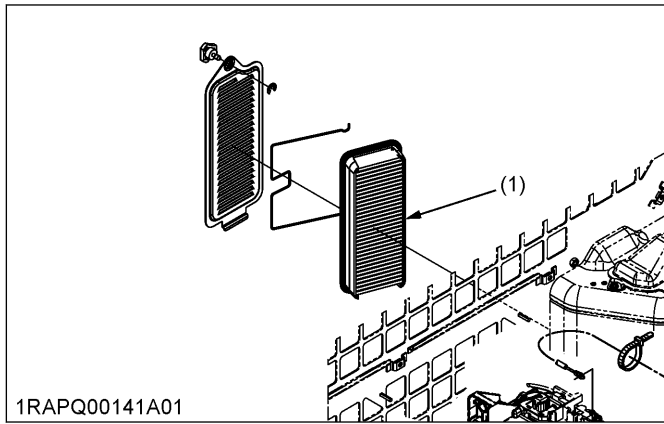


(1) Fresh air filter

## 7. Cleaning the inner air filter

**WARNING**  
To avoid personal injury or death:

- When removing and attaching the inner-air-filter, apply parking brake, stop the engine, and remove the key.

Remove the thumbscrews and pull out the inner-air-filter.

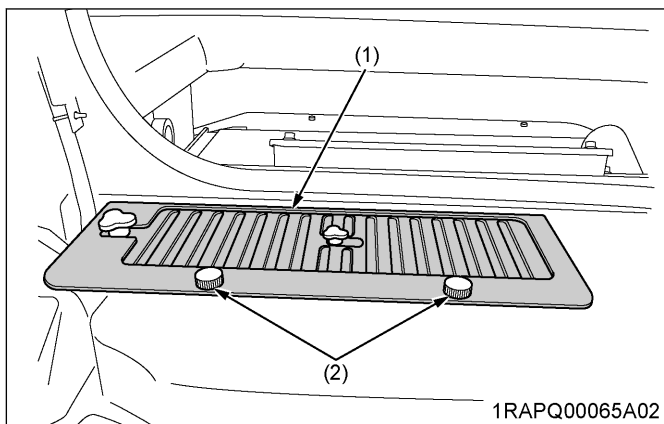


(1) Cover

(2) Thumbscrew

### Normal use

- Blow air from the opposite direction to the normal air flow of the inner-air-filter.  
Keep pressure of compressed air as follows.

Pressure of compressed air	Under 205 kPa (2.1 kgf/ cm <sup>2</sup> ) [30 psi]
----------------------------	---

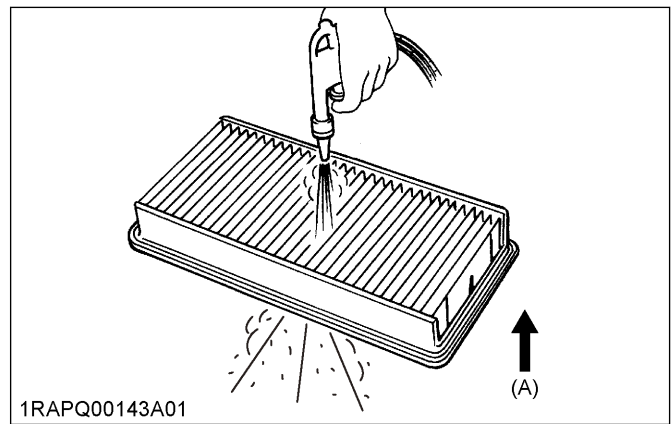


(A) Airflow of air conditioner

### IMPORTANT :

- Do not hit the inner-air-filter. If the inner-air-filter becomes deformed, dust may enter into the air-conditioner, which may cause damage and malfunction for the machine.
- Do not use gasoline, thinner, or similar chemicals to clean the inner-air-filter because damage to it may occur.
- Using gasoline, thinner, or similar chemicals to clean the inner-air-filter may also cause an unpleasant odor in the cab when the system is used next time.

Attach the filter and the cover as the following illustration.

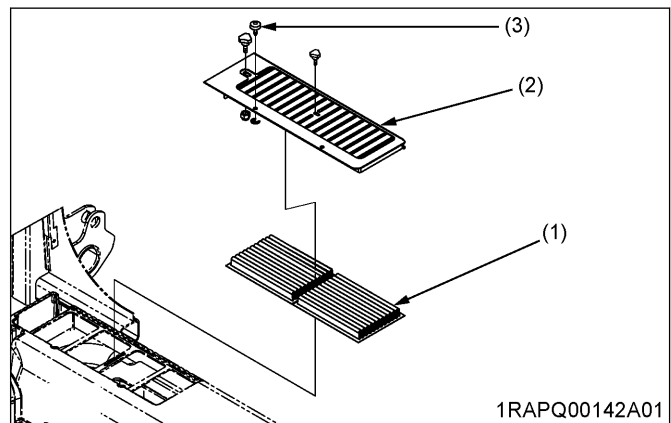

(1) Inner air filter

(3) Thumbscrew

(2) Cover


## 8. Checking the air-conditioner condenser

**WARNING**  
To avoid personal injury or death:

- Stop the engine and remove the key.
- Allow the engine and radiator to cool down completely before attempting maintenance on

**the radiator or oil cooler. A hot radiator can cause severe burns and/or injury.**

1. Check the air-conditioner condenser to be sure that it is clean from debris.

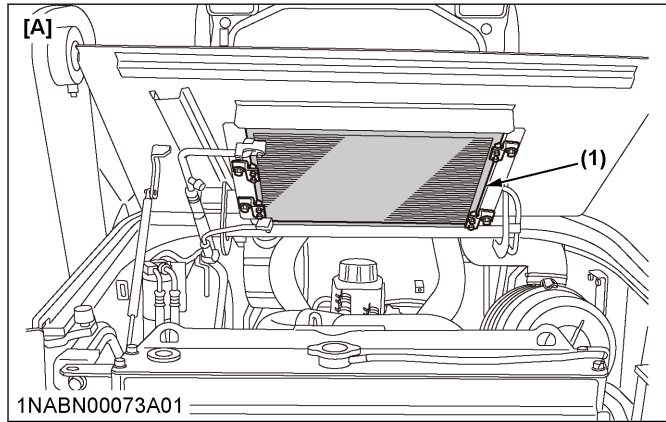

(1) Air-conditioner condenser

**NOTE :**

- Air flows from the outside to the inside, so debris would accumulate on the outside. If necessary, remove the outside cover to help clean the air-conditioner condenser.

**EVERY 500 SERVICE HOURS**

Carry out all 50, 100, and 250 hour servicing at the same time.


**1. Changing the engine oil**

**⚠ WARNING**

To avoid personal injury or death:


- First stop the engine, and then remove the key and wait long enough for the oil to cool down.

1. Remove the under cover on the bottom of the frame.
2. Remove the drain plug on the underside of the engine and drain all oil.

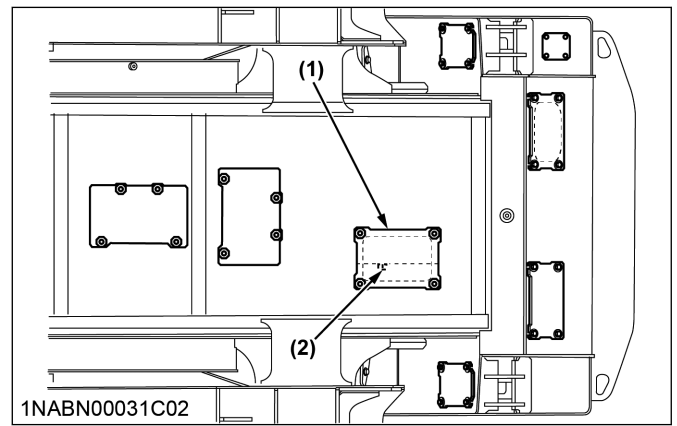

(1) Drain plug (2) Under cover

3. Re-tighten the drain plug, and attach the under cover.
4. Fill up with new oil through the filling port to the specified level.

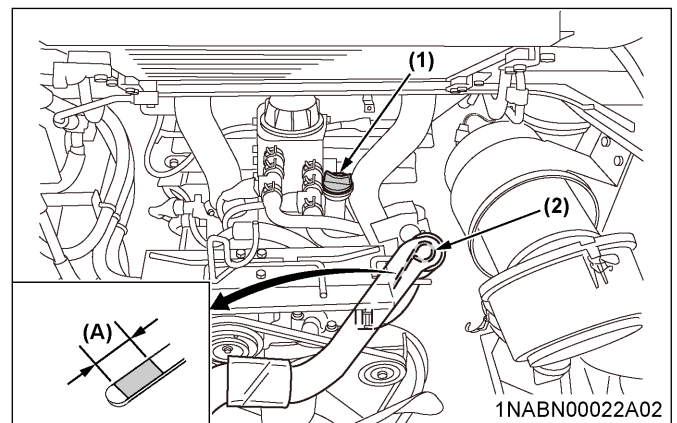


(1) Oil filling port (2) Engine oil dipstick (A) Required oil level range

Engine oil volumes with engine oil filter	8.5 L (2.2 US gal)
---	-----------------------


## 2. Replacing the engine oil filter cartridge

1. Remove the under cover on the bottom of the frame to drain the spilled engine oil from the engine-oil-filter-cartridge.

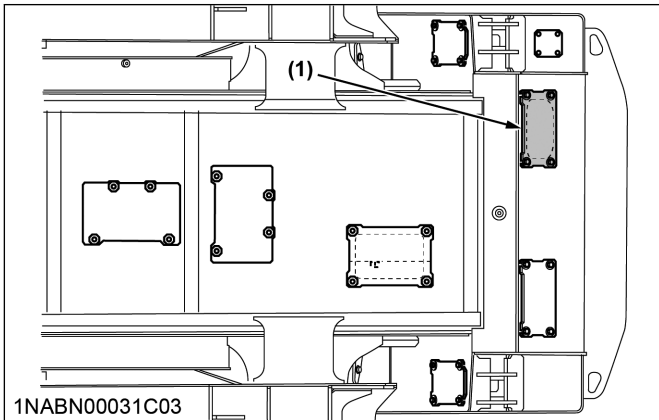

(1) Under cover

2. Replace the engine-oil-filter-cartridge at the same time as changing the engine oil.
  - a. Remove the engine-oil-filter-cartridge with the filter wrench.
  - b. Oil the O-ring of the new engine-oil-filter-cartridge lightly.
  - c. Then tighten the engine-oil-filter-cartridge by hand.
  - d. Fill engine oil to the specified level.
  - e. Let the engine run for approx. five min. and make sure that the low-fuel-warning-light does not light up.  
The engine oil level is reduced by the amount of the filter capacity after the engine is started. It is necessary to add the engine oil.
  - f. Then stop the engine and remove the key.

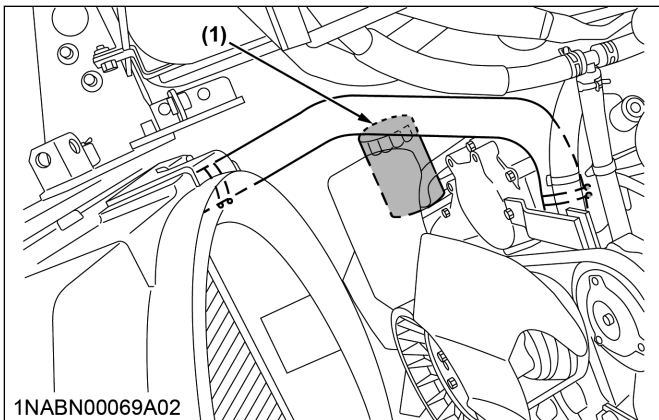

(1) Engine oil filter cartridge



3. Attach the under cover.

### IMPORTANT :

- Always check the engine oil level after having exchanged the filter.

## 3. Replacing the water separator filter element

1. Set the shutoff-valve of the water separator to the close position.
2. Loosen and remove the cup properly and replace the filter element.
3. Check the condition of the O-ring and replace if necessary.
4. Tighten up the cup properly.
5. Set the shutoff-valve to the open position.

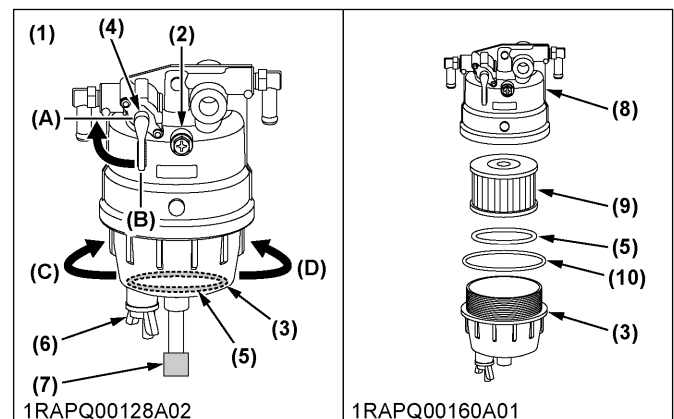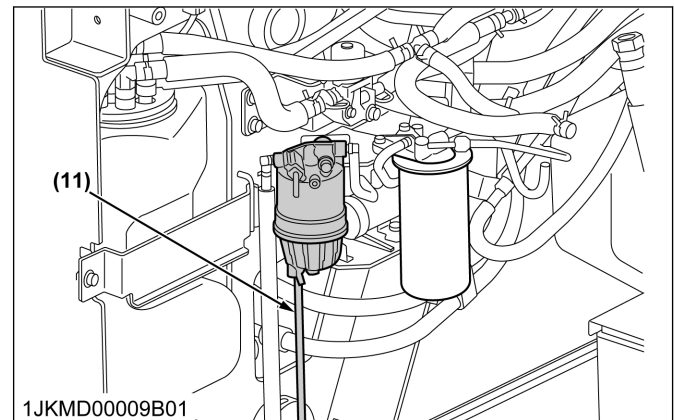

- (1) Water separator
- (2) Screw
- (3) Cup
- (4) Shutoff-valve
- (5) Float
- (6) Drain plug
- (7) Connector of water level sensor
- (A) Close
- (B) Open
- (C) Loosen
- (D) Tighten
- (8) Head cover
- (9) Filter element
- (10) O-ring
- (11) Hose

### IMPORTANT :

- In reattaching the water separator, be careful to keep off dust and dirt.
- Be sure to purge the fuel system before getting the machine restarted.  
(See Purging of the fuel system on page 122)

### 4. Replacing the fuel filter cartridge



**WARNING**


To avoid personal injury or death:

- Keep fire away.

**IMPORTANT :**

- If you do not replace the fuel-filter-cartridge regularly, the cleaning efficiency of the DPF (3000 hours) will be reduced and the DPF longevity will be shorter than expected.

1. Tilt the radiator.
2. Remove the water warning sensor harness.
3. Remove the fuel-filter-cartridge with the filter wrench.
4. Attach the water warning sensor harness.
5. Apply a small amount of fuel on the gasket of the replacement filter and tighten the gasket by hand.

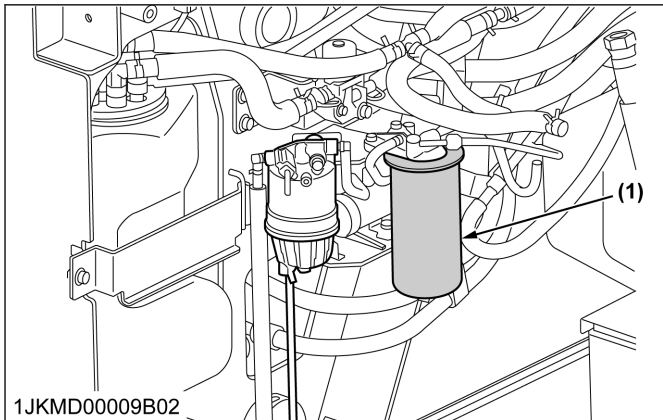

1JKMD00009B02

(1) Fuel filter cartridge

**IMPORTANT :**

- After exchange of the filter, purge the fuel system of air.

### 5. Changing the drive unit oil



**WARNING**


To avoid personal injury or death:

- Lower the lift arms to the ground, stop the engine, and remove the key before undertaking the gear oil change of the drive unit.

First change of the gear oil of the drive unit is 250 service hours.

1. Rotate the track so that the drain plug of the drive unit is in the bottom position.
2. Remove the drain plug to let the gear oil run out.
3. Screw in and tighten the drain plug again.

4. Fill the drive unit with the gear oil through the oil-filler-port.  
Fill the gear oil until it overflows out of the oil inspection port.  
Use prescribed gear oil SAE 90.

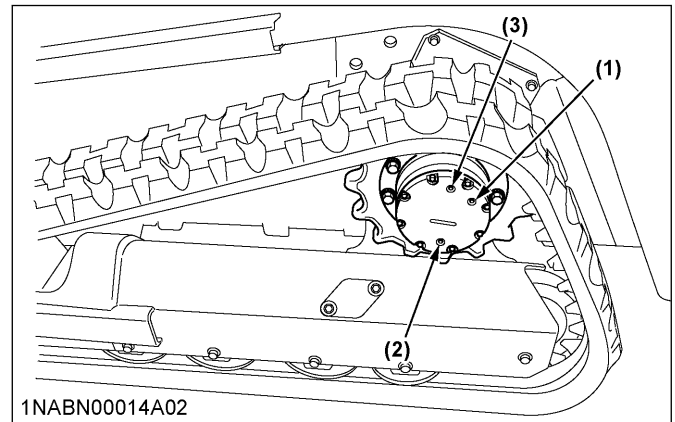

1NABN00014A02

(1) Oil inspection port  
(2) Drain plug

(3) Oil filler port

Gear oil volume	Approx. 1.0 L (0.3 US gal.)
-----------------	-----------------------------

### 6. Changing the return filter

First change of the return filter is 250 service hours.


1. Change the return filter according to Changing the hydraulic oil including replacing the suction filter and the return filter in the hydraulic tank on page 114.

### 7. Replacing the breather filter

The breather filter for the hydraulic tank is located above the hydraulic tank.

1. Raise the cab.  
(See Tilting up the cab on page 93 for detail)
2. Open the cap of the filter cover.
3. Remove the breather filter and replace with the new one.

- Tighten the cap of the filter cover.

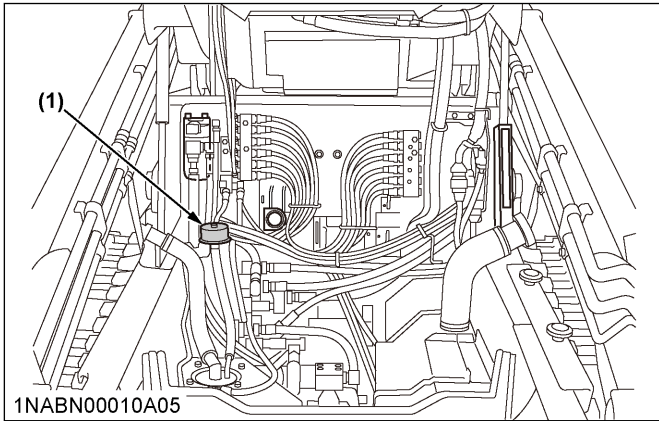


1NABN00010A05

(1) Breather filter

## 8. Replacing the hydraulic oil filter

First change of the hydraulic-oil-filter is 50 service hours.

- Raise the cab.  
(See Tilting up the cab on page 93 for detail)
- Open the cap of the filter cover.
- Remove the hydraulic-oil-filter with the wrench and replace with the new one.
- Tighten the cap of the filter cover.

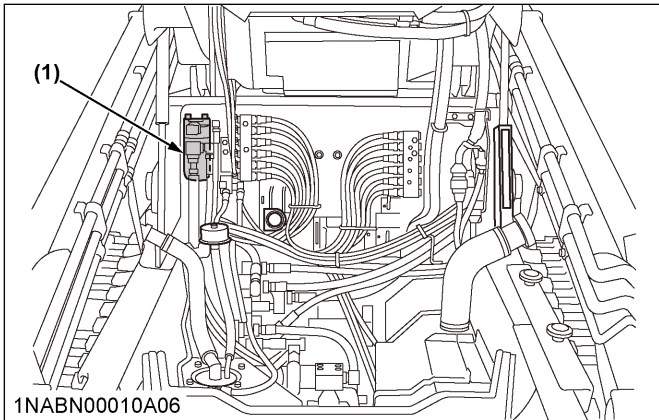

1NABN00010A06

(1) Hydraulic oil filter

## 9. Cleaning the front window roller [Closed cab model only]

Consult your local KUBOTA dealer for cleaning the front window roller.

## EVERY 1000 SERVICE HOURS

Carry out all 50, 100, 200, 250, and 500 hour servicing at the same time.


### 1. Changing the hydraulic oil including replacing the suction filter and the return filter in the hydraulic tank

#### WARNING

To avoid personal injury or death:


- Wait long enough for the hydraulic oil to cool down. Then change the hydraulic oil.

- Park the machine on a firm, flat, and level surface.
- Lower the lift arms to the ground, and stop the engine.

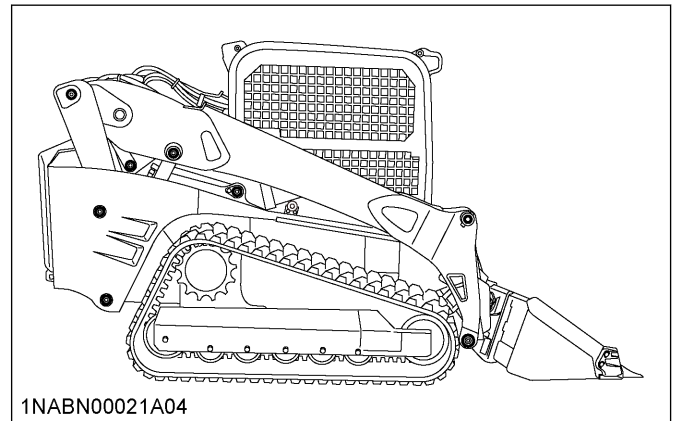

1NABN00021A04

- Remove the cover with drain plug in front of the machine, and drain the hydraulic oil.

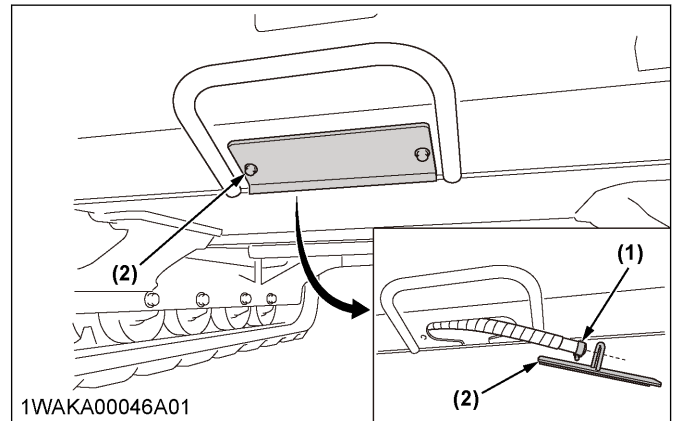

1WAKA00046A01


(1) Drain plug

(2) Cover

- Loosen the bolt, and remove the tank cover.
- Remove the suction filter and replace with new one.
- Loosen the set bolt first. Then remove the return filter and replace with new one.
- Install the hydraulic cover.



8. Retighten the drain plug.

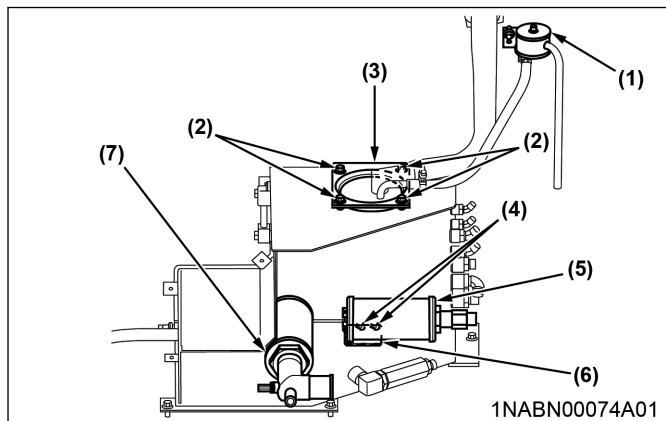


- (1) Breather filter
- (2) Bolt
- (3) Cover
- (4) Set bolt
- (5) Return filter
- (6) Filter stopper
- (7) Suction filter

9. Fill the hydraulic oil through the oil-filling-plug opening on the top side of the tank pipe.

10. Remove the plug off the top of the LS pump to pour oil into it.

Make sure the oil level is as specified, close the pump top and tighten up the plug. Damage to the LS pump is possible if this step is not completed correctly.

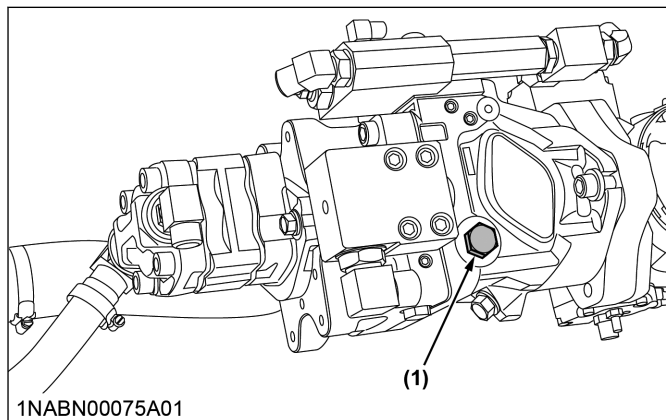

- (1) Plug

11. Let the engine run, and operate the lift arm and the bucket.

12. Then lower the lift arms slowly to the ground, and stop the engine.

13. Fill the hydraulic oil again up to the center of the gauge.

Hydraulic oil volumes	Hydraulic tank	38.1 L (10.1 US gal)
	Whole oil volumes	68.0 L (18.0 US gal)

14. Tighten the oil-filling-plug.

## 2. Hydraulic oil check with the hydraulic hammers

Changing the hydraulic oil after 1000 operating hours in the operator's manual is based on normal work. The following inspection measures are valid when using the hydraulic hammers.

- Changing and filling up of the hydraulic oil
  - Change the hydraulic oil more often when using the hydraulic hammers because the machine is subject to harder conditions than normal work.
  - Use only the recommended hydraulic oils that are mentioned in the operator's manual when changing or filling with the hydraulic oil.
  - When adding the hydraulic oil, do not mix oils of different makes
- Changing the return filter and the hydraulic oil
  - Change the return filter more often because of contamination resulting from the frequent assembly and disassembly of the hoses.
  - Use the correct replacement filter.
  - Change oil according to operating hours.

		Hydraulic oil	Return filter	Suction filter
Normal work		every 1000 Hrs.	every 500 Hrs. (250 Hrs. after first operation)	every 1000 Hrs.
Hammer work portion	20%	every 800 Hrs.	every 300 Hrs.	
	40%	every 400 Hrs.		
	60% more	every 300 Hrs. every 200 Hrs.	every 100 Hrs.	

## 3. Adjusting the engine valve clearance

Consult your local KUBOTA dealer for adjusting the engine valve clearance.

## 4. Replacing the front window roller [Closed cab model only]

Consult your local KUBOTA dealer for replacing the front window roller.

## EVERY 1500 SERVICE HOURS

Carry out all 50, 100, 250, and 500 hour servicing at the same time.

### 1. Checking the injector tip

Consult your local KUBOTA dealer for checking the injector tip.


## 2. Replacing the oil separator element

### WARNING


To avoid personal injury or death:

- Be sure to stop the engine before replacing the oil-separator-element.

1. Remove the cover, and remove the oil-separator-element.
2. Wipe off the oil and the carbon in the case with a clean rag.
3. Fit a new oil-separator-element and new gasket.
4. Tighten the cover until a cover comes in contact with body.

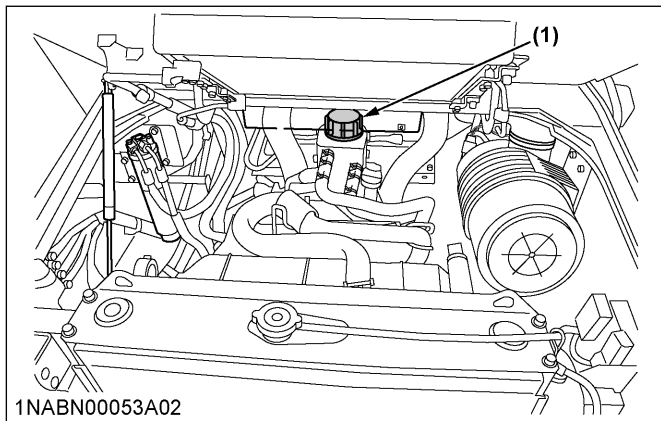

(1) Oil separator

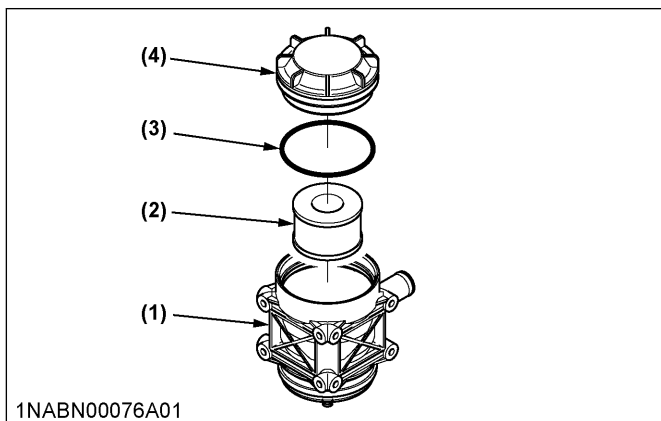

(1) Body (4) Cover  
 (2) Oil separator element  
 (3) Gasket

## 3. Checking the PCV (positive crankcase ventilation) valve

Consult your local KUBOTA dealer for checking the PCV valve.

## 4. Checking the EGR cooler

Consult your local KUBOTA dealer for checking the EGR cooler.

## 5. Checking the DEF (AdBlue) injector tip

Consult your local KUBOTA Dealer for checking the DEF (AdBlue) injector tip.

## 6. Checking the DEF (AdBlue) hoses

1. Visually check for cracks, DEF (AdBlue) leak and anything else unusual. Check to see if the lock bolts and nuts are tight.

## EVERY 2000 SERVICE HOURS

Carry out all 50, 100, 200, 250, 500, and 1000 hour servicing at the same time.

### 1. Checking the alternator and the starter motor

Consult your local KUBOTA dealer for checking the alternator and the starter motor.

## EVERY 3000 SERVICE HOURS

Carry out all 50, 100, 200, 250, 500, 1000, and 1500 hour servicing at the same time.

### 1. Checking the EGR system

Consult your local KUBOTA dealer for checking the EGR system.

### 2. Checking the turbocharger

Consult your local KUBOTA dealer for checking the turbocharger.

### 3. Cleaning the diesel-particulate-filter (DPF)

#### IMPORTANT :

- To clean up the DPF, a specific machine is required. Do not clean the DPF in any other way, such as disassembling, shaking, and heating as toxic chemicals may be present inside of the DPF.

The longer operating the DPF, the more ash (burnt residue) is collected in the DPF. Too much ash build-up adversely affects the DPF performance.

Consult your local KUBOTA dealer to clean up the DPF.

### 3.1 When the DEF (AdBlue) tank is frozen

If the DEF (AdBlue) tank is icy, the DPF regeneration cannot be made even if the DPF manual (parking) regeneration prompt lamp stays on.

In such case, wait until the DEF (AdBlue) tank has defrosted, and immediately carry on the manual (parking) regeneration.

## 4. Replacing the filter in DEF (AdBlue) pump

### WARNING

To avoid personal injury or death:

- Dispose of discharged/used DEF (AdBlue) properly in accordance with local regulations.

1. Turn the key to the [STOP] position.
2. Wait at least 25 minutes for the supply module to deactivate.
3. Place a pan below the supply module.
4. Loosen the cover and remove the filter and equalizing element at the same time.
5. Install a new filter and equalizing element in place.
6. Reattach the cover back into position.

DEF (AdBlue) filter cover tightening torque	5.5 N·m to 6.5 N·m (48.7 lbf·in. to 57.5 lbf·in.)
---	--

#### IMPORTANT :

- The DEF (AdBlue) filter serves to keep DEF (AdBlue) clean. When replacing it with new one, use KUBOTA genuine filter or its equivalent for best performance.
- The SCR system keeps on running for 25 minutes even after the key has been turned to the [STOP] position. If an inspection or repair is needed, wait at least 25 minutes.
- Discharged/used DEF (AdBlue) from lines during service cannot be reused or SCR system malfunction may result.

## 5. Checking the DEF (AdBlue) injector

Consult your local KUBOTA Dealer for checking the DEF (AdBlue) injector.

## EVERY 8000 SERVICE HOURS

Carry out all 50, 100, 200, 250, 500, 1000, and 2000 hour servicing at the same time.

### 1. Replacing the filter of DEF (AdBlue) tank

Consult your local KUBOTA Dealer for replacing the filter of DEF (AdBlue) tank.

## EVERY 3 SERVICE MONTHS

### 1. Checking the quality of DEF (AdBlue)

#### IMPORTANT :

- If the DEF (AdBlue) emits a strong ammonia odor, the quality of the fluid may have deteriorated. To check the quality of the DEF (AdBlue), check the odor of the DEF (AdBlue) in the DEF (AdBlue) tank once every 3 months.
- If the DEF (AdBlue) in the DEF (AdBlue) tank emits a strong ammonia odor, drain all DEF (AdBlue) from the DEF (AdBlue) tank into a container.


Details regarding how to drain the DEF (AdBlue) can be found in a different section.

(See Draining DEF (AdBlue) on page 48)


After draining the DEF (AdBlue), flush the inside of the DEF (AdBlue) tank with distilled water. Then refill the DEF (AdBlue) tank with new or high-quality DEF (AdBlue).

- Do not use a power tool when reinstalling the drain plug. Overtightening the drain plug may cause damage.

See the Storing DEF (AdBlue) in the DEF (AdBlue) tank on page 49 for detail.

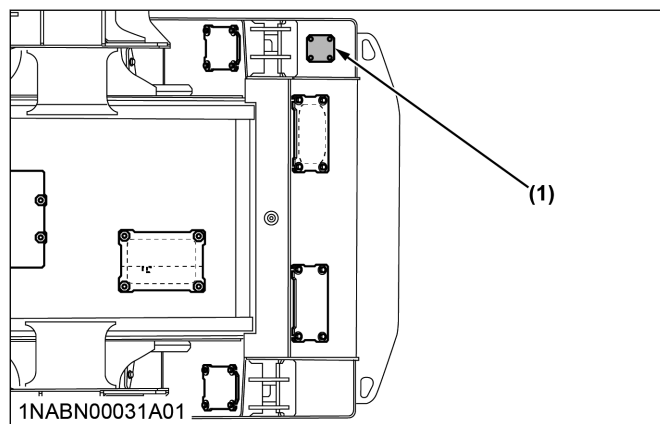

(1) Frame cover

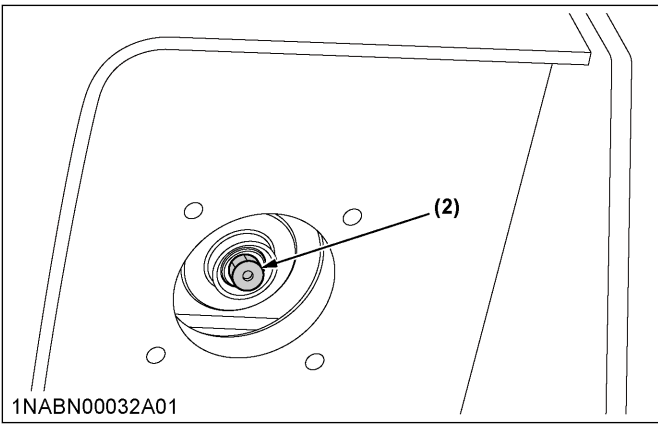

(2) Drain plug

Drain plug tightening torque	4.0 N·m to 6.0 N·m (35.4 lbf·in. to 53.1 lbf·in.)
------------------------------	--

## ANNUAL SERVICING

### 1. Checking the air-conditioner pipes and hoses

#### WARNING

To avoid personal injury or death:

- Do not touch the air-conditioner hoses or the heater with your hand. You may get burned.

1. Check to see that all lines and hose clamps are tight and not damaged.
2. If hoses and clamps are found worn or damaged, replace or repair them at once.  
Consult your local KUBOTA dealer for checking the air-conditioner pipes and hoses.

### 2. Checking the exhaust manifold for cracks, gas, leakage, and mounting screw

Consult your local KUBOTA dealer for checking the exhaust manifold for cracks, gas, leakage, and mounting screw.

### 3. Checking the intake air line for air leaks

Consult your local KUBOTA dealer for checking the intake air line for air leaks.

### 4. Checking the boost sensor and the AFS (air-flow-sensor)

Consult your local KUBOTA dealer for checking the boost sensor and the AFS.

### 5. Checking the condition of the diesel-particulate-filter (DPF) muffler

Consult your local KUBOTA dealer for checking the condition of the DPF muffler.

### 6. Checking the diesel-particulate-filter (DPF) differential pressure sensor and piping for gas leak

Consult your local KUBOTA dealer for checking the DPF differential pressure sensor and the DPF piping for gas leak.

### 7. Checking the diesel-particulate-filter (DPF) exhaust gas temperature sensor


Consult your local KUBOTA dealer for checking the DPF exhaust gas temperature sensor.

### 8. Checking the EGR piping for gas leak

Consult your local KUBOTA dealer for checking the EGR piping for gas leak.

### 9. Checking the antifrost heater for oil separator (CCV heater)


Consult your local KUBOTA Dealer for checking the antifrost heater for oil separator (CCV heater).

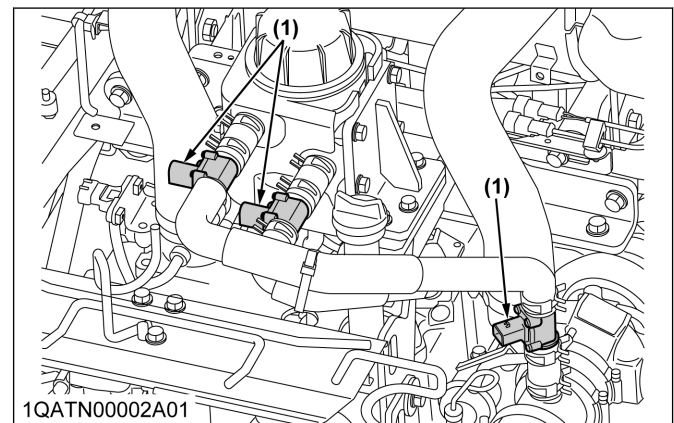

(1) CCV heater


### 10. Checking the CCV internal pressure switch

Consult your local KUBOTA dealer for checking the CCV internal pressure switch.

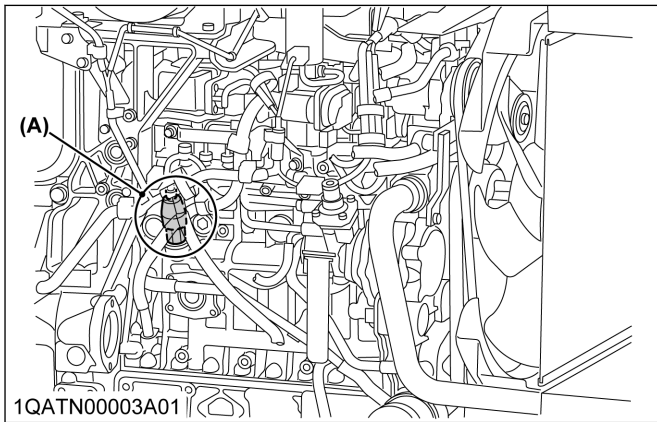

(A) Fig [A]


Fig [A]

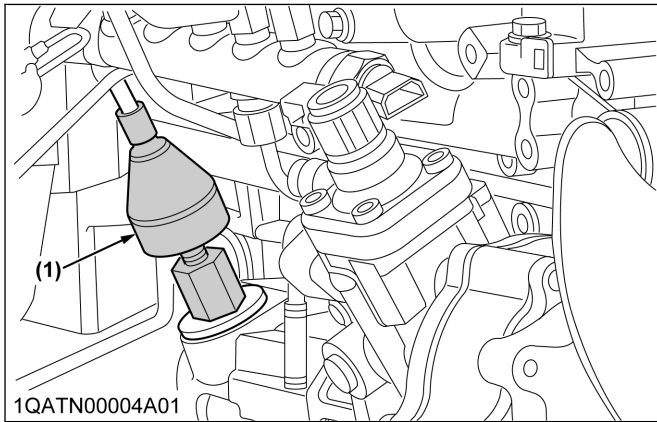

(1) CCV internal pressure switch


## 11. Checking the relief valve

Consult your local KUBOTA dealer for checking the relief valve.

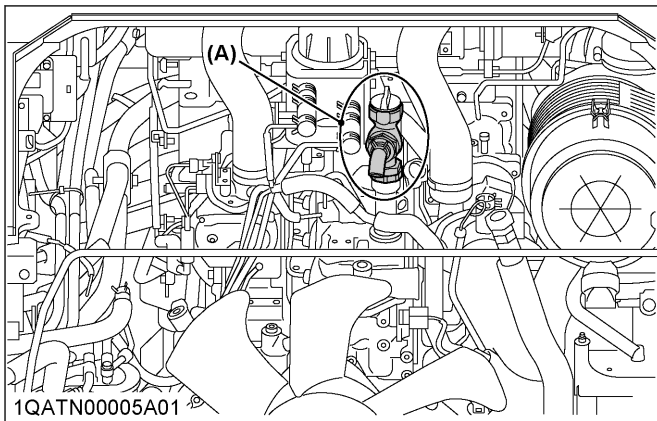

(A) Fig [A]

Fig [A]

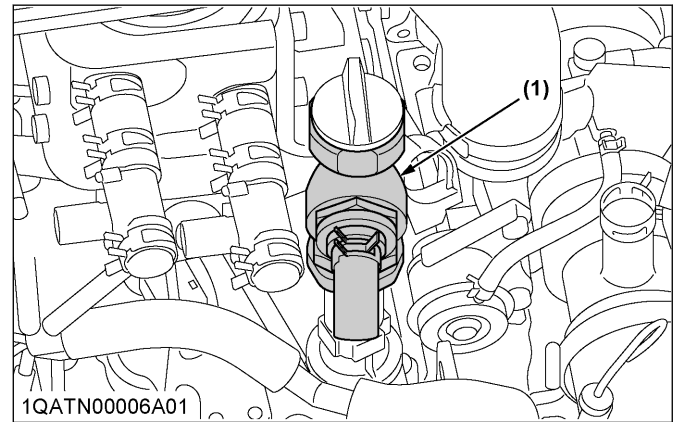

(1) Relief valve

## BIENNIAL SERVICING

### 1. Replacing the hydraulic hose

Consult your local KUBOTA dealer for replacing the hydraulic hoses.

### 2. Changing the radiator coolant

#### **⚠ WARNING**

To avoid personal injury or death:

- When using the antifreeze, use protective clothing such as rubber gloves (antifreeze contains poison).
- If you have swallowed the antifreeze, seek medical attention at once.
- When the antifreeze comes in contact with the skin or clothing, wash it off immediately.
- Do not mix different types of antifreeze. The mixture can produce a chemical reaction causing harmful substances or vapors.
- Antifreeze is extremely flammable and explosive under certain conditions. Keep fire and children away from the antifreeze.
- When draining fluids from the engine, collect fluids with a some container underneath the engine body.
- Do not pour waste onto the grounds, down a drain, or into any water source.
- Follow the relevant environmental-protection-regulations when disposing of the antifreeze.
- Antifreeze if swallowed is poisonous to people, animals, and birds.

1. Park the machine on a firm, flat and, level surface.
2. Lower the lift arms to the ground.
3. Stop the engine
4. Then remove the key and wait until the engine has cooled down completely.

1. Tilt the radiator.

2. Open the drain plug on the bottom of the radiator and drain coolant completely. if a recovery tank is equipped, disconnect the line from the tank floor and then open the drain shutoff-valve.
3. To clean, rinse the radiator with water.
4. Close the drain plug and fill the radiator and the recovery tank with coolant fluid.
5. Let the engine idle for about five min..
6. Stop the engine and remove the key.
7. Check the coolant level of recovery tank and add the coolant if necessary.  
The machine has been shipped filled with 50% antifreeze solution.




Cooling water	Radiator	Open cab	12.5 L (3.3 US gal.)
		Closed cab	13 L (3.4 US gal.)
	Recovery tank		1 L (0.3 US gal.)

**IMPORTANT :**


- Do not operate the engine without coolant.
- To fill the radiator system and the recovery tank, use fresh water and antifreeze fluid.
- When the antifreeze is mixed with water, the antifreeze mixing ratio must be less than 50%.
- Tighten the radiator cap properly. If the cap is loosely or not properly fitted, overheating of the engine can result due to coolant fluid loss.

**3. Replacing the fuel hose**

1. Replace the hoses and clamps according to Checking the fuel line and the intake air line on page 107.

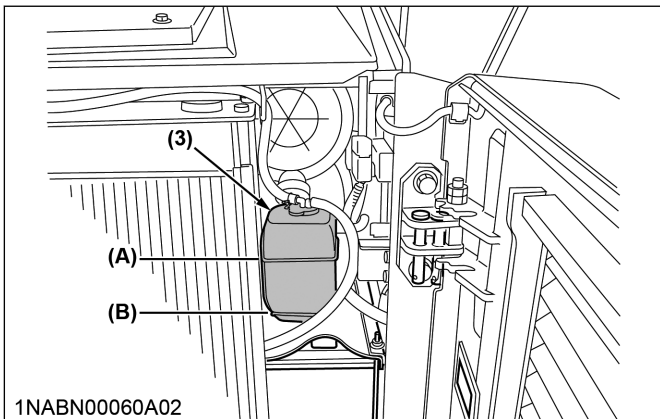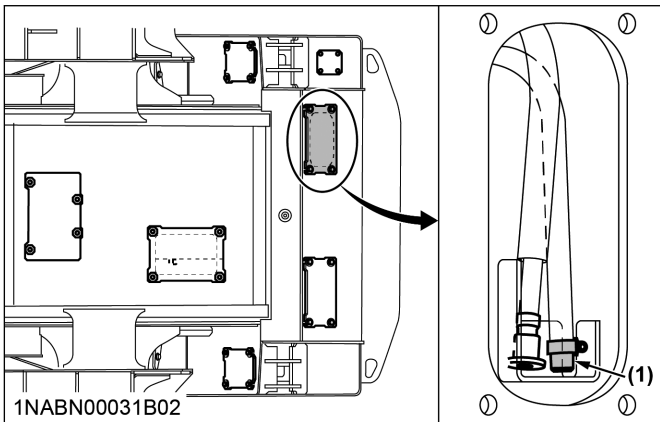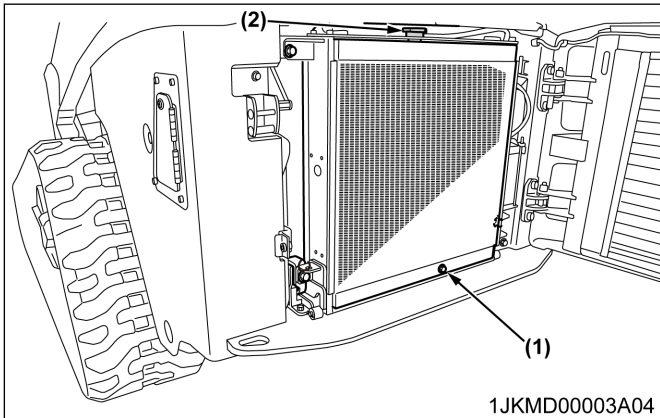



- (1) Drain plug (A) FULL  
 (2) Radiator cap (B) LOW  
 (3) Recovery tank

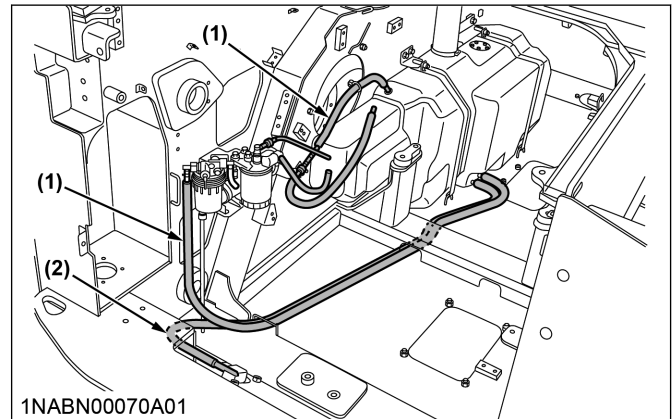

- (1) Fuel lines (2) Fuel drain line

### 4. Replacing the intake air line

1. Replace the hose and clamps according to Checking the fuel line and the intake air line on page 107.

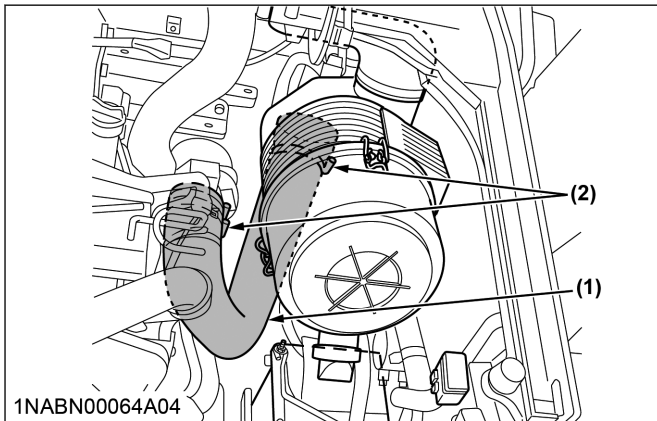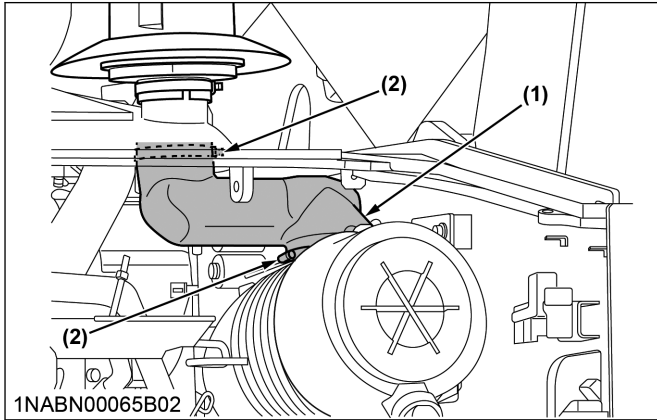

(1) Hose (2) Hose clamps



### 5. Replacing the radiator hoses

**! WARNING**

To avoid personal injury or death:

- Replace the radiator hoses and the hose clamps every two years. If the hoses are swollen, hard, or cracked, you must replace them earlier than specified (earlier than 2 years).

1. Replace the radiator hoses according to the following figure.

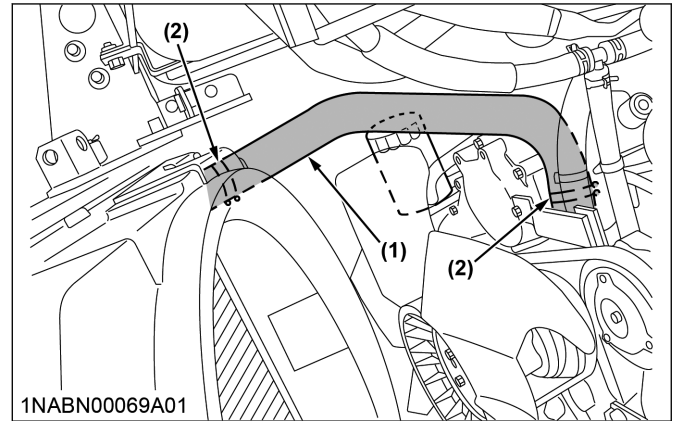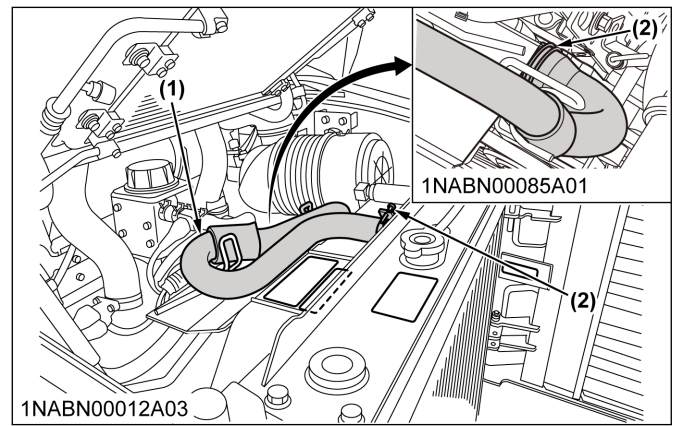

(1) Radiator hose (2) Hose clamps

### 6. Replacing the air-conditioner pipes and hoses

**! WARNING**

To avoid personal injury or death:

- Do not touch the water hoses or the heater with your hand. You may get burned.

Replace air-conditioner pipes and hoses every two years.

1. If the hoses or pipes of the air-conditioner are swollen, hard or cracked, replace them. Consult your local KUBOTA dealer for replacing the pipes and hoses of the air-conditioner.

### 7. Replacing the closed breather related rubber piping

Consult your local KUBOTA dealer for replacing the closed-breather-related-rubber-piping.

### 8. Replacing the diesel-particulate-filter (DPF) differential pressure sensor rubber piping (front and back)

Consult your local KUBOTA dealer for the DPF-differential-pressure-sensor-rubber-piping (front and back).

### 9. Replacing the suction pipe downstream the AFS (air-flow-sensor)

Consult your local KUBOTA dealer for replacing the suction pipe downstream the AFS.

### 10. Replacing the boost sensor pressure rubber piping

Consult your local KUBOTA dealer for replacing the boost-sensor-pressure-rubber-piping.

### 11. Replacing the EGR cooler hose

Consult your local KUBOTA dealer for replacing the EGR-cooler-hose.

## SERVICING AS REQUIRED

### 1. Checking the amount of refrigerant gas

#### WARNING

To avoid personal injury or death:

- Liquid contact with eyes or skin may cause frostbite.
- In the event of a leakage, wear safety goggles. Escaping refrigerant can cause severe injuries to eyes.
- In contact with a flame, R134a refrigerant emits a toxic gas.
- Do not disconnect any part of the refrigeration circuit of the air-conditioning system. Consult your local KUBOTA dealer for assistance and service of refrigerant.

If the air-conditioner performance is reduced, check the following points 1.-2.

1. Air-conditioner condenser is clogged.
2. Air-conditioner belt is loosened.

If there is nothing unusual with the above points, a shortage of refrigerant is possible. Too short refrigerant may cause a poor performance of the air-conditioner. Consult your local KUBOTA dealer for servicing and replenishment.

### 2. Draining the water separator in case warning against water of the fuel filter


1. If the error code [E:9120] of the water separator appears on the meter panel, immediately drain the water separator according to the detailed procedure in Draining the water separator on page 101.

#### IMPORTANT :

- If you don't drain the water separator immediately after the alarm, the engine may be seriously damaged.
- Without the water separator drained, the cleaning efficiency of the DPF (3000 hours) will be reduced and the DPF longevity will be shorter than expected.

### 3. Purging of the fuel system

1. Fill up the machine with fuel.
2. Turn the starter key to the [RUN] position. The fuel system will automatically be purged of air within one minute.

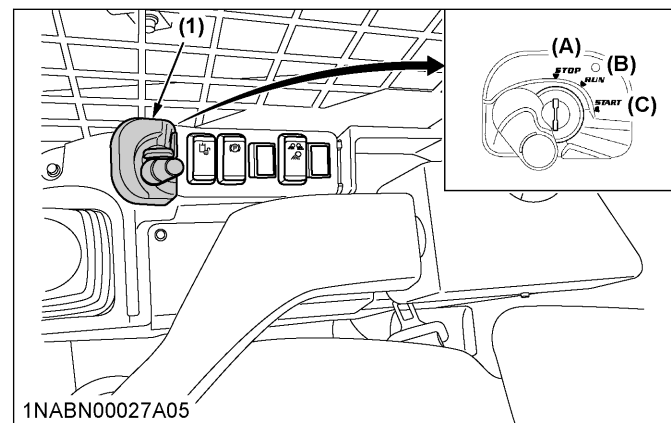

(1) Starter switch

- (A) STOP
- (B) RUN
- (C) START

#### IMPORTANT :

- If the purging was insufficient, the engine dies after starting. In this case repeat step 2. again.

### 4. Cleaning the plastic parts and synthetic leather

- Use a soft cloth when wiping plastic parts or synthetic leather.
- If the plastic or synthetic leather is very dirty, use a soft cloth dipped in a mild detergent that has been diluted with water.
- Wipe off any remaining moisture or detergent with a soft cloth that has been moistened with water and then thoroughly wrung out.



- Cleaning the plastic parts with alkaline, acidic, or organic solvents such as alcohol or benzene can damage them.

# TRACK

## ADJUSTING THE TRACKS

**IMPORTANT :**

- Make sure that no obstacles such as stones are caught in the track. Remove obstacles such as stones before adjusting the track tension.

1. Adjust the track tension properly.

- To loosen the tracks

**! WARNING**


To avoid personal injury or death:

- Do not loosen the grease fitting completely or too quickly. Otherwise grease under high pressure in the tension cylinder could squirt out.
- Do not work under the machine.

- Loosen the bolts, and remove the cover.
- Using a socket wrench, loosen the grease fitting a few turns.

- To tension the tracks

- Loosen the bolt, and remove the cover.
- Apply grease into the grease fitting.

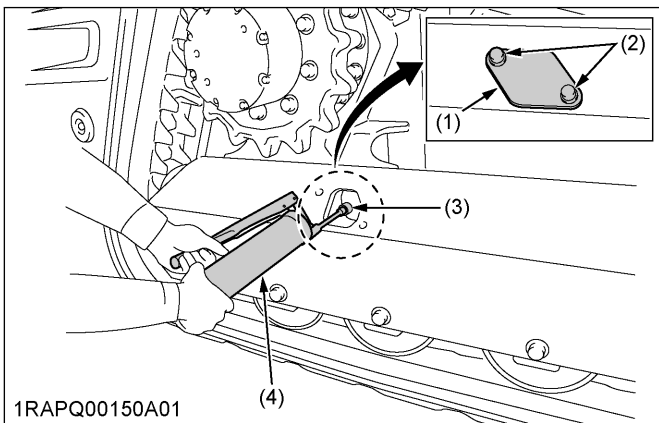

(1) Cover (2) Bolt (3) Grease fitting (4) Grease gun

2. Check the track tension.

**! WARNING**

To avoid personal injury or death:

- When lifting the machine itself with an attachment, place the jack stands under the main frame to prevent the machine from turning over.


- Put the machine on the jack stand.

**! DANGER**

To avoid personal injury or death:


- Do not work under the machine when putting the machine on the jack stand.
- For your safety, do not rely on hydraulically supported devices. They may leak down and suddenly drop or be accidentally lowered.

b. Lift the track from the ground as shown in the following figure.

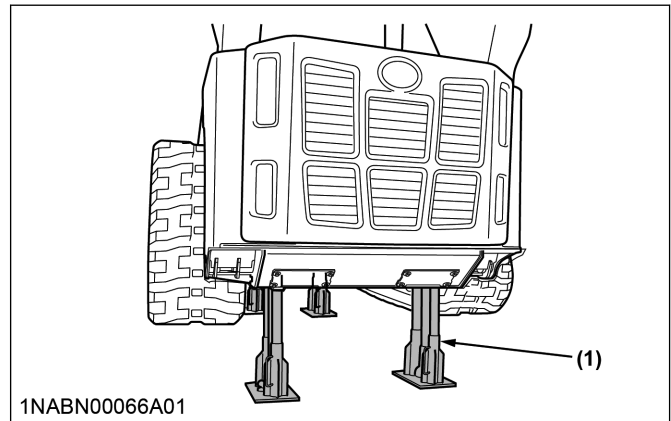

(1) Jack stand

c. The track tension is correct if the distance of clearance between the outer end of the track roller and the track interior surface (A) corresponds to the dimension specified in the following table.

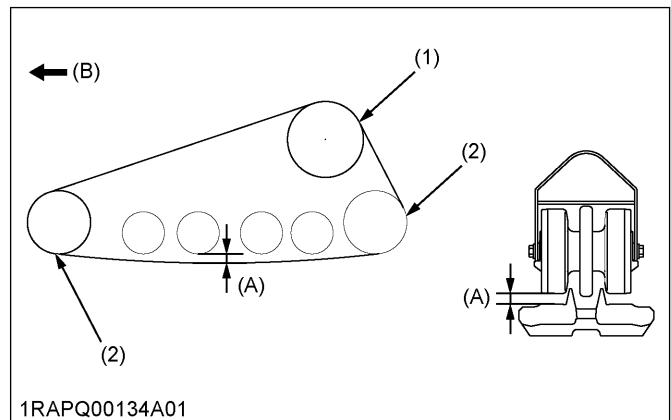

(1) Drive sprocket (2) Idler (A) Clearance between outer end of track roller and track interior surface (B) Front

Clearance between outer end of track roller and track interior surface (A)	20 mm to 30 mm (0.8 in. to 1.2 in.)
--	-------------------------------------

**IMPORTANT :**

- If the tracks are too tight, wear is increased.
- If the tracks are too loose, the track pads may collide with the sprocket and wear is increased.  
The track may dislocate or come off.
- If the track tension is high due to sticking mud, remove mud from the track.

3. After adjustment is completed, tighten the grease fitting using the socket wrench.

You must keep the tightening torque as follows.

Tightening torque	Between 98 N · m to 108 N · m (72.3 ft · lbf to 79.7 ft · lbf)
-------------------	---

**IMPORTANT :**

If the seam of the track is positioned incorrectly, the tracks will be tensioned too loosely, and a further readjustment will be necessary.

1. Rotate the track after adjustment one to two times to check the tension.
2. Additionally follow the following points when adjusting rubber tracks.
  - Check track tension 50 hours after initial use and readjust if necessary.
  - Check and adjust thereafter every 50 service hours.

**IMPORTANT :**

- Clean the track after every use.

# FUSE

## FUSES



### WARNING

To avoid personal injury or death:

- When changing fuse, stop the engine and turn the key in the [STOP] position.

### 1. Replacing the fuse

1. Detach the cover, and remove the cover of the fuse box.
2. Replace the burnt out fuse with a fuse of the same capacity.

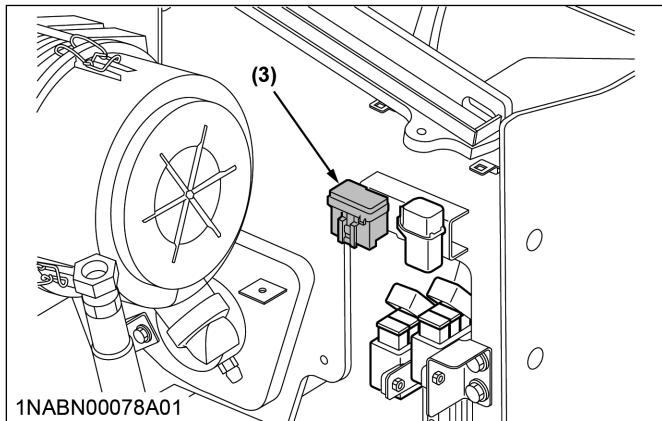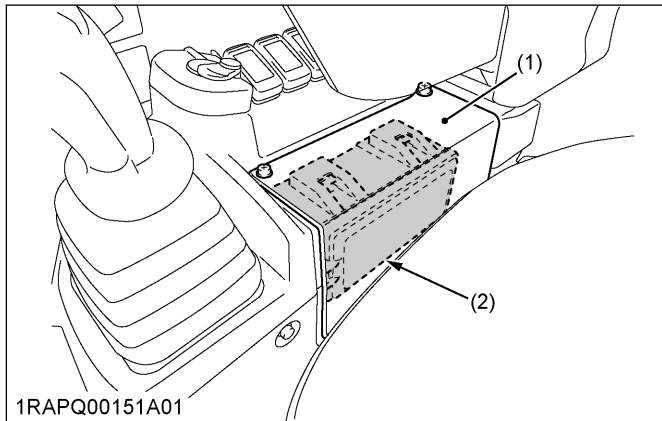

(1) Cover  
(2) Fuse box 1

(3) Fuse box 2

### 2. Fuse capacities and circuits

[A]

9	10	11	12	13		14	15	16	17	18	19	20
1	2	3	4	5	6	7	21		22	23		8

1RAPQ00152A02

[A] Fuse box 1

No.	Protected circuit	Capacity
1	Room light / Strobe light	5 A
2	Front work lights	20 A
3	Rear work lights	15 A
4	Horn	5 A
5	Instrument panel (+B)	5 A
6	AUX electrical power	15 A
7	ECU (+B)	5 A
8	Starter	5 A
9	Indicator (Air cleaner)	5 A
10	Switch (AC)	5 A
11	ECU (AC)	20 A
12	Fuel pump	5 A
13	Control element	5 A
14	Arm harness	20 A
15	Electrical outlet	15 A
16	Attachments-1	-
17	Attachments-2	20 A
18	Air ride seat	20 A
19	Backup alarm	5 A
20	Engine ECU(AC)	5 A

[Closed cab model]

No.	Protected circuit	Capacity
21	Blower motor	20 A
22	Wiper	15 A
23	Compressor clutch	10 A

**NOTE :**

- The fuses of No. 16 and No. 17 are not set at the factory. When using the attachments-1, contact your KUBOTA dealer.

[B]	
	24
	25
	26
	27
	28
	29


1NABN00079A01

[B] Fuse box 2

No.	Protected circuit	Capacity
24	CCV Heater	30 A
25	ACU	20 A
26	ACU Heater	30 A
27	EGR	10 A
28	Switch (Sensor)	10 A
29	Engine Elements	5 A

**NOTE :**

- For the positions of the fuses, look at the label attached on the side of the fuse box.

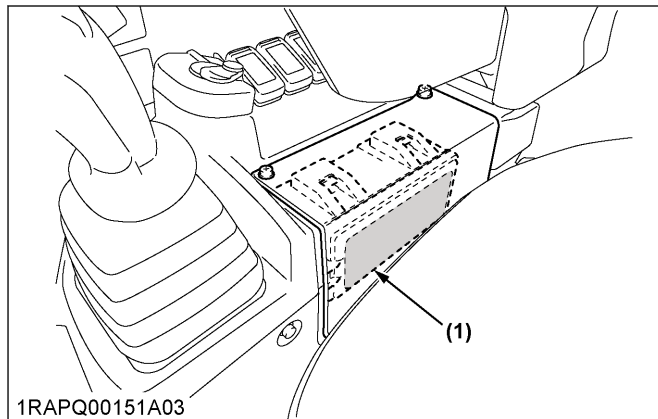


(1) Label

### 3. Electrical outlet

Max power is less than 120 W.

If you need another auxiliary electric, contact your KUBOTA dealer for details.

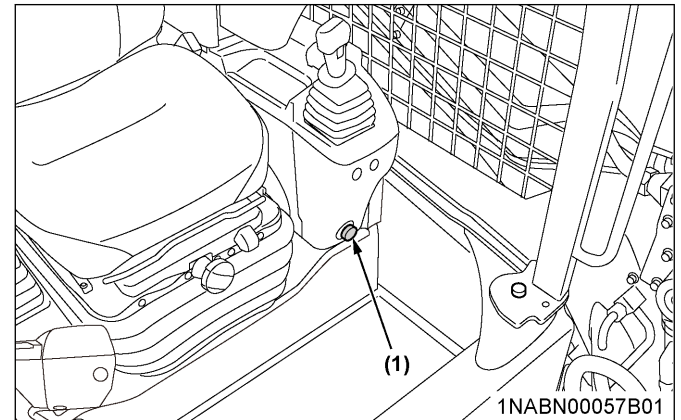


(1) Electrical outlet

### 4. Slow blow fuse

Slow-blow-fuse protects the electrical circuits.

If the slow-blow-fuse is blown, check the electrical circuits for trouble and then replace with a new compatible slow-blow-fuse.

(See Replacing the bolted slow blow fuse on page 128)

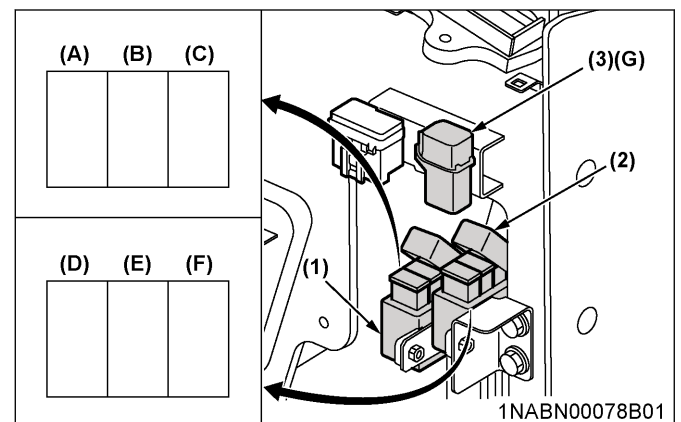

(1) Slow blow fuse 1

(2) Slow blow fuse 2

(3) Slow blow fuse 3

#### Slow blow fuse 1

No.	Protected circuit	Capacity	Fuse type
(A)	Alternator	120 A	Bolted
(B)	Engine	30 A	Plug-in
(C)	Heater	100 A	Bolted


**Slow blow fuse 2**

**[Open cab model]**

No.	Protected circuit	Capacity	Fuse type
(D)	Main	60 A	Bolted
(E)	ACU	40 A	Plug-in
(F)	CCV Heater	30 A	Bolted

**[Closed cab model]**

No.	Protected circuit	Capacity	Fuse type
(D)	Main	60 A	Bolted
(E)	ACU	40 A	Plug-in
(F)	Closed cab	50 A	Bolted

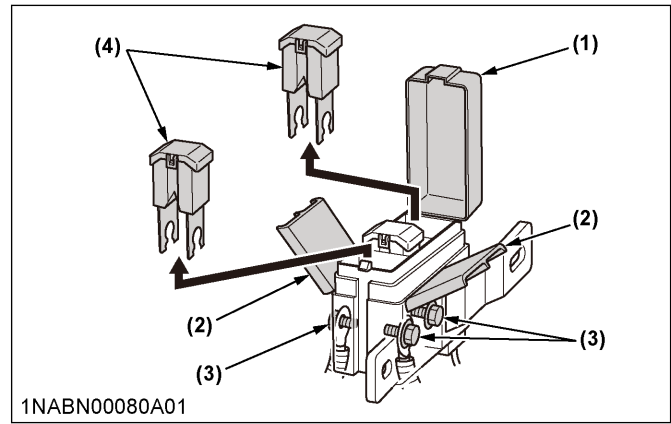


1NABN00080A01  
 (1) Slow blow fuse case cap (4) Bolted slow blow fuse  
 (2) Cover (3) Bolt

**Slow blow fuse 3**

No.	Protected circuit	Capacity	Fuse type
(G)	Condenser Motor	20 A	Plug-in

**5. Replacing the bolted slow blow fuse**

1. Disconnect the negative cord of the battery.
2. Remove the slow-blow-fuse-case.

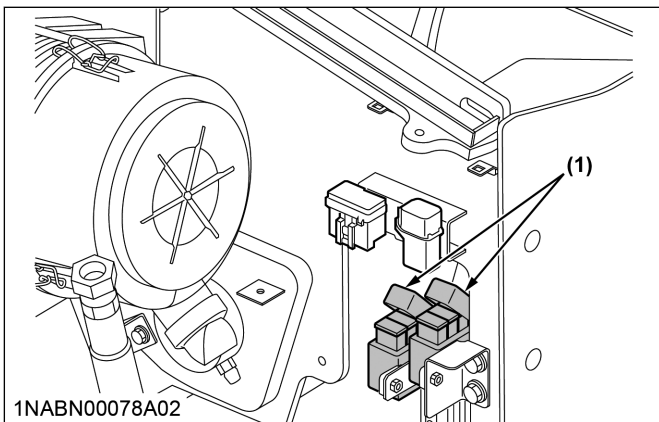

(1) Slow blow fuse case

3. Open the slow-blow-fuse-case-cap and the cover, and then remove the bolts and draw out the bolted-slow-blow-fuse.

# TROUBLESHOOTING


## TROUBLESHOOTING OF THE ENGINE AND OTHER SYSTEMS

If the machine does not perform as expected, or if trouble arises, see the following table and undertake appropriate measures.

Trouble		Cause	Countermeasure
Engine	Starting difficulties	Fuel is too viscous.	<ul style="list-style-type: none"> <li>Check the fuel tank and the filter.</li> <li>Remove the impurities and the water.</li> <li>If necessary, replace the filter.</li> </ul>
		Air or water in the fuel system	<ul style="list-style-type: none"> <li>Remove the water from the fuel tank.</li> <li>Check the fuel-pipe-joint-bolts and nuts for looseness.</li> <li>Purging of the fuel system as the fuel filter and the supply pump. See Purging of the fuel system on page 122.</li> </ul>
		Fuse is blown out.	<ul style="list-style-type: none"> <li>Check the fuse and replace it with a same-capacity one as required.</li> </ul>
		Oil viscosity is too high the engine runs sluggishly in winter.	<ul style="list-style-type: none"> <li>Use the engine block heater (option).</li> </ul>
		Battery is almost dead causing insufficient compression.	<ul style="list-style-type: none"> <li>Recharge the battery.</li> </ul>
		Low DEF (AdBlue) level	<ul style="list-style-type: none"> <li>Add DEF (AdBlue) to the tank.</li> </ul>
	Insufficient engine power	Low fuel level	<ul style="list-style-type: none"> <li>Check the fuel and add it if necessary.</li> </ul>
		Clogged air cleaner	<ul style="list-style-type: none"> <li>Clean the air-cleaner-element.</li> </ul>
		Low DEF (AdBlue) level	<ul style="list-style-type: none"> <li>Add DEF (AdBlue) to the tank.</li> </ul>
	Engine suddenly stops.	Low fuel level	<ul style="list-style-type: none"> <li>Check the fuel and add it if necessary.</li> <li>Purge the fuel system.</li> </ul>
		Low DEF (AdBlue) level	<ul style="list-style-type: none"> <li>Add DEF (AdBlue) to the tank.</li> </ul>
	Abnormal exhaust gas color	Use of poor fuel	<ul style="list-style-type: none"> <li>Use the prescribed fuel.</li> </ul>
		Too much engine oil	<ul style="list-style-type: none"> <li>Drain engine oil to prescribed level.</li> </ul>
	Water temperature in red zone (Overheating)	Flawed seal of the water pump	<ul style="list-style-type: none"> <li>Replace the seal of the water pump.</li> </ul>
		Worn or torn V-belt	<ul style="list-style-type: none"> <li>Adjust or replace the V-belt.</li> </ul>
		Thermostat is flawed.	<ul style="list-style-type: none"> <li>Replace the thermostat.</li> </ul>
		Coolant level too low	<ul style="list-style-type: none"> <li>Fill the recovery tank with the coolant to prescribed level.</li> </ul>
		Radiator grill or fins are clogged.	<ul style="list-style-type: none"> <li>Clean the radiator grill or fins.</li> </ul>
		Coolant is contaminated with rust from the cylinder head or crank case.	<ul style="list-style-type: none"> <li>Replace coolant fluid and add anti-rust.</li> </ul>
		Flawed radiator cap (Evaporation)	<ul style="list-style-type: none"> <li>Replace the radiator cap.</li> </ul>
		Corroded coolant pipes	<ul style="list-style-type: none"> <li>Clean or replace the coolant pipes.</li> </ul>
		Continuous operation under full load	<ul style="list-style-type: none"> <li>Reduce the load.</li> </ul>
		Cylinder-head-gasket is damaged (Coolant loss).	<ul style="list-style-type: none"> <li>Replace the cylinder-head-gasket.</li> </ul>
Engine oil level too low		<ul style="list-style-type: none"> <li>Fill the engine with the engine oil to prescribed level.</li> </ul>	
Maladjustment of the fuel injection		<ul style="list-style-type: none"> <li>Readjust the fuel injection in ignition timing.</li> </ul>	
Use of poor fuel		<ul style="list-style-type: none"> <li>Use the prescribed fuel.</li> </ul>	
Hydraulic System	Lift arms, bucket, or drive unit power is too low.	Hydraulic oil level too low	<ul style="list-style-type: none"> <li>Add the hydraulic oil to the prescribed level.</li> </ul>
		Leakages of the hoses and / or the joints	<ul style="list-style-type: none"> <li>Replace the hose and/or the joint.</li> </ul>
		Clogged oil filter	<ul style="list-style-type: none"> <li>Replace the oil filter.</li> </ul>

(Continued)

## TROUBLESHOOTING

Trouble		Cause	Countermeasure
Hydraulic System	Lift arms, bucket, or drive unit can not move.	Armrest is in the raised position.	<ul style="list-style-type: none"> <li>Lower the armrests.</li> </ul>
		Operator is not in the operator's seat.	<ul style="list-style-type: none"> <li>Sit in the operator's seat.</li> </ul>
		Hydraulic-unlock-switch is not pressed.	<ul style="list-style-type: none"> <li>Press the hydraulic-unlock-switch.</li> </ul>
Drive System	Deviation of drive direction	Blocked through the stones	<ul style="list-style-type: none"> <li>Remove the stones.</li> </ul>
		Track too loose or too tight	<ul style="list-style-type: none"> <li>Adjust the track accordingly.</li> </ul>
Electric system	 mark appears in the instrument panel.	Electric system is malfunctioning.	<ul style="list-style-type: none"> <li>Check the error code number of LIST OF THE ERROR CODE NUMBERS on page 131 and contact your local dealer.</li> </ul>



## LIST OF THE ERROR CODE NUMBERS

⊙: Sure to happen

○: May happen

Error Code Number	Problem or Failure	Machine condition				Provisional measure and Correction
		Engine performance			Machine performance	
		Acceleration limited	Engine output limited	Engine stopped		
E:001	CAN communication	-	-	-	-	Immediately contact your local dealer.
E:004	Hydraulic oil temperature advance warning	-	-	-	-	Stop the engine and check the level in the hydraulic oil tank, for a hydraulic oil leak and grill or oil cooler is clogged. Fill to proper level.
E:005	Hydraulic oil temperature has reached a specified level.	⊙	-	-	-	Stop the engine and check the level in the hydraulic-oil-tank and for a hydraulic oil leak. Fill the hydraulic-oil-tank with the hydraulic oil to proper level. If the error code number "E:005" still appears, immediately contact your local dealer.
E:008	Fuel sensor system	-	-	-	The fuel level indicator does not appear on the meter. The other functions of the machine are still operative.	Immediately contact your local dealer.
E:009	Acceleration system (hand)	⊙	-	-	The accelerator fails, but the other functions of the machine are still operative. The machine is operative at the low idling rpm.	Move the machine to a place suited for repair. Immediately contact your local dealer.
E:010	High-speed switching system	-	-	-	The machine still runs at low speed without switching to high speed. The other functions of the machine are still operative.	Immediately contact your local dealer.
E:011	Parking brake system	-	-	-	The machine fails to move.	Immediately contact your local dealer.
E:012	Float switching system	-	-	-	The float mode is not turned on. The other functions of the machine are still operative.	Immediately contact your local dealer.
E:013	Hydraulic lock system	-	-	-	The attachment fails to function, but the machine can move.	Move the machine to a place suited for repair. Immediately contact your local dealer.
E:014	Hydraulic oil temperature is below a specified level.	-	-	-	The AUX high flow range is not available.	Raise the hydraulic oil temperature. Then if the error code number "E:014" is not solved, immediately contact your local dealer.
E:015	Hydraulic quick-hitch system	-	-	-	The hydraulic quick-hitch system is not turned on. The other functions of the machine are still operative.	Immediately contact your local dealer.

(Continued)

## TROUBLESHOOTING

Error Code Number	Problem or Failure	Machine condition			Machine performance	Provisional measure and Correction
		Engine performance				
		Acceleration limited	Engine output limited	Engine stopped		
E:016	Auxiliary hydraulic control system (Control switch on the knob)	-	-	-	The auxiliary-hydraulic-control-system is not turned on. The other functions of the machine are still operative.	Immediately contact your local dealer.
E:018	Auxiliary hydraulic control system (Solenoid valve for Rightward SW)	-	-	-	The auxiliary-hydraulic-control-system is not turned on. The other functions of the machine are still operative.	Immediately contact your local dealer.
E:019	Auxiliary hydraulic control system (Solenoid valve for Leftward SW)	-	-	-	The auxiliary-hydraulic-control-system is not turned on. The other functions of the machine are still operative.	Immediately contact your local dealer.
E:020	Electronic travel torque management system	-	-	-	The machine fails to move.	Immediately contact your local dealer.
E:021	5 V power supply of the sensor is short-circuited.	-	-	-	The majority of systems fail. <ul style="list-style-type: none"> <li>The engine may be started and the machine may move.</li> </ul> Do not try any jobs. Just move the machine to a safe place.	Immediately contact your local dealer.
E:023	Error code number "E:023" appears if a jumper cable is connected to a 24 V battery or improper device to jump start the engine	-	-	-	Immediately stop using connected device, and disconnect the 24 V battery. When the engine gets restarted and is running with no error code number appearing, it means there is no problem.	If the error code number "E:023" still appears, immediately contact your local dealer.
E:024	Hydraulic temperature sensor	-	-	-	The AUX high flow mode is not available.	Immediately contact your local dealer.
E:026	CRS CAN communication	○	○	-	-	Immediately contact your local dealer.
E:027	ACU CAN communication	○	○	-	-	Immediately contact your local dealer.
E:028	Acceleration system (foot)	◎	-	-	The accelerator fails, but the machine's other functions are still operative. The machine is operative at the idling rpm.	Move the machine to a place suited for repair. Immediately contact your local dealer.
E:9000	Requirement for the DPF regeneration.	-	-	-	DPF must be regenerated, but low engine rpm is unable to start the DPF regeneration.	Rev up the engine rpm and start the DPF regeneration. If the error code number "E:9000" still appears, immediately contact your local dealer.
E:9001	Requirement for the DPF regeneration.	-	◎	○	DPF must be regenerated, but low engine rpm is unable to start the DPF regeneration. If you leave the machine with the hydraulic locked, the engine can stop automatically.	Rev up the engine rpm and start the DPF regeneration. If the error code number "E:9001" still appears, immediately contact your local dealer.
E:9002	DPF is regenerated.	-	◎	-	-	-
E:9003	Requirement for the DPF regeneration.	-	◎	-	DPF must be regenerated, but unable to start the DPF regeneration.	Immediately contact your local dealer.
E:9004	Requirement for the DPF replacement.	-	◎	-	You must replace the DPF.	Immediately contact your local dealer.

(Continued)

Error Code Number	Problem or Failure	Machine condition				Provisional measure and Correction
		Engine performance			Machine performance	
		Acceleration limited	Engine output limited	Engine stopped		
E:9006	Requirement for the DPF regeneration.	-	-	-	DPF must be regenerated, but unable to start the DPF regeneration because the inhibit switch is activated.	Move the machine to a safe place and release the inhibit switch to start the DPF regeneration. If the error code number "E:9006" still appears, immediately contact your local dealer.
E:9007	Requirement for the DPF regeneration.	-	⊙	○	DPF must be regenerated, but unable to start the DPF regeneration because the inhibit switch is activated. If you leave the machine with the hydraulic locked, the engine can stop automatically.	Restart the engine, move the machine to a safe place, and release the inhibit switch to start the DPF regeneration. If the error code number "E:9007" still appears, immediately contact your local dealer.
E:9010	Engine stop for DPF	-	-	⊙	The DPF regeneration fails to function. Leave the machine with the hydraulic system locked, by which the engine stops itself.	Restart the engine, move the machine to a safe place, and release the inhibit switch to start the DPF regeneration. If the error code number "E:9010" still appears, immediately contact your local dealer.
E:9100	Rpm sensor system	○	○	-	-	Immediately contact your local dealer.
E:9101	Fuel or rail pressure system	⊙	⊙	⊙	-	Immediately contact your local dealer.
E:9102	SCV system	⊙	⊙	-	-	Immediately contact your local dealer.
E:9103	Intake air temperature sensor system	-	-	-	-	Immediately contact your local dealer.
E:9104	Coolant temperature system	⊙	⊙	-	-	Immediately contact your local dealer.
E:9105	Fuel temperature sensor system	-	-	-	-	Immediately contact your local dealer.
E:9106	Injector system	⊙	⊙	○	-	Immediately contact your local dealer.
E:9107	Intake air pressure sensor system	-	○	-	-	Immediately contact your local dealer.
E:9108	Battery voltage system	⊙	⊙	○	-	Immediately contact your local dealer.
E:9109	Sensor voltage system	⊙	⊙	○	-	Immediately contact your local dealer.
E:9110	Main relay system	-	-	-	-	Immediately contact your local dealer.
E:9112	Atmospheric pressure sensor system	-	○	-	-	Immediately contact your local dealer.
E:9113	EGR valve system	-	⊙	-	-	Immediately contact your local dealer.

(Continued)

## TROUBLESHOOTING

Error Code Number	Problem or Failure	Machine condition				Provisional measure and Correction
		Engine performance			Machine performance	
		Acceleration limited	Engine output limited	Engine stopped		
E:9114	Pre overheat	-	⊙	-	-	For correction, see Coolant temperature gauge on page 29. Stop the engine and check the grill or oil cooler is clogged. If the error code number "E:9114" still appears, immediately contact your local dealer.
E:9115	Engine overheat warning and Emission level caution	-	⊙	-	-	For correction, see Coolant temperature gauge on page 29. If the error code number "E:9115" still appears, immediately contact your local dealer.
E:9116	Engine overheat warning	⊙	-	-	-	For correction, see Coolant temperature gauge on page 29. If the error code number "E:9116" still appears, immediately contact your local dealer.
E:9117	Air heater system	-	-	-	-	Immediately contact your local dealer.
E:9118	Engine oil pressure system	-	-	-	-	Stop the engine and check the engine oil level. If the error code number "E:9118" still appears, immediately contact your local dealer.
E:9119	Charging system failure	-	-	-	-	Stop the engine and check the V-belt. If the error code number "E:9119" still appears, immediately contact your local dealer.
E:9120	Fuel filter water warning	-	-	-	-	Stop the engine and check and drain the water separator. If the error code number "E:9120" still appears, immediately contact your local dealer.
E:9121	Engine ECU	○	○	○	-	Immediately contact your local dealer.
E:9122	ECU communication failure	○	○	-	-	Immediately contact your local dealer.
E:9123	PCV	-	-	⊙	-	Immediately contact your local dealer.
E:9124	PRV	-	-	⊙	-	Immediately contact your local dealer.
E:9125	HP5 system	-	-	⊙	-	Immediately contact your local dealer.
E:9126	CCV system freezing	-	-	-	-	Stop the engine and immediately contact your local dealer.

(Continued)

Error Code Number	Problem or Failure	Machine condition				Provisional measure and Correction
		Engine performance			Machine performance	
		Acceleration limited	Engine output limited	Engine stopped		
E:9127	CCV system freezing	⊙	⊙	-	CCV system is frozen. If you continue running the engine while the error number "E:9126" appears, the engine performance is limited.	Stop the engine and immediately contact your local dealer.
E:9200	Mass air flow sensor system	-	○	-	-	Immediately contact your local dealer.
E:9203	Intake air throttle	-	-	-	-	Immediately contact your local dealer.
E:9204	Differential pressure sensor system	-	-	-	-	Immediately contact your local dealer.
E:9205	Exhaust temperature sensor (DOC inlet)	-	-	-	-	Immediately contact your local dealer.
E:9206	Exhaust temperature sensor (DOC outlet)	-	-	-	-	Immediately contact your local dealer.
E:9207	Exhaust temperature sensor (DPF outlet)	-	-	-	-	Immediately contact your local dealer.
E:9208	All the exhaust temperature sensors break down at once.	-	-	-	-	Immediately contact your local dealer.
E:9211	DOC response is unusual.	⊙	⊙	-	-	Immediately contact your local dealer.
E:9212	DPF regeneration timeout	-	-	-	-	Immediately contact your local dealer.
E:9213	DPF regeneration Error (Water temperature is low)	-	-	-	-	Immediately contact your local dealer.
E:9214	DPF regeneration cycle occurs too often.	-	⊙	-	-	Immediately contact your local dealer.
E:9300	Engine fuel system (P/L)	⊙	⊙	-	-	Check the fuel level and see if the fuel filter is clogged. If the error code number "E:9300" still appears, immediately contact your local dealer.
E:9301	Engine fuel system (rail pressure)	⊙	⊙	-	-	Check the fuel level and see if the fuel filter is clogged. If the error code number "E:9301" still appears, immediately contact your local dealer.
E:9302	Engine fuel system (air in the fuel system)	⊙	⊙	-	Air in the fuel system	Check the fuel level. If the fuel tank is not empty, immediately contact your local dealer.
E:9303	Engine fuel system (SCV)	⊙	⊙	-	-	Check the fuel level and see if the fuel filter is clogged. If the error code number "E:9303" still appears, immediately contact your local dealer.
E:9304	Engine fuel system (supply pump).	⊙	⊙	-	-	Check the fuel level and see if the fuel filter is clogged. If the error code number "E:9304" still appears, immediately contact your local dealer.

(Continued)

## TROUBLESHOOTING

Error Code Number	Problem or Failure	Machine condition			Machine performance	Provisional measure and Correction
		Engine performance				
		Acceleration limited	Engine output limited	Engine stopped		
E:9305	Engine air intake system (poor air intake)	⊙	⊙	-	-	Check to see if any air-intake hose is disconnected and if the air-cleaner-element is clogged. If the error code number "E:9305" still appears, immediately contact your local dealer.
E:9306	Engine air intake system (boost pressure too low)	⊙	⊙	-	-	Check to see if any air-intake hose is disconnected and if the air-cleaner-element is clogged. If the error code number "E:9306" still appears, immediately contact your local dealer.
E:9307	Engine exhaust temperature (DOC inlet) is not as specified.	-	-	⊙	-	Check the fuel level and see if the fuel filter is clogged. Check to see if any air-intake hose is disconnected and if the air-cleaner-element is clogged. If the error code number "E:9307" still appears, immediately contact your local dealer.
E:9308	Engine exhaust temperature (DOC outlet) is not as specified.	-	-	⊙	-	Check the fuel level and see if the fuel filter is clogged. Check to see if any air-intake hose is disconnected and if the air-cleaner-element is clogged. If the error code number "E:9308" still appears, immediately contact your local dealer.
E:9309	Engine exhaust temperature (DPF outlet) is not as specified.	-	-	⊙	-	Check the fuel level and see if the fuel filter is clogged. Check to see if any air-intake hose is disconnected and if the air-cleaner-element is clogged. If the error code number "E:9309" still appears, immediately contact your local dealer.
E:9310	Starter turn-on limited	-	-	⊙	-	The starter is limited for its activation in response to any other error
E:9400	Other failures	○	○	○	-	Immediately contact your local dealer.
E:9500	DEF (AdBlue) Pressure Sensor	⊙	⊙	-	-	Immediately contact your local dealer.
E:9501	DEF (AdBlue) Tank Temperature Sensor	-	-	-	-	Immediately contact your local dealer.
E:9502	DEF (AdBlue) Tank Level sensor error	⊙	⊙	-	-	Immediately contact your local dealer.

(Continued)

Error Code Number	Problem or Failure	Machine condition				Provisional measure and Correction
		Engine performance			Machine performance	
		Acceleration limited	Engine output limited	Engine stopped		
E:9503	DEF (AdBlue) Tank Level: Low or Empty	⊙	⊙	-	-	Add the DEF (AdBlue). And then if the error code "E:9503" is not solved, immediately contact your local dealer.
E:9504	DEF (AdBlue) Tank Level: Leakage	⊙	⊙	-	-	Add the DEF (AdBlue). And then if the error code "E:9504" is not solved, immediately contact your local dealer.
E:9505	SCR EGT (Exhaust Gas Temperature) Sensor	⊙	⊙	-	-	Immediately contact your local dealer.
E:9506	CAN1 Bus off (ACU)	-	-	-	-	Immediately contact your local dealer.
E:9507	CAN2 Bus off (ACU)	⊙	⊙	-	-	Immediately contact your local dealer.
E:9508	CAN communication (NOx sensors)	⊙	⊙	-	-	Immediately contact your local dealer.
E:9509	CAN Received Data (ACU)	⊙	⊙	-	-	Immediately contact your local dealer.
E:9510	DEF (AdBlue) Injector	⊙	⊙	-	-	Immediately contact your local dealer.
E:9511	Suction Tube Heater HT1 (S)	-	-	-	-	Immediately contact your local dealer.
E:9512	Delivery Tube Heater HT3 (D)	-	-	-	-	Immediately contact your local dealer.
E:9513	Return Tube Heater HT4 (R)	-	-	-	-	Immediately contact your local dealer.
E:9514	DEF (AdBlue) Pump Heater HT2 (E)	-	-	-	-	Immediately contact your local dealer.
E:9515	DEF (AdBlue) Heater (External) Relay	-	-	-	-	Immediately contact your local dealer.
E:9516	Coolant Valve for DEF (AdBlue) Tank	-	-	-	-	Immediately contact your local dealer.
E:9517	DEF (AdBlue) Pump	○		-	-	Immediately contact your local dealer.
E:9518	Low Conversion Efficiency	⊙	⊙	-	-	Immediately contact your local dealer.
E:9519	DEF (AdBlue) Tank Quality sensor error	⊙	⊙	-	-	Immediately contact your local dealer.
E:9520	DEF (AdBlue) Tank Quality error	⊙	⊙	-	-	Replace the DEF (AdBlue) in the DEF (AdBlue) tank. And then if the error code "E:9520" is not solved, immediately contact your local dealer.
E:9521	Pre NOx Sensor	⊙	⊙	-	-	Immediately contact your local dealer.
E:9522	Post NOx Sensor	⊙	⊙	-	-	Immediately contact your local dealer.
E:9523	DEF (AdBlue) Dosing Pressure Monitor	⊙	⊙	-	-	Immediately contact your local dealer.
E:9524	Sensor 5V Supply Voltage (ACU)	⊙	⊙	-	-	Immediately contact your local dealer.

(Continued)

## TROUBLESHOOTING

Error Code Number	Problem or Failure	Machine condition				Provisional measure and Correction
		Engine performance			Machine performance	
		Acceleration limited	Engine output limited	Engine stopped		
E:9525	System Power (ACU)	⊙	⊙	-	-	Immediately contact your local dealer.
E:9526	ACU FLASH ROM	⊙	⊙	-	-	Immediately contact your local dealer.
E:9527	EGR system error (ACU)	⊙	⊙	-	-	Immediately contact your local dealer.
E:9550	Other failures for SCR system	○	○	-	-	Immediately contact your local dealer.
E:9600	Engine power limited (SCR system)	⊙	-	-	SCR system error, engine power is limited during operation.	To resolve this error code, use the E:95xx error solution.
E:9601	Engine power limited (SCR system)	⊙	⊙	-	SCR system error, engine power is limited during operation.	To resolve this error code, use the E:95xx error solution.
E:9602	Engine power limited (SCR system)	⊙	⊙	-	SCR system error, engine power is limited during operation.	To resolve this error code, use the E:95xx error solution.



# COLD WEATHER

Operation of the machine under cold weather conditions

## PREPARATION FOR OPERATION OF THE MACHINE IN COLD WEATHER

- Replace the engine oil and hydraulic oil with those of viscosity suitable for cold weather.
- In cold weather, the battery power drops, and the battery fluid may freeze if the battery is not sufficiently charged. To prevent the battery fluid from freezing, be sure to keep the battery charged at least 80% or more of its capacity after operation of the machine.  
To ease next start of the machine, it is recommended to keep the battery stored in closed or heated rooms.
- Add anti-freeze to coolant in the radiator and recovery tank, if the ambient temperature is expected to drop as follows.

Ambient temperature	below 0 °C (32 °F)
---------------------	--------------------

Mixing ratio of water and anti-freeze depends on the expected ambient temperature.  
When mixing, stir anti-freeze up well, and then fill it into the radiator.

### Mixing ratio between water and antifreeze

Ambient temperature	°C (°F)	-5 (+23)	-10 (+14)	-15 (+5)	-20 (-4)	-25 (-13)	-30 (-22)	-35 (-31)
Antifreeze	%	30	30	30	35	40	45	50
Water	%	70	70	70	65	60	55	50

### IMPORTANT :

- **Use permanent anti-freeze or long-life coolant.**
- **Drain the coolant completely and clean the inside of the radiator, then fill with the water and anti-freeze mixture.**
- **The anti-freeze acts as an anti-corrosive, it is not necessary to add an additive to the water and antifreeze mixture.**
- **See Checking the coolant level on page 96 for radiator fill volumes.**
- **See Starting the engine under cold conditions on page 59.**

## STORING THE MACHINE AFTER COMPLETION OF WORK IN COLD WEATHER

1. Clean the machine thoroughly after work, and wipe dry.  
Otherwise mud and earth on the tracks could freeze if the ambient temperature drops as follows. Operation of the machine is then not possible.

Ambient temperature	below 0 °C (32 °F)
---------------------	--------------------

2. Store the machine in a dry place. If you can not store the machine in a dry place, store it on wooden planks or on mats.  
If the machine is kept on damp or muddy ground, the tracks could freeze overnight. Operation of the machine is then not possible. Furthermore the reduction gear may be damaged.
3. Additionally, rub the piston rods of the hydraulic cylinders to dry them.  
Otherwise severe damage could occur to the piston rods of the hydraulic cylinders if dirty water seeps through the seals.

# LONG STORAGE

## WARNING

To avoid personal injury or death:

- Do not clean the machine with the engine running.
- To avoid the danger of exhaust fume poisoning, do not operate the engine in a closed building or any areas without proper ventilation.
- When storing the machine, remove the key from the starter switch to avoid unauthorized persons from operating the machine and getting injured.
- Bring the machine on a firm, flat, and level surface. Lower the lift arms on the ground.

## STORING THE MACHINE FOR A LONGER PERIOD OF TIME

If the machine be stored for a longer period of time, follow the following procedures.

1. Clean the whole machine thoroughly and in all cases store it indoors.  
If you have to keep the machine outdoors, follow the following procedure.
  - a. Lay out wooden planks on even ground.
  - b. Place the machine on the planks.
  - c. Cover the machine completely.
2. Change the oil and grease the machine.
3. Heavily grease the visible section of the cylinder rods.
4. Remove the battery and store it indoors.
5. Drain all DEF (AdBlue) from the DEF (AdBlue) tank into a container.  
Do not use a power tool when reinstalling the drain plug.  
Overtightening the drain plug may cause damage.  
(See Draining DEF (AdBlue) on page 48)
6. If it is expected that the ambient temperature will drop as follows, add the antifreeze or drain coolant completely.

Ambient temperature	below 0 °C (32 °F)
---------------------	--------------------

### IMPORTANT :

- **Wash the machine after stopping the engine.**  
If you wash the machine while running the engine, splashing water gets into the air cleaner through its intake and cause engine damage.  
Carefully, wash and do not splash water over the air cleaner while the engine is running.

## OPERATING THE MACHINE AFTER STORING FOR A LONG PERIOD OF TIME

Follow the following procedures when operating the machine storing for a long period of time.

1. Wipe off the grease from the hydraulic cylinder rods.
2. Turn on the engine, and operate the attachments and the drive mechanisms under no load in order to circulate the hydraulic oil.
3. Add new or high-quality DEF (AdBlue) to the DEF (AdBlue) tank.  
(See Adding DEF (AdBlue) on page 48)

If the machine is stored for longer than one month, perform steps 1. and 2. once every month.

### 1. Periodic replacement of important component parts

To ensure safety in operation, you are strongly requested to inspect and service the machine at regular intervals. For added safety, ask your KUBOTA dealer to replace the following important component parts.

The following important component parts are prone to degradation in material or subject to wear and tear with time. It is difficult to judge how much they have been affected at regular inspection. It is therefore necessary to replace the following component parts with new ones, whether wear is visible or not after a specified time of use.

If any parts are found worn even before the specified use, repair or replace them in the same way as other parts.

If any of the hose clamps is found deformed or cracked, also replace the hose clamp.

For the hydraulic hoses other than the ones to be replaced periodically, inspect them for the following points. If found unusual, tighten them up or replace them.

When replacing the hydraulic hoses, change their O rings and sealings with new ones.

For replacement of the important parts, contact your KUBOTA dealer.

### NOTE :

- **At the following periodic inspections, check the fuel hoses and hydraulic hoses as well.**

Inspection Interval	Check points
Daily Checks	Oil leak at the fuel and hydraulic hose connections and points
Every month	Oil leak at the fuel and hydraulic hose connections and points Damages at the fuel and the hydraulic hose (cracks, chafing)
Every year	Oil leak at the fuel and hydraulic hose connections and points Interference, deformation, degradation, twist, and other damages (cracks, chafing) of the fuel and hydraulic hoses

### List of important component parts

No.	Component parts	Period
1	Fuel hose	Every 2 years or 4000 hours
2	Hydraulic hose	
3	Radiator hose	
4	Closed breather related rubber piping	
5	DPF differential pressure sensor rubber piping (front and back)	
6	Suction pipe downstream the AFS (air-flow-sensor)	
7	Boost sensor pressure rubber piping	
8	Intake air line	

To prevent serious damage to the hydraulic system, use only a KUBOTA genuine hydraulic hose.

# RECOMMENDED OILS

## RECOMMENDED OILS, GREASES, AND FUELS

### IMPORTANT :

- Before delivery the hydraulic oil is Idemitsu Daphne Super Hydro 46ST.
- Use the engine oil API service classification CJ-4 or CK-4.
- Use SAE 90 (API, GL-4, GL-5) as the drive-unit-oil for all seasons.

	Application	Viscosity	KTC* <sup>1</sup> recommends	Shell	ExxonMobil
Gear oil	All-weather gear oil	SAE 90	Excavator Gear Oil 90 Part Number 7000-68700 (1 Quart)	Shell Spirax HD80W-90	Mobilize HD Plus 80W-90
Hydraulic oil			Kubota Hydraulic Fluid 46HD		
Grease				Shell Alvania EP2	Mobilux EP2
Fuel				Diesel Fuel No.2-D S15	
Fuel under -5 °C (23 °F)				Diesel Fuel No.1-D S15	

\*1 KTC is an abbreviation for Kubota Tractor Corporation.

	Application	Viscosity	KCL* <sup>1</sup> recommends	Shell	Esso
Gear oil	All-weather gear oil	SAE 90		Shell Spirax HD75W-90	Mobilube HD 80W-90
Hydraulic oil			ExxonMobil Mobil DTE 10 Excel 46 or equivalent oil		
Grease				Shell Alvania EP2	Mobilux EP2
Fuel				Diesel Fuel No.2-D S15	
Fuel under -5 °C (23 °F)				Diesel Fuel No.1-D S15	

\*1 KCL is an abbreviation for Kubota Canada Ltd.

### NOTE :

- **Engine oil**
  - Use the engine oil of suitable American-petroleum-institute (API) service classification and with proper SAE Engine oil standards according to the ambient temperatures.

Above 25 °C (77 °F)	SAE 30 or SAE 10W-30, SAE 15W-40
0 °C to 25 °C (32 °F to 77 °F)	SAE 20 or SAE 10W-30, SAE 15W-40
Below 0 °C (32 °F)	SAE 10W or SAE 10W-30

- See the following table for the suitable API classification engine oil and the fuel.

Fuel used	Engine oil classification (API classification)
	Oil class of engines with DPF
Ultra Low Sulfur Fuel [ $< 0.0015\%$ (15 ppm)]	CJ-4 or CK-4

- **Fue:**
  - Use the ultra low sulfur diesel fuel only for these engines.

Ultra low sulfur diesel fuel	below 0.0015% (15 ppm)
------------------------------	------------------------

- Cetane number of 45 minimum. Cetane number greater than 50 is preferred, especially for the following temperatures or elevations.

---

Temperatures	Below -20 °C (-4 °F)
Elevations	Above 1500 m (5000 ft)

- Diesel fuels that are specified to EN 590 or ASTM D975 are recommended.
- No. 2-D is a distillate fuel of lower volatility for engines in industrial and heavy mobile service (SAE J313 JUN87).
- Indicated capacities of water and oil are manufacture's estimate.

**IMPORTANT :**

- If you use different fuel or engine oil, the cleaning efficiency of the DPF (3000 hours) will be reduced and the DPF longevity will be shorter than expected.
- Filters must trap fuel and lubricant sulfate additives (Zn, Pb, Na, K, Ca, Mg, Cu, Ba, P, etc.) as ash during combustion.

You must control the fuel carefully to prevent the additives being mixed into fuel such as the fuel tank anti-oxidants, the water remover, the antifreeze, and so on.

## BIO DIESEL FUEL (BDF)

B0-B20 Biodiesel fuels (BDF): mixed diesel fuels containing 20% or less biodiesel can be utilized under the following conditions.

### IMPORTANT :

- **Refueling and handling fuel should be done with caution in order to avoid contact with the fuel and spillage that could create a potential environmental or fire hazard. Wear appropriate protective equipment when refueling.**

### Applicable BDF:

1. Blended diesel fuels containing 6% thru 20% BDF (B6 - B20) which comply with American Society for Testing and Materials (ASTM) D7467 Standard, as revised, can be used without adversely affecting the performance and durability of the engine and fuel system components.
2. Any mineral oil diesel fuel, if used, must conform to ASTM D975 (or the European EN590) Standard, as revised. B100 fuel used to make Biodiesel blended fuels must meet ASTM D6751 (or EN14214) Standard, as revised. The final blended fuel B20 must conform to ASTM D7467 Standard, as revised. Straight vegetable oil is NOT allowed in any blended fuel.
3. Allowable blended fuel is mineral oil diesel fuel blended with B100 (i.e. 100% BDF). The blended fuel ratio shall be less than 20% B100 and 80% or more diesel fuel. The B100 source used for Biodiesel blends must be purchased from an accredited BQ-9000 marketer or producer. More information about qualified marketer(s) and producer(s) can be found at <http://www.bq-9000.org>.

### Preparation:

1. Before using BDF concentrations greater than B5, you are advised to replace the engine oil, engine oil filter and fuel filter with new oil and filters. For replacement procedures, refer to the "MAINTENANCE" section.

### Product Warranty, Emission and Other Precautions:

1. The engine emission control system was certified according to current regulations based on the use of non-BDF. When using BDF, the owner is advised to check applicable local and federal emission regulations and comply with all of them.
2. BDF may cause restricted or clogged fuel filters during cold weather conditions, resulting in the engine not operating properly.
3. BDF encourages the growth of microorganisms which may cause degradation of the fuel. This in turn may cause fuel line corrosion or reduce fuel filter flow earlier than expected.
4. BDF inherently absorbs moisture which may cause degradation of the fuel earlier than expected. To

avoid this, drain the water separator and fuel filter port often.

5. Do not use Biodiesel concentrations higher than 20% (i.e. greater than B20). Engine performance and fuel consumption will be affected, and degradation of the fuel system components may occur.
6. Do not readjust the engine fuel control system as this will violate emission control levels for which the equipment was approved.
7. Compared with soybean-based and rapeseed-based feedstock, palm oil-based feedstock has a thicker consistency (i.e. higher viscosity) at lower temperatures. Consequently, fuel filter performance may be reduced, particularly during cold weather conditions.
8. The Kubota Warranty, as specified in the Owner's Warranty Information Guide, only covers defects in product materials and workmanship. Accordingly, any problems that may arise due to the use of poor quality fuels that fail to meet the above requirements, whether biodiesel or mineral oil based, are not covered by the Kubota Warranty.

### Routine handling:

1. Avoid spilling BDF onto painted surfaces as this may damage the finish. If fuel is spilled immediately wipe clean and flush with soapy water to avoid permanent damage.
2. When using BDF, you are advised to maintain a full tank of fuel, especially overnight and during short term storage, to reduce condensation within the tank. Be sure to tighten the fuel cap after refueling to prevent moisture build up within the tank. Water in the Biodiesel mixture will damage fuel filters and may damage engine components.

### Maintenance Requirements when using BDF B0 thru B5:

Follow the oil change intervals recommended by referring to the "MAINTENANCE" section. Extended oil change intervals may result in premature wear or engine damage.

### Maintenance Requirements when using BDF B6 thru B20:

The maintenance interval for fuel related parts changes.

See the table below for the new maintenance interval.


Items		Interval	Remarks
Water separator filter element	Replace	Every 250 hrs	
Fuel filter cartridge	Replace	Every 250 hrs	
Fuel line	Check	Every 125 hrs	
	Replace	Every 1 year	Consult your local KUBOTA Dealer for this service.

**Long Term Storage:**

1. BDF easily deteriorates due to oxygen, water, heat and foreign substances. Do not store B6 thru B20 longer than 1 month and B5 longer than 3 months.
2. When using B6 thru B20 and storing the machine longer than 1 month, drain the fuel from the tanks and replace with light mineral oil diesel fuel. Subsequently, run the engine at least 30 minutes to remove all of the Biodiesel from the fuel lines.
3. When using B5 fuel and storing machine longer than 3 months, drain the fuel from the tanks and replace with light mineral oil diesel fuel. Subsequently, run the engine at least 30 minutes to remove all of the Biodiesel from the fuel lines.

# APPENDICES

## MAIN DIMENSIONS OF THE MACHINE

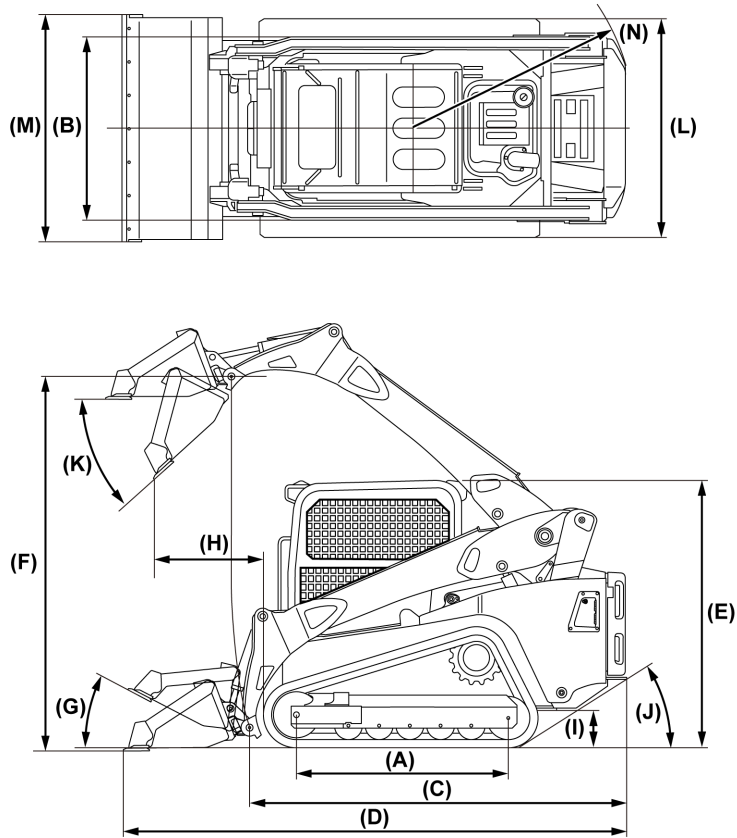

1JKMD00008A01



Model		SVL97-2
		Standard track
A	Length of track on ground	1667 mm (65.6 in.)
B	Track gauge	1512 mm (59.5 in.)
C	Length w/o bucket	3137 mm (123.5 in.)
D	Length w/bucket on ground	3929 mm (154.7 in.)
E	Height to top of cab	2116 mm (83.3 in.)
F	Bucket hinge pin height at max. lift	3264 mm (128.5 in.)
G	Rollback angle at carry position	27 degree
H	Reach at max. lift and dump	1035 mm (40.7 in.)
I	Ground clearance	293 mm (11.5 in.)
J	Departure angle	31 degree
K	Max. dump angle	43 degree
L	Vehicle width	1962 mm (77.2 in.)
M	Width with bucket	2061 mm (81.1 in.)
N	Turning radius from center-machine rear	1610 mm (63.4 in.)

**NOTE :**

- Dimensions are based on the machine with KUBOTA standard bucket.
- Dimensions are based on the machine with KUBOTA standard rubber track.
- Specifications are subject to change without notice.

# INDEX

## A

action modes	
selecting.....	70
AFS (air flow sensor)	
checking.....	118
air cleaner element	
checking.....	105
cleaning.....	106
replacing.....	109
air cleaning warning indicator.....	33
air conditioner	
adjusting the air flow.....	52
air control vent.....	53
air flow sensor (AFS)	
checking.....	118
air-conditioner belt [closed cab model]	
checking and adjusting tension.....	109
air-conditioner condenser	
checking.....	110
air-conditioner hoses	
checking.....	118
replacing.....	121
air-conditioner pipes	
checking.....	118
replacing.....	121
air-conditioner switch.....	53
operating.....	54
alternator	
checking.....	116
antifrost heater.....	118
armrest.....	42,62
attachment control device (option)	
operating.....	74
AUX electrical control switch (option).....	39
AUX hold switch.....	39
AUX port	
max. flow volume.....	72
AUX port (LH and RH) maximum flow volume setting	
flow chart.....	73
AUX port switch [high-flow model].....	38
AUX port switch [standard flow model].....	38
AUX port variable switch.....	38
auxiliary hydraulic control.....	68
operating.....	68
auxiliary port [high-flow model only]	
operation.....	70

## B

battery charge warning light.....	31
battery condition.....	102
BDF (biodiesel fuel).....	144
biodiesel fuel (BDF).....	144
blower switch.....	53

operating.....	54
boost sensor	
checking.....	118
boost sensor pressure rubber piping	
replacing.....	122
breather filter	
replacing.....	113
bucket.....	66
bucket-floating indicator.....	31

## C

cab	
tilt up.....	93
cab door [closed cab model]	
closing.....	55
opening.....	55
catalyst-containing diesel-particulate-filter (DPF) device	
.....	44
catalyst-containing DPF (diesel-particulate-filter) device	
.....	44
caution while traveling.....	79
CCV heater.....	118
CCV internal pressure switch	
checking.....	118
checkpoints after starting the engine.....	59
clamps	
checking.....	107
cleaning	
cleaning fuel tank cap.....	104
closed breather related rubber piping	
replacing.....	121
closed cab model	
air-conditioner belt.....	109
cab door.....	55
side cab window.....	57
wiper/washer switch.....	55
control panel.....	53
operating.....	54
control pedals.....	41
coolant level	
checking.....	96
coolant temperature gauge.....	29
checking.....	30

## D

daily check items	
before starting the machine.....	95
dealer service.....	23
DEF (AdBlue).....	47
adding.....	48
adding in the DEF (AdBlue) tank.....	97
checking quality.....	117
disposing.....	50

draining.....	48	drive unit oil	
handling.....	15,47	change.....	113
quality.....	47	driving.....	62
storing.....	49	<b>E</b>	
storing in the DEF (AdBlue) tank.....	49	EGR cooler	
DEF (AdBlue) hoses		checking.....	116
checking.....	116	EGR cooler hose	
DEF (AdBlue) injector		replacing.....	122
checking.....	117	EGR piping	
DEF (AdBlue) injector tip		checking for gas leak.....	118
checking.....	116	EGR system	
DEF (AdBlue) level		checking.....	116
checking.....	97	electrical outlet.....	41,127
DEF (AdBlue) level gauge.....	47	electrical wiring	
DEF (AdBlue) pump		checking and cleaning.....	100
replacing filter.....	117	emergency exit.....	42
DEF (AdBlue) quality warning lamp.....	51	engine	
DEF (AdBlue) tank		checking and cleaning.....	100
replacing filter .....	117	operation.....	57
when frozen.....	117	starting.....	58
diesel particulate filter (DPF)		starting under cold conditions.....	59
cleaning.....	116	starting with auxiliary battery.....	60
diesel particulate filter (DPF) differential pressure		stopping.....	59
sensor		engine hood	
checking for gas leak.....	118	opening.....	91
diesel particulate filter (DPF) exhaust gas temperature		engine oil	
sensor		changing.....	111
checking.....	118	engine oil filter cartridge	
diesel particulate filter (DPF) muffler		replacing.....	112
checking condition.....	118	engine oil level	
diesel particulate filter (DPF) piping		checking.....	98
checking for gas leak.....	118	engine oil pressure indicator.....	31
diesel-particulate-filter (DPF) differential pressure		engine rev up indicator.....	32
sensor rubber piping (front and back)		engine valve clearance	
replacing.....	122	adjusting.....	115
diesel-particulate-filter (DPF) muffler		error code numbers.....	131
checking.....	102	evacuator valve	
diesel-particulate-filter (DPF) regeneration indicator...32		checking.....	101
display selector switch.....	40	cleaning.....	106
DPF (diesel particulate filter)		exhaust manifold	
cleaning.....	116	checking.....	118
DPF (diesel particulate filter) differential pressure		<b>F</b>	
sensor		float switch.....	37
checking for gas leak.....	118	fluid	
DPF (diesel particulate filter) exhaust gas temperature		adding.....	97
sensor		fresh air filter	
checking.....	118	cleaning.....	109
DPF (diesel particulate filter) muffler		front window roller [closed cab model only]	
checking condition.....	118	cleaning.....	114
DPF (diesel particulate filter) piping		replacing.....	115
checking for gas leak.....	118	fuel filter cartridge	
DPF (diesel-particulate-filter) differential pressure		replacing.....	113
sensor rubber piping (front and back)		fuel gauge indicator.....	29
replacing.....	122	fuel hose	
DPF (diesel-particulate-filter) muffler		replacing.....	120
checking.....	102		
DPF (diesel-particulate-filter) regeneration indicator...32			

fuel level	
check.....	96
fuel line	
checking.....	107
fuel system	
purging.....	122
fuel tank	
draining the water.....	104
fuel tank cap.....	104
fuse.....	126
replacing.....	126
fuse capacities.....	126
fuse circuits.....	126

## G

glow plug indicator.....	30
--------------------------	----

## H

horn switch.....	36
hour meter.....	32
hydraulic hose	
replacing.....	119
hydraulic oil	
changing.....	114
checking with hydraulic hammers.....	115
hydraulic oil filter	
replacing.....	114
hydraulic oil level	
checking.....	99
hydraulic oil temperature gauge.....	32
hydraulic quick switch [hydraulic quick-hitch model only].....	39
hydraulic quick-hitch.....	77
hydraulic quick-hitch model only	
hydraulic quick switch.....	39
hydraulic tank	
suction filter and return filter.....	114
hydraulic unlock switch.....	35

## I

important component parts	
periodic replacement.....	140
important information on machine operation.....	79
indicator light.....	53
operating.....	54
inhibit diesel particulate filter (DPF) regeneration switch	
.....	37
injector tip	
checking.....	115
inner air filter	
cleaning.....	110
instrument panel.....	28
intake air line	
checking.....	107
checking for air leaks.....	118
replacing.....	121

interior lamp.....	55
--------------------	----

## L

levers.....	41
lift arm	
lowering.....	43
lift arm stopper.....	65
lift arms	
operating.....	65
lifting the machine.....	82
loading on a transport vehicle.....	85
low fuel warning light.....	29
lubrication point.....	99

## M

machine parts.....	26
main dimensions of the machine.....	146
main frame	
cleaning inside.....	109
discharging mud.....	95
maintenance	
checking items.....	11
preparing.....	11
maintenance intervals.....	88
master warning light.....	31
maximum flow volume	
setting.....	71
mechanical quick-hitch.....	75

## O

oil cooler.....	91
checking.....	100
oil separator element	
replacing.....	116
OPC function.....	42
operating the machine	
after storing for a long period of time.....	140
operation of the machine in cold weather	
preparation.....	139
operator CAB	
discharging mud.....	95
operator's manual	
Where to keep.....	92
operator's seat	
adjusting.....	61
option	
attachment control device.....	74
AUX electrical control switch.....	39

## P

parking brake switch.....	35
parking brake warning light.....	30
parking on an incline.....	80
parking the machine.....	10

PCV (positive crankcase ventilation) valve	
checking.....	116
pivot turn.....	63
plastic parts	
cleaning.....	122
pre-cleaner	
checking.....	102
precaution	
CCV system freezing warning lamp.....	33
checking the battery condition.....	102
checking the V-belt.....	100
checking the washer liquid.....	102
FOPS.....	8
general.....	7
operating the machine.....	8
ROPS.....	8
safely loading the machine.....	11
safely transporting the machine.....	11
safety for children.....	10
traveling in high speed.....	79
traveling on inclines.....	80
use of machine near water.....	79
washing whole machine.....	101
prevention of slippage of rubber tracks.....	81
prohibited actions.....	81

## R

radiator.....	91
checking.....	100
Radiator coolant	
changing.....	119
radiator hoses	
checking.....	107
replacing.....	121
rear door.....	90
rear window	
emergency exit.....	42
recommended fuel.....	142
recommended grease.....	142
recommended oil.....	142
refrigerant gas	
checking.....	122
regeneration of diesel-particulate-filter (DPF).....	44
regeneration of DPF (diesel-particulate-filter).....	44
relief valve	
checking.....	119
return filter	
changing.....	113
suction and return filter.....	114
reverse alarm	
checking.....	42
running-in of the machine.....	60

## S

safety label.....	17
care.....	22

SCR (selective catalytic reduction) system	
adding DEF (AdBlue).....	48
DEF (AdBlue).....	47
DEF (AdBlue) level gauge.....	47
DEF (AdBlue) quality warning lamp.....	51
disposing DEF (AdBlue).....	50
draining DEF (AdBlue).....	48
handling DEF (AdBlue).....	47
handling precautions after stopping the engine....	50
maintenance of SCR system related parts.....	50
overview.....	46
precautions when using in cold regions.....	50
quality of DEF (AdBlue).....	47
SCR system warning lamp.....	50
storing DEF (AdBlue) in the DEF (AdBlue) tank...	49
storing purchased DEF (AdBlue).....	49
thawing DEF (AdBlue) lamp.....	51
warning display when the remaining amount of DEF (AdBlue) is low.....	48
SCR system warning lamp.....	50
scrapping.....	24
seat belt.....	62
seat switch.....	37
side cab window [closed cab model].....	57
slow blow fuse.....	127
replacing.....	128
specification table.....	25
spin turn.....	64
start of the machine.....	61
starter motor	
checking.....	116
starter switch.....	35
storing the machine	
after completion of work in cold weather.....	139
for a longer period of time.....	140
suction filter	
replacing.....	114
suction pipe downstream the AFS (air-flow-sensor)	
replacing.....	122
switches.....	34
synthetic leather	
cleaning.....	122

## T

temperature control lever.....	53
operating.....	54
thawing DEF (AdBlue) lamp.....	51
towing an inoperable machine.....	87
towing an operable machine.....	86
track tension	
checking.....	105
tracks	
adjust.....	124
travel speed switch	
use.....	36
traveling.....	62

troubleshooting	
engine and other systems.....	129
turbocharger	
checking.....	116

## V

V-belt tension	
checking and adjusting tension.....	108

## W

warranty policy.....	23
washer liquid [closed cab model]	
checking.....	102
water separator	
drain.....	101
draining in case warning against water of the fuel	
filter.....	122
water separator filter element	
replacing.....	112
wiper/washer switch [closed cab model].....	55
working light switch.....	36