SKIP*HOP

9M494410-04

EON™ 4-in-1 high chair




OWNER'S MANUAL

Please read all instructions before assembly and use of EON 4-in-1 High Chair.

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

4 USES:

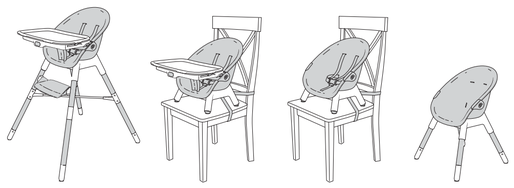

1. High Chair
6 months – 3 years
(up to 33 lb/15 kg)


2. Dining Booster
6m+ with harness,
3y+ without harness

3. Tableside Booster
6m+ with harness,
3y+ without harness

4. Toddler Chair
Sized for children up to 5 years of age. (Supports up to 80 lb/36.3 kg)

BOOSTER SEAT MODE:

Minimum adult chair dimensions requirement in booster seat mode:

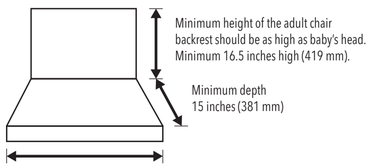

CLEANING & CARE:

Tray: Wipe clean with a damp sponge or cloth. Do not microwave or put in dishwasher. Do not submerge in water.


Tray Liner: Dishwasher-safe or wipe clean.

Seat (structure): Wipe clean with a damp sponge or cloth.

5 Point Harness/Chair Straps: Surface wash only. Wipe with a damp sponge or cloth and air dry. Do not use bleach.

CONTENTS:

1. Seat
2. Belly Guard
3. Tray with Tray Liner
4. Footrest
5. Crossbar
6. Upper Leg A
7. Upper Leg B
8. Upper Leg C (x2)
9. Lower Leg A (x2)
10. Lower Leg B (x2)
11. Booster Feet (x4)
12. 5-Point Harness (pre-assembled)
13. Chair Strap A
14. Chair Strap B
15. Armrest Covers (x2)
16. Screws (x4)

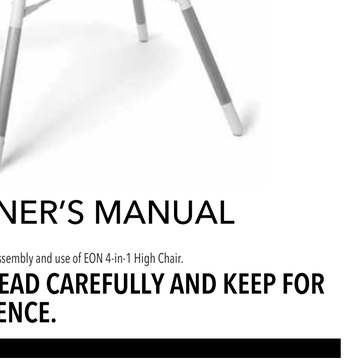


Philips screwdriver required, not included.

© Skip Hop, Inc.
SKIP HOP and MUST-HAVES MADE BETTER are trademarks owned by Skip Hop, Inc.
All rights reserved.

100 W 33 ST, STE 1125
NY, NY 10001
In the US: 888.782.9548
www.skiphop.com


FIRST TIME ASSEMBLY: HIGH CHAIR MODE — Adult assembly required.

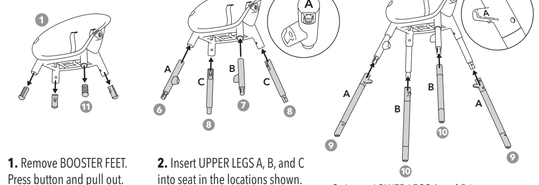

1. Remove BOOSTER FEET. Press button and pull out.


2. Insert UPPER LEGS A, B, and C into seat in the locations shown. *Please refer to marks at the top of each leg.

3. Insert LOWER LEGS A and B into UPPER LEGS in the locations shown. *Please refer to marks at the top of each leg.

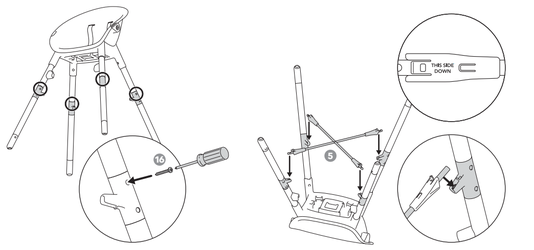

4. Insert screws (x4) and tighten.

5. Flip seat over, assemble CROSSBAR to legs. Make sure "THIS SIDE DOWN" is facing you. Make sure the post goes through the hole on each end of CROSSBAR.

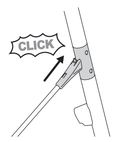


6. Slide clips to lock (x4). You will hear a "click" signaling it's secured.


STOP If crossbar is damaged or cannot be installed correctly, discontinue use.




7. Flip chair upright. Insert FOOTREST. Make sure the SKIP HOP logo is facing toward the front.

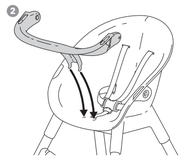


8. Insert center posts of BELLY GUARD into seat.

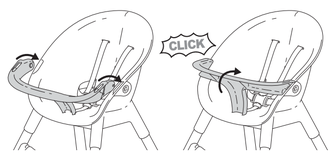


9. Insert BELLY GUARD into side slots to lock. You will hear a "click" signaling it's secured.

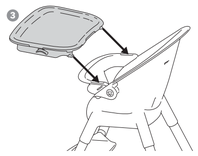


10. Attach TRAY to slots on BELLY GUARD.

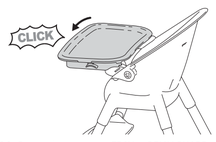


11. Rotate down to snap TRAY to BELLY GUARD.

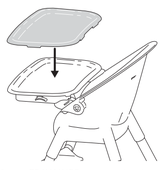


12. Attach TRAY LINER by snapping into place.

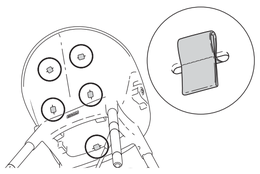

13. Check and adjust 5-POINT HARNESSS position by ensuring that all five T-ends of the harness are secured through the slots in the seat back and bottom. Pull forcefully on 5-POINT HARNESSS to ensure that it is secured.

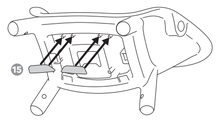


14. For storage, insert ARMREST COVERS to posts at the bottom of the Seat. Covers will be needed for Toddler Chair conversion.

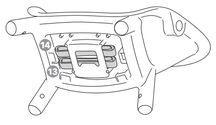


15. Store CHAIR STRAPS A and B under SEAT when not in use.

TRAY ADJUSTMENT:

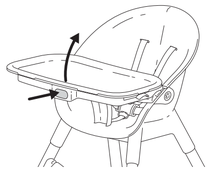


1. To remove TRAY, press button on front of tray and lift up.

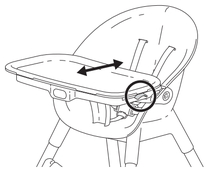


2. To adjust TRAY position, pull up on levers on each side of tray, and slide forward or back.

FOOTREST ADJUSTMENT:

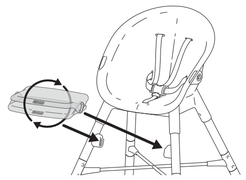


To adjust FOOTREST height, flip it over and reinsert. Make sure the logo is upright and visible at the front.

BELLY GUARD:

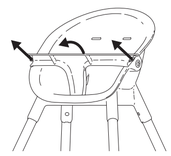

To release BELLY GUARD, pull up on both side levers, pull BELLY GUARD out of side pockets, and remove.


DINING/TABLESIDE BOOSTER CONVERSION (FROM HIGH CHAIR MODE):

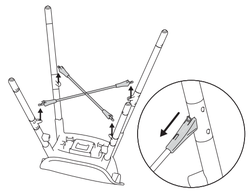


1. For Tableside Booster: Remove TRAY, BELLY GUARD, and FOOTREST.
For Dining Booster: Remove FOOTREST.
Remove CROSSBAR from legs, as shown.



2. Press button and pull to release legs from seat (x4).

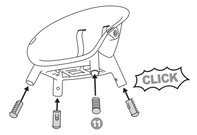

3. Insert BOOSTER FEET into seat. You will hear a "click" signaling they're secured (x4).

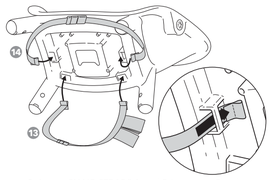

4. Insert CHAIR STRAPS A and B into seat. Check that all T-ends of CHAIR STRAPS A and B are secured through the slots in the seat bottom. Pull forcefully on straps to ensure that they are secured.




5. Place Booster Seat on Chair.

STOP Reference minimum adult chair dimensions before use.




6. Buckle the chair back straps together. Buckle the chair bottom straps together. You will hear a "click" when buckles lock.

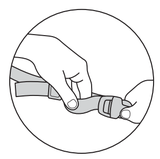


7. Pull strap end to tighten. Adjust slider until smooth.


TODDLER CHAIR CONVERSION (FROM HIGH CHAIR MODE):

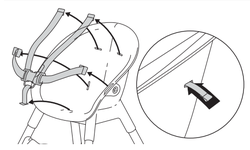

1. Remove TRAY, BELLY GUARD, and FOOTREST first. Remove 5-POINT HARNESS from seat. To remove 5-POINT HARNESS, flatten the T-hook at the end of each strap, and push through slot.

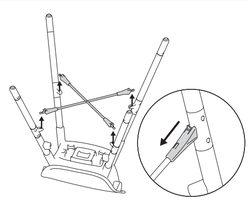


2. Remove CROSSBAR from legs.

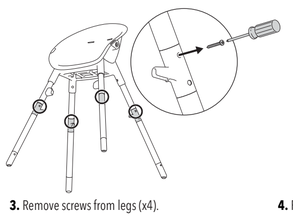

3. Remove screws from legs (x4).




4. Remove LOWER LEGS from UPPER LEGS.

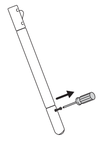

5. Remove FEET (x4) by unscrewing from LOWER LEGS (x4).



6. Attach FEET to UPPER LEGS and secure with screws (x4).

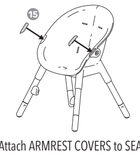


7. Attach ARMREST COVERS to SEAT.



8. (Optional) Remove FOOTREST ANCHORS. Keep FOOTREST ANCHORS for future conversion to High Chair.


TODDLER CHAIR CONVERSION (FROM BOOSTER SEAT MODE):

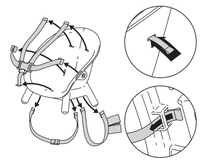


1. Make sure TRAY and BELLY GUARD are removed first. Remove 5 POINT HARNESS and CHAIR STRAPS from seat as shown. To remove, flatten the T-ends of each strap and push through slot.



2. Remove BOOSTER FEET. Press button and pull out.

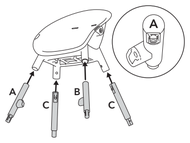

3. Insert UPPER LEGS A, B, and C into seat in the locations shown. *Please refer to marks at the top of each leg.

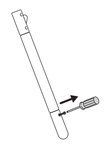

4. Remove FEET (x4) by unscrewing from LOWER LEGS (x4).

5. Attach FEET to UPPER LEGS and secure with screws (x4).

6. Attach ARMREST COVERS to SEAT.

7. (Optional) Remove FOOTREST ANCHORS. Keep FOOTREST ANCHORS for future conversion to High Chair.

HIGH CHAIR:

⚠WARNING:

- **FOLLOW THE MANUFACTURER'S INSTRUCTIONS.**
- **DO NOT LEAVE CHILDREN UNATTENDED.**
- **THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED–MOST INJURIES FROM HIGH CHAIRS ARE CAUSED BY FALLS.**
- **POSITION THE HIGH CHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.**
- **USE THIS HARNESS AT ALL TIMES.**
  FALL HAZARD: Children have suffered **severe** head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly. Prevent your child from climbing on the product.
- Always use the restraint system, and adjust to fit snugly.
- The tray is not designed to hold child in chair.
- Stay near and watch child during use.
- The child should be secured in the high chair at all times by the restraint system.
- Never leave the child unattended. Do not use the product unless all components are correctly fitted and adjusted. Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product. Be aware of the risk of tilting when your child can push its feet against a table or any other structure. Do not to use the product until the child can sit up unaided. The product is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15 kg. Do not use the product if any part is broken, torn or missing. The high chair shall be on a flat, even and horizontal floor and do not elevate the high chair on any structure or table. To reduce the risk of injury, position the high chair away from furniture, walls, hot surfaces and liquids, window covering cords, and electrical cords and position the high chair away from furniture when the chair is not being used at a table with a tray removed. Check this product regularly for damaged hardware, loose joints, missing parts or sharp edges before and after assembly and frequently during use. Do not use the high chair if it is not working correctly until repaired. Regularly inspect and maintain high chair. The high chair should only be used in an upright position once the child is capable of reliably and consistently sitting upright. Do not allow adults or older children to sit in high chair. Avoid injury from pinching. Keep children's hands and feet clear of arm rest when securing tray.

BOOSTER SEAT:

⚠WARNING:

Children have suffered **head injuries,** including skull fractures, **after falling** with or from booster seats. • Check that booster seat is **securely attached** to adult chair before each use. • **Always use restraints** until child is able to get in and out of booster seat without help (up to 36 months). Adjust to **fit snugly.** • **Never** allow child to **push away from table.** • **Never lift** and **carry** child in booster seat. • **Stay near** and **watch** your child during use. Prevent serious injury or death. Do not use in motor vehicles. Until child is able to get in and out of the booster seat without help (up to 36 months), the child should be secured in the booster seat at all times by the restraining system. The tray is not designed to hold the child in the chair. Use this product only for children capable of sitting upright unassisted. • Never leave the child unattended. • Always check the security and the stability of the product on the adult chair before use. • Never use this product on any seat that does not have a seat back. • Always use the restraint system and ensure it is correctly fitted. Always use the chair attachment system and ensure it is correctly fitted before use. • Do not use this product on stools or benches. This product is intended for children able to sit unaided (minimum 6 months) and up to 36 months or a maximum weight of 15 kg. Ensure that the adult chair with the booster seat is placed in a position where the child is not able to use its feet to push against the table or any other structure as this can cause the tip over of the adult chair supporting the booster seat. Do not to use the booster seat if any part is broken, torn or missing. Do not to use accessories or replacement parts other than those approved by the manufacturer. When in booster seat mode, it is not to be used as a floor seat.

TODDLER CHAIR:

⚠WARNING:

Assembly to be carried out by a competent adult only. Never leave child unattended. During assembly children should be kept away from the product due to possible risk of injury. Improper assembly can result in damage to your chair or cause harm to your child. Product shall only be used by children who can sit up unassisted. Fall Hazard: Do not use as a step stool or near windows. Do not use this item if any components are missing or damaged. This product is suitable for children up to 5 years. Maximum weight is 80 lb (36.3 kg). Not intended for adult use. Regularly check all fastenings to ensure that they are properly tightened.

DO NOT STAND ON CHAIR