



SpecSeal[®] Series FP Intumescent Firestop Plug

1

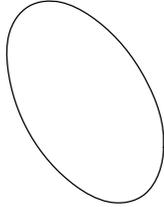


Inspect area to be protected. Remove sharp edges or protruding wires or ties that can damage foam plugs.

2

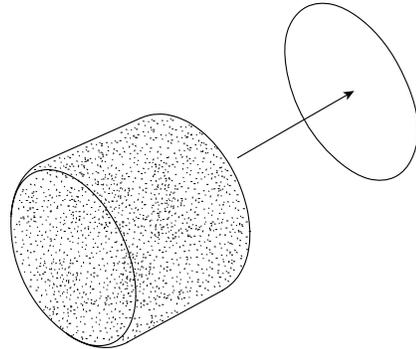


Insert plug into opening/sleeve on both sides of wall with rounded face positioned outward. Face of plug to be flush with wall surface.

3

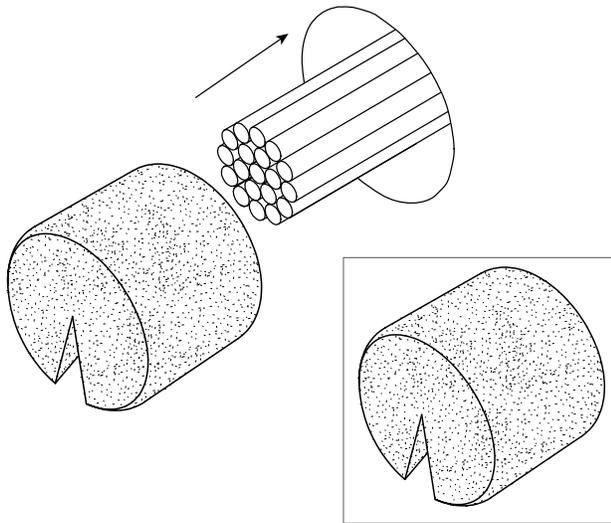

When cables are present, slit plug to accommodate single or grouped cables.

4

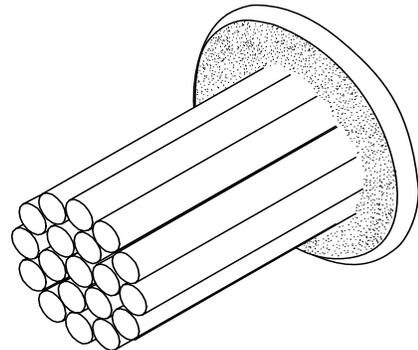

Cables to be centered within plug using slit opening. Rounded face of plug positioned outward and flush with wall surface on both sides of wall.

Note: For more information on firestop installation, refer to ASTM E3157.

