

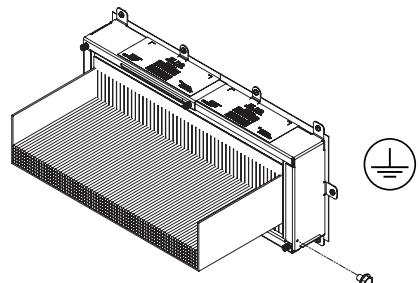


EZ-Path® Cable Tray Retrofit Device
 (Part Numbers: EZCTR612, EZCTR614, EZCTR616, & EZCTR618)


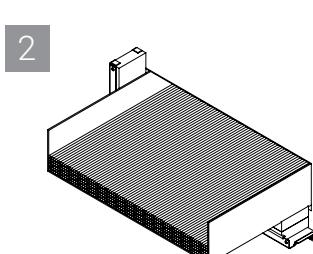
Optional Ground Attachment

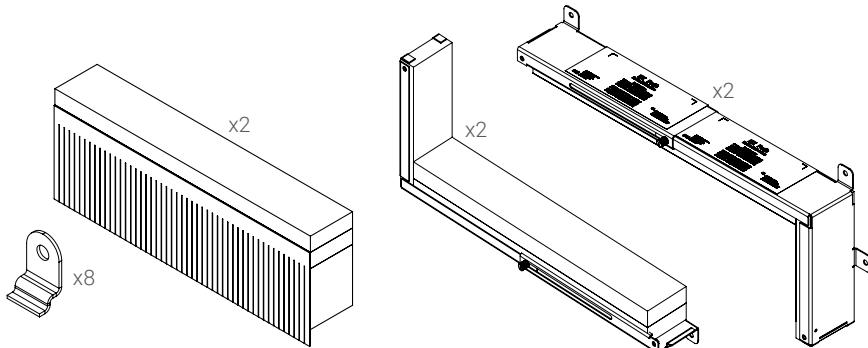


Parts Included (Not to Scale)

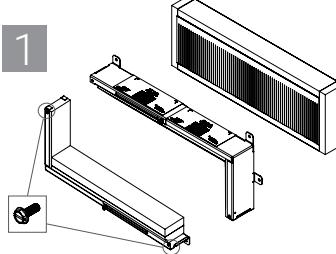


Remove corner screws and separate device into two halves. Remove intumescent foam strips, foam blocks, and rubber gasket assembly from top half of device.




Tightly abut bottom half of tray device against underside of cable tray and face of wall. Fasten mounting tabs of device to wall using appropriate fasteners (see table A).

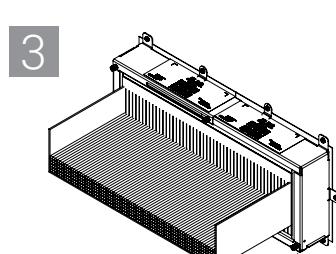

Attach top half of device to bottom half by inserting the interlocking tabs into slots. Secure device halves together using screws from Step 1. Fasten mounting tabs of device to wall using appropriate fasteners (see table A).

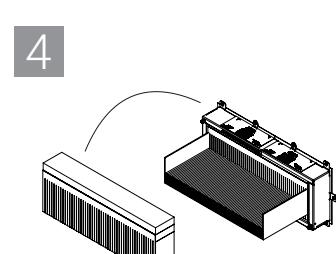

Re-insert intumescent foam strips, foam blocks, and rubber gasket assembly into device as shown.

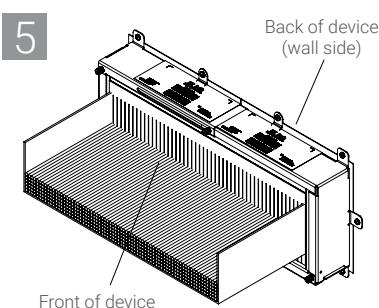

Insert provided mounting tabs into slots on top and bottom of device through clear name plates. Fasten mounting tabs of device to wall using appropriate fasteners (see table A).

Important: Depending on the cable fill, verify that the correct orientation of all parts matches the figure above.

TABLE A: FASTENER TYPES

Type of Wall	Fastener Type
Gypsum Board	No. 8 min 1-1/2 in. (38 mm) long steel screws featuring hi-lo threads and pan-heads
Concrete	3/16" (4.8 mm) diameter steel concrete screws

Note: For more information on firestop installation, refer to ASTM E3157.