




MDMBOOT - For DNV Requirements

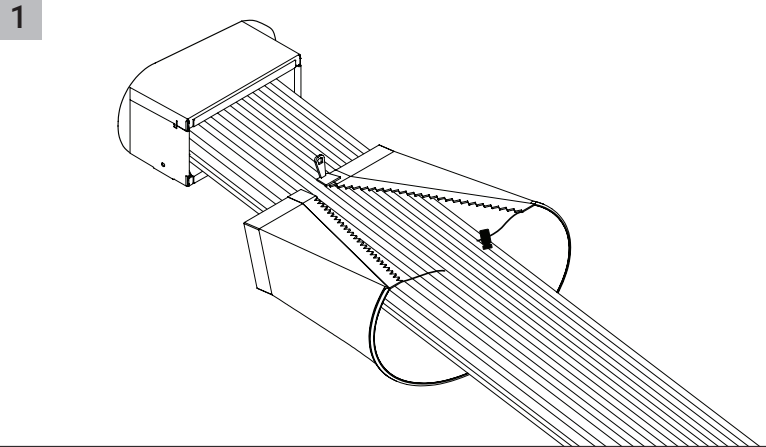


1 Unzip boot completely and position it on non-flange side of the EZ-Path[®] Cable Transit.

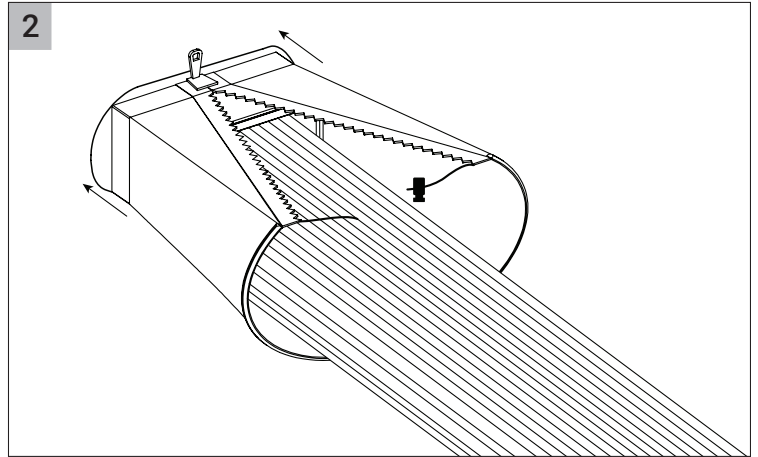

2 Encircle EZ-Path[®] Cable Transit and Cables (when present) with MDMBOOT and engage zipper. Draw string end to be positioned away from division.

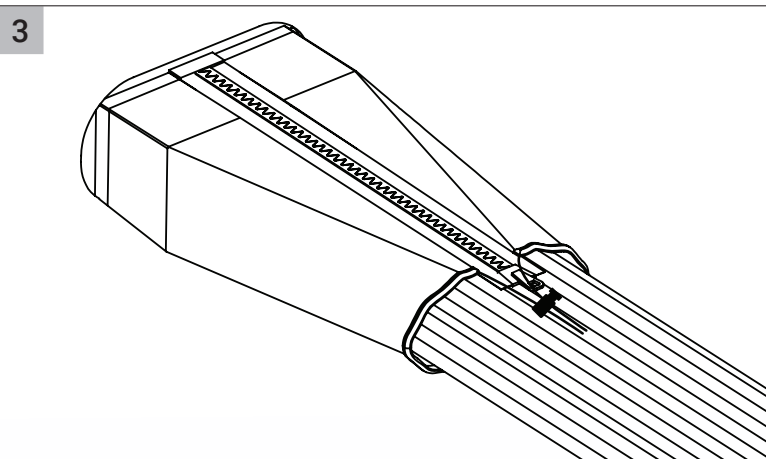

3 Fully engage zipper and reinsert loose draw string.

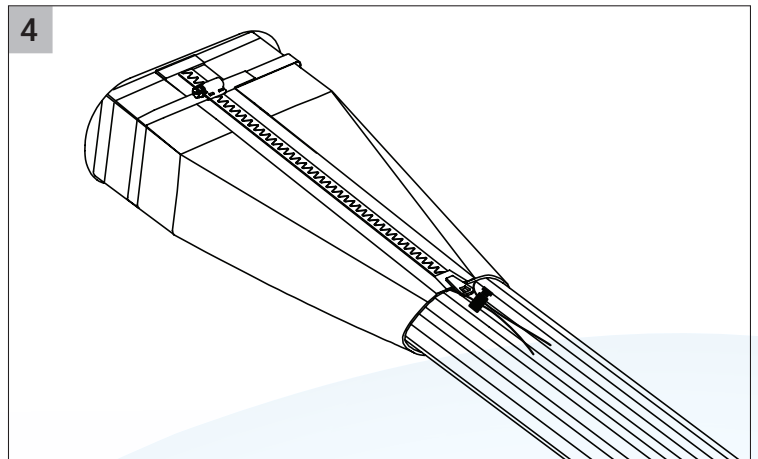

4 Install and tighten steel hose clamp around EZ-Path[®] Cable Transit and MDMBOOT and tighten drawstring.

Note: Please refer to Type Approval Certificates for insulation requirements.