





Four & Seven Gang Mounting Plates (Part Numbers: EZP433W, EZDP433GK, EZP733W, EZDP733GK)

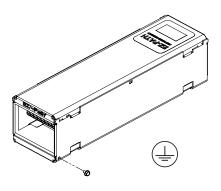


Optional Ground Attachment

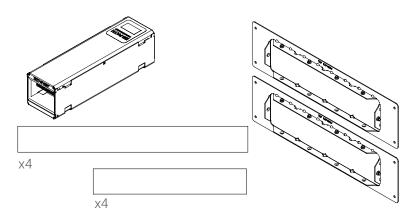


Parts Included (Not to Scale)
Devices not included in Cat. No. EZP433W and EZP733W


Option 1 – Installation in Finished Walls

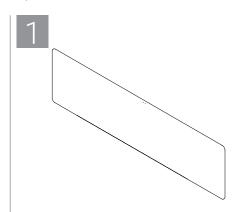


Cut opening in wall to accommodate for EZ-Path® Devices (See Table A)

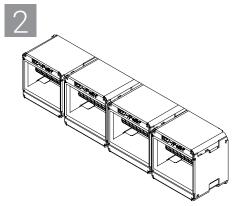

Install devices into opening with ends projecting equally from wall surfaces

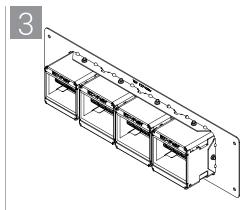

Apply gasket around opening on flat side of plate and install around devices on both sides of wall

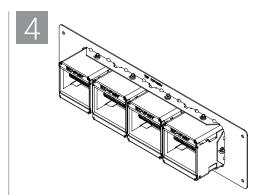

Tighten hex head screws and fasten the steel plate to both sides of wall as needed (See Table A)

Note: For more information on firestop installation, refer to ASTM E3157.










Four & Seven Gang Mounting Plates (Part Numbers: EZP433W, EZDP433GK, EZP733W, EZDP733GK)


Option 2 – Installing Devices Prior to Wallboard (New Wall Construction)



Fasten plates to studs with tabs projecting into wall ensuring that the plates are aligned.

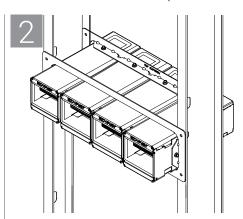

Insert devices into plates so that they project equally from both sides and tighten corresponding hex head screws to hold devices in place.

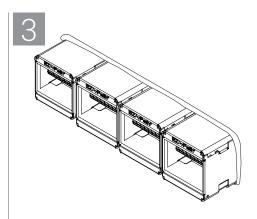

Gap between devices and finished gypsum board shall be filled with joint compound or SpecSeal® brand firestop sealant.

Stud spacing	16" (406 mm)	24" (610 mm)
Mounting plate part number	EZP433W	EZP733W
No. of Devices	(4) EZD33FWS	(7) EZD33FWS
Opening Size	12-1/8" x 3-1/8" (308 mm x 79 mm)	21-1/8" x 3-1/8" (537 mm x 79 mm)
	FASTENER REQUIREMENTS	
Fasten to studs	(OPTIONAL)	(REQUIRED)

Note: For more information on firestop installation, refer to ASTM E3157.





