


Curtain Wall Soft Seals

SpecSeal® Series AS200 Elastomeric Spray


SpecSeal® Fast Tack® Firestop Spray & SpecSeal® Safing Spray

1

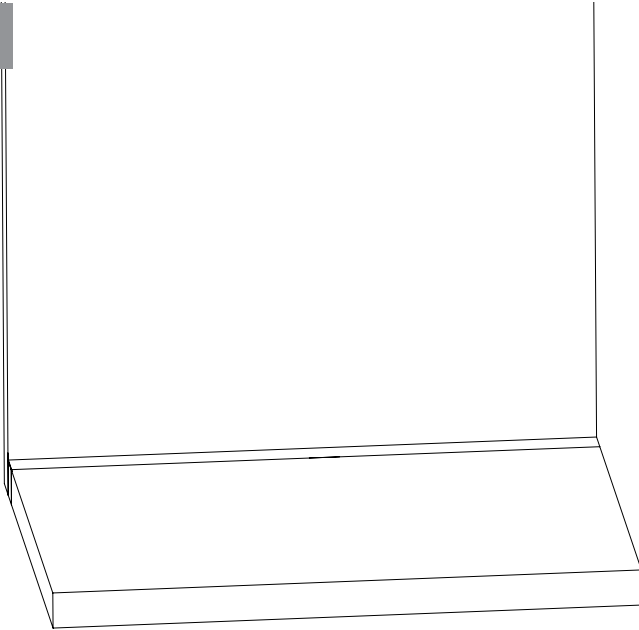

Areas to be protected must be clean and free of oil, loose dirt, rust or scale. Installation temperature shall be between 40°F (4°C) and 95°F (35°C). Consult appropriate manufacturer's drawing for system design requirements. Forming or packing materials are required as an integral part of various system designs.

2

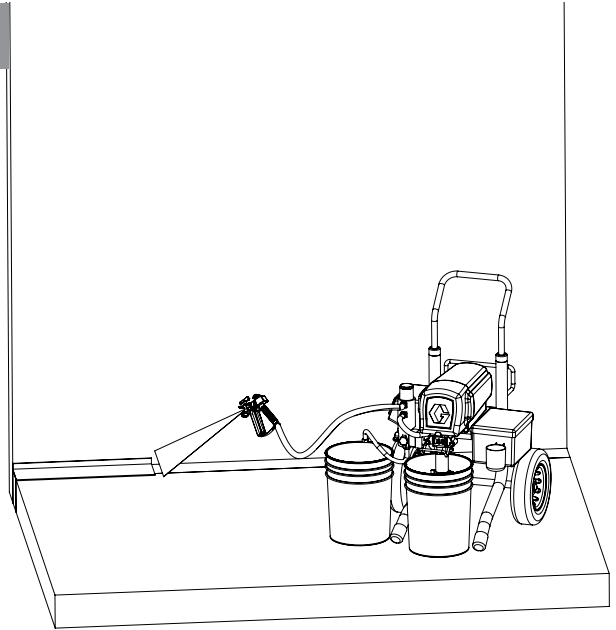

Coating may be applied by airless spray in a single pass as thick as 3/16" (4.8 mm) wet coating depth, although coating thickness requirements vary according to individual design.

Notes:

If applying by brush or spraying on vertical surfaces where coating appears to be prone to slumping, multiple coats or the application of a thin tack coat may be required. **DO NOT ATTEMPT TO THIN PRODUCT BY ADDING WATER.** Water and moisture in the lines, or hose, will cause machine clogs. When dry, may be painted using most non-solvent based paints.

For more information on firestop installation, refer to ASTM E3157.