


INSTALLATION INSTRUCTIONS

EZ-Path[®] Series 44+ Modular Floor Grid System (Part Numbers: EZG444, EZDG444S2, EZG844, EZDG844S2, EZG1644, & EZDG1644S2)

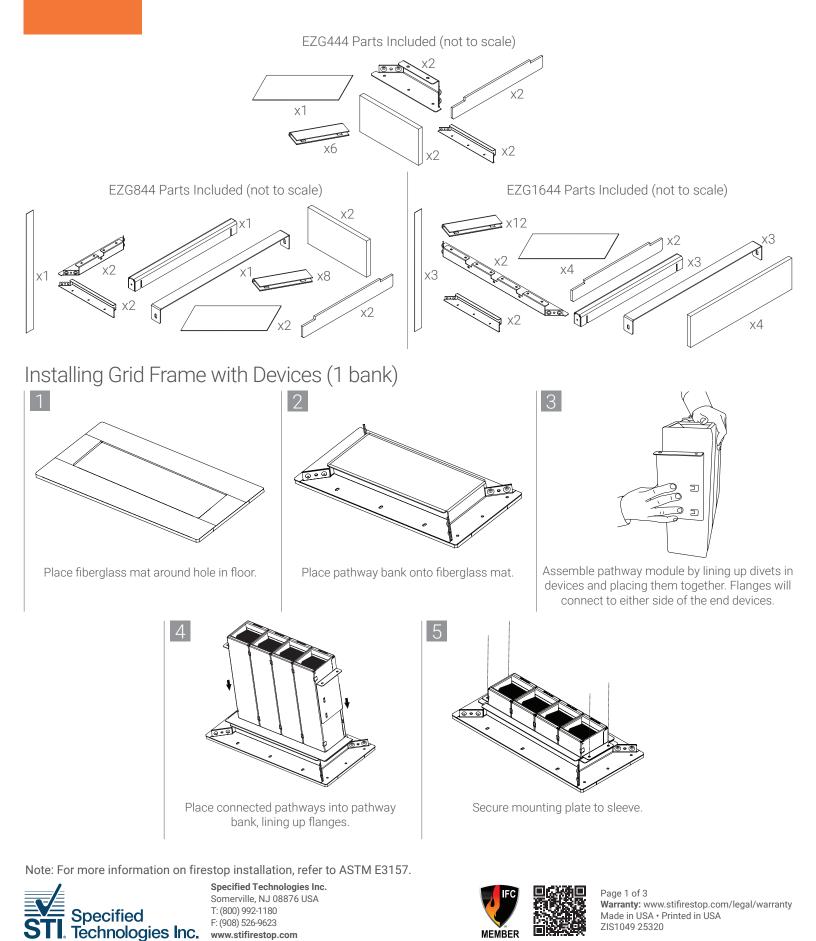




INSTALLATION INSTRUCTIONS


3

EZ-Path® Series 44+ Modular Floor Grid System (Part Numbers: EZG444, EZDG444S2, EZG844, EZDG844S2, EZG1644, & EZDG1644S2)

Installing Grid Frame with Devices (2 bank or 4 bank)

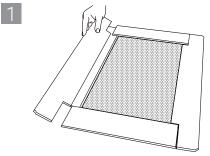


Place fiberglass mats around hole in floor.

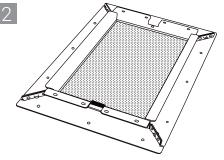


Place pathway bank onto fiberglass mat.




Assemble pathway module by lining up divets in devices and placing them together.

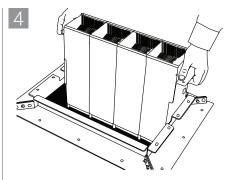


Place connected pathways into pathway bank, lining up flanges.

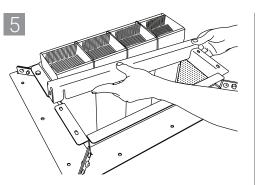


Insert space bar.

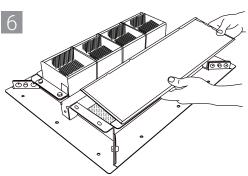

If there is not another set of pathways to install right away, install firestop panel.

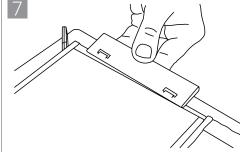

Holding panel securely in place with edges aligned, install panel clips at panel ends by pressing over lip of panel and frame flange.

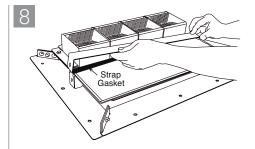

Replace spacer bar gasket and spacer bar strap to secure panel edges where they overlap spacer bar.

TABLE A: OPENING DIMENSIONS

Pathway Capacity	Catalog Number With Devices	Catalog Number Blank	Opening Width	Opening Length	Frame Width	Frame Length
4 Devices	EZDG444S2	EZG444	6" (15.3 cm)	18" (45.7 cm)	11" (28 cm)	23" (58.4 cm)
8 Devices	EZDG844S2	EZG844	12" (30.5 cm)	18" (45.7 cm)	17" (43.2 cm)	23" (58.4 cm)
16 Devices	EZDG1644S2	EZG1644	24" (61 cm)	18" (45.7 cm)	29" (73.7 cm)	23" (58.4 cm)

Note: For more information on firestop installation, refer to ASTM E3157.



Specified Technologies Inc. Somerville, NJ 08876 USA T: (800) 992-1180




Page 2 of 3 Warranty: www.stifirestop.com/legal/warranty Made in USA • Printed in USA ZIS1049 25320

INSTALLATION INSTRUCTIONS




EZ-Path® Series 44+ Modular Floor Grid System (Part Numbers: EZG444, EZDG444S2, EZG844, EZDG844S2, EZG1644, & EZDG1644S2)


Installing Blank Grid without Devices

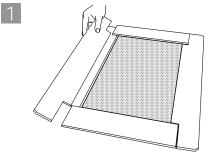


Place fiberglass mats around hole in floor.

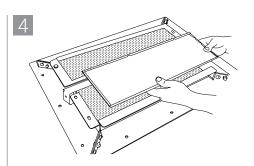


Install firestop panels on both sides.

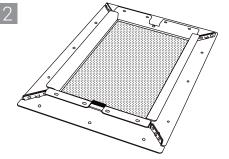


Place pathway bank onto fiberglass mat.

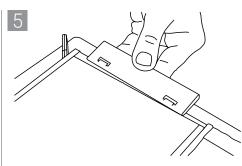

Holding panel securely in place with edges aligned, install panel clips at panel ends by pressing over lip of panel and frame flange.

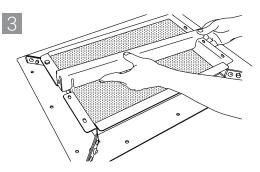


Insert space bar.

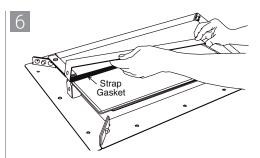

Replace spacer bar gasket and spacer bar strap to secure panel edges where they overlap spacer bar.

Complete Kits

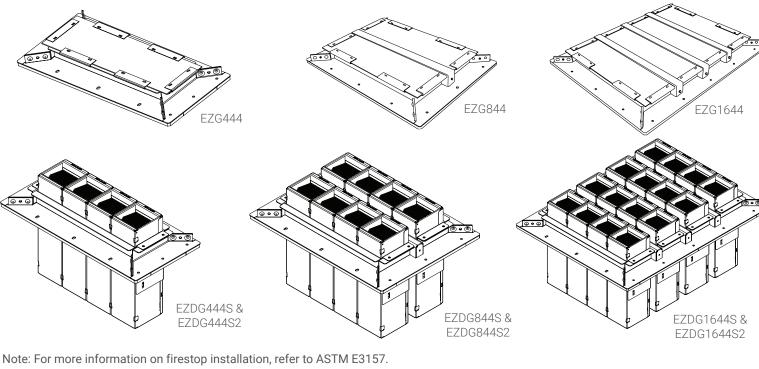

 Specified
 T: (800) 992-1180

 F: (908) 526-9623
 www.stifirestop.com

Specified Technologies Inc. Somerville, NJ 08876 USA T: (800) 992-1180



Page 3 of 3 Warranty: www.stifirestop.com/legal/warranty Made in USA • Printed in USA ZIS1049 25320