



## Series 84+ Fire Rated Pathway (Part Numbers: EZDP84S2 & EZP184W)

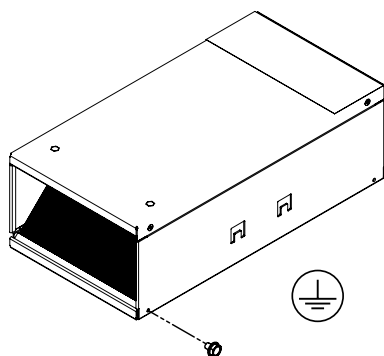


Optional Ground Attachment

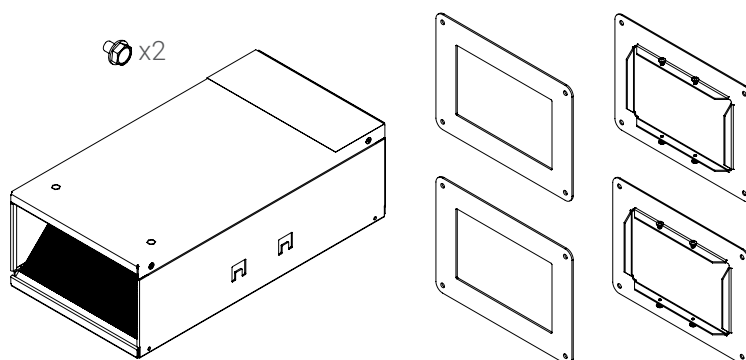

Parts Included (Not to Scale)


### New Work Installation

1

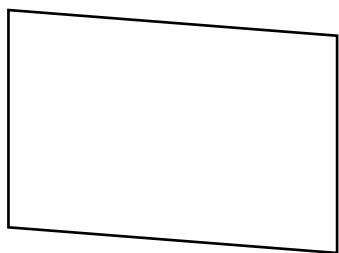


Cut nominal 7-1/2 in. (190 mm) by 4-3/4 in. (120mm) rectangular opening in wall.

2

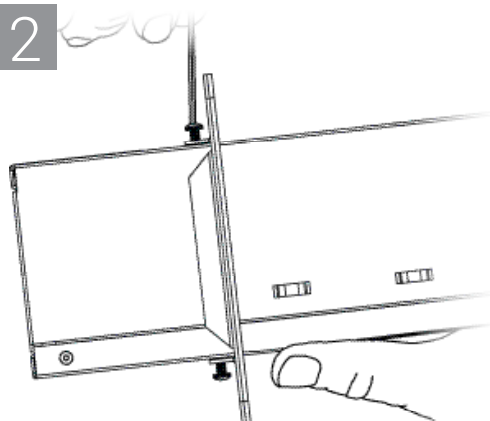

Install a wall plate and gasket around pathway making sure that flanges are facing towards the end of the device. Tighten set screws to lock wall plate onto pathway.

3

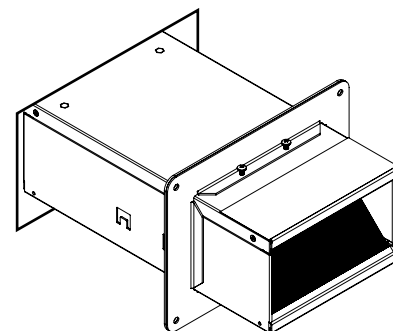

Insert pathway through wall using previously installed wall plate and gasket as a stop. Moving to the opposite side of the wall, install remaining gasket around pathway and slide toward wall. Install remaining wall plate around pathway, tightening corresponding set screws.

Note: For more information on firestop installation, refer to ASTM E3157.