AEROCORE WILDS

TRIM PROFILES & MEASUREMENTS

PACIFIC MAT & FLOORING

TRIM DESCRIPTION

QUARTER ROUND
Applied to cover the expansion gap between the flooring and the wall.

END CAP
Often times called Square Edge or Threshold, used when butting up to carpet or a sliding glass door.


T-MOLD
Joins two floors of equal height, such as in a doorway, between two rooms or in a large area where the maximum length/width is exceeded.


REDUCER
Ends the flooring onto a surface such as concrete.


OVERLAP STAIR NOSE
Ends flooring at the top of either a landing or downward staircase.


QNOSE
Stair Nosing is made from the same product as your flooring selection, ensuring it will match your installed floors. MADE TO ORDER


TRIM PROFILE

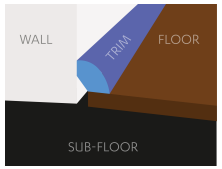


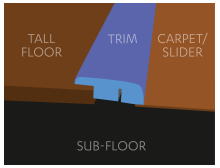

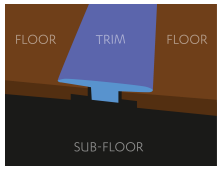


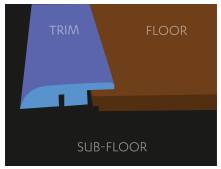


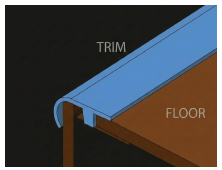


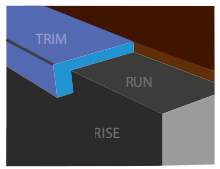



TRIM DIMENSIONS

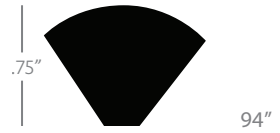

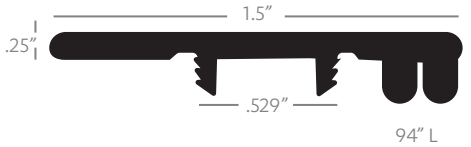



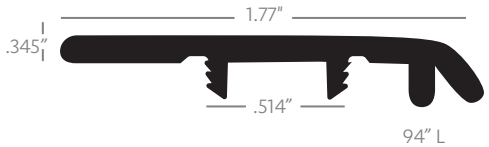

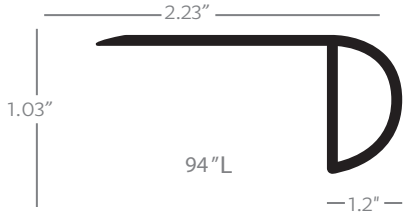



*QNose Stair Nose Run depth is determined by the flooring material