



### TRIM DESCRIPTION

#### QUARTER ROUND

Applied to cover the expansion gap between the flooring and the wall.


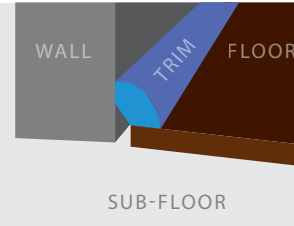


### TRIM DIMENSIONS

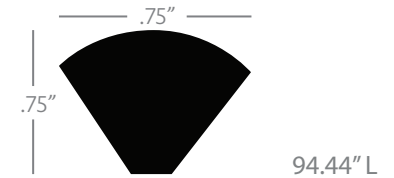



#### END CAP

Often times called Square Edge or Threshold, used when butting up to carpet or a sliding glass door.

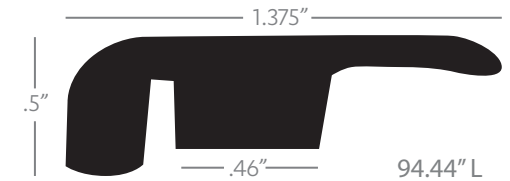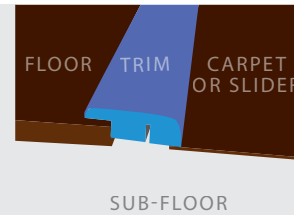



#### T-MOLD

Joins two floors of equal height, such as in a doorway, between two rooms or in a large area where the maximum length/width is exceeded.

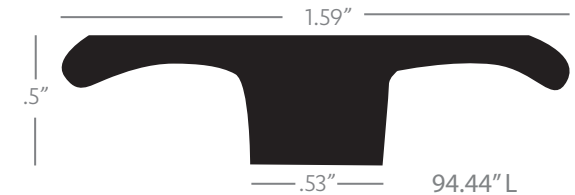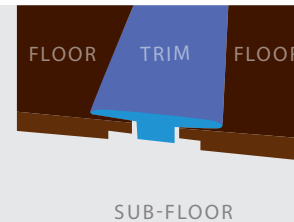



#### REDUCER

Ends the flooring onto a surface such as concrete.

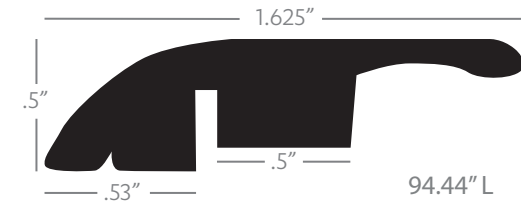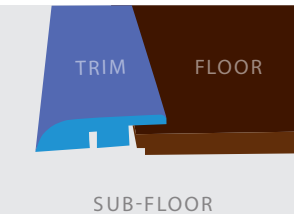

#### STAIR NOSE

Ends flooring at the top of either a landing or downward staircase.

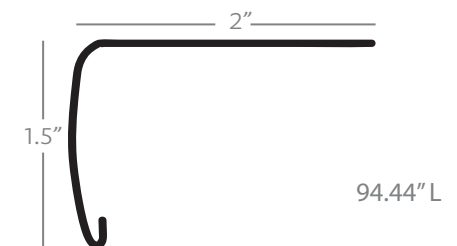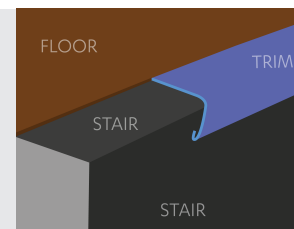

**SHIMS AND TRACK** may be require with this procut. Contact Pacific Mat to confirm.

Trim dimensions are approximate. Trims are coordinating, color or graining may not be exact.