


ADH2396 Installation



- 1 Use the provided alcohol wipe to clean the top of the sensor cap. Allow it to dry completely.

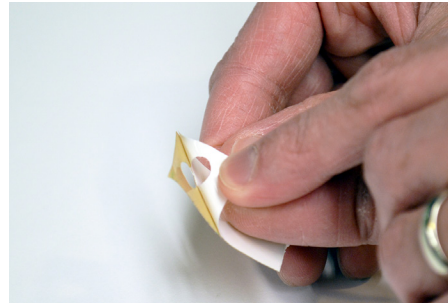


- 2 Peel one side of the backing from the adhesive.



- 3 Align the large hole on the adhesive, sticky side down, with the screw on the sensor cap.



- 4 Smooth the adhesive onto the sensor cap for at least 10 seconds.

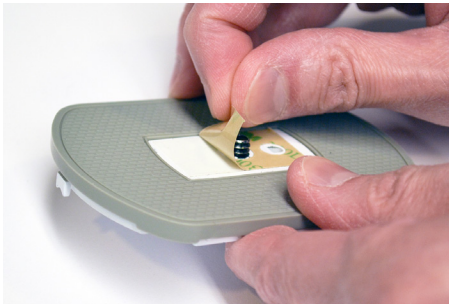


- 5 Peel the other backing from the adhesive.



- 6 Align the screw hole in the Insta 360 camera with the screw on the sensor cap.



- 7 Screw the camera onto the screw so that the front of the camera is facing the front of the sensor cap ("Front" is marked on the underside of the sensor cap).

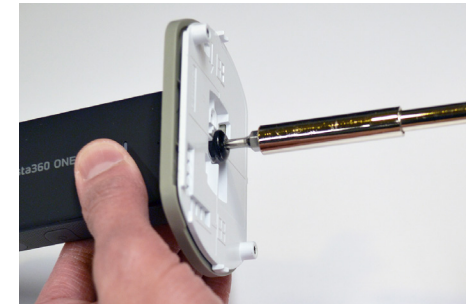

- 8 Use a TT15 bit to tighten the screw into the camera.

ADH2396 Installation



- 9 Place the sensor cap onto the sensor body.



- 10 Insert and tighten the 2 screw using a TT15 bit to secure the sensor cap to the sensor body.



- 11 Place the camera and sensor onto a previously installed OnePOD stand.

SD0910 Rev0 12/16/22