


ÌnVue

CT80 Ingenico Moby Series Bracket CTBA010-B

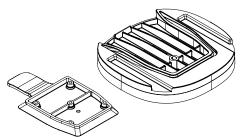

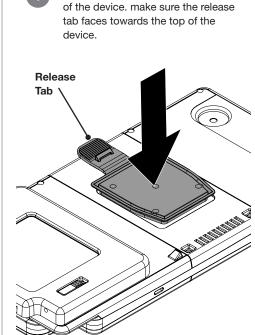


Place the dovetail plate onto the back

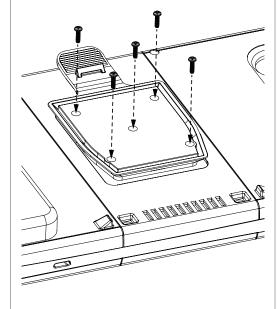


Secure the dovetail plate to the

device with the 5 provided screws.


2



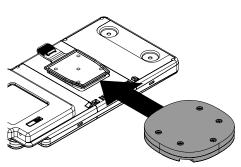





Clean the bracket with the provided alcohol wipe. Allow it to dry completely.

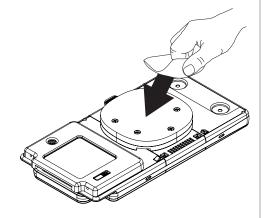


5a If using the Moby M120 version, remove the small rubber pad from the handle and insert the taller rubber stopper.

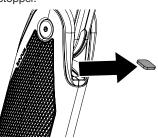

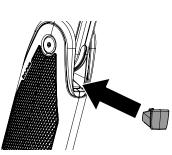

5b Orient the handle so that the arrow on the top will face the top of the device.

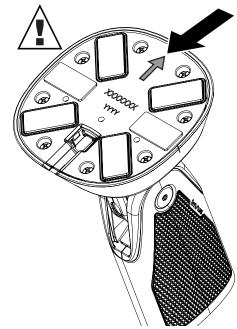

Remove the clear film from the adhesives on the CT80 handle.

5c

