


Cable Lock Bracket - Headphone Stand (NCBRKT-C1)

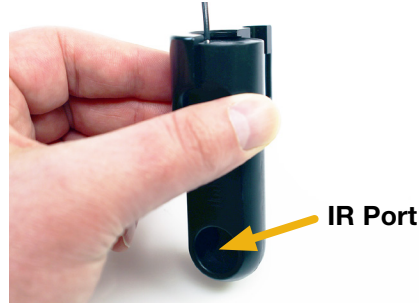

- 1 Place a charged and coded OneKEY into the IR port on the Cable Lock and press the button to unlock the Cable Lock.



- 2 Place one of the brackets around the Cable Lock. Ensure that the IR port is facing out from the bracket.



- 3 Fit the thinner channel of the bracket around the post of the headphone display.



- 4 Hook the 2 brackets together.



- 5 Close the brackets around the Cable Lock and headphone display post.



- 6 Insert the 2 provided nuts into the openings in the left side bracket.



- 7a Holding the nut in place, insert one of the provided screws through the hole on the right side bracket.



- 7b Use a TT20 bit to tighten the screw into the nut.

Cable Lock Bracket - Headphone Stand (NCBRKT-C1)



8 Repeat for the other screw.



9 Place the headphones onto the display.



10 Loop the Cable Lock tether around the headphone band and insert the tether into the Cable Lock. The Cable Lock will chirp in confirmation.

Releasing the Headphones



11a Place a charged and coded OneKEY into the IR port on the Cable Lock and press the button to unlock the Cable Lock.



11b The tether will pop out of the Cable Lock, allowing the headphones to be removed from the display.