

WS2/W2000 Apple Watch Tray Sensor Replacement Adhesive Kit ADH2378/3350

For all devices (Steps 1-14)



1 Use a charged and coded OneKEY to deactivate the stand.



2 Unplug the power supply from the outlet.



3 Lift the wearable and sensor tray from the stand.



4 Pull enough cable from the stand to make remerchandising easier. Snap the cable clip over the cable to prevent it from recoiling into the stand.



5 Use a TT8 bit to loosen the screw in the band clamp.



6 Open the band clamp.



7 Unplug the flex tray sensor from the WS2/W2000 cable.



8 Carefully separate the corners of the tray sensor from the wearable.

WS2/W2000 Apple Watch Tray Sensor Replacement Adhesive Kit ADH2378/3350



- 9 Lift the wearable from the tray sensor.




- 10 Slide the band out from the tray sensor.




- 11 Remove the 2 larger adhesives from the front corners on the tray sensor.

Note: A small tool may make this easier.

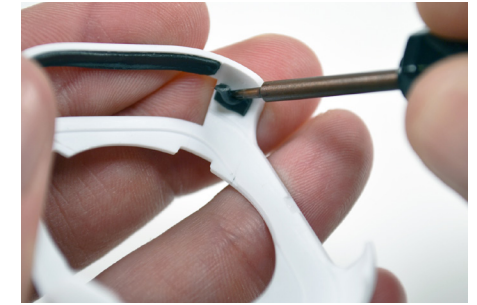

- 12 Remove the small corner adhesive.

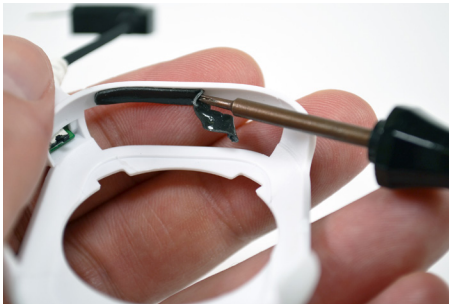


- 13 Remove the bridge adhesive.




- 14 Use a provided alcohol wipe to clean any adhesive residue from the tray sensor. Allow it to dry completely.

ADH2378 Installation:

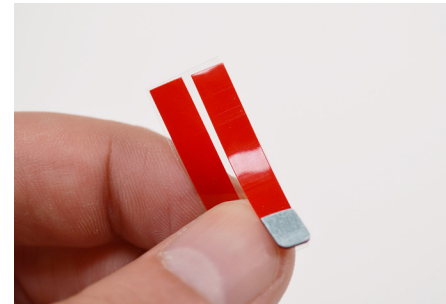


- 15 Remove one of the smaller corner adhesives from its backing.

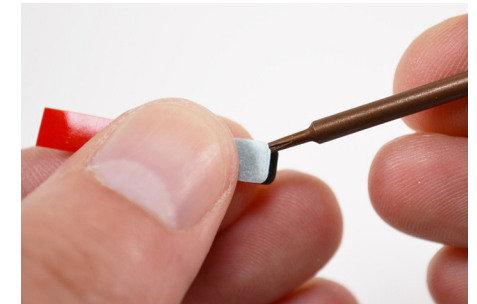


- 16 Remove the small liner from the adhesive.

Note: A small tool may make this easier.


WS2/W2000 Apple Watch Tray Sensor Replacement Adhesive Kit ADH2378/3350

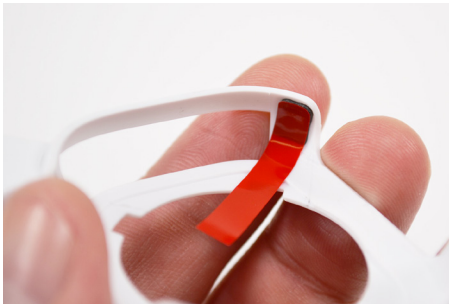

17 Carefully align the adhesive with the corner near the bridge and smooth it into place for at least 10 seconds.

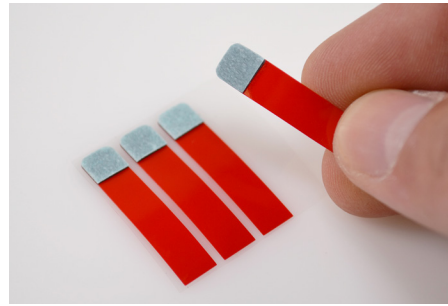

18 Remove one of the larger corner adhesives from its backing.

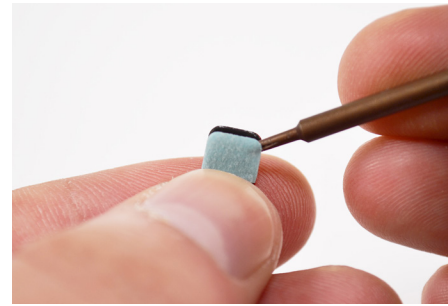

19 Remove the small liner from the adhesive.
Note: A small tool may make this easier.




20 Align the adhesive with one of the front corners and smooth it into place for at least 10 seconds.




21 Repeat the process for the other front corner.



22 Remove one of the bridge adhesives from its backing.

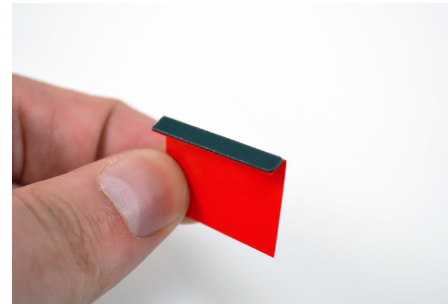


23 Fold the adhesive over, as shown.

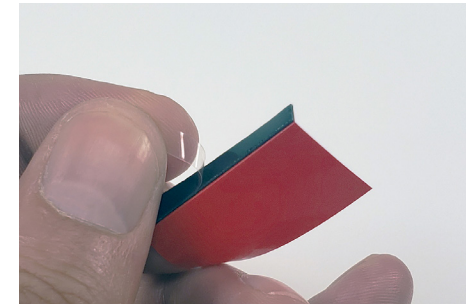


24 Peel the clear film from the adhesive.

WS2/W2000 Apple Watch Tray Sensor Replacement Adhesive Kit ADH2378/3350

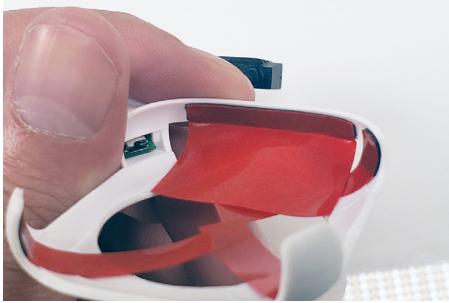

25 Align the adhesive with the bridge and smooth it into place.

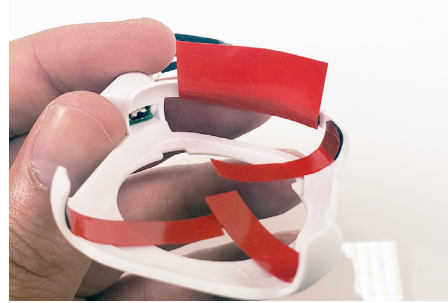


26 Fold the pull tab on the bridge adhesive upwards, as shown.




27 The tray sensor is now ready to be reinstalled. Consult the instructions included with the tray sensor for full installation information.

ADH3350 Installation:

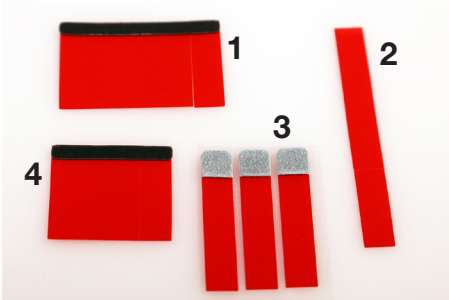


1 Identify the adhesives.


- 1) Bridge Adhesive
- 2) Switch Tape
- 3) Corner Adhesives x3
- 4) Side Adhesive

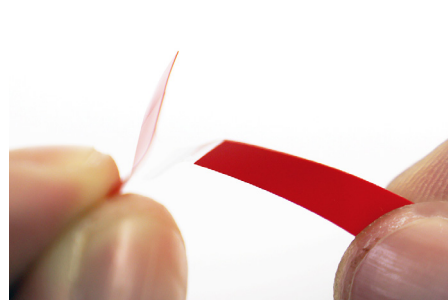

2a Before applying any other adhesives, peel the shorter liner from the Switch Tape (Adhesive #2 in step 1).

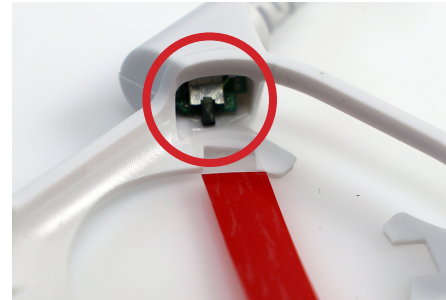


2b Place the tape over the switch. Ensure that the switch is pushed down as shown.

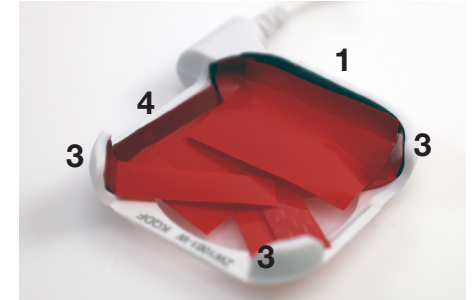


3 ZW1061 Remerchandising: Consult step 1 for the positions of the adhesives. Peel the clear film, leaving the red liners in place and place onto the tray and smooth into place.


WS2/W2000 Apple Watch Tray Sensor Replacement Adhesive Kit ADH2378/3350

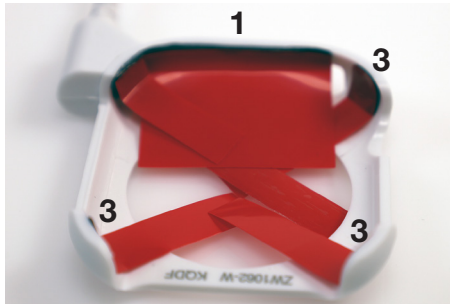

4 ZW1062 Remerchandising:
Consult step 1 for the positions of the adhesives. Peel the clear film, leaving the red liners in place and place onto the tray and smooth into place.

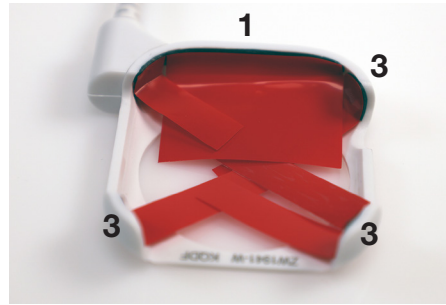

5 ZW1941 Remerchandising:
Consult step 1 for the positions of the adhesives. Peel the clear film, leaving the red liners in place and place onto the tray and smooth into place.

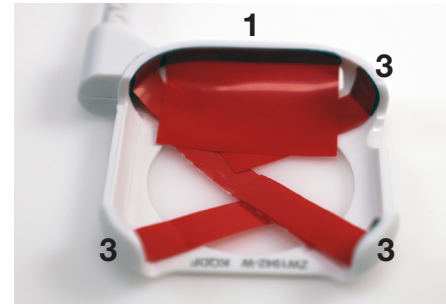

6 ZW1942 Remerchandising:
Consult step 1 for the positions of the adhesives. Peel the clear film, leaving the red liners in place and place onto the tray and smooth into place.