

# Cam Lock Installation- Verizon Wireless



Remove screws and metal plate inside drawer.



Insert Cam Lock into recess opening in door. Be sure to test Cam with programmed IR Sounder Key and make sure lens shows locked position (solid black background)



Make sure lock is inserted in the correct direction by checking alignment of IR lens in hole from the front.  
**OBSERVE IR LENS TO CONFIRM LOCKED**



Place metal plate over the Cam lock



Replace screws holding plate in place



Place Anti-Rotation washer around Cam barrel



Thread Cam Lock Nut on barrel and tighten down.



Bend all 3 prongs on Anti-Rotation washer over the Nut



Place Cam Arm on the barrel. **BE SURE TO ORIENTATE THE CAM ARM TO THE LOCKED POSITION. THIS IS STRAIGHT UP. HAND TIGHTEN THE ARM ON THE CAM BARREL WITH A SCREWDRIVER. DO NOT USE POWER TOOLS!**



Photo indicates Arm position for locked Cam Lock.



Photo indicates Arm position for unlocked Cam Lock

TEST LOCK BEFORE CLOSING THE DRAWER.

Call InVue Customer Service if you have any questions during installation.

1-888-554-6883 x 1353



# L-Bracket Adjustment - Verizon Wireless

---




Loosen screws



Slide L-bracket forward or backward so that the CAM arm is 1/8" or less away from the metal leg when in the locked position



Tighten screws to secure L-bracket

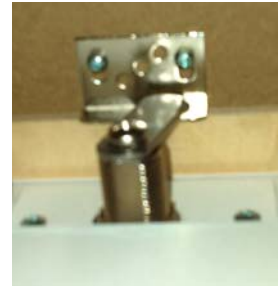

Test lock to ensure it operates correctly. If CAM arm hits the L-bracket and cannot fully swing behind the metal leg, use the key to unlock and pull drawer then adjust L-bracket as needed. DO NOT manually move CAM arm

Call InVue Customer Service if you have any questions during installation.

1-888-554-6883 x 1353

