




AMERICAN LEATHER®

Comfort Theatre Installation Instructions

Installation of Insert Wedge with Control Panel

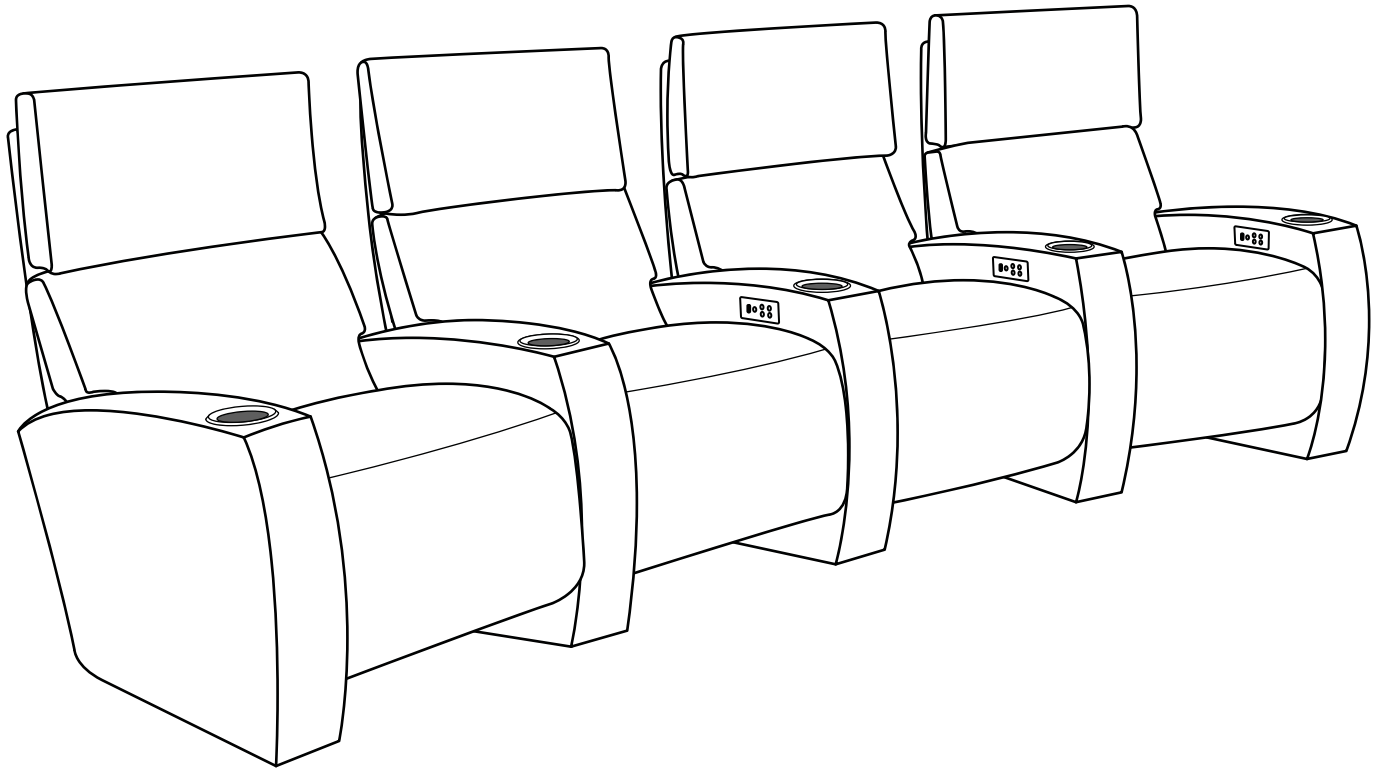


Note: Configurations will vary based on your order.



A M E R I C A N L E A T H E R®

Comfort Theatre Installation Instructions

Turn the Comfort Theatre recliner over onto the back (as shown in the image below) to remove the bag containing the hardware:

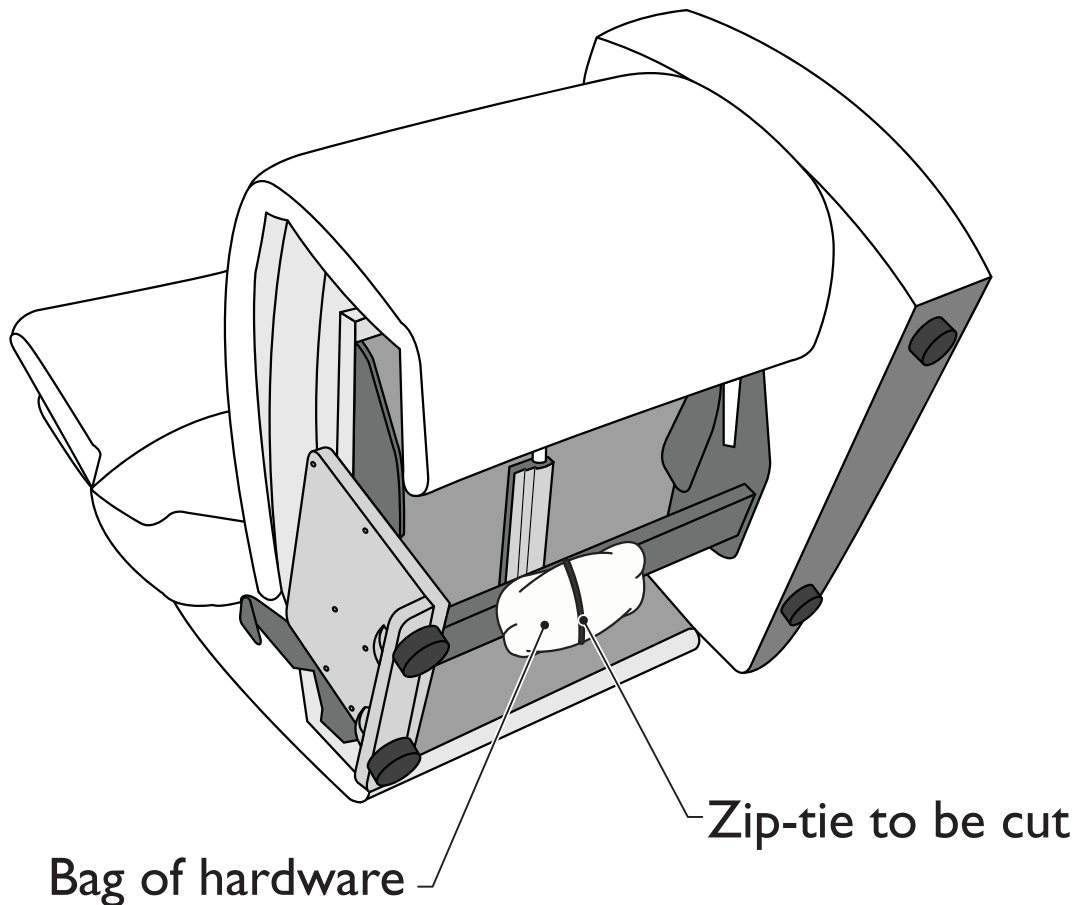

Note: Some image details omitted for clarity.




AMERICAN LEATHER®

Comfort Theatre Installation Instructions

Hardware included with each recliner:


Transformer:

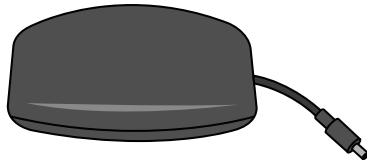

Washer
(Qty. 2):



Wall Cord:

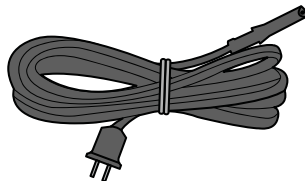


5/16" Bolt, 2" Long
(Qty. 3):

Note: One extra 5/16" Bolt is included.



Low Voltage
Power Cord:

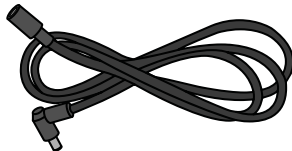


1/4" Bolt, 3/4" Long
(Qty. 2):




Tools needed for assembly:



Ratchet

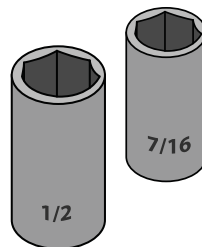

1/2" & 7/16"
Sockets

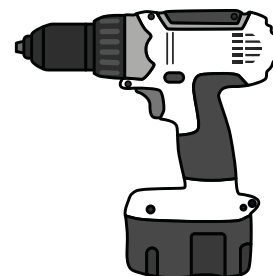


Electric Drill
(Optional)




AMERICAN LEATHER®

Comfort Theatre Installation Instructions

Installation of Insert Wedge with Control Panel

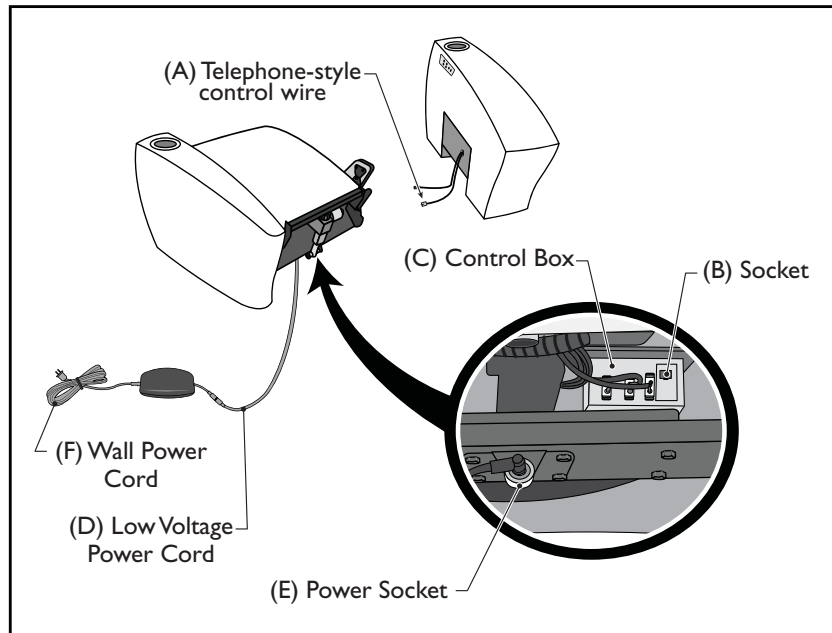

1. Plug the telephone-style control wire (A) into the socket (B) on the control box (C) under the seat of the Comfort Theatre recliner. Next, plug the low voltage power cord (D) into the power socket (E) under the seat of the recliner. Plug the wall power cord (F) into an open electrical outlet. Plugging in the telephone-style control wire (A), the low voltage power cord (D) and the wall power cord (F) is only temporary so that the recliner can be opened in **Step 2**. **Note:** There will only be two wires coming out of the insert wedge if you ordered the optional LED cup holder; Otherwise, there will only be a single wire.

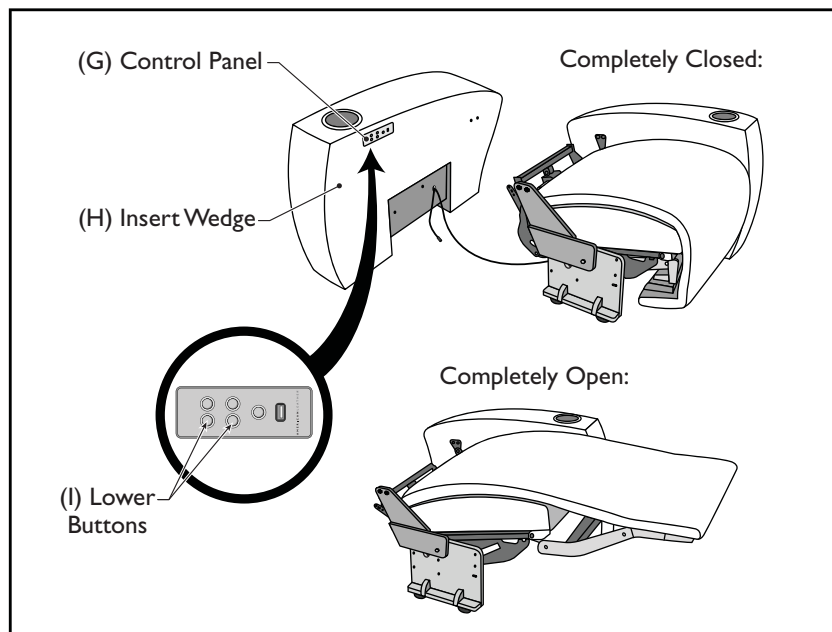


2. Next, completely open the recliner. Find the control panel (G) on the insert wedge (H) and press the two lower buttons (I) until the recliner stops moving. This will put the Comfort Theatre recliner into the completely open position. With the recliner fully open, disconnect the wires you connected in **Step 1**: The telephone-style control wire (A), low voltage power cord (D), and the wall power cord (F)



AMERICAN LEATHER®

Comfort Theatre Installation Instructions


Installation of Insert Wedge with Control Panel

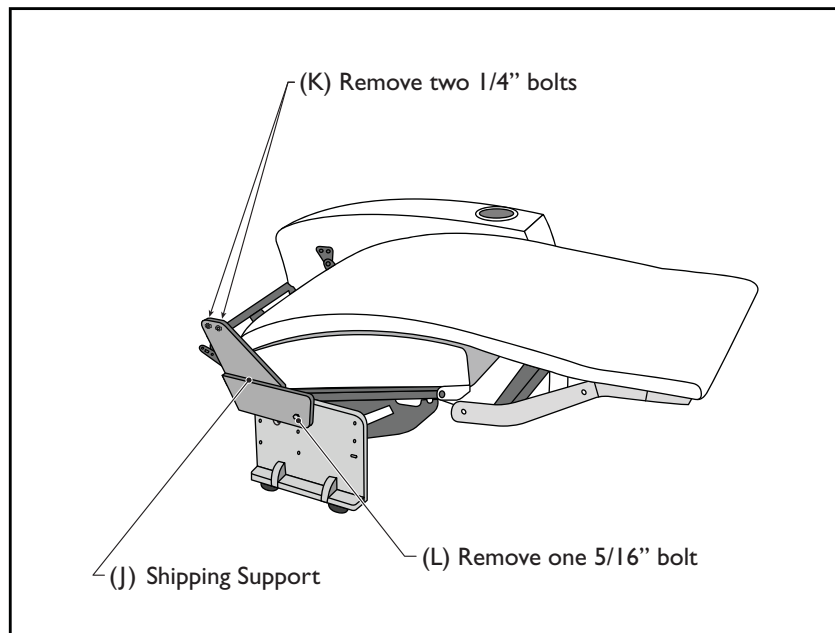

Tip: You will need these tools for step 3




Ratchet

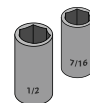

1/2" & 7/16"
Sockets

3. The shipping support (J) needs to be removed and discarded. Remove the two upper 1/4" bolts (K) and discard. Remove the single 5/16" bolt (L) and the shipping support can now be discarded.

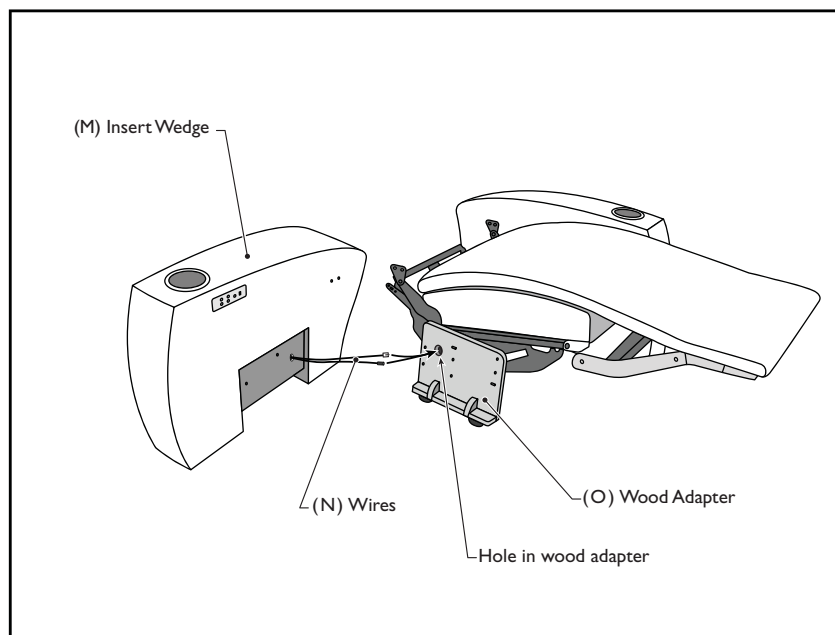


4. Line up the insert wedge (H) with the side of the recliner. Run the two wires (N) from the insert wedge through the hole in the wood adapter (O).



AMERICAN LEATHER®

Comfort Theatre Installation Instructions


Installation of Insert Wedge with Control Panel

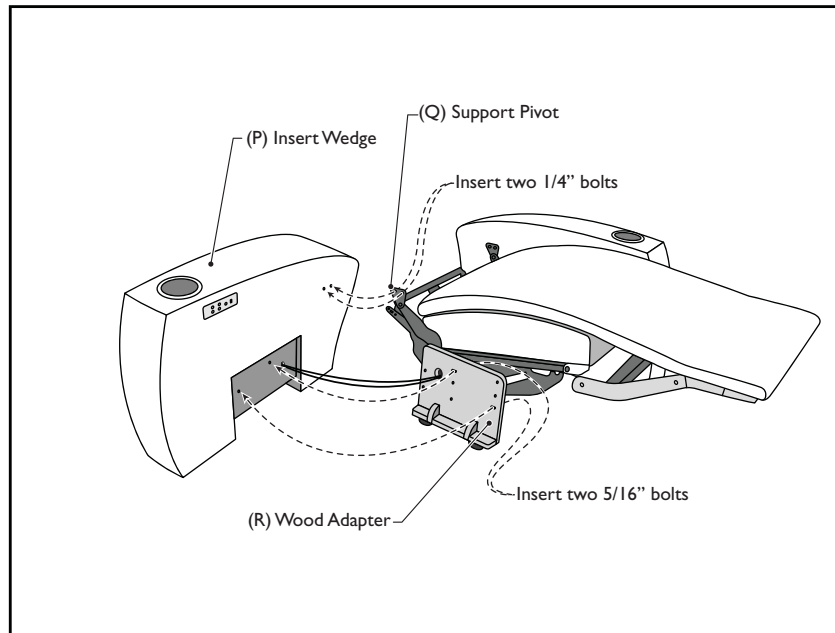

Tip 1: You will need these tools for steps 5 and 6



Ratchet

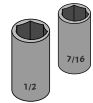

1/2" & 7/16"
Sockets

Tip 2: You will need this hardware for step 5


Washer (Qty. 2): 5/16" Bolt (Qty. 2):



1/4" Bolt (Qty. 2):



5. Line up the insert wedge (P) with the side of the recliner. Use the two 1/4" bolts provided in the hardware bag and insert them into the support pivot (Q). Next, use the two provided 5/16" bolts and washers to fasten the wood adapter (R) to the insert wedge as shown. Tighten all four bolts by hand.

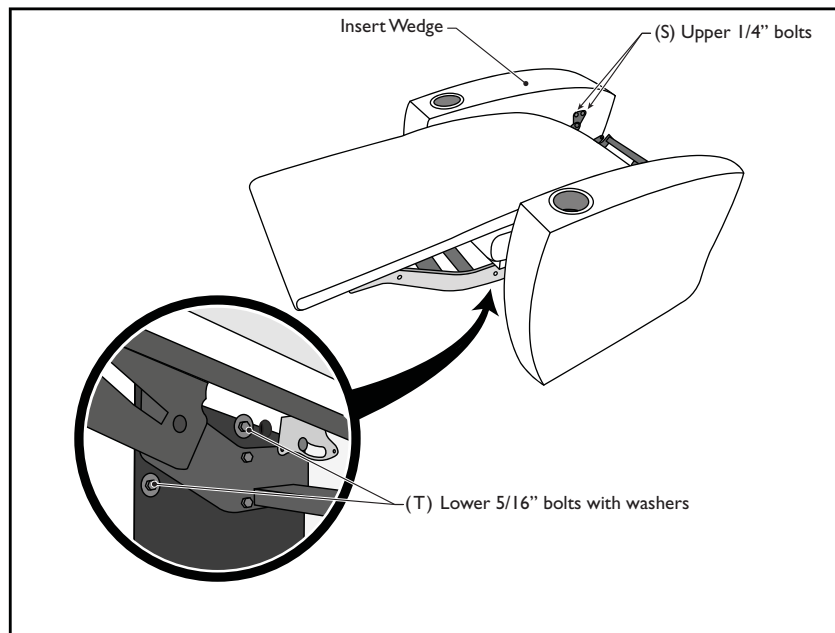

6. Tighten down the upper bolts (S) completely and then tighten down the lower bolts (T) completely.





AMERICAN LEATHER®

Comfort Theatre Installation Instructions

Installation of Insert Wedge with Control Panel

Note: The view in the image below is achieved by looking from the front underneath the recliner.

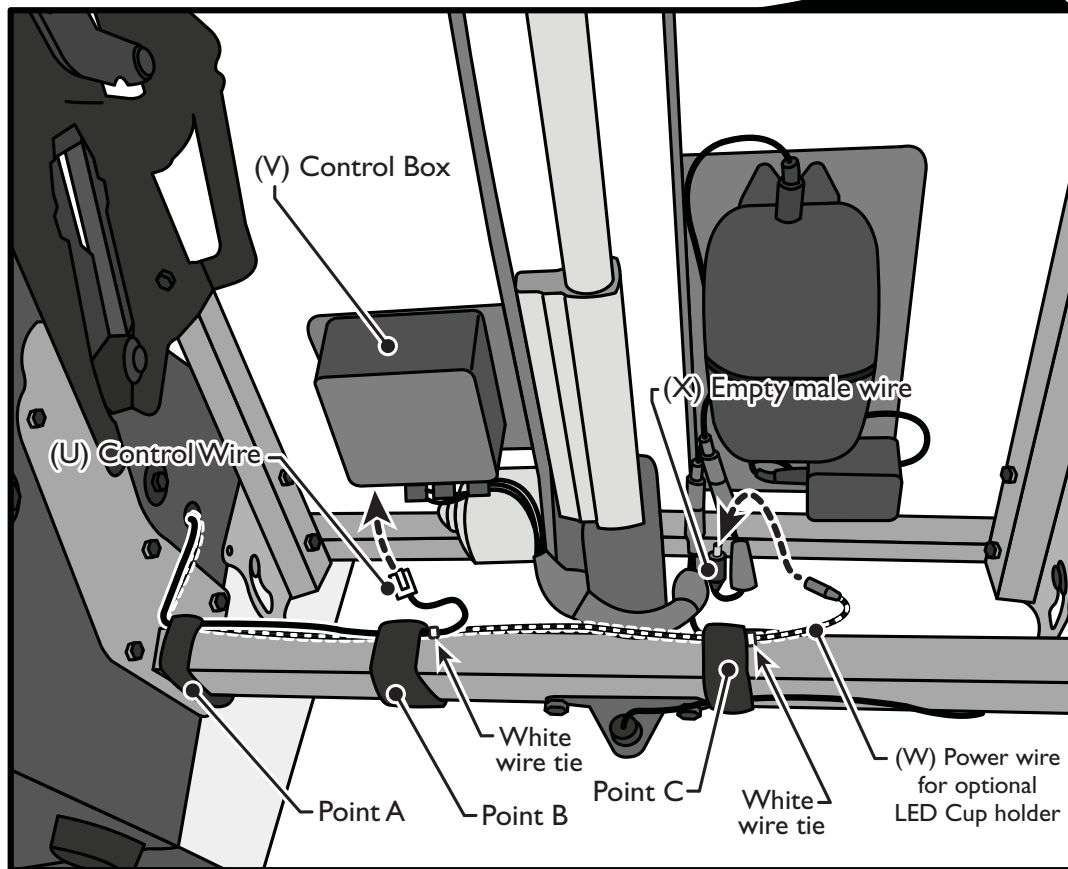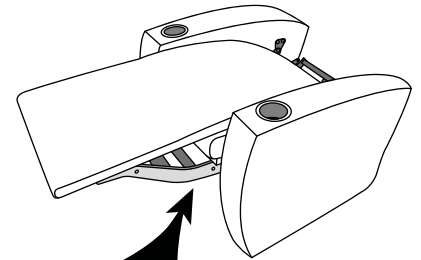

7. The wires that were routed through the hole in the wood adapter in **Step 4** need to be secured so no damage to the wires occurs when the mechanism is operating. Double sided Velcro wire ties are provided at points A, B, and C to secure the wires as shown. Pull the wires completely through the hole and secure them at point A. (Right side sitting shown: For left side sitting, point A will be on the opposite side of the image.)

Note before proceeding: the length of the control wire (U) and the power wire (W) from the wire tie (Velcro) must be 7" to allow the wires to move with the mechanism when it is in operation. **Tip:** there is a white plastic wire tie on each wire to indicate the 7" mark. Secure the wires at this 7" mark with the Velcro wire ties to ensure proper operation.

After securing the control wire (U) and the optional LED cup holder power wire (W) to Point A, continue to route the wires to Point B. Secure the white plastic wire tie of the control wire (U) to Point B. Continue running the optional Power wire (W) to point C. Secure the white plastic wire tie of the optional Power wire (W) to point C.


After the wires are properly secured, they will need to be connected. Connect the Control wire (U) to the back of the control box (V) like you did in **Step 1**. If your Comfort Theatre recliner was ordered with the optional lighted cup holder, you will need to connect the power wire (W) to the empty male wire (X) that's located in a bundle of wires above Point C.



AMERICAN LEATHER®

Comfort Theatre Installation Instructions

Installation of Insert Wedge with Control Panel

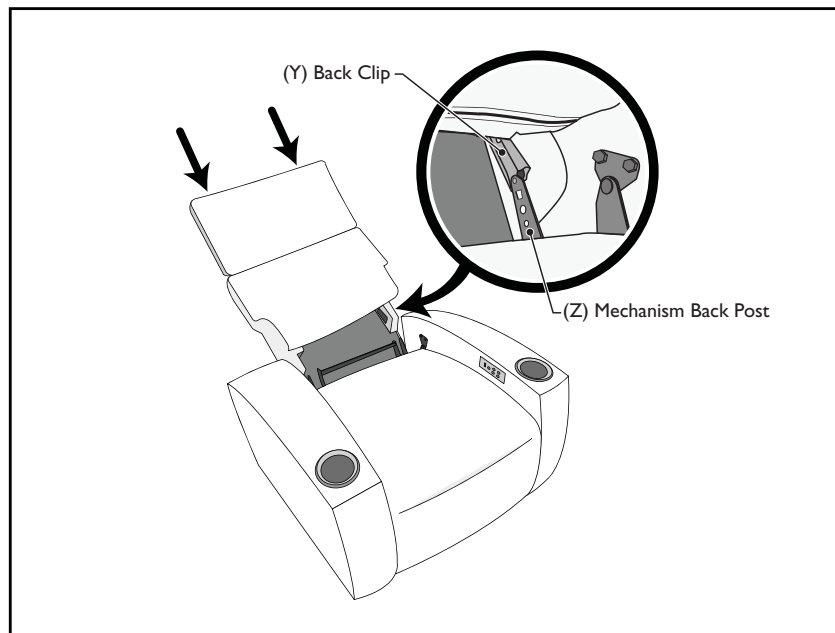

8. To install the Comfort Theatre recliner back, first line up the back clips (Y) with the mechanism back post (Z) on both sides of the Comfort Theatre recliner. When you have the mechanism back posts resting inside of the back clips, apply downward pressure on the Comfort Theatre back until you hear the clips “click” into place. The back should be very snug. If the back is loose and easily removed then it is not set in place correctly.