


Installation of Insert Wedge without Control Panel

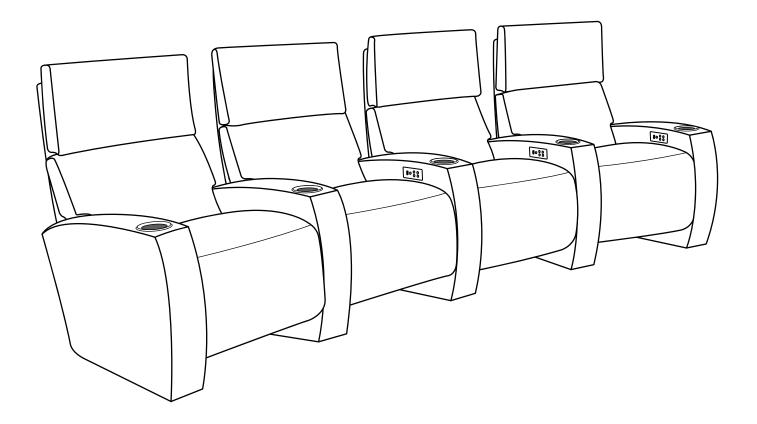


Note: Configurations will vary based on your order.

Pg. I of 6



Turn the Comfort Theatre recliner over onto the back (as shown in the image below) to remove the bag containing the hardware:

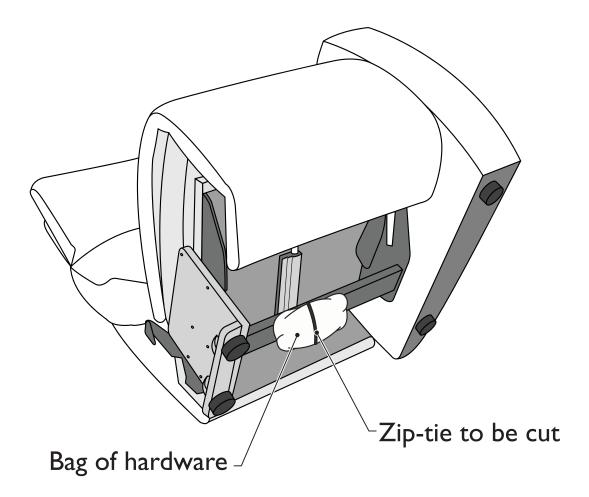

Note: Some image details omitted for clarity.

Pg. 2 of 6




#### Hardware included with each recliner:





Wall Cord:



Low Voltage Power Cord:



Washer (Qty. 2):



5/16" Bolt, 2" Long (Qty. 3):


Note: One extra 5/16" Bolt is included.



1/4" Bolt, 3/4" Long (Qty. 2):




# Tools needed for assembly:

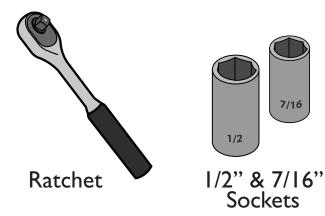






Installation of Insert Wedge without Control Panel

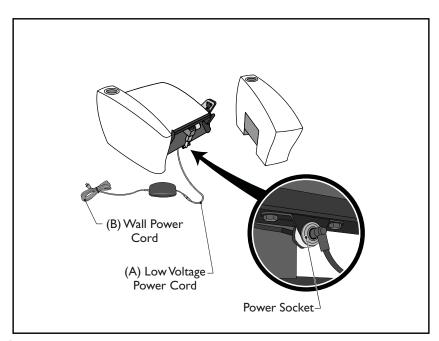

I. Plug the low-voltage power cord (A) into the power socket under the seat of the Comfort Theatre recliner. Plug the wall power cord (B) into an open electrical outlet.

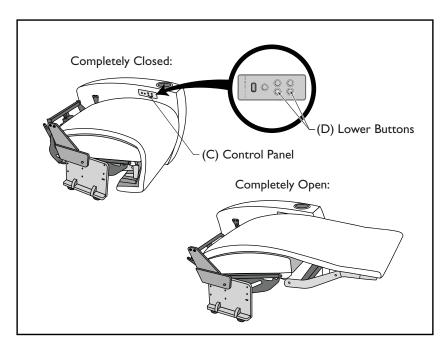


**2.** Next, completely open the recliner. Find the control panel (C) on the arm of the Comfort Theatre recliner, and press the two lower buttons (D) until the recliner stops moving. This will put the Comfort Theatre recliner into the completely open position.


Pg. 4 of 6




Installation of Insert Wedge without Control Panel

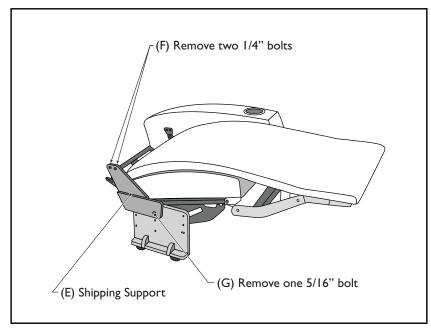

**Tip 1:** You will need these tools for steps 3, 4, and 5



**3**. The shipping support (E) needs to be removed and discarded. Remove the two upper 1/4" bolts (F) and discard. Remove the single 5/16" bolt (G) and the shipping support can now be discarded.

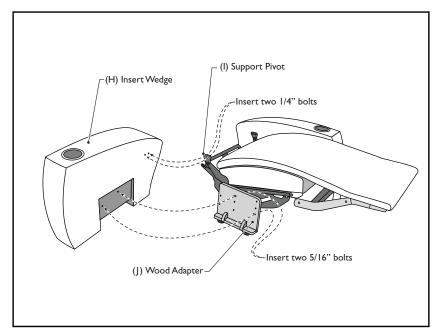

**Tip 2:** You will need this hardware for steps 4 and 5

Washer (Qty. 2): 5/16" Bolt (Qty. 2):





1/4" Bolt (Qty. 2):


4 BOIL (QL)

**4**. Line up the insert wedge (H) with the side of the recliner. Use the two 1/4" bolts provided in the hardware bag and insert them into the support pivot (I). Next, use the two provided 5/16" bolts and washers to fasten the wood adapter (J) to the insert wedge as shown. Tighten all four bolts by hand.


Pg. 5 of 6 V04.23.14



Installation of Insert Wedge without Control Panel

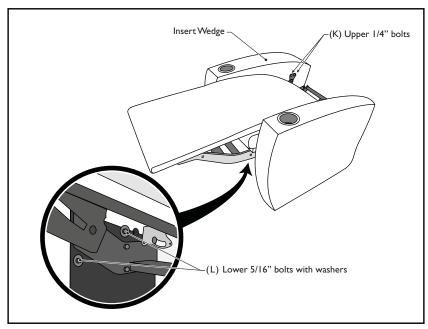

**5**. Tighten down the upper bolts (K) completely and then tighten down the lower bolts (L) completely.

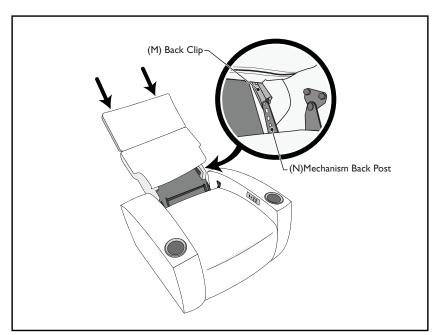

**6**. To install the Comfort Theatre recliner back, first line up the back clips (M) with the mechanism back post (N) on both sides of the Comfort Theatre recliner. When you have the mechanism back posts resting inside of the back clips, apply downward pressure on the Comfort Theatre back until you hear the clips "click" into place. The back should be very snug. If the back is loose and easily removed then it is not set in place correctly.

Pg. 6 of 6