


2007-2018 WRANGLER JK 2/4 DOOR CARGO ROOF RACK ACCESSORY MOUNT PART #JK-7102

PARTS LIST:

2	Accessory Mounting Plate	2	195mm x 42mm x 6mm Mid Foam Strips
2	Left Accessory Tubes	2	100mm x 42mm x 6mm Short Foam Strips
2	Right Accessory Tubes	4	10mm x 30mm Hex Bolts
2	Step Pads	4	10mm Lock Washers
1	Driver/Left Front Mounting Bracket	4	10mm x 27mm OD x 3mm Flat Washers
1	Passenger/Right Front Mounting Bracket	4	8mm x 68mm Knob Bolts
1	Driver/Left Rear Mounting Bracket	8	8mm x 25mm Button Head Bolts
1	Passenger/Right Rear Mounting Bracket	8	8mm x 24mm OD x 2mm Flat Washers
2	Hardtop Spacer Plates	16	8mm x 16mm OD x 1.6mm Flat Washers
2	278mm x 42mm x 6mm Long Foam Strips	12	8mm Nylon Lock Nuts

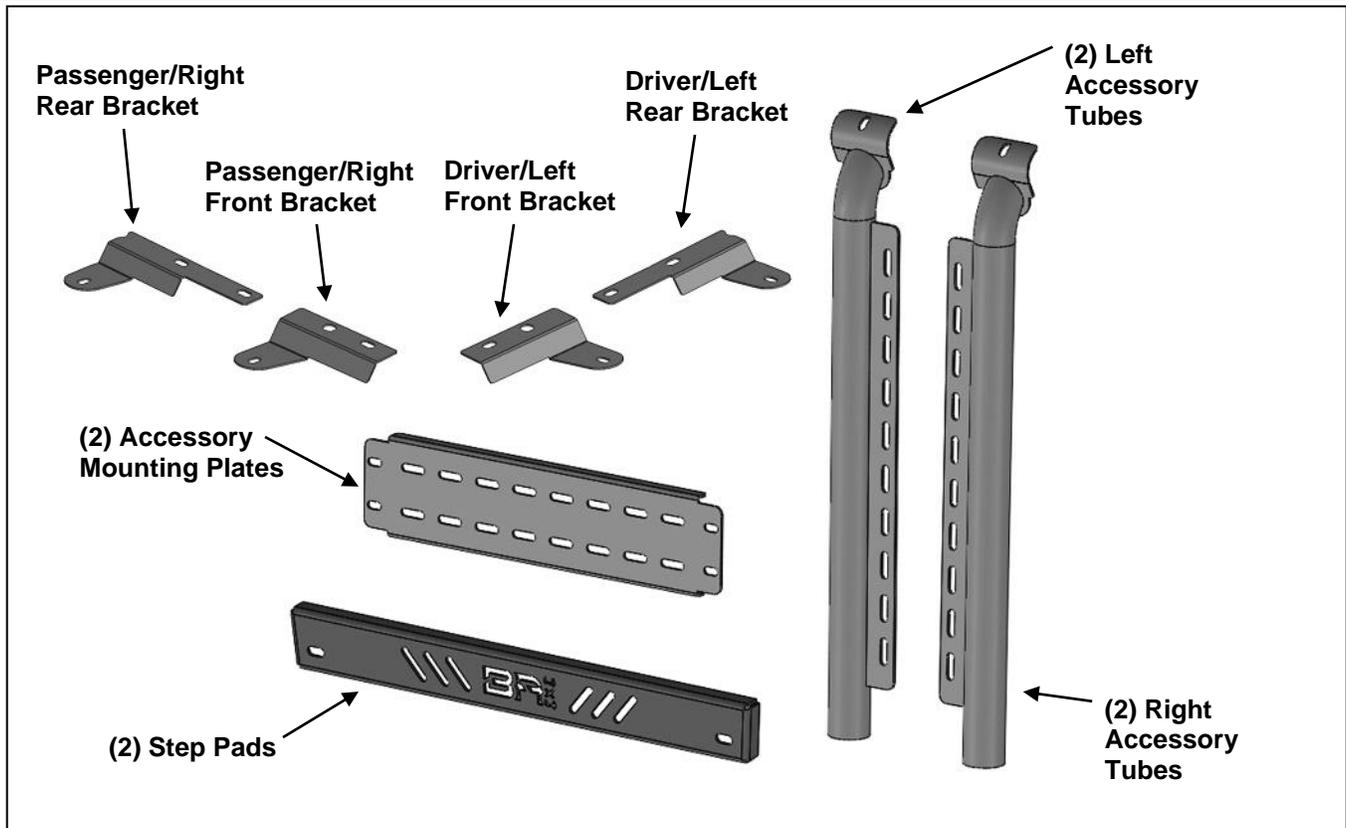

PROCEDURE:




REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS REQUIRED. ROOF RACK IS REQUIRED FOR ATTACHMENT.

1. Select the Driver/Left Front Bracket. For hardtop models, attach (1) Long Foam Strip to the top of the Bracket, **(Figure 1)**. Repeat this **Step** to attach (1) Short Foam Strip to (1) Spacer Plate, **Figure 2**, and (1) Mid Foam Strip to the Rear Bracket, **Figure 3**.
2. For hardtop models, from inside the cabin, temporarily remove the bolts attaching the roof to the vehicle, **(Figure 4)**.


- Lift the hardtop roof enough to slide the Driver/Left Brackets and Spacer Plate under the lip of the roof. Line up the holes of the Brackets to the threaded holes in the roof used for the factory bolts, **(Figure 5)**.
- Reattach the roof, but do not tighten factory hardware.
- Select (1) Step Pad, (1) Left Accessory Tube and (1) Right Accessory Tube. Attach the Tubes and Step Pad to the Brackets with (2) 10mm Hex Bolts, (2) 10mm Lock Washers and (2) 10mm Flat Washers, **(Figure 6)**. Do not tighten hardware.
- Locate the holes in the roof rack aligned with the Accessory Tube Slots, **(Figure 7)**. Attach the Tubes to the roof rack with (2) 8mm Knob Bolts, (4) 8mm x 24mm Flat Washers and (2) 8mm Nylon Lock Nuts, **(Figure 8)**. Do not tighten hardware.
- Attach (1) Accessory Plate to the (2) Tubes with (4) 8mm Button Head Bolts, (8) 8mm x 16mm Flat Washers and (4) 8mm Nylon Lock Nuts, **(Figures 9 & 10)**. Do not tighten hardware.
- Level and adjust the Accessory Mount assembly and tighten all hardware.
- Repeat **Steps 1—8** to attach an Accessory Mount Assembly to the Passenger/Right Side.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Accessory Mount.


Driver/Left Side Installation Pictured

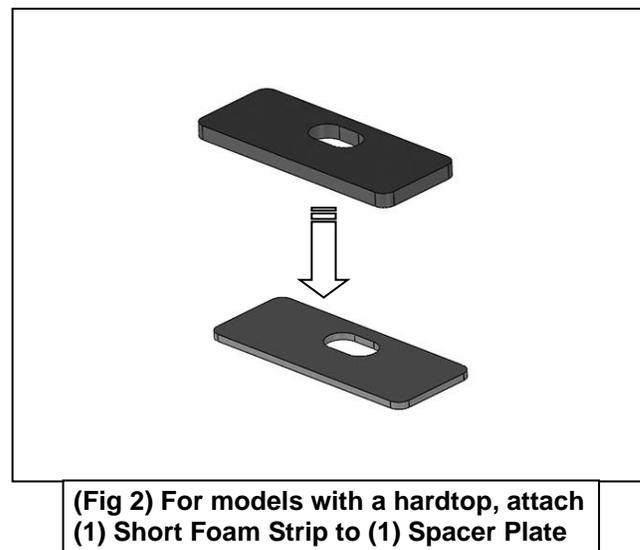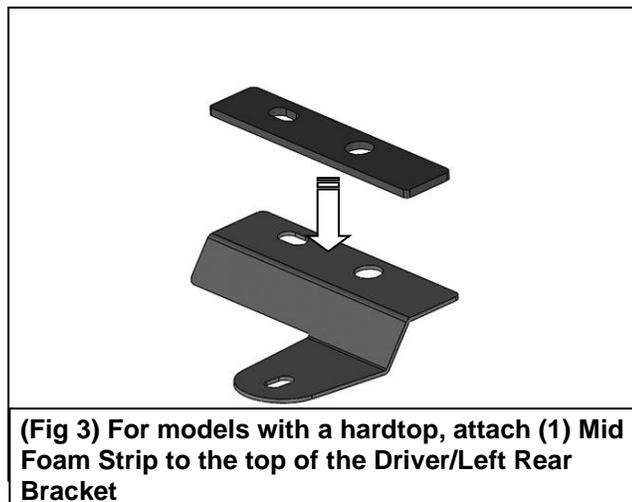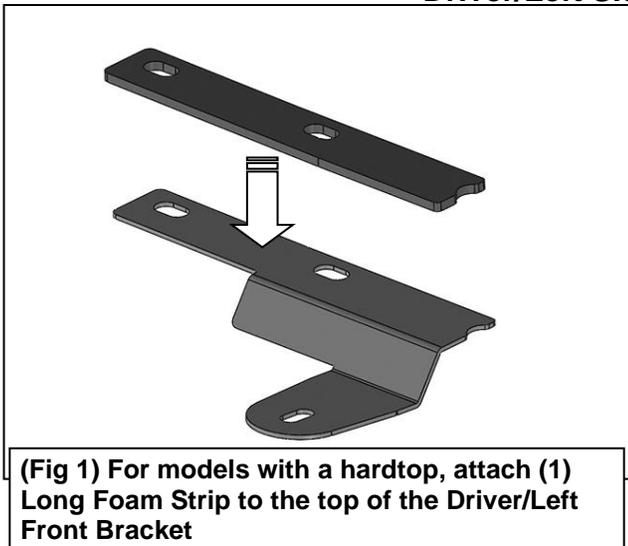


Driver/Left Side Installation Pictured

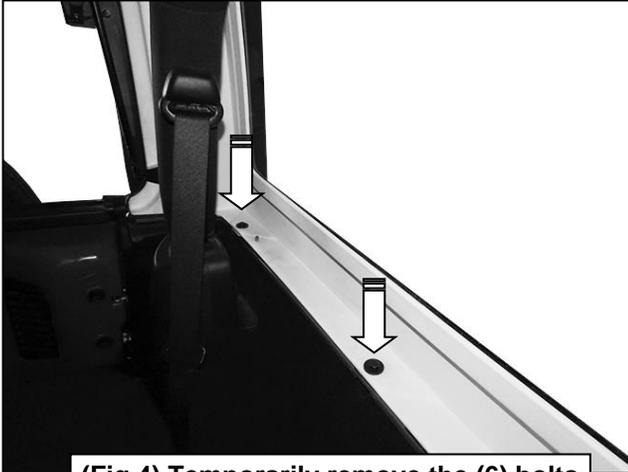

(Fig 4) Temporarily remove the (6) bolts attaching the hardtop roof to the vehicle. Place bolts in a safe location

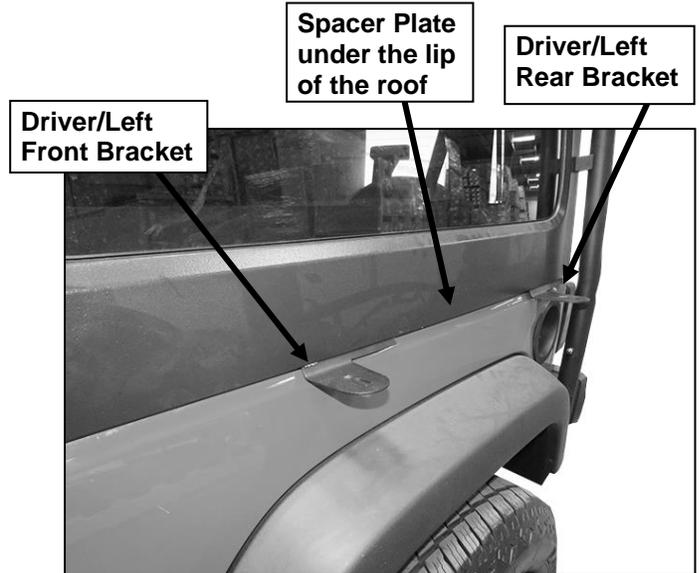

(Fig 5) Lift the hardtop and place the Driver/Left Brackets and (1) Spacer Plate under the window. Line up the holes in the brackets to the holes in the roof used for the bolts

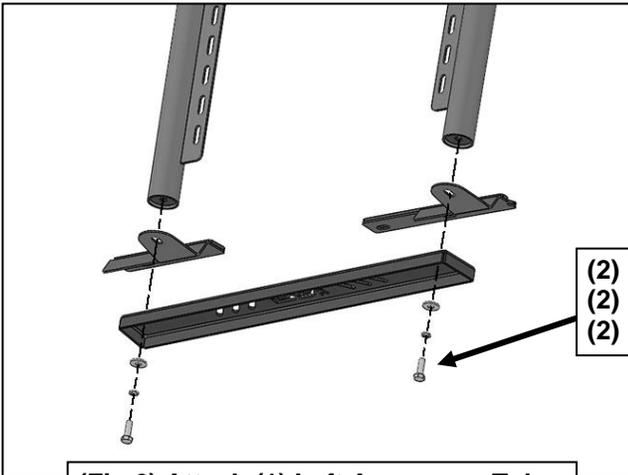


- (2) 10mm Hex Bolts
- (2) 10mm Lock Washers
- (2) 10mm Flat Washers

(Fig 6) Attach (1) Left Accessory Tube, (1) Right Accessory Tube and (1) Step Pad to the Driver/Left Brackets



(Fig 7) Attach the Accessory Tubes to the holes in the roof rack, (Passenger/Right rear shown)


Passenger/right Side Installation Pictured

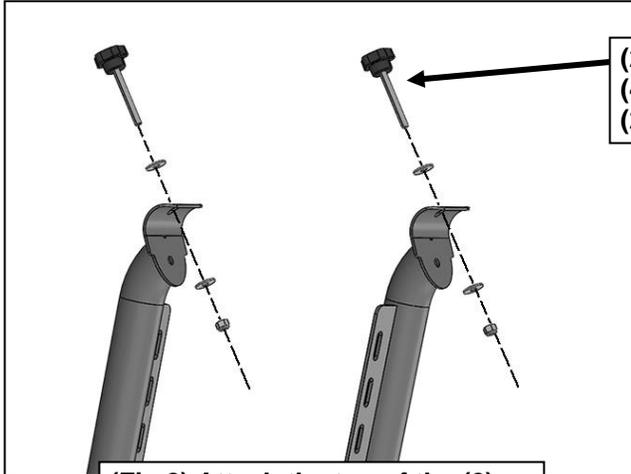

- (2) 8mm Knob Bolts
- (4) 8mm x 24mm Flat Washers
- (2) 8mm Nylon Lock Nuts

(Fig 8) Attach the top of the (2) Accessory Tubes to the roof rack

- (4) 8mm Hex Bolts
- (8) 8mm x 16mm Flat Washers
- (4) 8mm Nylon Lock Nuts

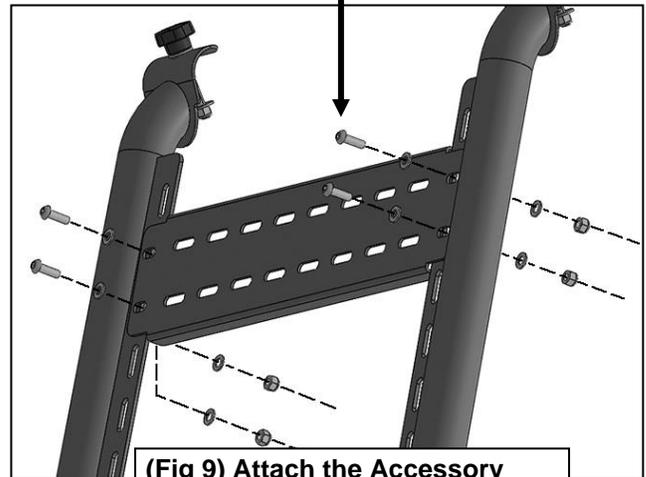

(Fig 9) Attach the Accessory Plate to the (2) Accessory Tubes



(Fig 10) Accessory Plate attached to the front Accessory Tube