


ACCESSORY MOUNT FOR UNIVERSAL RACK PART #TK-6127

PARTS LIST:

1	Accessory Mounting Brackets
2	"L" Univ. Accessory Brackets
8	8-1.25mm x 25mm Hex Bolts
16	8mm x 16mm x 1.6mm Small Flat Washers
8	8mm Nylon Lock Nuts

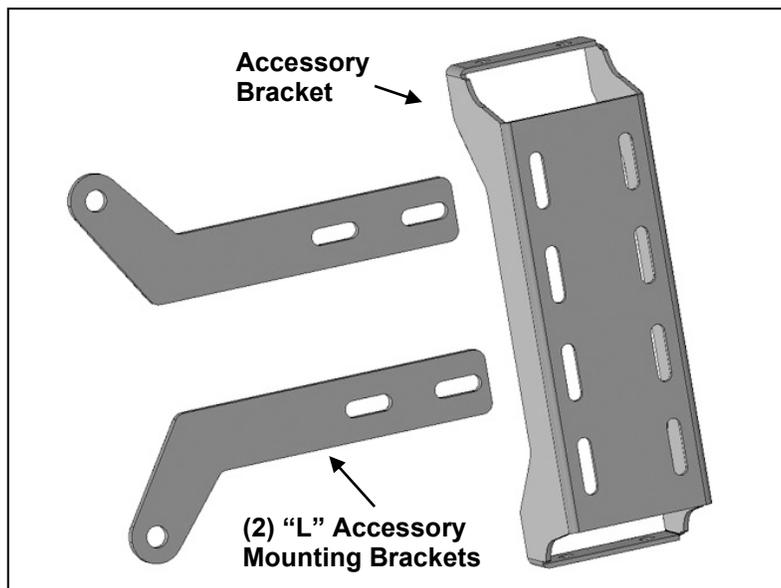


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

1. Select the Accessory Side Bracket, **(Figure 1)**. From the back, insert the Accessory Bracket assembly between the top and bottom side Tubes. Attach the Bracket to the mounting strip on the back of the side Tubes with (4) 8mm x 25mm Hex Bolts, (8) 8mm x 16mm Small Flat Washers and (4) 8mm Nylon Lock Nuts, **(Figure 1)**. Do not fully tighten Accessory Bracket hardware until final location is determined. **NOTE:** Accessory Bracket may be installed under Top Cross Braces if necessary. Reuse Cross Brace mounting hardware to attach the Accessory Bracket as needed. Additional Bracket kits are available separately.
2. Select (1) universal "L" Mounting Bracket, **(Figure 2)**. Determine a desired location on the Accessory Bracket. Attach the "L" Bracket to the Accessory Bracket assembly with the included (2) 8mm x 25mm Hex Bolts, (4) 8mm x 16mm Small Flat Washers and (2) Nylon Lock Nuts. Repeat to install remaining "L" Brackets in desired locations.
3. Check the alignment and fully tighten all hardware.
4. Do periodic inspections to the installation to make sure that all hardware is secure and tight.


To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean Overland Rack and Accessories.

- (4) 8mm x 25mm Hex Bolts
- (8) 8mm x 16mm Small Flat Washers
- (4) 8mm Nylon Lock Nuts

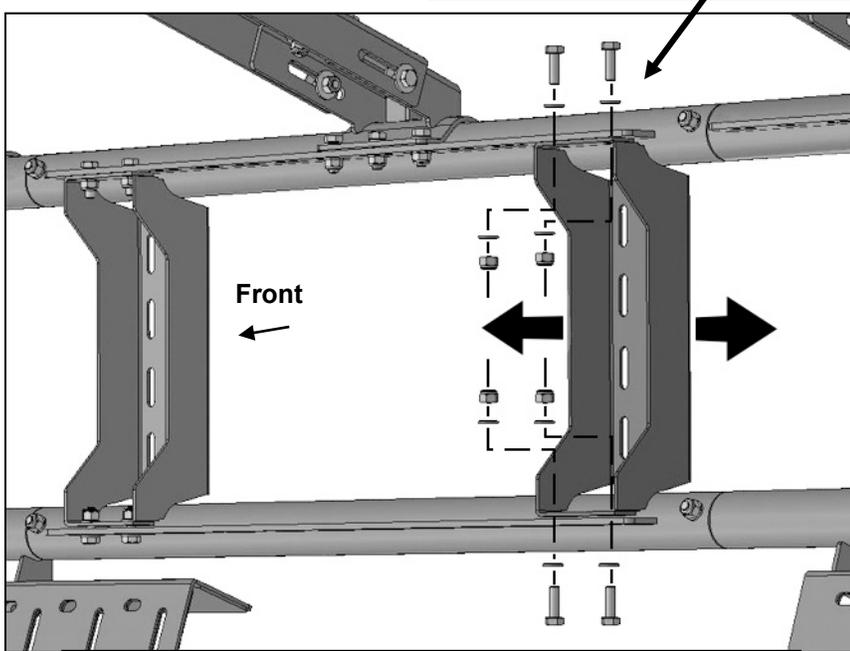

(Fig 1) Attach Accessory Bracket to mounting tracks on back of Side Tubes (passenger/right side illustrated)

- (4) 8mm x 25mm Hex Bolts
- (8) 8mm x 16mm Small Flat Washers
- (4) 8mm Nylon Lock Nuts

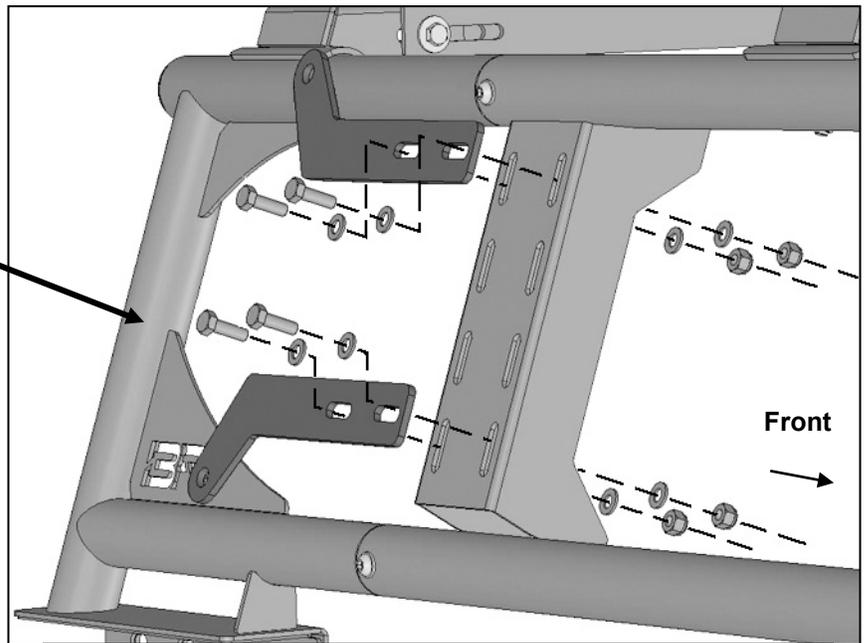

(Fig 2) Example of typical Universal "L" Bracket installation