


2024-2026 TOYOTA TACOMA DOUBLE CAB SHORT BED/ACCESS CAB LONG BED REVO STEP SLIDERS PART #TC-4126

PARTS LIST:

Qty	Item Description	Qty	Item Description
1	Driver Side Step Slider	16	10-1.25mm x 35mm Hex Bolt
1	Passenger Side Step Slider	2	8-1.25mm x 35mm Hex Bolt
16	10mm Lock Washer	2	8mm x 28mm x 3mm Flat Washer
16	10mm x 30mm x 2.5mm Flat Washer	2	8mm Lock Washer

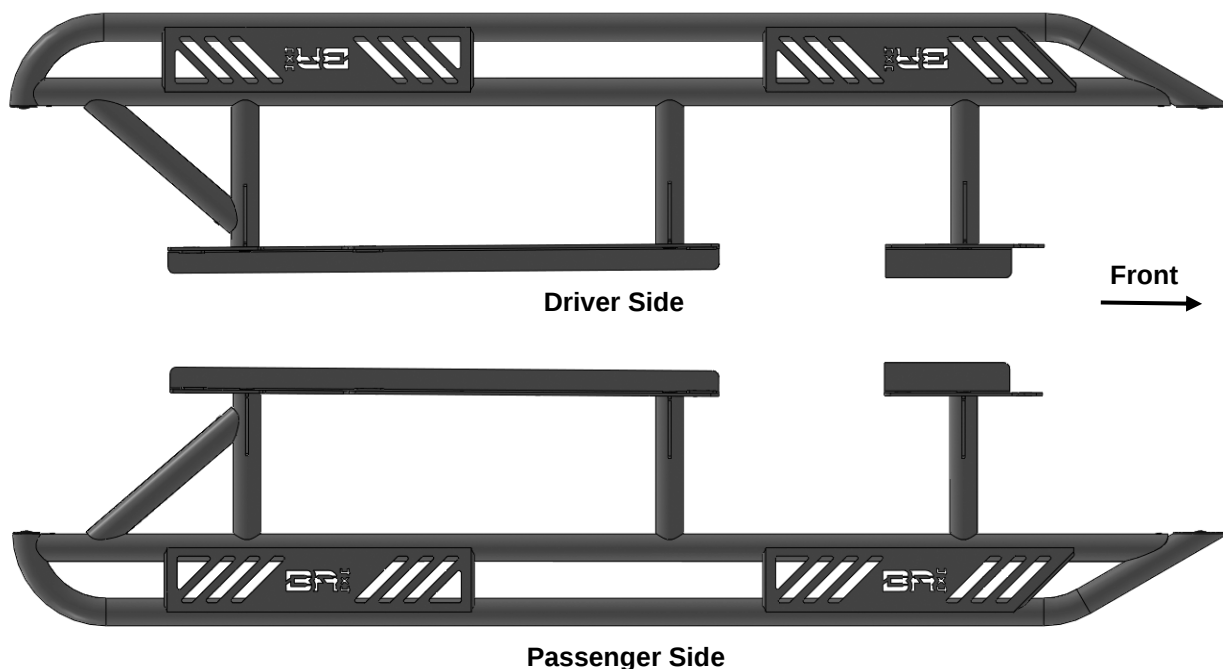

Lock
Washer




Flat
Washer



Hex Bolt

TOOLS REQUIRED

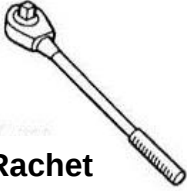
 Ratchet	 13mm Socket 16mm Socket	 Extensions	 Wrench
--	--	--	---

PRODUCT CARE AND MAINTENANCE


- Textured coat finished should be cleaned ONLY with a mild soap on a damp sponge.
- BA recommends wiping down the product with a light coat of lubricate (i.e. WD40) periodically to maintain its luster.
- DO NOT apply polish or wax that requires buffing for removal as this may damage the finish.
- DO NOT coat the product with any type of shine such as Tire Shine or glossy aerosol or gel. This can cause discoloration, staining or bubbling.

1


Follow (Fig 1 – 8) to attach the brackets to the Passenger/Right Side. Repeat the following steps on the Driver/Left Side. Ensure all hardware is hand tightened at this point.

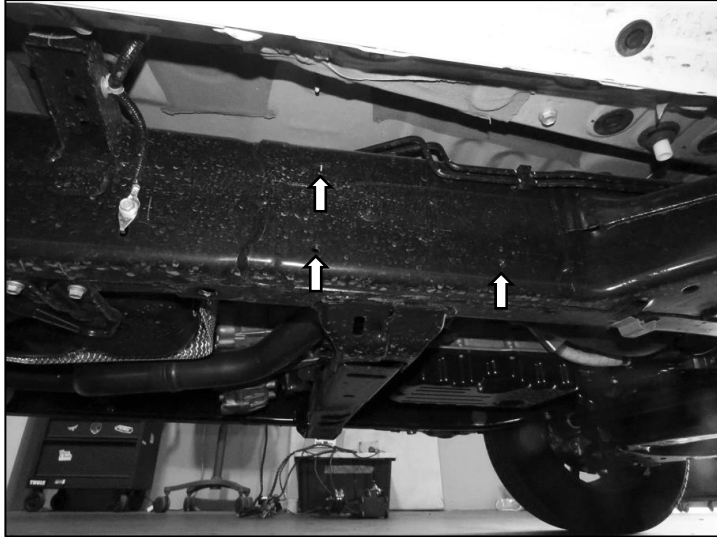


(Fig 1) On Passenger Side Front Frame, locate the front threaded inserts

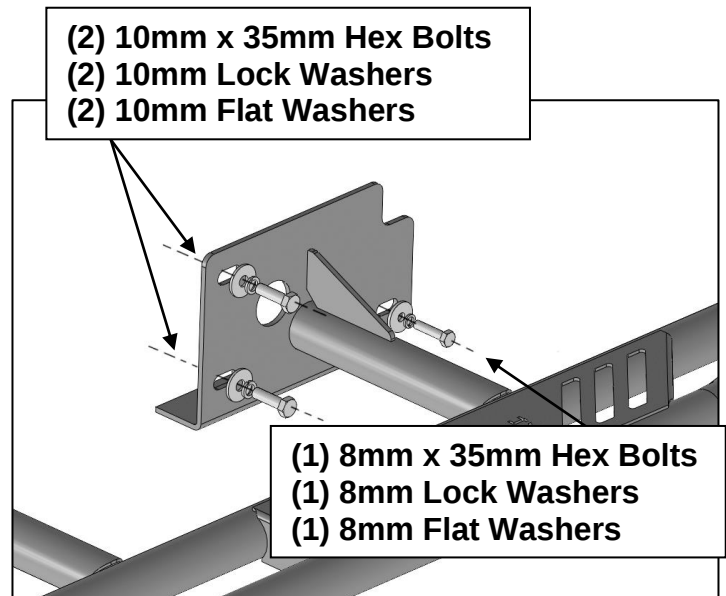

(Fig 2) Mount front bracket using indicated hardware

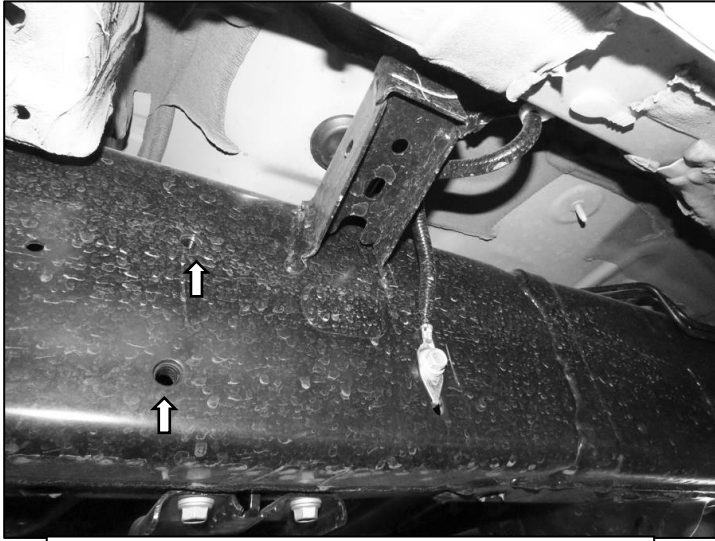


(Fig 3) On Passenger Side Center Frame, locate the front threaded inserts

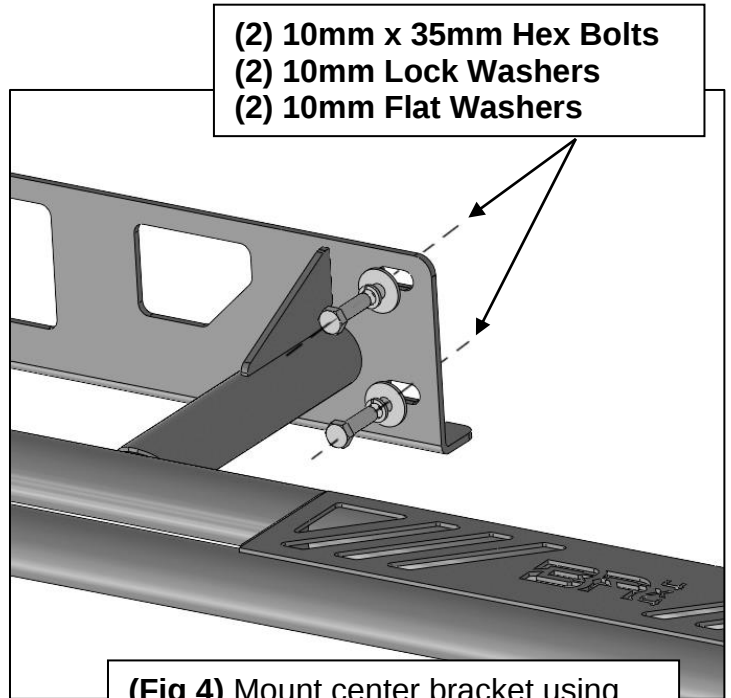

(Fig 4) Mount center bracket using indicated hardware



(Fig 5) On rear section of the frame, locate the rear threaded inserts

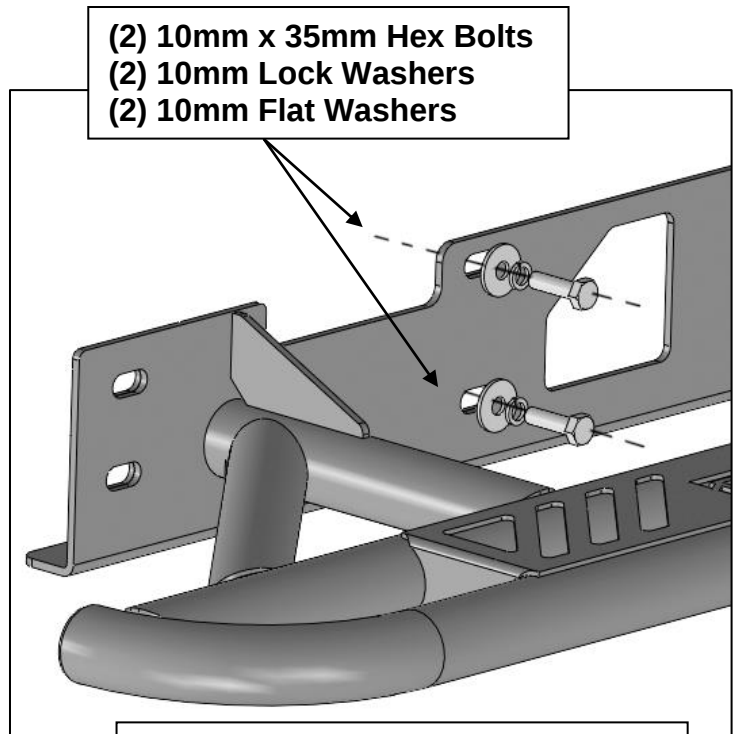


(Fig 6) Mount rear bracket using indicated hardware



(Fig 7) On rear section of the frame, locate the rear threaded inserts

(2) 10mm x 35mm Hex Bolts
(2) 10mm Lock Washers
(2) 10mm Flat Washers

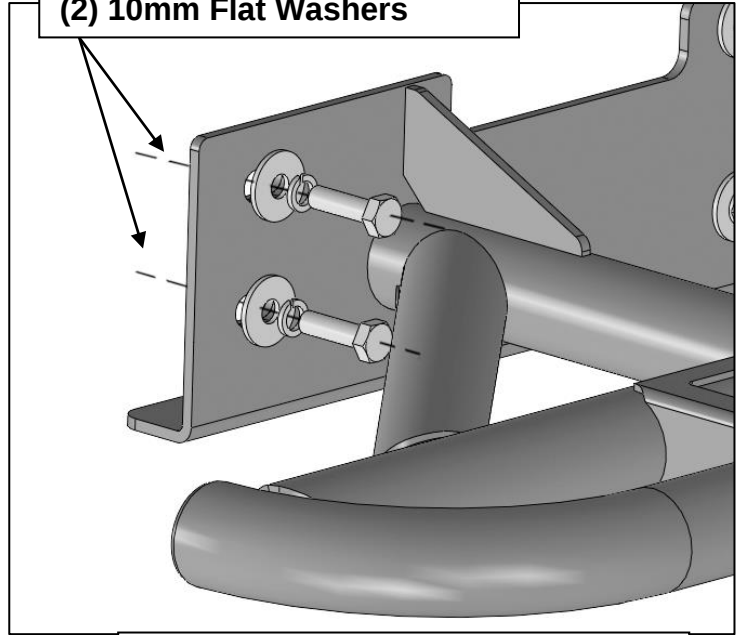

(Fig 8) Mount rear bracket using indicated hardware

2

Ensure Step Slider is leveled and straightened, then fully tighten all hardware. Installation complete. Do periodic inspections to the installation to make sure all hardware is secure and tight.



Installation Complete