


SKY RIDGE - 20021 INSTALLATION INSTRUCTIONS



Parts List

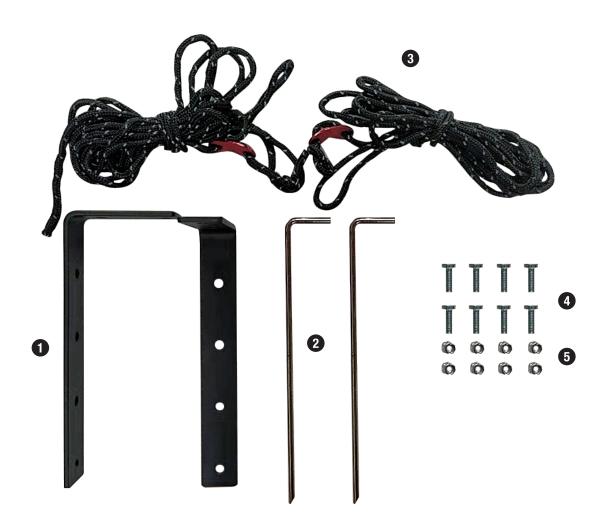

- 1. Mounting Brackets x 2
- 2. Pegs x 2
- 3. Guy Ropes x 2
- 4. Bolts x 8
- 5. Nylock Nuts x 8





SKY RIDGE - 20021 INSTALLATION INSTRUCTIONS



The Sky Ridge Awning has been designed to fit most roof rack and roof bar systems, horse floats, camper trailers and many other applications. This versatile product will give you many years of trouble-free service providing you follow these simple mounting, operating and care instructions.

Mounting Awning

Step 1. Use supplied supplied 6mm bolts and nylock nuts. The awning should be attached using no less than 4 (6mm) nuts and boltThe extrusion on the back of the awning will hold the head of the 6mm bolts captive.

Step 2. The bolts can be positioned anywhere along the length of the awning to correspond to the most appropriate mounting points.

Step 3. Mount the awning at a suitable height so that the doors of the vehicle can be opened without snagging the bottom of the awning and the legs reach the ground when open. We recommend you measure before hand to ensure proper height.





Set Up Instructions

Step 1. Undo the zip on the PVC bag, and release the hook and loop straps holding the awning in place.

Step 2. Release the awning rafter arms from the main aluminum extrusion. Swing both rafter arms slightly more than 90 degrees away from the vehicle.

Step 3. Allow the awning to unroll in your hands to its full length.

Step 4. Release the legs of the awning from inside the front beam. Slide the inner leg tube to the desired height and engage the twist lock of the leg by turning the bottom half of the leg to lock the leg in place.

Step 5. With one hand holding the front beam, extend the rafter arm, and place the arm pin into the corresponding hole in the front beam. Twist the arm to engage the twist lock.









SKY RIDGE - 20021 INSTALLATION INSTRUCTIONS



Set Up Instructions

Step 6. Secure the fabric to the rafter arms using the hook and loop straps.

Step 7. Use the provided rope and stake to secure the legs in case of winds.

Step 8. Pack up is simply the reverse of the above procedure.





Caution

In the event of rain ensure that the awning is set to an appropriate angle to allow rainwater to run off and not accumulate on top of the awning.

In windy conditions it is essential that the awning be secured to the ground to prevent damage to the awning and to the vehicle.

Tent Storage

- •If storing the awning off the vehicle, ensure it is packed away completely dry.
- •Be careful not to drag the awning on the ground. This will damage the cover and allow potential water ingress the next time you use your rooftop tent.
- •Do not store directly on concrete floor.

Awning Care

- •Do not expose to petrol, oil or solvents.
- •New poly/cotton fabric will initially experience some weeping through the seams. This will reduce over time as the fabric cures.
- •Well-worn products may be re-proofed using a good quality waterproofing solution. This is highly recommended
- •Dry your products thoroughly before closing them. We recommend you air dry it in between adventures to prevent mildew and mold growth. These can lead to discoloration, foul odor and your tent material to degrade. Mold and mildew are not covered under warranty.
- •Periodically lubricate zipper teeth with non-scented bees wax. Make sure to keep them free from dust and dirt. This will prolong the life of your zippers.
- •To clean your fabric, use a mild detergent and warm water gently applied with a sponge. Rinse with a clean wet sponge and allow to completely air dry before storing.
- •Avoid excess sun exposure to prolong the life of your product. UV rays can degrade fabrics and waterproof coatings. If your product begins to break down, we suggest washing the fabric with a mild detergent and water solution followed by a treatment of a water repellent designed for tents. Consult your local outdoor retailer for other tent fabric care products and use as directed.