


2019-2023 DODGE RAM 1500 CREW CAB (NEW BODY STYLE) AMBUSH SIDE STEPS PART #DG-4200

PARTS LIST:

1	Driver/left side Ambush Side Step	24	10mm x 20mm x 2mm Flat Washers
1	Passenger/right side Ambush Side Step	12	10mm Nylon Lock Nuts
6	Mounting Brackets (use for left or right)	18	8mm x 24mm x 2mm Flat Washers
12	10mm x 30mm Hex Bolts	18	8-1.25mm Nylon Lock Nuts

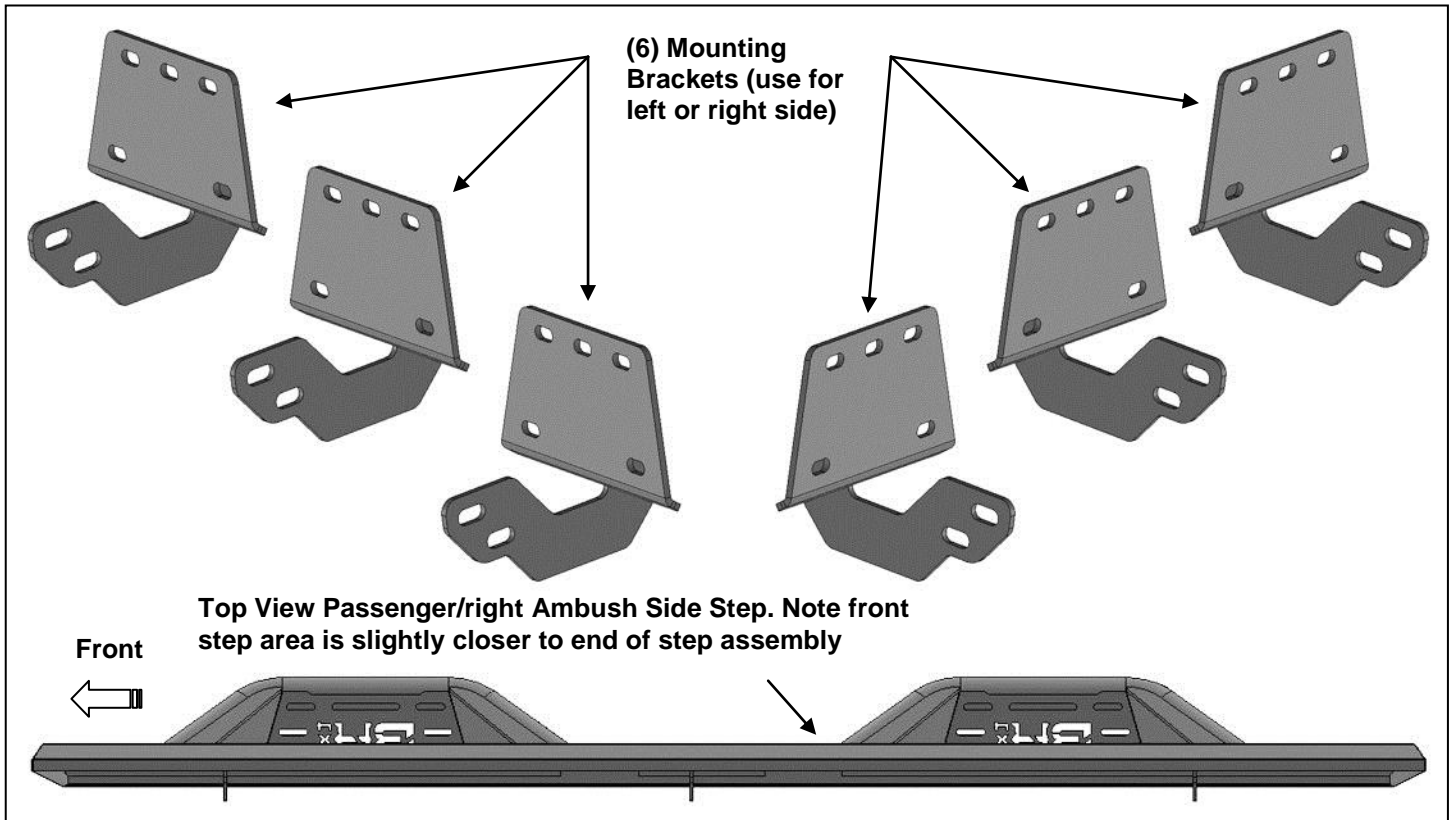

PROCEDURE:


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

1. Start the installation under the passenger/right side of the vehicle. Locate the front (3) factory studs along the inner side of the body panel, **(Figure 1)**. **IMPORTANT:** Remove any undercoating or paint from threads before installing Brackets.
2. Select (1) Mounting Bracket. **NOTE:** All (6) Brackets are universal and will fit left or right side. Attach the Mounting Bracket to the (3) factory studs with (3) 8mm Flat Washers and (3) 8mm Nylon Lock Nuts, **(Figures 2 & 3)**. Leave hardware loose at this time.
3. Repeat **Steps 1 & 2** to attach (1) Bracket to the center mounting location along the body panel, **(Figures 4 & 5)**.
4. Repeat **Steps 1 & 2** to attach (1) Bracket to the rear mounting location close to the end of the cab, **(Figures 6 & 7)**.
5. Carefully unwrap the Ambush Side Steps and select the Passenger/right side assembly. Use the illustration above to help identify the correct Side Step.


6. With assistance, attach the Side Step to the front facing side of the Brackets with the included (6) 10mm Hex Bolts, (12) 10mm Flat Washers and (6) 10mm Nylon Lock Nuts, **(Figures 8—12)**. Do not tighten hardware at this time.
7. Level and adjust the Side Step as necessary and fully tighten all hardware.
8. Repeat **Steps 1—7** for the Driver/left Ambush Side Step installation.
9. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used also to clean the Ambush Side Step.


Passenger/right Side Installation Pictured

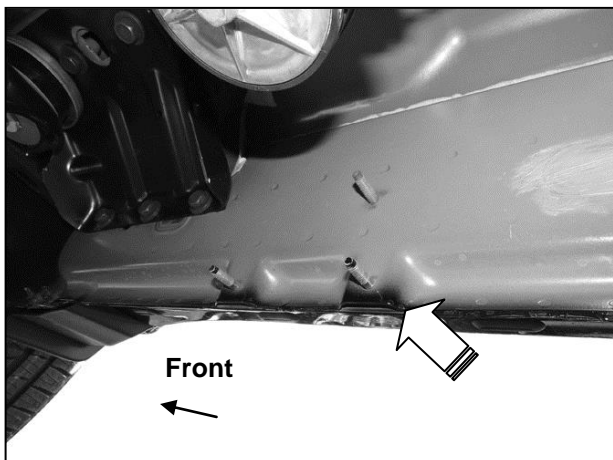


(Fig 1) Passenger/right front mounting location

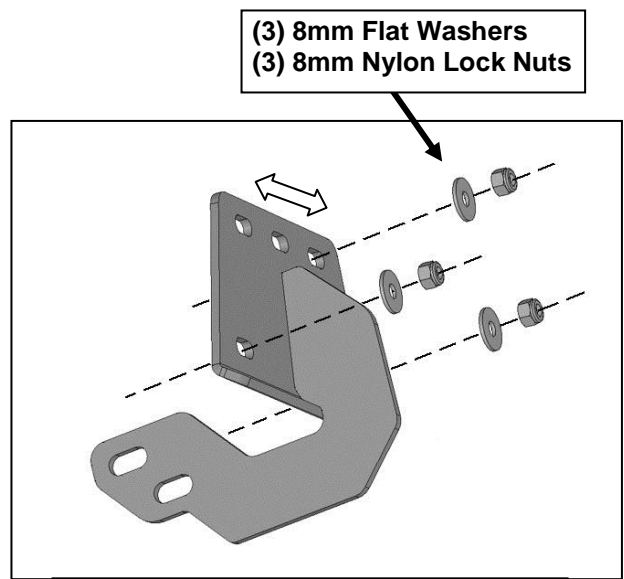

(Fig 2) Attach Bracket to the (3) studs

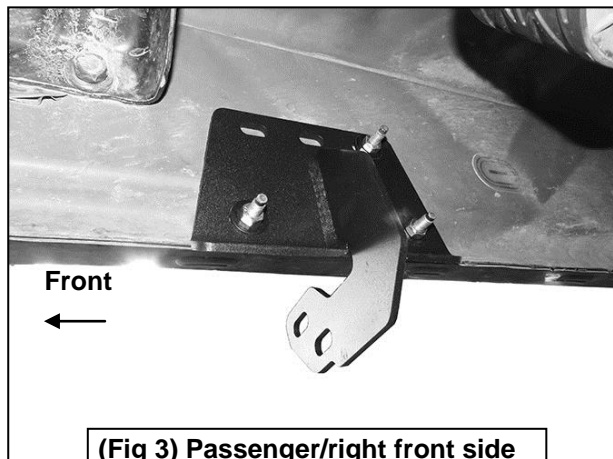


(Fig 3) Passenger/right front side with Mounting Bracket installed

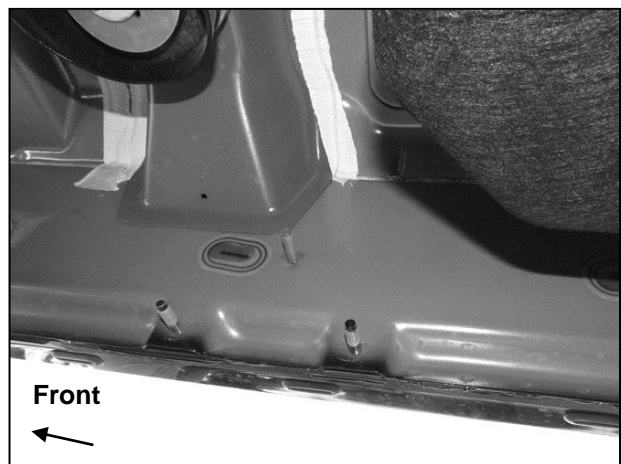

(Fig 4) Passenger/right center mounting location

Passenger/right Side Installation Pictured

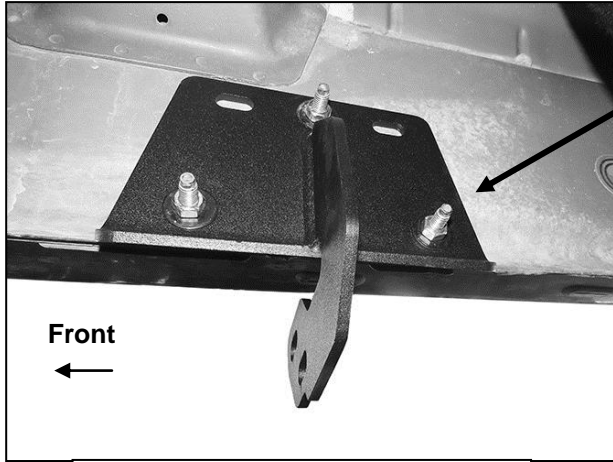


- (3) 8mm Flat Washers
- (3) 8mm Nylon Lock Nuts

(Fig 5) Passenger/right center side with Mounting Bracket installed




(Fig 6) Passenger/right rear mounting location

- (3) 8mm Flat Washers
- (3) 8mm Nylon Lock Nuts

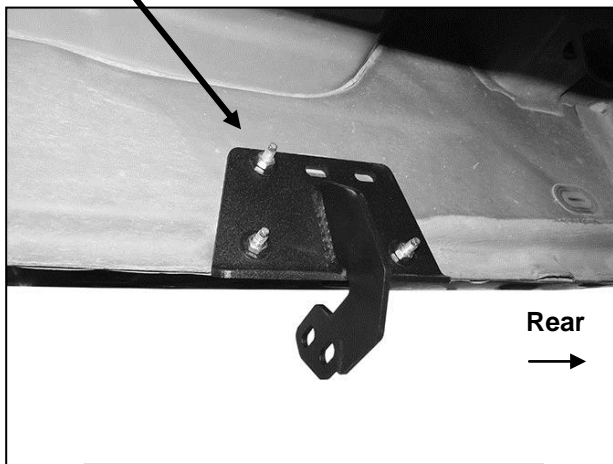

(Fig 7) Passenger/right rear side with Mounting Bracket installed

- (2) 10mm Hex Bolts
- (4) 10mm Flat Washers
- (2) 10mm Nylon Lock Nuts

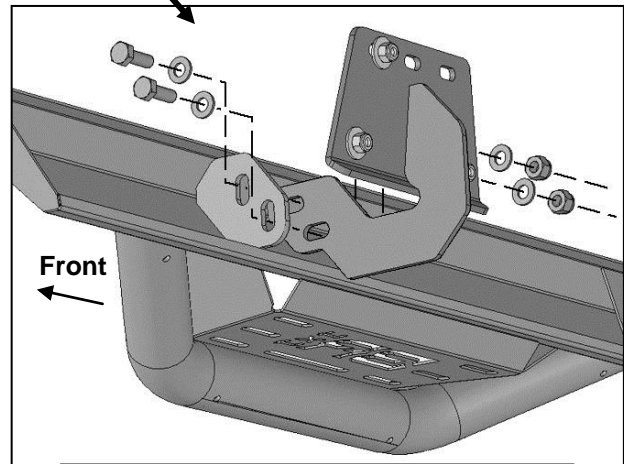


(Fig 8) Attach Side Step to front facing side of front Mounting Bracket

Passenger/right Side Installation Pictured




- (2) 10mm Hex Bolts
- (4) 10mm Flat Washers
- (2) 10mm Nylon Lock Nuts

(Fig 9) Passenger/right Side Step attached to front Mounting Bracket

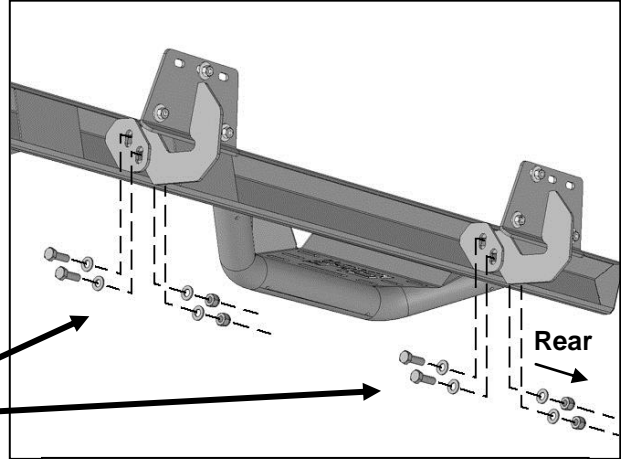

- (2) 10mm Hex Bolts
- (4) 10mm Flat Washers
- (2) 10mm Nylon Lock Nuts

(Fig 10) Attach passenger/right Side Step to center and rear Mounting Brackets

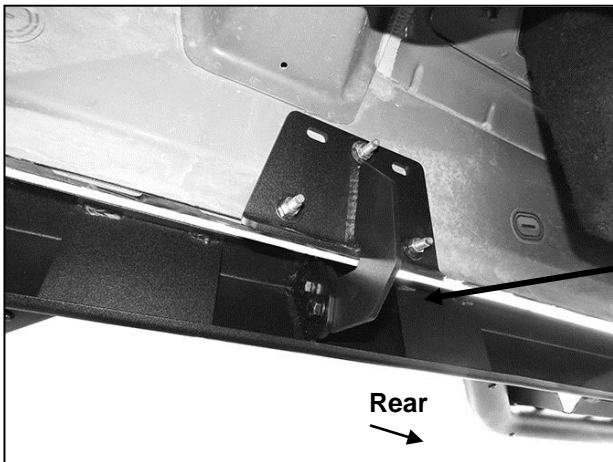

- (2) 10mm Hex Bolts
- (4) 10mm Flat Washers
- (2) 10mm Nylon Lock Nuts

(Fig 11) Passenger/right Side Step attached to center Mounting Bracket



(Fig 12) Passenger/right Side Step attached to rear Mounting Bracket