


## 2018-2023 JEEP WRANGLER JL REAR FENDER LINERS PART #JL-6101

### PARTS LIST:

1	Driver/Left Upper Liner	12	6mm x 18mm OD x 1.6mm Flat Washers
1	Passenger/Right Upper Liner	20	6mm x 12mm OD x 1.6mm Flat Washers
1	Driver/Left Lower Liner	12	6mm Lock Washers
1	Passenger/Right Lower Liner	10	6mm Nylon Lock Nuts
2	6-1.0mm x 30mm Button Head Bolts	6	6mm Clip Nuts
10	6-1.0mm x 25mm Button Head Bolts	2	Spacers
10	6-1.0mm x 15mm Button Head Bolts	1	4mm Hex Wrench

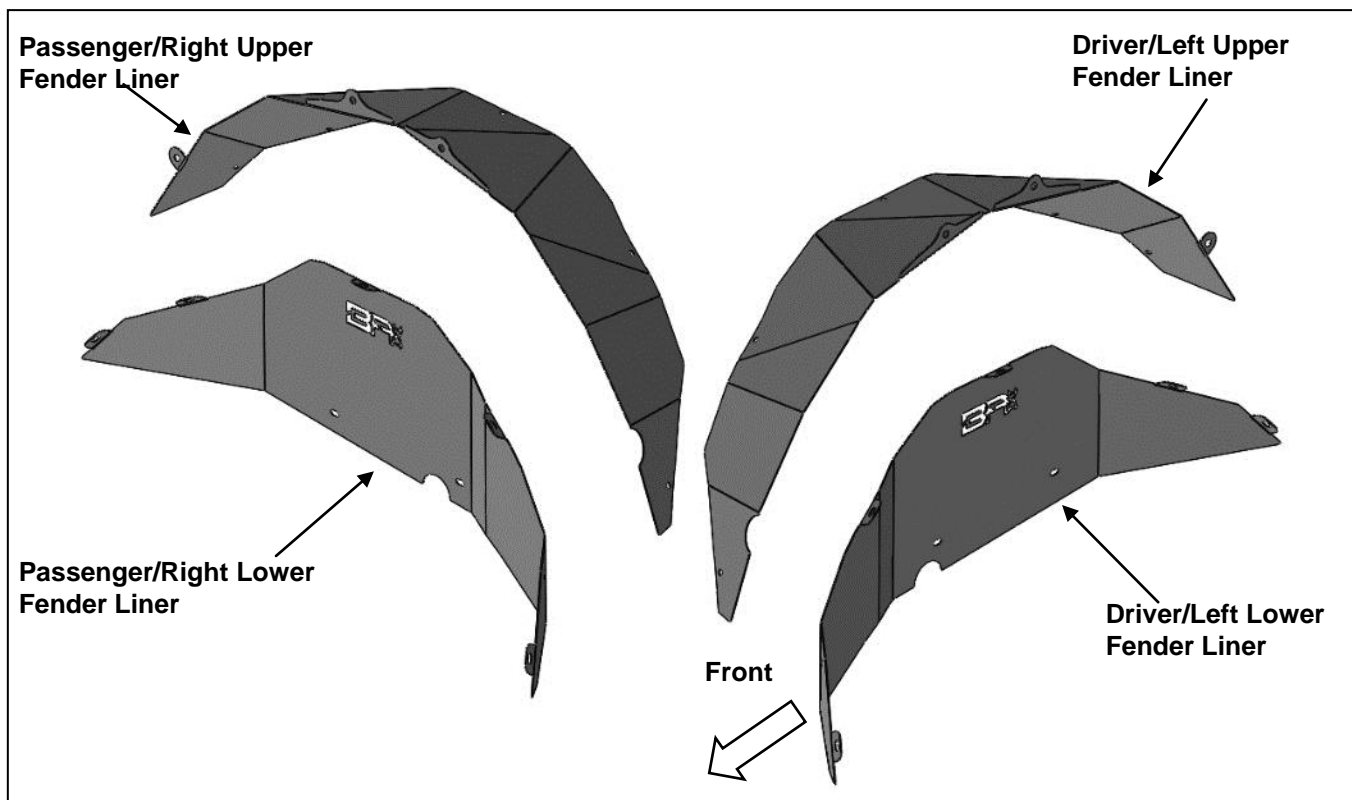

### PROCEDURE:


**REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS RECOMMENDED.**

- Start installation on the Passenger/Right side of the vehicle. Locate the tabs along the bottom of the body above the frame, **(Figure 1)**. **NOTE:** The plastic fender liner attached to these tabs.
- Select (3) 6mm Clip Nuts. Slide the Clip Nuts onto the (3) forward mounting tabs, **(Figures 2 & 4)**.
- Select the Passenger/Right Upper Liner and Lower.
  - Attach the Lower Liner to the Upper Liner with (5) 6mm x 15mm Button Head Bolts, (10) 6mm x 12mm Flat Washers and (5) 6mm Nylon Lock Nuts, **(Figure 5)**.
  - Insert the Fender Liner into position up to the back of the inner body panel.
  - Attach the Upper Fender Liner to the top of the wheel well with (3) 6mm x 25mm Button Head Bolts, (3) 6mm Lock Washers and (3) 6mm x 18mm Flat Washers, **(Figures 3, 6 & 8)**. **NOTE:** It may be easier to install the Fender Liner with the vehicle raised up and/or rear tire removed. Line up the mounting holes in the Fender Liner with the back of the body panel.


- d. Attach the Lower Fender Liner to the (3) Clip Nuts with (1) 6mm x 30mm Button Head Bolt, (2) 6mm x 25mm Button head Bolts, (3) 6mm Lock Washers, (3) 6mm x 18mm Flat Washers and (1) Spacer, **(Figures 4, 7 & 8)**
- 4. Repeat **Steps 1—3** to attach the Driver/Left Fender Liners.
- 5. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment**, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Fender Liners.


### Passenger/Right Side Installation Pictured

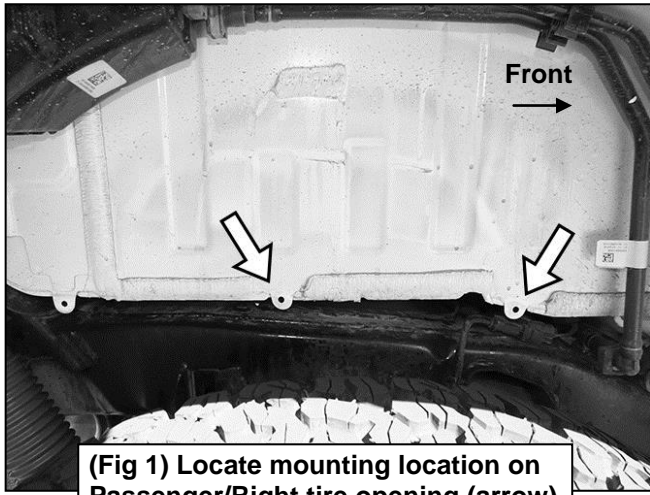


**(Fig 1) Locate mounting location on Passenger/Right tire opening (arrow)**

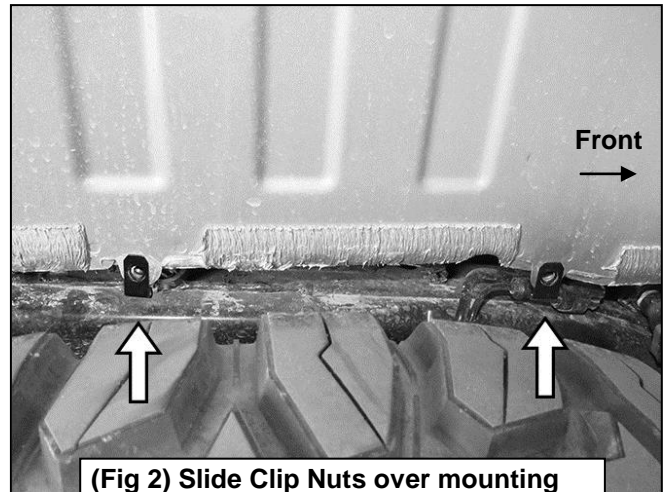

**(Fig 2) Slide Clip Nuts over mounting tabs on bottom of inner body panel (arrows-Passenger/Right side pictured)**

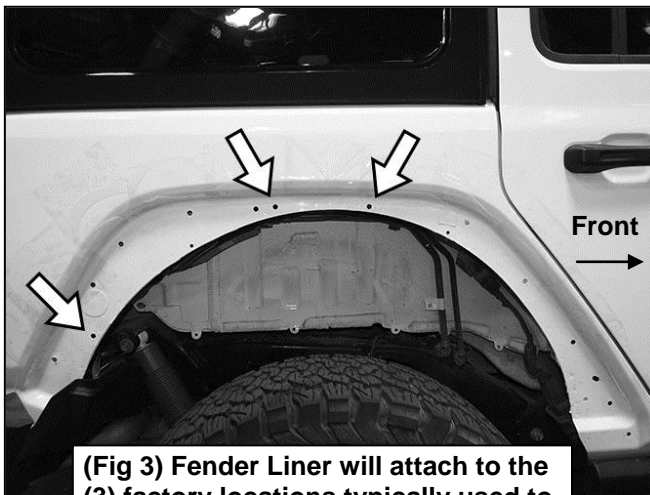


**(Fig 3) Fender Liner will attach to the (3) factory locations typically used to attach aftermarket fenders (arrows)**

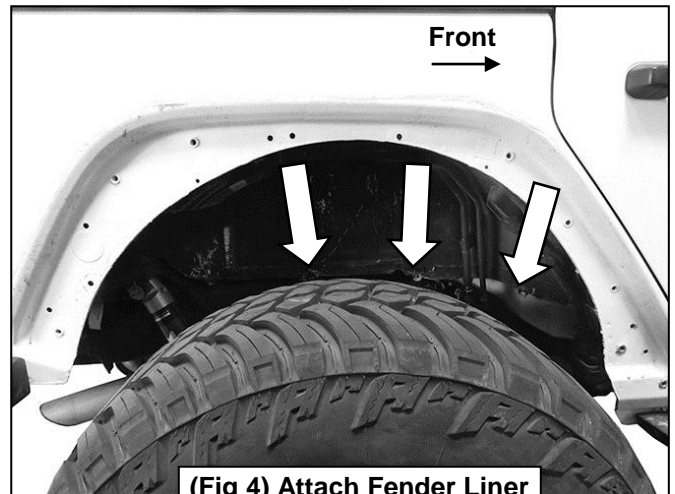

**(Fig 4) Attach Fender Liner to the (3) 6mm Clip Nuts**


Passenger/Right Side Installation Pictured

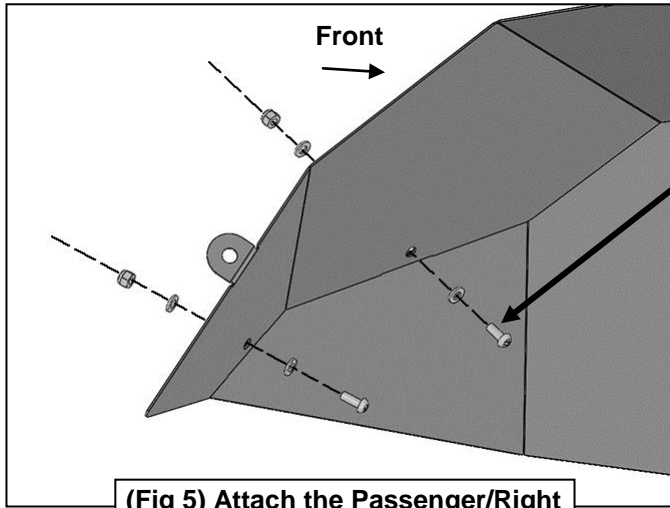

(Fig 5) Attach the Passenger/Right Lower Liner to the Upper Liner


- (2) 6mm x 15mm Button Head Bolts
- (4) 6mm x 12mm Flat Washers
- (2) 6mm Nylon Lock Nuts

- (3) 6mm x 25mm Button Head Bolts
- (3) 6mm Lock Washers
- (3) 6mm x 18mm Flat Washers

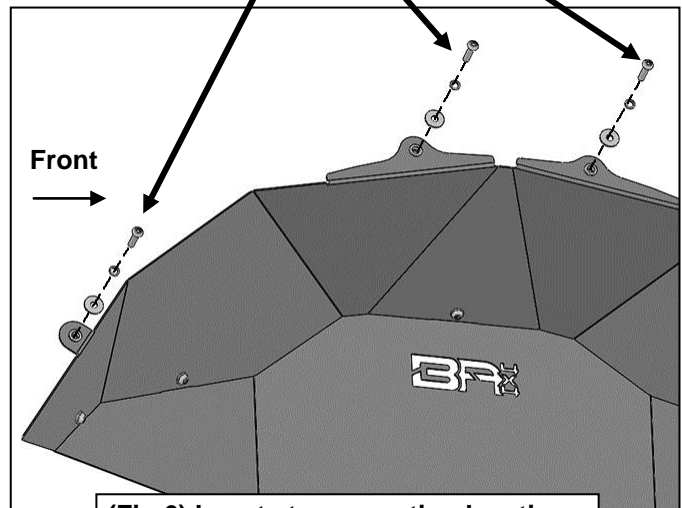


(Fig 6) Locate top mounting locations on bottom of fender supports

- (2) 6mm x 25mm Button Head Bolts
- (2) 6mm Lock Washers
- (2) 6mm x 18mm Flat Washers
- (2) 6mm Clip Nuts

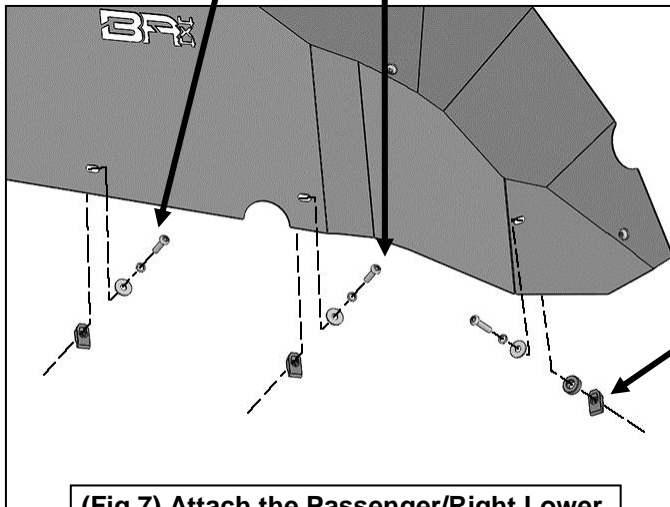

(Fig 7) Attach the Passenger/Right Lower Liner to the frame in the wheel well

- 6mm x 20mm Button Head Bolt
- 6mm Lock Washer
- 6mm x 18mm Flat Washer
- Spacer
- 6mm Clip Nut

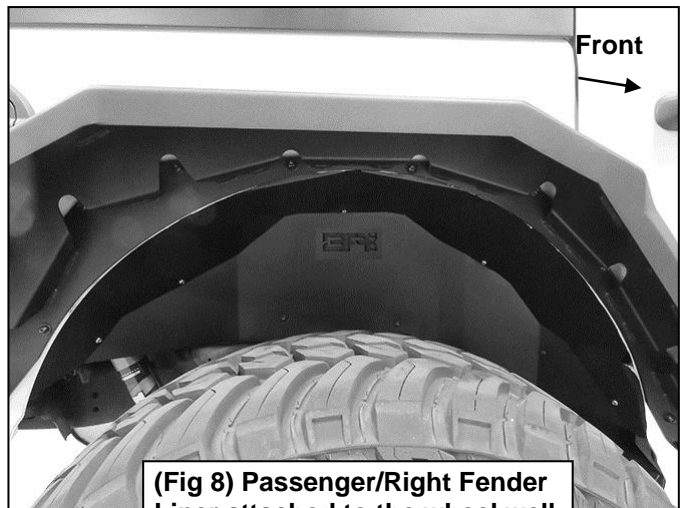

(Fig 8) Passenger/Right Fender Liner attached to the wheel well