







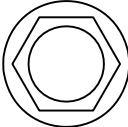
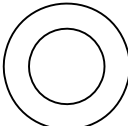


The Crescent Firewood Rack

Thank you for purchasing this quality product, Made in the USA!


Parts List

Letter	Description	Image	Quantity
A	Bottom Section		2
B	Base		2
C	Upper Arc Section		4
D	Lower Arc Section		2
E	Bracket		3
F	$\frac{1}{4}$ " X 2" Stainless Bolt		10
G	$\frac{1}{4}$ " Flange Nut		10
H	$\frac{3}{8}$ " X $3\frac{1}{2}$ " Stainless Bolt		4
I	$\frac{3}{8}$ " Flange Nut		4
J	$\frac{3}{8}$ " Washer		4

The Crescent Firewood Rack


Assembly instructions:

Step 1

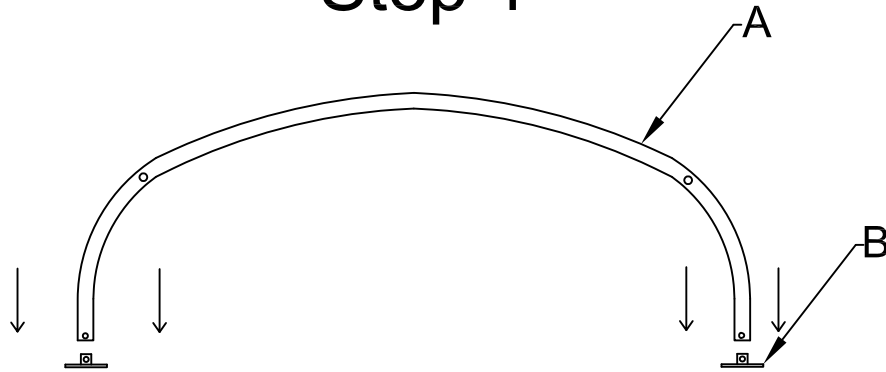

Slide the two bottom sections (A) over the base plate tubes (B) and bolt together using 1/4" Bolts and Nuts (F and G).


Step 2

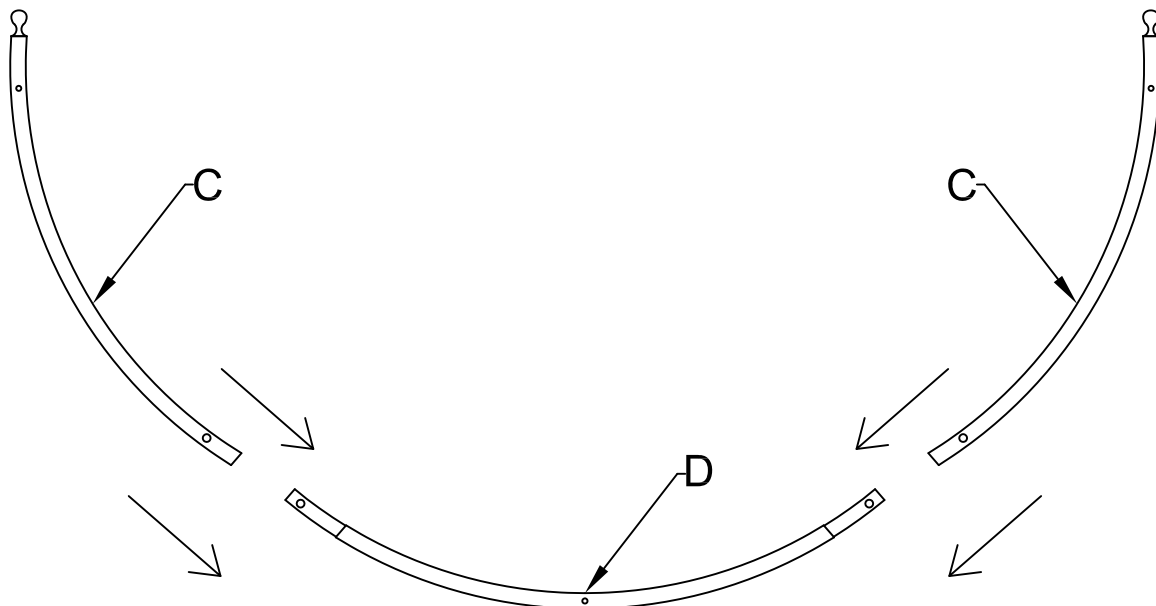

Slide the ends of the upper section (C) over the ends of the bottom of the upper section (D) Do not bolt together.


The Crescent Firewood Rack

Step 3

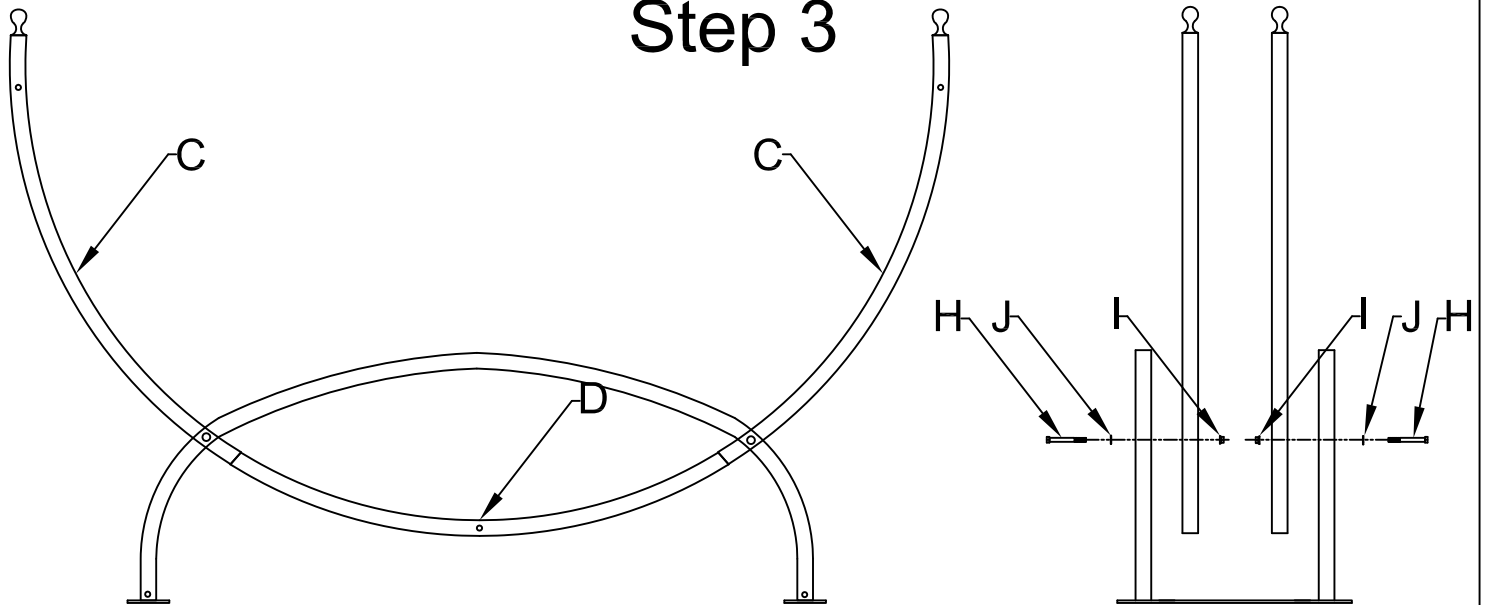

Attach the upper sections (C and D) to the inside of the bottom section (A) using the $\frac{3}{8}$ " bolts, washers, and nuts. Place the bolts and washers on the outside with the nuts inside. These bolts will connect section C to section D as well as the entire upper unit to the bottom section (A).

Step 4

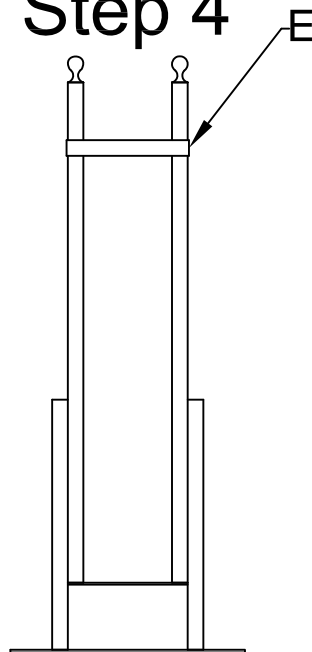

Bolt the spacer straps (E) over the outside of the tubes on both ends of the rack and the bottom using $\frac{1}{4}$ " Bolts (F). Place bolt head on the outside and nut (G) on the inside.