
KINZLY FULL/QUEEN/KING BED ASSEMBLY INSTRUCTIONS




PARTS PACKING CONFIGURATIONS

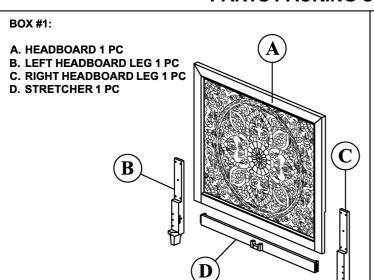

BOX #2:

E. FOOTBOARD 1 PC
J. SLAT ROLL 1 SET

BOX #3:

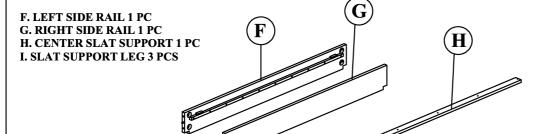

HARDWARE PACKED IN BOX #2

No	Description	Photo	Quantity
1	ALLEN BOLT (M8X40)		12 PCS
2	THREADED BOLT (M8X80)	Componentation	8 PCS
3	HEX NUT (M8)	•	8 PCS
4	HALF MOON WASHER		8 PCS
5	SPRING WASHER (M9)	0	12 PCS
6	FLAT WASHER (M9)	0	12 PCS
7	WOOD SCREW (M4X30)	1	6 PCS
8	SPANNER		1 PC
9	ALLEN KEY		1 PC

KINZLY FULL/QUEEN/KING BED FULLY ASSEMBLED




TOOL REQUIRED PHILLIPS-HEAD SCREWDRIVER (NOT PROVIDED)




KINZLY FULL/QUEEN/KING BED ASSEMBLY INSTRUCTIONS






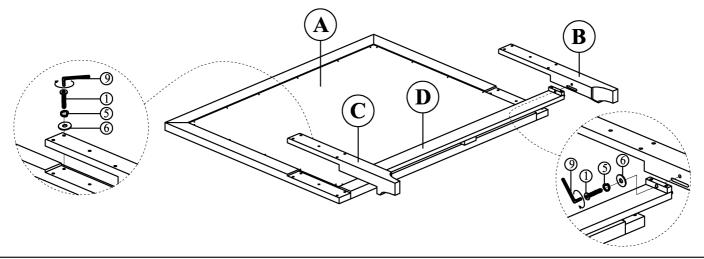

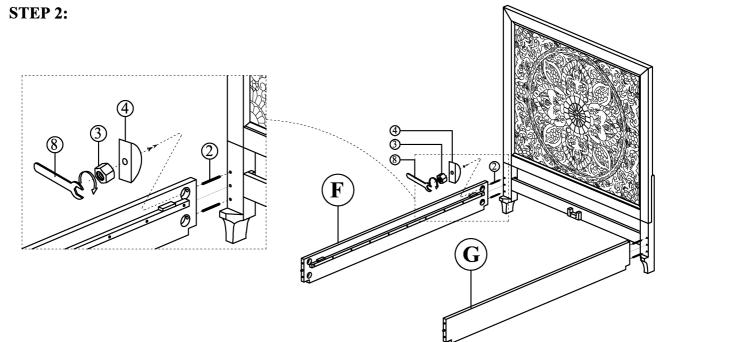




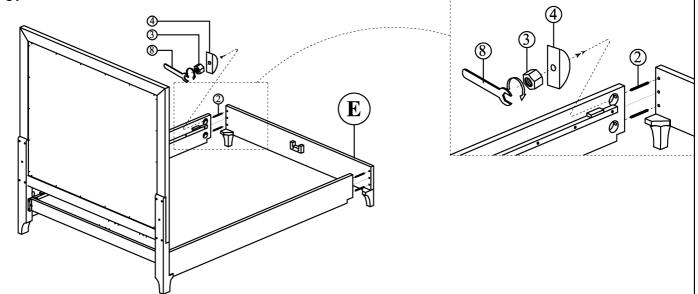


BOHO CHIC FULL/QUEEN/KING BED ASSEMBLY INSTRUCTIONS



STEP 4:

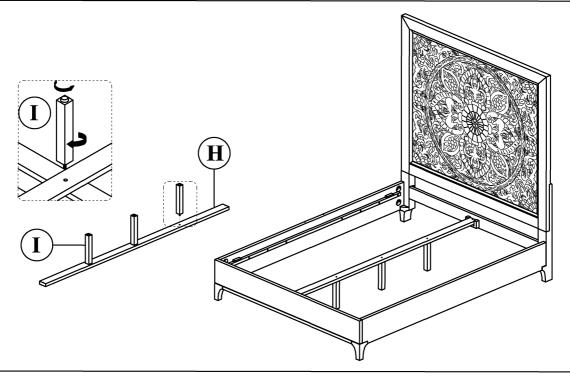


STEP 5:

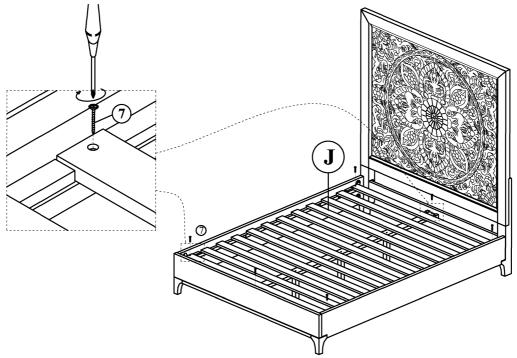

INSTRUCTIONS FOR ADJUSTING LEVELER

POSITION THE BED IN YOUR SPACE AND LOCATE THE LEVELER UNDER EACH SUPPORT LEG. TURN THE LEVELER COUNTER-CLOCKWISE TO EXTEND THE LEVELER AND CLOCKWISE TO RETRACT IT.

ADJUST EACH LEVELER UNTIL EACH SUPPORT LEG IS APPLY EQUAL, UPWARD PRESSURE ON THE SUPPORT SLAT.



MAINTENANCE INSTRUCTIONS:

REMOVE YOUR MATTRESS, AND BOX SPRING IF APPLICABLE, BEFORE MOVING YOUR BED.

LIFT YOUR BED WHEN MOVING IT; DRAGGING CAN DAMAGE THE SUPPORTS.

RE-ADJUST THE LEVELERS AFTER MOVING YOUR BED.