


A diagram of a lever arm. It consists of a long, thin rod pivoted at one end. A weight is attached to the rod at a point between the pivot and the other end. The rod is shown in a vertical position, with the weight hanging below the pivot point.

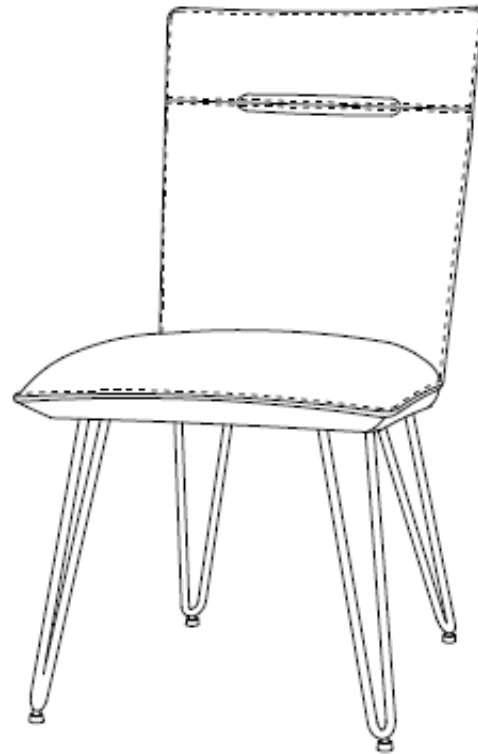

1	THREADED BOLT M8*16MM	12 PC	2	WASHER M6	12 PC	3	ALLEN KEY (4MM)	01 PC
								

Step1:

Attach all four legs (B), (C), (D) and (E) to seat (A), using (1), (2) and (3) as shown below.
Ensure all 12 pairs of bolts and washers are fixed firmly (3 pairs per leg).

