


PAXTON MIRROR

ASSEMBLY INSTRUCTIONS



BOX #1


A. MIRROR 1 PC

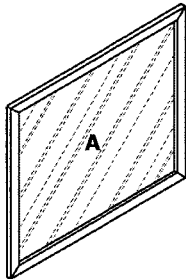

PARTS AND FITTING PACKAGING DETAIL

BOX #2*

B. 6 DRAWER DRESSER 1 PC
C. MIRROR SUPPORT 2 PCS
HARDWARE IN PLASTIC POUCH

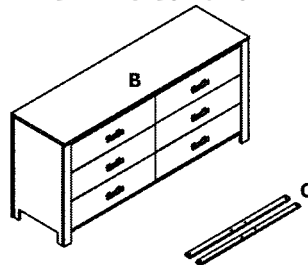

*SOLD SEPARATELY

HARDWARE PACKED IN BOX #2

1	ALLEN BOLT 30MM	8 PCS
2	ALLEN KEY	1 PC

WARNING

FOR YOUR SAFETY AND CONVENIENCE
ASSEMBLY BY TWO PEOPLE IS RECOMMENDED

OPTION 1


FIXING MIRROR ON TO WALL

PRE-INSTALLED MIRROR BRACKETS ARE TEARDROP SHAPED.
TEST CONNECTION BETWEEN MIRROR BRACKETS AND MOUNTING
HARDWARE BEFORE INSTALLATION FOR A SECURE FIT.

INSTALL MOUNTING HARDWARE ON THE WALL. MAKE SURE
THE DISTANCE BETWEEN MOUNTING HARDWARE CENTERS
ON THE WALL MATCHES THE DISTANCE BETWEEN BRACKET
CENTERS ON THE MIRROR.


**CAUTION: WE RECOMMEND INSTALLING MOUNTING
HARDWARE IN WALL STUDS OR A BOARD THAT IS
SECURED TO STUDS. CONSULT A PROFESSIONAL
INSTALLER BEFORE INSTALLING IN DRYWALL.**

HANG THE MIRROR FROM THE MOUNTING HARDWARE.
ENSURE THE TEARDROP BRACKETS HAVE CAUGHT THE
MOUNTING HARDWARE.

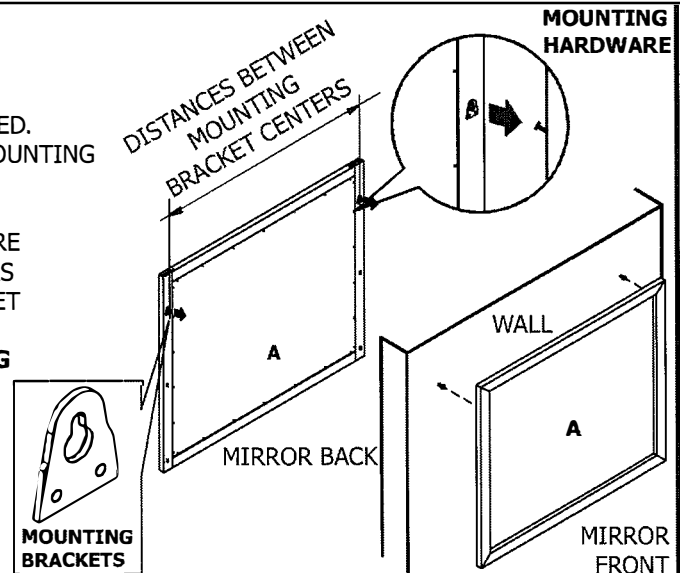


OPTION 2

FIXING MIRROR ON TO 6 DRAWER DRESSER

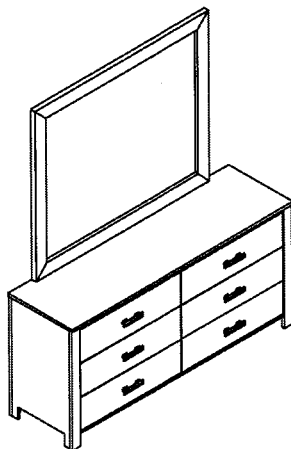

STEP 1 :

USE PILOT HOLES AS REFERENCE
TO CONNECT MIRROR (A) & MIRROR
SUPPORT (C) USING ALLEN BOLTS (1).
TIGHTEN THE BOLTS USING ALLEN
KEY (2). REPEAT THE STEP FOR
SECOND MIRROR SUPPORT.

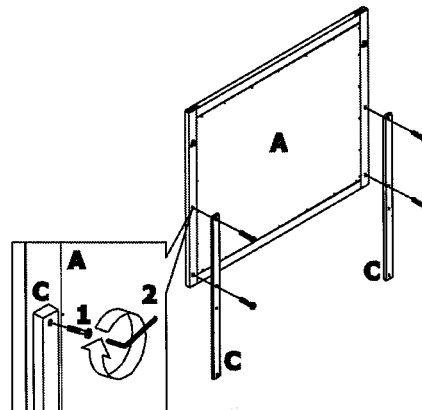

STEP 2 :

FOLLOW THE ILLUSTRATION TO FIX
MIRROR (A) TO 6 DRAWER DRESSER (B)
USING ALLEN BOLTS (1) ON MIRROR
SUPPORT FROM BACK SIDE, USE PILOT
HOLES AS REFERENCE FOR EASY
ASSEMBLY. TIGHTEN THE BOLTS
USING ALLEN KEY (2).

