


PAXTON STORAGE BED QUEEN/KING ASSEMBLY INSTRUCTIONS



PARTS AND FITTING PACKAGING DETAIL


BOX #1

- A. HEADBOARD 1 PC
B. FOOTBOARD 1 PC

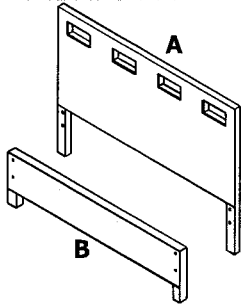


BOX #2

- C. LEFT SIDERAIL 1 PC
D. RIGHT SIDERAIL 1 PC
E. CENTER SLAT 1 PC
F. LEG SUPPORTS 4 PCS
HARDWARE BOX*

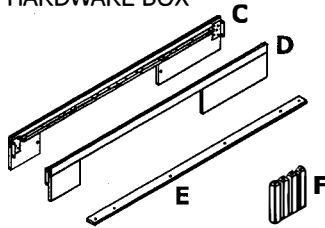


BOX #3

- G. STORAGES 2 PCS
H. STORAGE FEETS 12 PCS

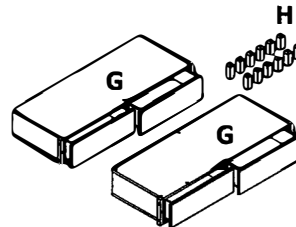


BOX #4

- I. BED SLATS 12 PCS

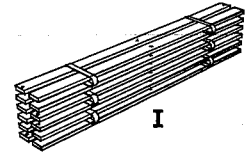


TOOL REQUIRED:



PHILLIPS HEAD SCREW
DRIVER (NOT PROVIDED)

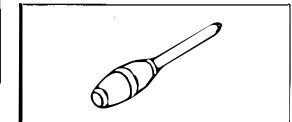

PAXTON STORAGE BED ASSEMBLED

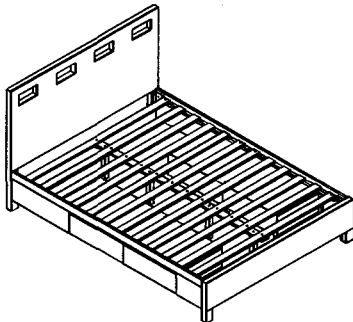



HARDWARE* PACKED IN BOX #2

1	PHILLIPS HEAD BOLTS 20MM	8	PCS	2	WOOD SCREWS Ø8X30MM	8	PCS	3	ALLEN KEY	1	PC
											
4	ALLEN BOLTS 40MM	18	PCS	5	WASHERS 8MM	8	PCS				
											
											YOUR BOX MAY CONTAIN EXTRA HARDWARE

STEP 1 :


FIX LEFT SIDERAIL (C) TO THE
HEADBOARD (A) USING PHILLIPS HEAD
BOLTS (1) AND WASHERS (5).

DO NOT TIGHTEN BOLTS COMPLETELY
UNTIL ASSEMBLY IS COMPLETED

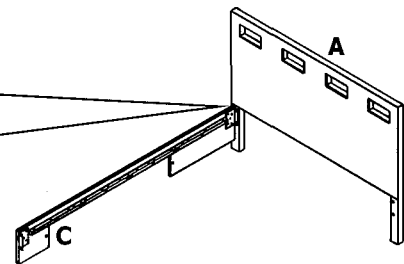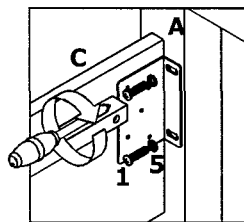


STEP 2 :

FIX THE OTHER END OF LEFT
SIDERAIL (C) TO THE
FOOTBOARD (B).

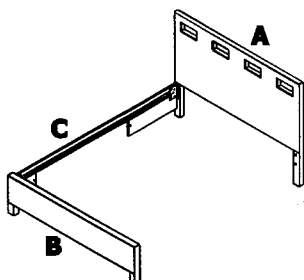


STEP 3 :

FIX RIGHT SIDERAIL (D)
TO THE HEADBOARD (A)
AND FOOTBOARD (B).

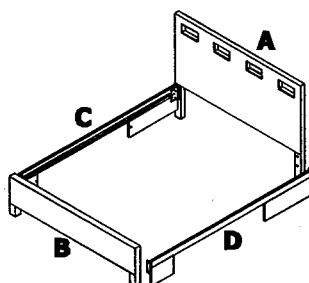


STEP 4 :

REMOVE PLASTIC COVER FROM STORAGE
FEETS (H) BOLT. FOLLOW THE ILLUSTRATION
TO FIX STORAGE FEETS (H) TO STORAGE (G).

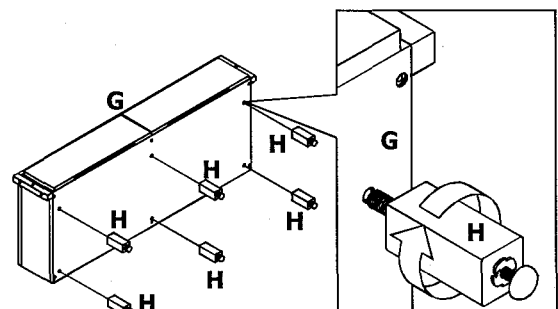

STEP 5 : Place (G) inside in frame.


FOLLOW THE ILLUSTRATION TO FIX STORAGE (G) TO LEFT SIDERAIL (C) USING ALLEN BOLTS (4). USE ALLEN KEY (3) TO TIGHTEN THE BOLTS.

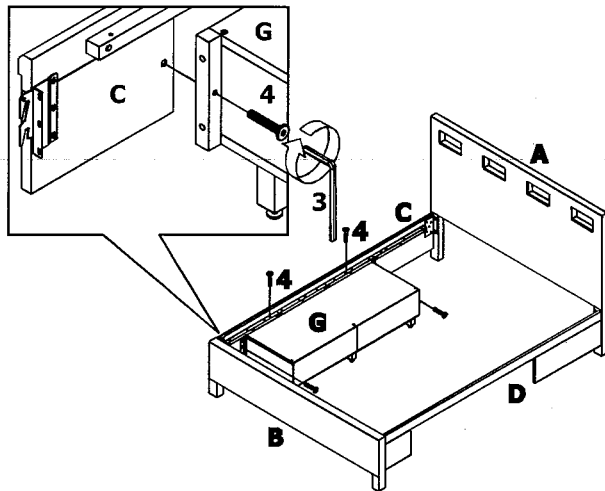

STEP 6 :


FIX STORAGE (G) TO RIGHT SIDERAIL (D) USING ALLEN BOLTS (4).

TURN LEVELER UNDERNEATH STORAGE FEET (H) TO ADJUST THE STORAGE (G) LEVEL AS SHOWN ON ILLUSTRATION.

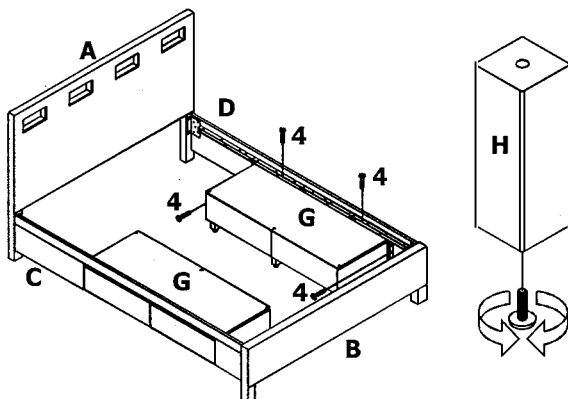

STEP 7 :


ARRANGE CENTER SLAT (E) SO THAT T-NUTS ARE FACING THE FLOOR. SLIDE ALLEN BOLTS (4) FROM TOP OF CENTER SLAT (E) INTO THE 2ND, 5TH, 6TH, AND 9TH PREDRILLED HOLES. FIX CENTER LEGS (F) TO CENTER SLAT (E) USING ALLEN BOLTS (4) AND ALLEN KEY (3).

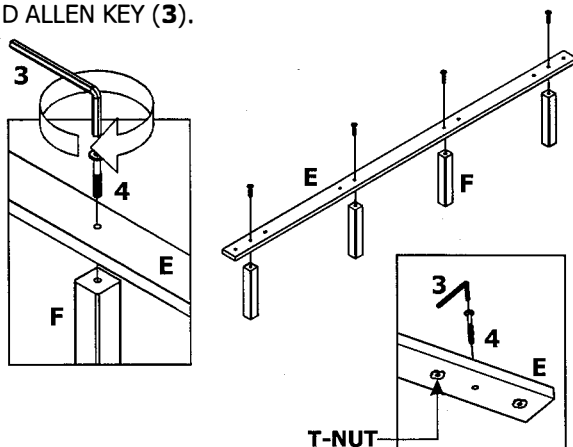

UPDATED :NOVEMBER 23TH, 2010


STEP 8 :

FOLLOW THE ILLUSTRATION TO SPREAD OUT ALL THE BED SLATS (I). SLIDE CENTER SLAT (E) UNDER BED SLATS (I). SLIDE ALLEN BOLTS (4) FROM TOP OF BED SLATS (I) THROUGH PRE-DRILLED HOLES ON 1ST, 2ND, 5TH, 8TH, 11TH AND 12TH BED SLATS. TIGHTEN ALLEN BOLTS (4) WITH ALLEN KEY (3) TO SECURE BED SLATS (I) TO CENTER SLAT (E).

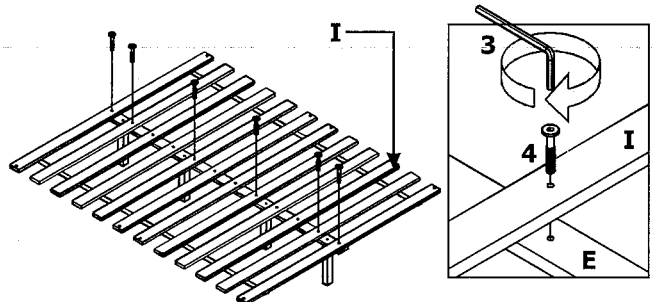

STEP 9 :

FOLLOW THE ILLUSTRATION TO PLACE THE BED SLATS (I) ON THE BED FRAME. SPREAD BED SLATS (I) ON BED FRAME. FIX 1ST, 6TH, 7TH, AND 12TH BED SLATS TO BED FRAME USING WOOD SCREWS (2). USE PILOT HOLES ON SIDERAILS (C,D) AS REFERENCE FOR CORRECT PLACEMENT.

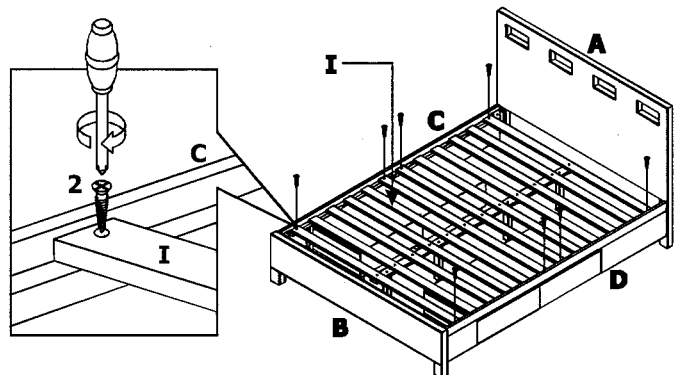


INSTRUCTIONS FOR ADJUSTING LEVELERS:

POSITION THE BED IN YOUR ROOM
LOCATE LEVELERS UNDER EACH
CENTER LEG (E).

TURN COUNTER-CLOCKWISE TO
EXTEND, CLOCKWISE TO CONTRACT.

ADJUST LEVELERS UNTIL EACH LEG
IS APPLYING EQUAL UPWARD
PRESSURE ON THE CENTER SLAT.

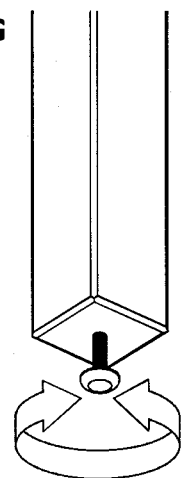

MAINTENANCE INSTRUCTIONS:

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.