


ASSEMBLY INSTRUCTIONS

GANGWAY BUMPOUT MOUNT - OPTION

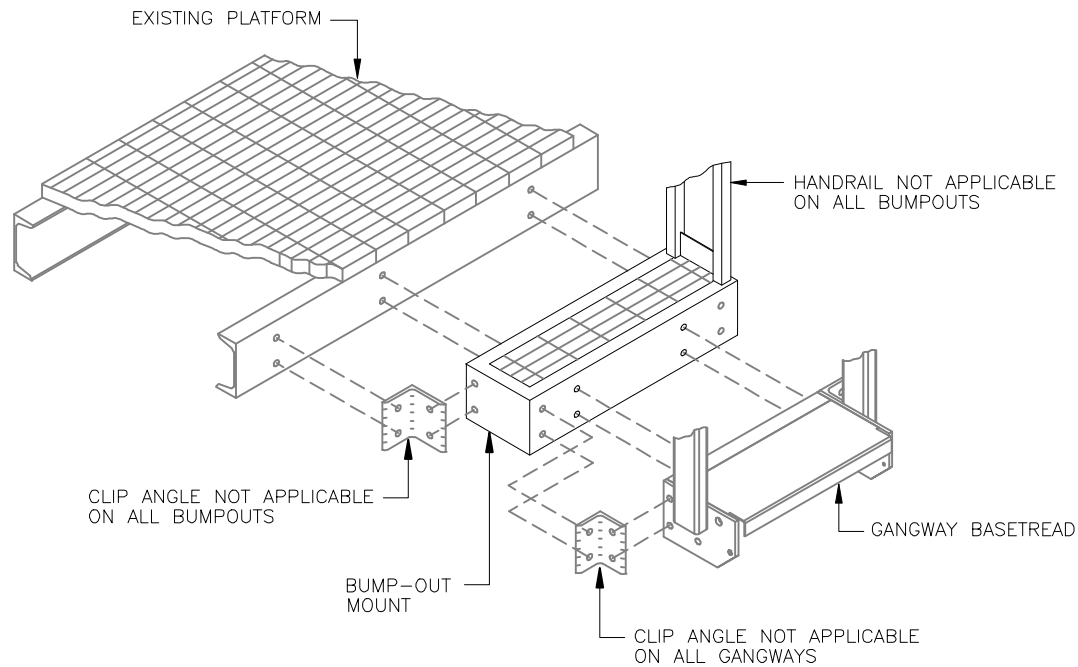

NOTE:
MOUNTING IS TYPICAL
EACH SIDE OF GANGWAY

INSTALLATION:

- 1 - FIELD DRILL EXISTING PLATFORM TO ACCEPT BUMP-OUT MOUNT AS SHOWN.
- 2 - USE APPROPRIATE LENGTH $\frac{3}{4}$ " BOLTS TO CONNECT BUMP-OUT MOUNT TO PLATFORM.
- 3 - RAISE GANGWAY TO CONNECT TO BUMPOUT MOUNT.
- 4 - VERIFY GANGWAY IS PLUMB AND SQUARE.
- 5 - GANGWAY AND BUMP-OUT MOUNT WALK SURFACES SHOULD BE LEVEL WITH PLATFORM WALK SURFACE.
- 6 - TIGHTEN AND TORQUE ALL CONNECTIONS (SEE TIGHTENING/TORQUING GUIDE IN MANUAL)