

ASSEMBLY INSTRUCTIONS - Bumpout

Bumpout Platform:


HARDWARE NEEDED:

- (4) 1/2" X 3" S/S BOLTS
- (4) 1/2" X 1-1/2" S/S BOLTS
- (8) 1/2" S/S NYLOCK NUTS
- (16) 1/2" S/S FLAT WASHERS

WARNING:
FOR SAFETY, DON'T STAND ON TOP PLATFORM TO ATTACH
BUMPOUT WITHOUT ADDITIONAL FALL PROTECTION

NOTE FOR LARGE EXTENSION:

FOR 36" PLATFORM EXTENSIONS, THE
LOAD CAPACITY FOR THE M3-MAUI
UNIT IS REDUCED TO 300# CAPACITY.

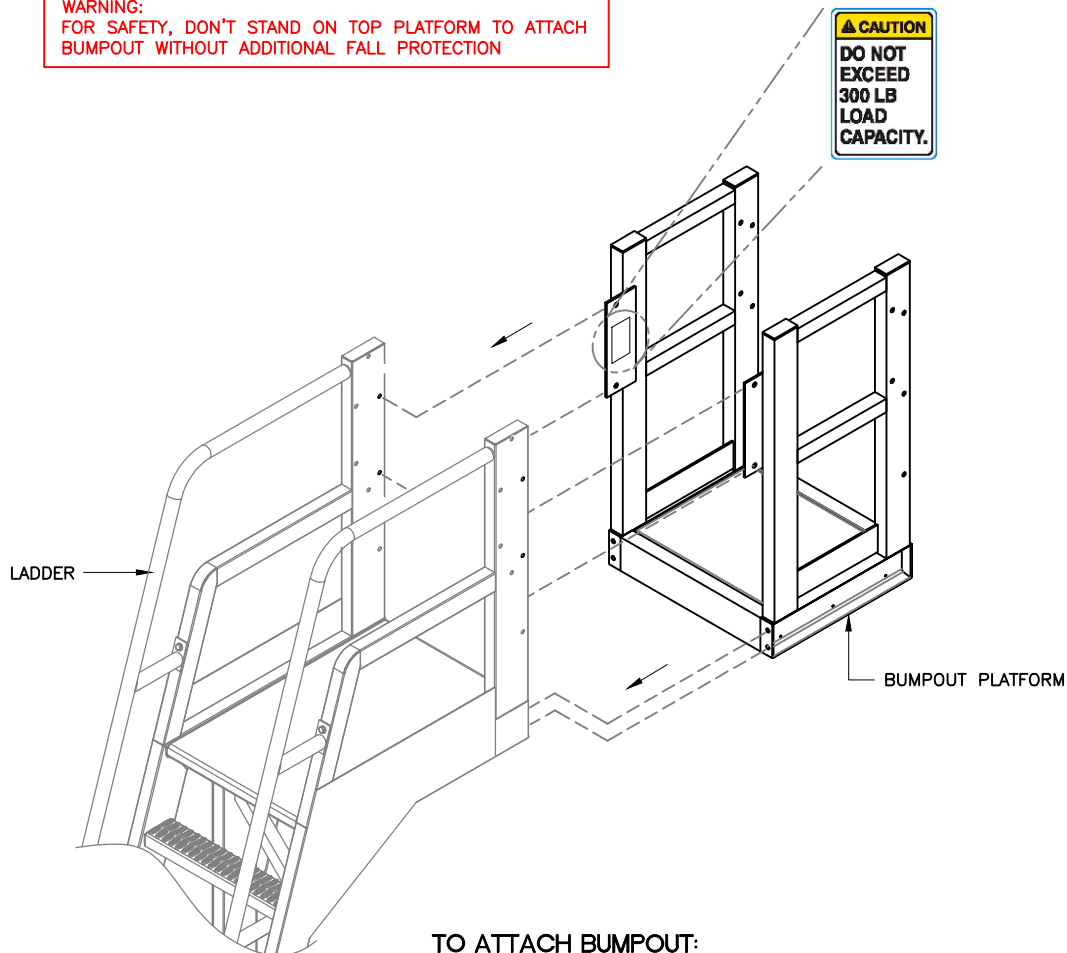

TO ATTACH BUMPOUT:



- 1) LIFT BUMPOUT UP TO LADDER USING CRANE OR FORKLIFT.
- 2) ALIGN HOLES IN BUMPOUT BRACKET WITH HOLES IN LADDER UPRIGHT.
- 3) FASTEN EACH SIDE WITH ONE BOLT TO HOLD IN PLACE.
- 4) MARK THE HOLES IN UNDERSIDE AND DRILL FRONT OF LADDER TO MATCH BUMPOUT PLATFORM.
- 5) USE 1/2"x 3" BOLTS, NUTS AND WASHERS TO ATTACH BUMPOUT TO BRACKET AND 1/2"x 1-1/2" BOLTS, NUTS, AND WASHERS TO CONNECT UNDERSIDE. TIGHTEN ALL CONNECTIONS WITH SOCKET AND WRENCH DURING ASSEMBLY.

NOTE: USE ANTI-SIEZE TO HELP PREVENT S/S HARDWARE FROM GAULLING.

ASSEMBLY INSTRUCTIONS - Bumpout

No hardware needed for assembly.

WARNING:
FOR SAFETY, DON'T USE MODIFIED MAUI UNIT UNTIL
ADDITIONAL COUNTERWEIGHT IS IN PLACE AS SHOWN.

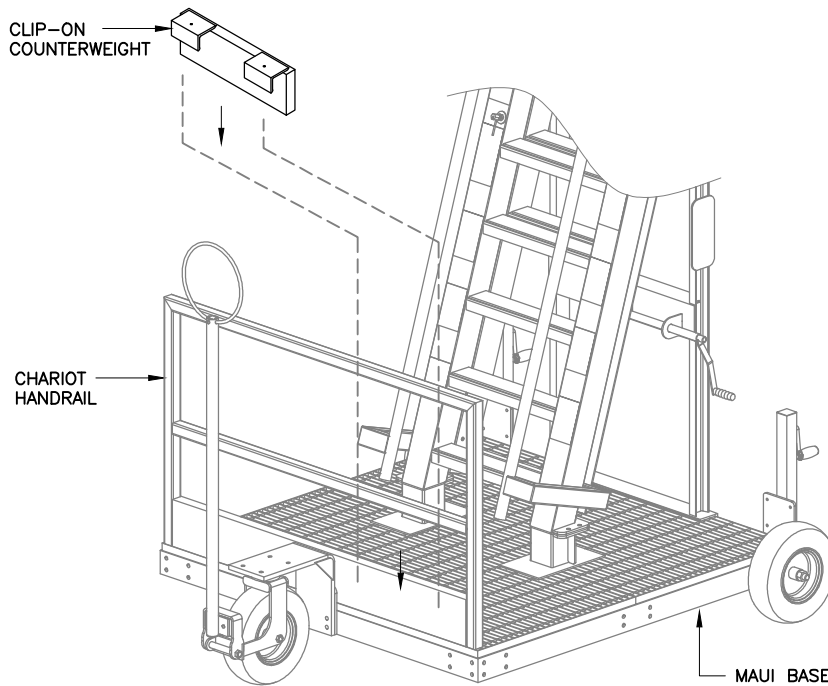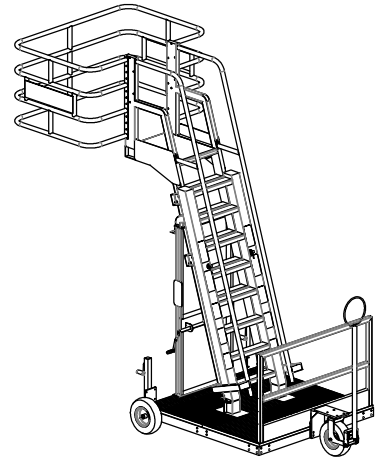

TO ATTACH COUNTERWEIGHT:

POSITION COUNTERWEIGHT CLIPS OVER THE TOP OF THE TOEBOARD OF THE CHARIOT HANDRAIL AS SHOWN AND VERIFY IT IS SECURE IN PLACE.

NOTE:

COUNTERWEIGHT CAN BE POSITIONED ON EITHER SIDE OF CHARIOT HANDRAIL.
(SOME UNITS MAY REQUIRE TWO COUNTERWEIGHTS, 1 EACH SIDE)



SafeRack
LOADING RACK TECHNOLOGIES

**M3 - MAUI
ADD-ON COUNTERWEIGHT**