

UPSIDE INNOVATIONS

— DUAL STEP INSTALLATION MANUAL —



Required Tools & Hardware

- 9/16" standard wrench


- HK0012 OSHA Dual Step Hardware Kit:
(5) 2 1/4" bolts
(5) nuts
(5) flat washers

- HK0014 OSHA Platform Leg Hardware Kit:
(4) 1" bolts
(4) flat washers
(4) split lock washers

For this step, you will need the HK0014 Hardware Kit. To begin, determine the leg height required for the platform at the door.

Step 1: Insert the platform leg, adjust it for the desired height, and insert (1) 1" bolt with 1 flat washer and 1 split lock washer. Then tighten the bolt. Repeat for the remaining platform legs.

Step 2: Insert the platform rail and end rail into the corner pockets of the platform.

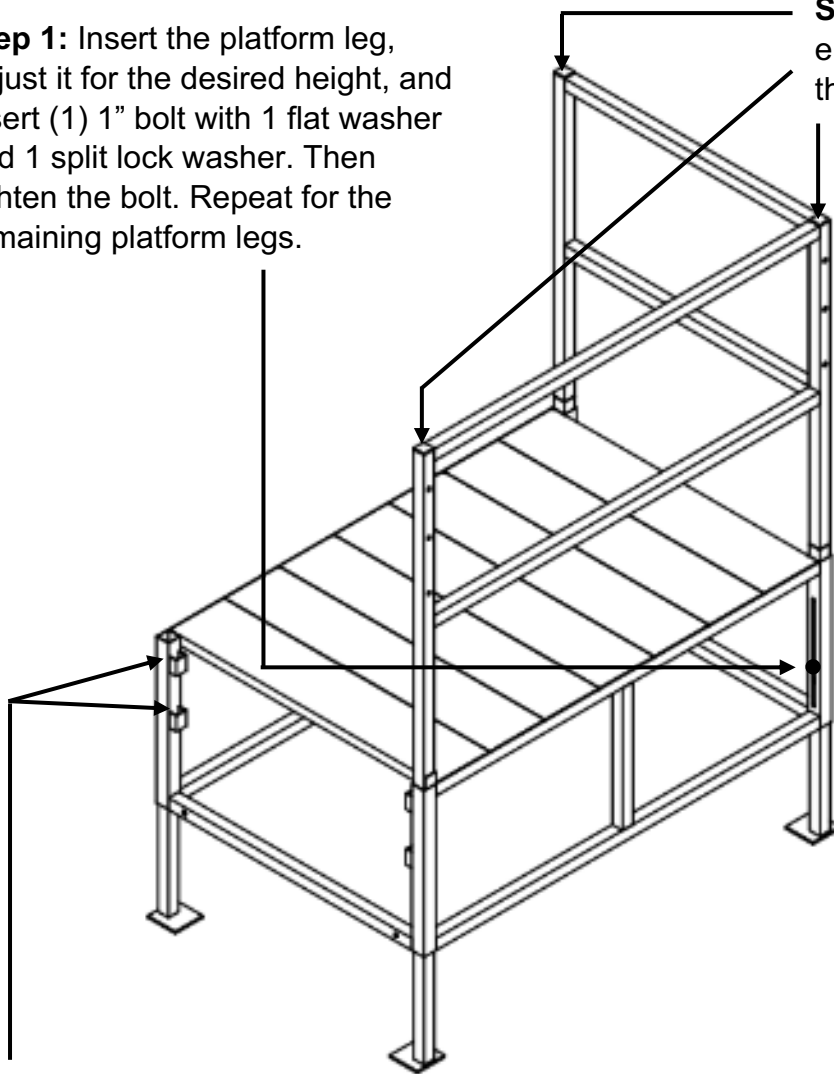


Step 3: Lift the upper end of the step riser and hook it on either the top pocket or bottom pocket. The top pocket will give you the minimum riser height while the bottom pocket will give you the maximum riser height.

After the platform is set and the steps are hooked into either the top pocket or bottom pocket, insert the 2 1/4" bolts to secure steps and handrail.

You will need:

- HK0012 Kit
- (5) 2 1/4" bolts
- (5) nuts
- (5) flat washers

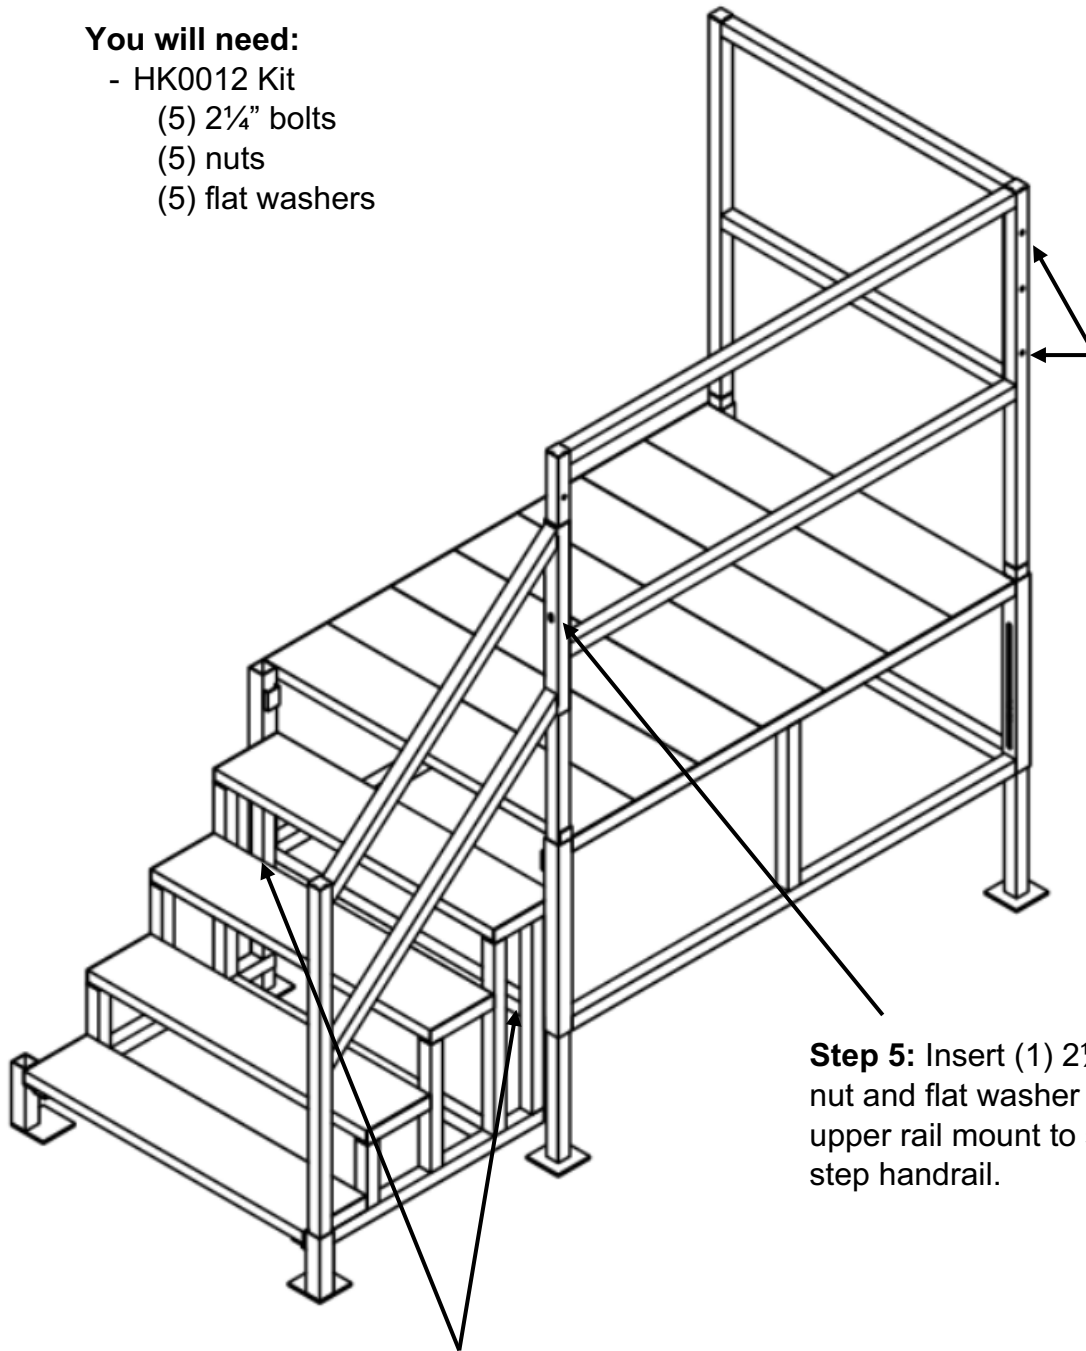

Step 4: Insert (2) 2 1/4" bolts with nuts and 2 flat washers.

Step 5: Insert (1) 2 1/4" bolt with a nut and flat washer into the upper rail mount to secure the step handrail.

Step 6: Insert (1) 2 1/4" bolt with a nut and flat washer on either side of the steps through the mounting bracket on the back side of the step riser.

Part dimensions:

