

ASSEMBLY INSTRUCTIONS

Ladder Handrail

Note: Handrails Are Typically Shipped Pre-mounted On New Units.

7d

Handrail Assembly / Replacement:


HARDWARE NEEDED:

Bolt A

- (2) $\frac{1}{2}$ " X $1\frac{1}{2}$ " PLATED BOLT
(Gripper Head Bolt)

Bolt Assembly B

- (8) $\frac{1}{2}$ " X $1\frac{1}{2}$ " S/S BOLTS
(8) $\frac{1}{2}$ " S/S NYLOCK NUTS
(8) $\frac{1}{2}$ " S/S FLAT WASHERS

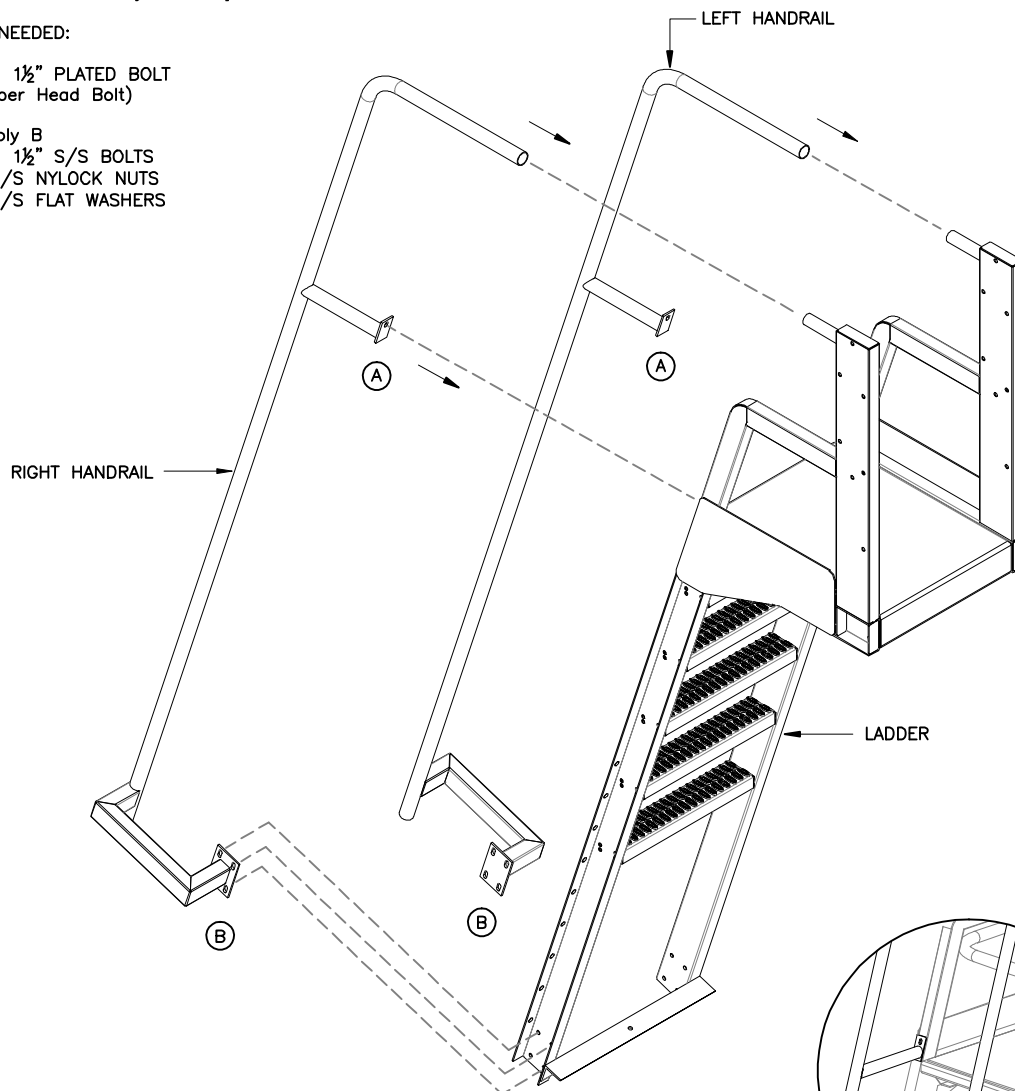

TO ATTACH HANDRAILS:

- 1) FIRST, SLIDE TOP OF HANDRAIL OVER PIPE SOCKET ON PLATFORM UPRIGHT.
- 2) POSITION HANDRAIL INTO PLACE AS SHOWN.
- 3) LOOSELY BOLT ON TOP HANDRAIL BRACKET (BOLT A).
- 4) ALIGN HOLES IN BOTTOM MOUNT BRACKET WITH LADDER SIDERAIL AND BOLT ON USING 4 BOLTED CONNECTIONS (BOLT B).
- 5) TIGHTEN ALL CONNECTIONS SECURELY (BOLTS A AND B).
- 6) REPEAT STEPS 1-5 FOR OTHER HANDRAIL CONNECTION.