



-DO NOT OVER TIGHTEN BOLTS WHEN
CONNECTING PEDAL.

-OVERTIGHTENING WILL CREATE TENSION
AND CRACK THE PEDAL.


-NUT TORQUE REQUIREMENT OF 10 FT/LBS.

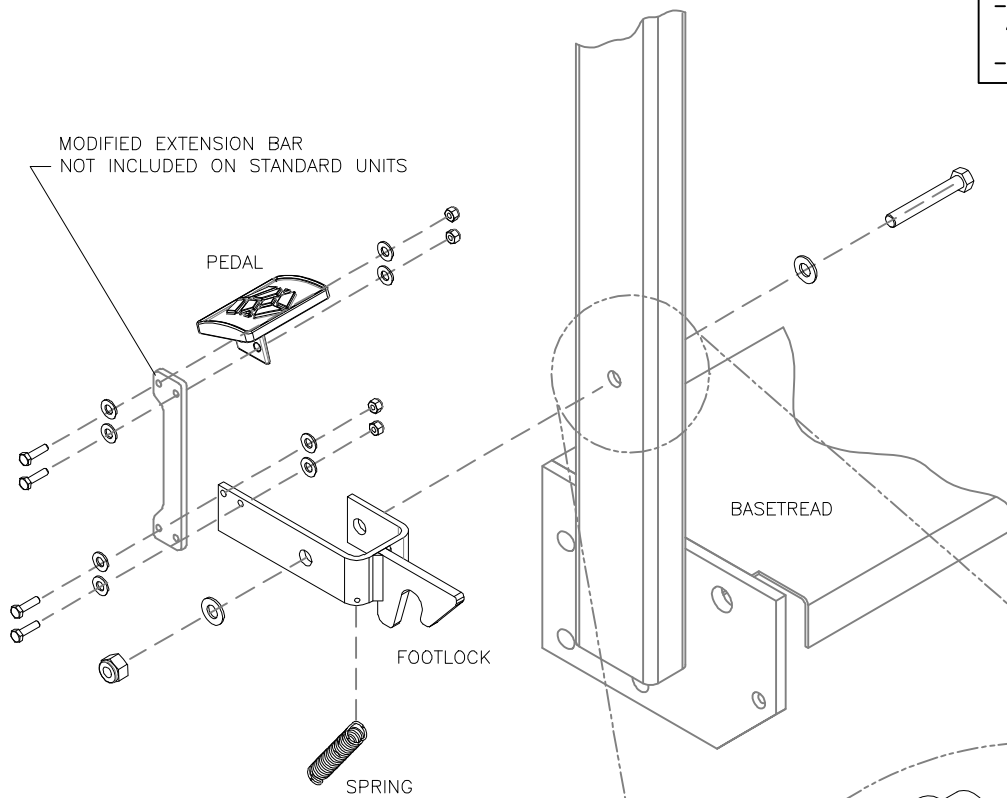

Exploded

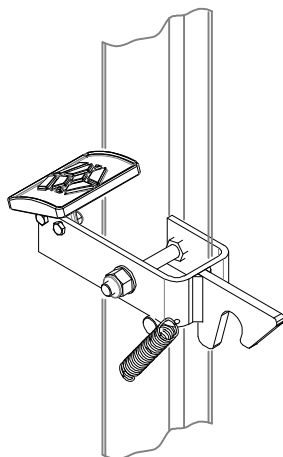

Assembled
(STANDARD FOOTLOCK)

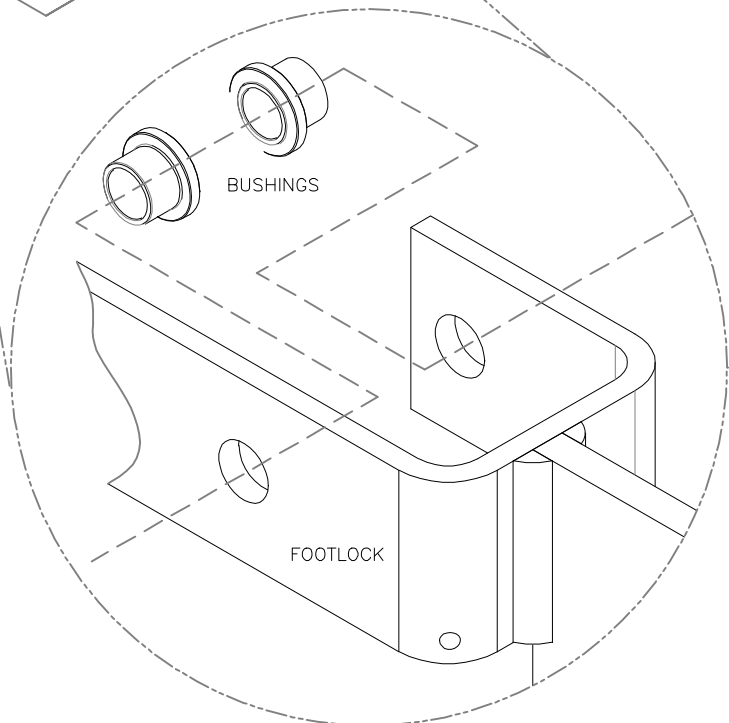

Footlock Bushing Orientation