

# SPOT ON *by* MICHELLE GERSON


When designing a collection with Michelle Gerson, we had a singular goal: express Michelle's distinct approach to design in a tile collection. Enter Game On, a bold return to basic shapes with just the right amount of the unexpected — a collection that is inherently Michelle Gerson. Game On features four joyfully geometric designs; Spot On, Slide, Zip, and Stix, each available as stocked mosaics in array of colorways, and fully customizable in a range of sizes that includes mosaic form and large format tile.




# SPOT ON *by* MICHELLE GERSON




**Multi**  
Background: Veined Volakas | Azul Cielo, Vanilla Onyx, Lilac, Rosa Portogallo, Ming Classico, White Sand

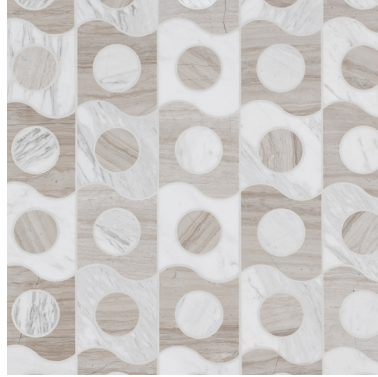

**Cloud**  
Bianco Dolomiti, Cloud Limestone

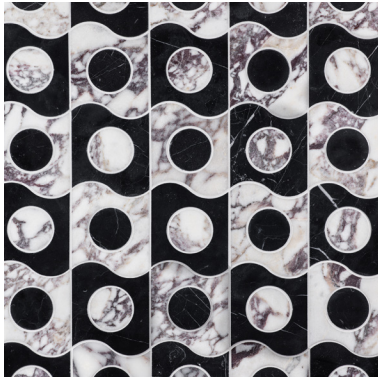

**Viola**  
Calacatta Viola, Nero Marquina

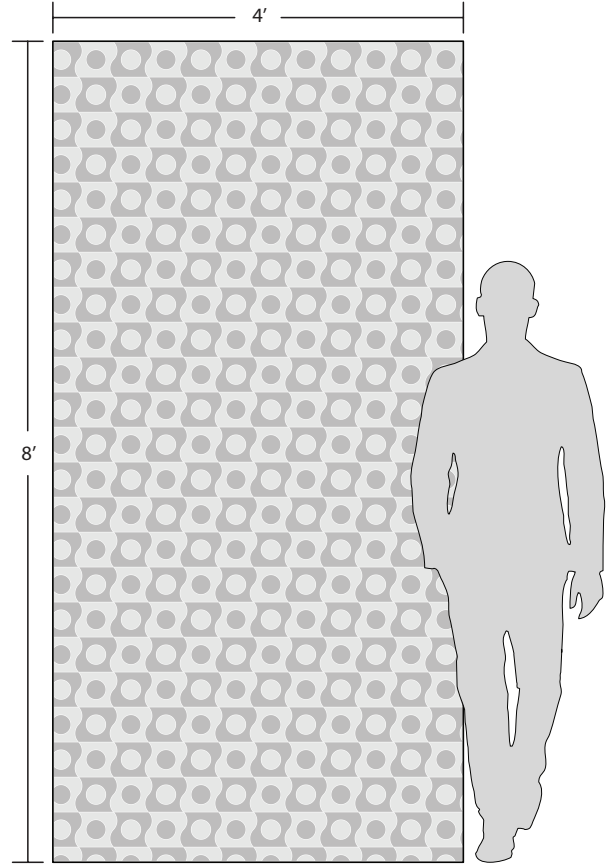

APPLICATIONS									VARIATION				TAILORED TO CUSTOMIZATION
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND	V1	V2	V3	V4	CARPET CUTTING
Commercial Light/Medium	All	Yes, including steam <sup>1</sup>	No	No	Yes, non-freeze thaw	No	Yes	Yes					FIELD
													FINISH
													MOSAIC
													SADDLE
													VANITY TOP
													WATERJET

INSTALLATION/MAINTENANCE										
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT	QR CODE
Ardex X77 White Microtec Fiber Reinforced Mortar <sup>2</sup>	Ardex FG-C Microtec Unsanded <sup>3</sup>	As Established on Sheets	Ardex 8 + 9	Ardex SX Silicone Sealant	AquaMix Sealer's Choice Gold	AquaMix Concentrated Cleaner	TCNA Handbook	Maintain Sheet Orientation	Recommended	

**NOTES**

<sup>1</sup> Showers: Product MUST be installed in accordance with current TCNA Handbook Stone Methods.

<sup>2</sup> Setting material for Spot On Cloud - Ardex N23 White Microtec Rapid Set.  
Alternate Setting material for Spot On Multi, Spot On Viola - Ardex X4 White Tile & Stone Mortar or Mapei Kerabond White w/Keralastic Additive | Spot On Cloud - Mapei Granirapid White 2-part System.

<sup>3</sup> Alternate grout - Mapei Keracolor Unsanded

Tech notes: Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. White mortar is recommended for natural stone. The installation of intricate mosaic patterns may require the use of a mosaic nipper to hand cut pieces along the edge to fit or conduct adjustments throughout the installation. For straight cuts on a tile wet saw clear plastic face tape can be applied to keep the mosaic pieces aligned while cutting. Seal and utilize a grout release prior to grouting.

**AVAILABLE SIZES**

**8.21" X 8.21" X 3/8"**  
*Waterjet Mosaic*  
One Unit (0.47 sf/pc)



# SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone, B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
<ul style="list-style-type: none"><li>• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend.</li><li>• Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes.</li><li>• Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately.</li><li>• Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor.</li><li>• Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area.</li><li>• Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area.</li><li>• Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage.</li><li>• Tap down and level the mosaic sheets with a grout float over the predetermined area.</li><li>• Allow mortar to set, harden, and cure.</li></ul>	<ul style="list-style-type: none"><li>• Wipe up any epoxy residue with sponges and clean water.</li><li>• Note: No soap and no chemicals are needed. Just clean water.</li><li>• Rinse sponges and change the water often.</li><li>• Finally wipe with cool, clean water &amp; clean sponges.</li><li>• Use clean microfiber cloths for final wipe down.</li></ul>

Artistic Tile recommends sealing all natural stones before grouting.