
LEO

Few natural patterns evoke as profound a response as the leopard's distinctive spots. The Leo mosaic, meticulously handcrafted from carefully selected natural stone tesserae, achieves a long-sought milestone in tile and stone artistry: an authentic and timeless representation of the leopard's pelt. Available in two sophisticated colorways—Moca, offering a refined interpretation of the classic motif, and Sea Grey, presenting a deeper, more understated variation—Leo comprises four seamlessly integrated components, ensuring a harmonious and continuous pattern that captivates enthusiasts of this enduring design.




LEO

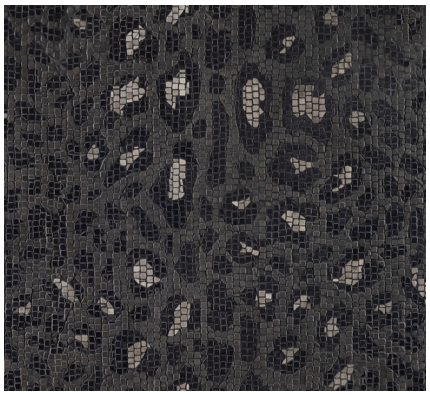

Sea Grey




Moca

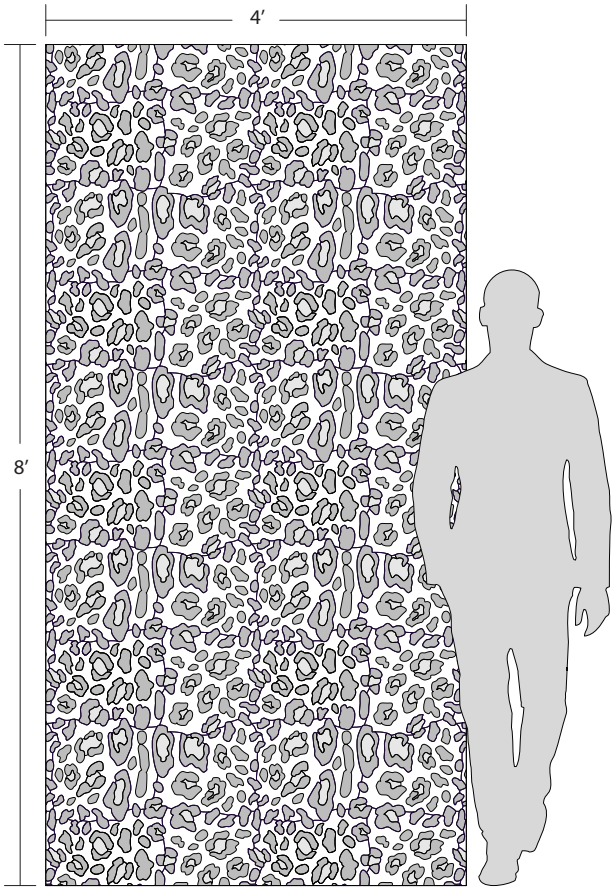

APPLICATIONS

INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND
Light/Medium Commercial	All	Conventional Only [1]	Yes, conventional only [2]	No	Yes, including freeze thaw	No	Yes	Yes

VARIATION

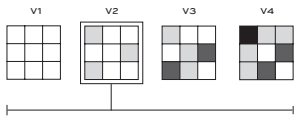

TAILORED TO CUSTOMIZATION

- CARPET CUTTING
- FIELD
- FINISH
- MOSAIC
- SADDLE
- VANITY TOP
- WATERJET


INSTALLATION/MAINTENANCE

SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Ardex X77 White Microtec Fiber Reinforced Mortar [3]	Ardex FG-C Microtec Unsanded [4]	As established on sheets	Ardex 8 + 9	Ardex SX	Aquamix Sealers Choice Gold	AquaMix Concentrated Cleaner	TCNA Handbook	Maintain Sheet Orientation	Required

NOTES

[1] Showers: Product MUST be installed in accordance with current TCNA Handbook Stone Methods.
[2] Shower Floors: Ardex 100% Solids Epoxy Adhesive White is recommended for installing this product in shower floor applications. See complete install instructions for further details.
[3] Alternate Setting Materials: Ardex N23 White Microtec Rapid Set, Ardex 100% Solids Epoxy Adhesive White
[4] Alternate Grout: Ardex FL Rapid Set Sanded, Ardex DG - One Component Grout
Tech Note: Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. Dry laying of this product prior to installation is required. Massage joints when blending individual sheets. White mortar is recommended for natural stone. The installation of intricate mosaic patterns may require the use of a mosaic nipper to hand cut pieces along the edge to fit or conduct adjustments throughout the installation. For straight cuts on a tile wet saw clear plastic face tape can be applied to keep the mosaic pieces aligned while cutting. Seal and utilize a grout release prior to grouting.

WATERJET MOSAIC

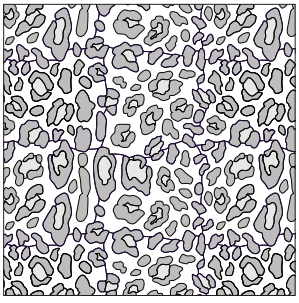

3.3252 SF/unit
Interlocking Sheet

Tumbled Stone Mosaic

SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone, B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend. • Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes. • Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately. • Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor. • Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area. • Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area. • Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage. • Tap down and level the mosaic sheets with a grout float over the predetermined area. • Allow mortar to set, harden, and cure.	• Wipe up any epoxy residue with sponges and clean water. • Note: No soap and no chemicals are needed. Just clean water. • Rinse sponges and change the water often. • Finally wipe with cool, clean water & clean sponges. • Use clean microfiber cloths for final wipe down.

Artistic Tile recommends sealing all natural stones before grouting.