


STUDS




There is nothing formulaic about artistic tile's studs. Simultaneously fresh and retro, the applications for these round stone mosaics are limitless. Circular tiles are a staple of residential and commercial design; our Studs are unique in their smaller size and our use of classic stone in their creation. A traditional yet relaxed aesthetic.



STUDS

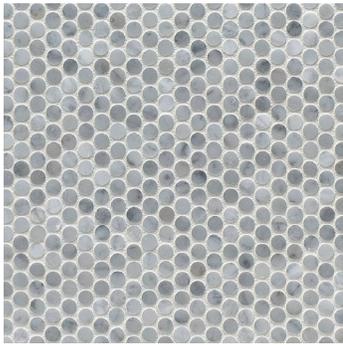

Bianco Carrara Polished

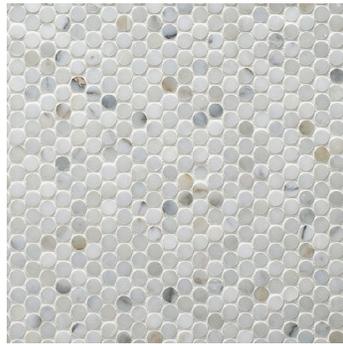


Calacatta Gold Polished



Blue Blend Polished
(Thassos, Azul Cielo, Ming Green)



Thassos Polished

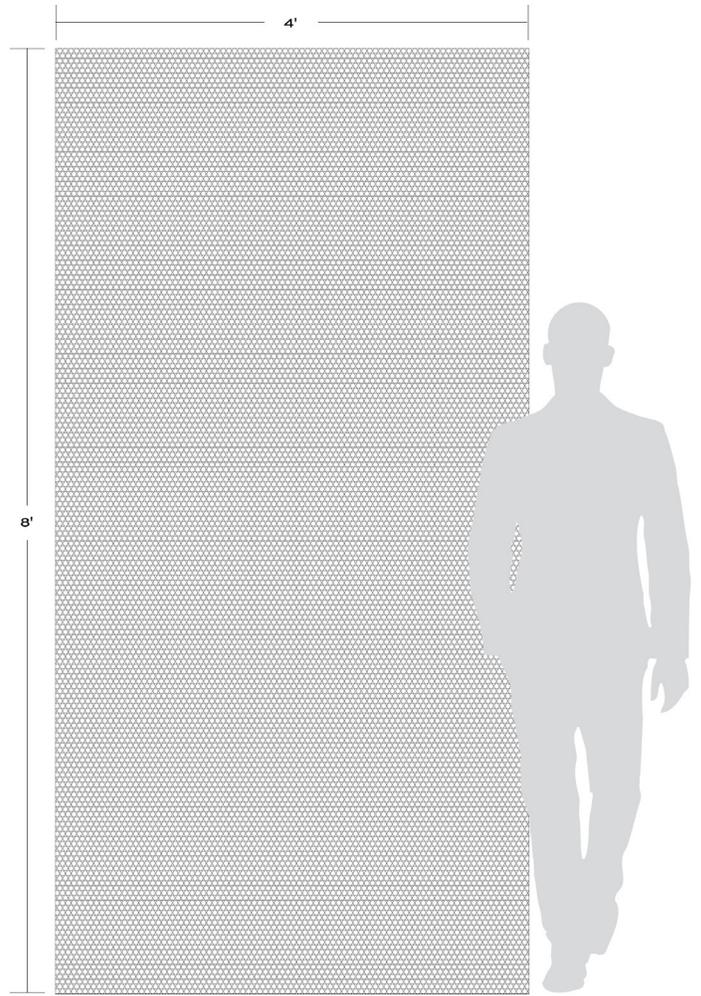

APPLICATIONS							
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP
Commercial Light/ Medium	All	Yes, including steam	Yes	No	Yes, non-freeze thaw	No	Yes

VARIATION			
V1	V2	V3	V4

INSTALLATION/MAINTENANCE									
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Mapei Kerabond w/ Keralastic Additive ¹	Mapei Keracolor Unsanded ²	As established on sheets	Mapei Mapelastick Aquadefense	Mapei Keracaulk Sanded	AquaMix Sealers Choice Gold	AquaMix Concentrated Stone & Tile Cleaner	TCNA Handbook	Maintain Sheet Orientation	Sample ³

STONE MOSAIC
<p>1/2" CIRCLE MOSAIC 12" x 12-1/3" x 3/8" (1.03 sf) <i>Polished</i></p>

NOTES

¹ Alternative mortar: Mapei Granirapid 2-Part System or Ardex X4 Tile & Stone Mortar

² Alternative grout: Mapei Flexcolor CQ

³ Layout for overview of material before installation

Tech notes: Dry-layout prior to installation is required in order to ensure that grout joints between sheets are not visible; two opposing sides of each sheet interlock and the other two opposing side align; trimming of the mesh backing may be necessary

- Mapei Ultracolor Plus sanded- suitable for grout joints of 1/16" - 1"

SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone, B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
<ul style="list-style-type: none">• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend.• Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes.• Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately.• Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor.• Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area.• Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area.• Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage.• Tap down and level the mosaic sheets with a grout float over the predetermined area.• Allow mortar to set, harden, and cure.	<ul style="list-style-type: none">• Wipe up any epoxy residue with sponges and clean water.• Note: No soap and no chemicals are needed. Just clean water.• Rinse sponges and change the water often.• Finally wipe with cool, clean water & clean sponges.• Use clean microfiber cloths for final wipe down.

Artistic Tile recommends sealing all natural stones before grouting.