

# MOTOR CITY CIRCLES

Motor City Circles drives tile design to a very cool place. This stunning mosaic spins a classic pattern on its axis, layering beautifully crafted stone or glass wheels in four refined colorways: Desert Sunrise, Bianco Dolomiti, Vanilla Onyx, and Ice White Jazz Glass.






# MOTOR CITY CIRCLES


VANILLA ONYX



Vanilla Onyx

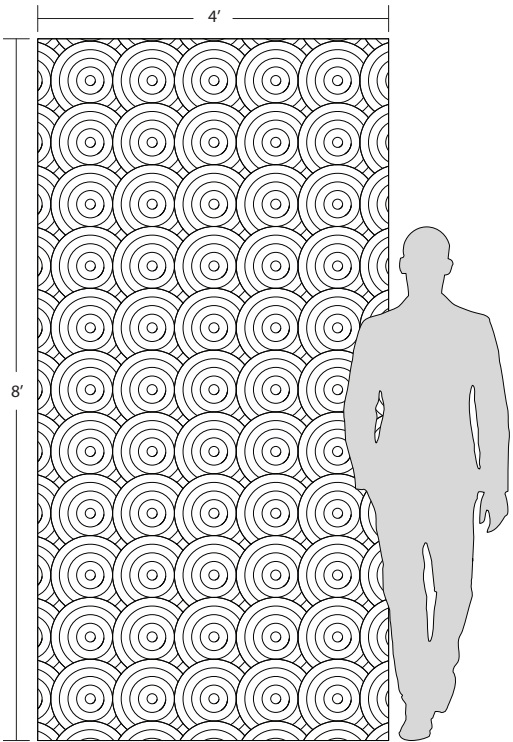

Straight Joint Layout

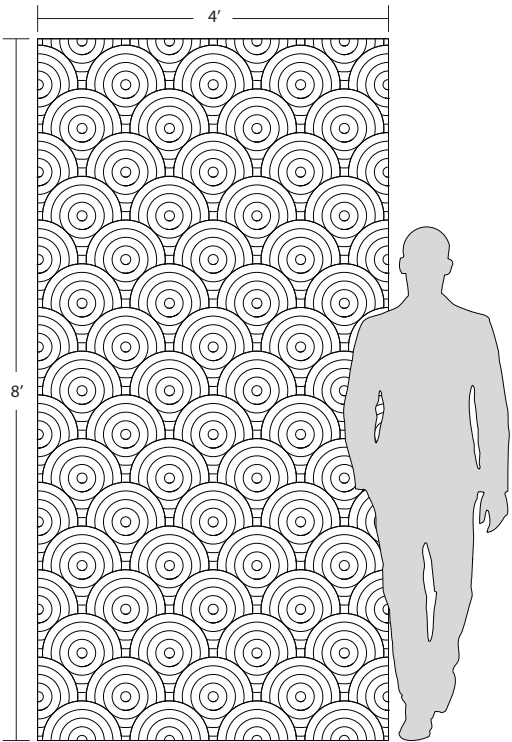

Broken Joint Layout

APPLICATIONS								
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND
Residential Light	All	Conventional only	Yes, conventional only <sup>1</sup>	No	No	No	No	Yes

VARIATION			
V1	V2	V3	V4

INSTALLATION/MAINTENANCE									
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Ardex X77 White Microtec Fiber Mortar <sup>2</sup>	Ardex FG-C Microtec Unsanded <sup>3</sup>	As established on sheets	Ardex 8+9	Ardex SX	AquaMix Sealer's Choice Gold	AquaMix Concentrated Cleaner	TCNA Handbook	No	No

NOTES
Product MUST be installed in accordance with current TCNA Handbook Stone Methods. <sup>1</sup> Shower Floors: Ardex 100% Solids Epoxy Adhesive White is recommended for installing this product in shower floor applications. See complete install instructions for further details. <sup>2</sup> Alternate Setting Materials: Ardex X4 White Tile & Stone Mortar, Ardex 100% Solids Epoxy Adhesive White <sup>3</sup> Alternate Grout: Mapei Keracolor Unsanded, Ardex DG 1 - One Component Grout  Tech Note: Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. Dry laying of this product prior to installation is required. Massage joints when blending individual sheets. White mortar is recommended for natural stone. The installation of intricate mosaic patterns may require the use of a mosaic nipper to hand cut pieces along the edge to fit or conduct adjustments throughout the installation. For straight cuts on a tile wet saw clear plastic face tape can be applied to keep the mosaic pieces aligned while cutting. Seal and utilize a grout release prior to grouting.


MOSAIC
8-7/16" x 8-7/16" x 1/8" 0.49 SF/unit Interlocking Sheet Polished Stone Mosaic

# MOTOR CITY CIRCLES


## DESERT SUNRISE



Desert Sunrise

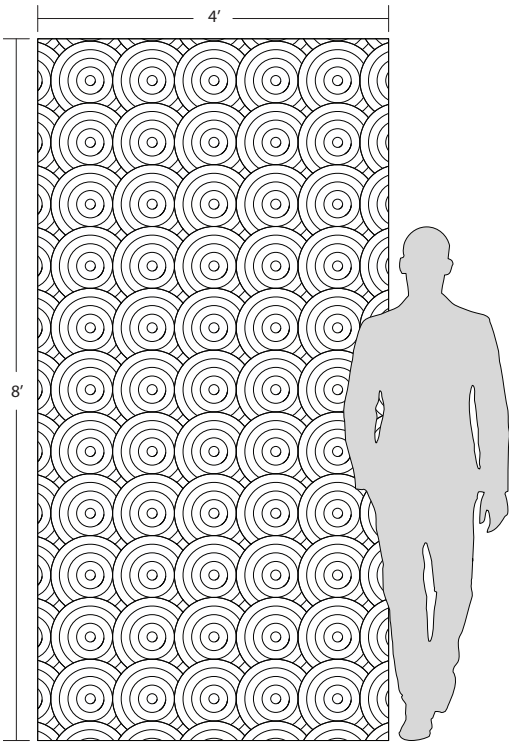

Straight Joint Layout

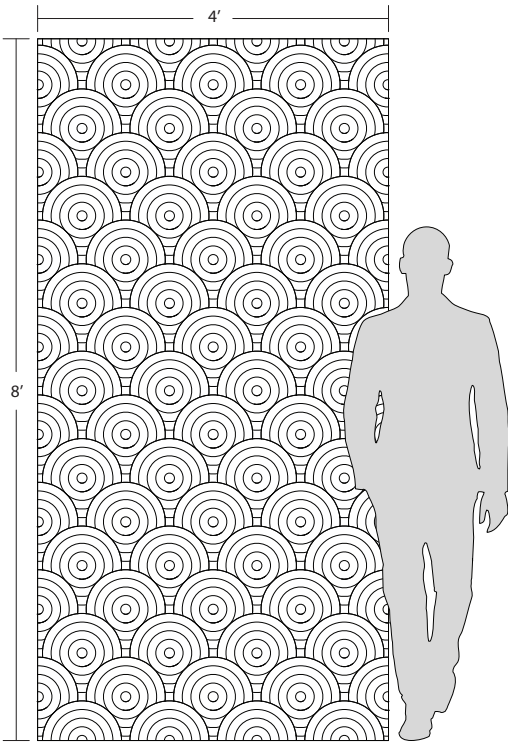

Broken Joint Layout

APPLICATIONS								
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND
Light / Medium Commerical	All	Convention- al Only	Yes, conventional only <sup>1</sup>	No	Yes, non-freeze thaw	No	Yes	Yes

VARIATION			
V1	V2	V3	V4

INSTALLATION/MAINTENANCE									
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Ardex X77 White Microtec Fiber Rein- forced Mortar <sup>2</sup>	Ardex FG-C Microtec Unsanded <sup>3</sup>	As established on sheets	Ardex 8+9	Ardex SX	AquaMix Sealer's Choice Gold	AquaMix Concentrated Cleaner	TCNA Handbook	No	Required

NOTES									
<p>Product MUST be installed in accordance with current TCNA Handbook Stone Methods.</p> <p><sup>1</sup> Shower Floors: Ardex 100% Solids Epoxy Adhesive White is recommended for installing this product in shower floor applications. See complete install instructions for further details. Minor vein washout is possible in wet installations.</p> <p><sup>2</sup> Alternate Setting Materials: Ardex X4 White Tile &amp; Stone Mortar, Ardex 100% Solids Epoxy Adhesive White</p> <p><sup>3</sup> Alternate Grout: Mapei Keracolor Unsanded, Ardex DG 1- One Component Grout</p> <p>Tech Note: Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. Dry laying of this product prior to installation is required. Massage joints when blending individual sheets. White mortar is recommended for natural stone. The installation of intricate mosaic patterns may require the use of a mosaic nipper to hand cut pieces along the edge to fit or conduct adjustments throughout the installation. For straight cuts on a tile wet saw clear plastic face tape can be applied to keep the mosaic pieces aligned while cutting. Seal and utilize a grout release prior to grouting.</p>									

## MOSAIC

**8-7/16" x 8-7/16" x 3/8"**


**0.49 SF/unit**

**Interlocking Sheet**


*Tumbled Stone Mosaic*

# MOTOR CITY CIRCLES


BIANCO DOLOMITI

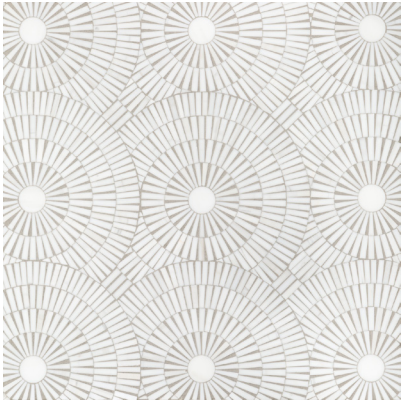

Bianco Dolomiti

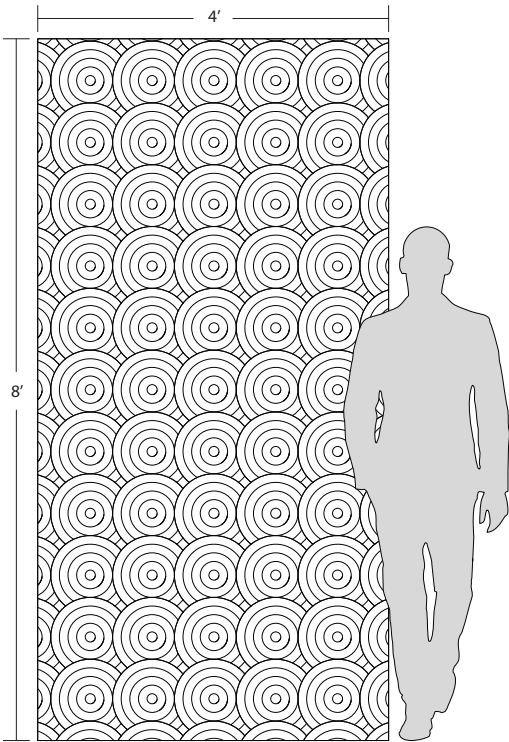

Straight Joint Layout

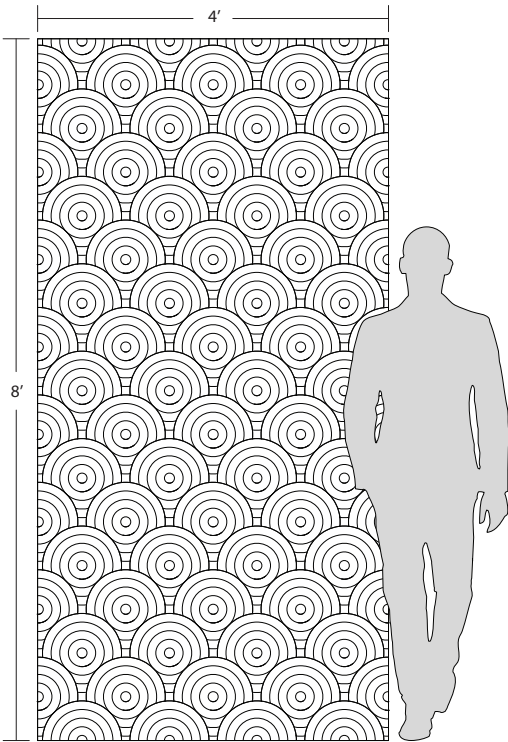

Broken Joint Layout

APPLICATIONS								
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND
Light / Medium Commercial	All	Yes, including steam	Yes, including steam <sup>1</sup>	No	Yes, non-freeze thaw	No	No	Yes

VARIATION			
V1	V2	V3	V4

INSTALLATION/MAINTENANCE									
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Ardex X77 White Microtec Fiber Reinforced Mortar <sup>2</sup>	Ardex FG-C Microtec Unsanded <sup>3</sup>	As established on sheets	Ardex 8+9	Ardex SX	AquaMix Sealer's Choice Gold	AquaMix Concentrated Cleaner	TCNA Handbook	No	Required

NOTES									
Product MUST be installed in accordance with current TCNA Handbook Stone Methods.									
<sup>1</sup> Shower Floors: Ardex 100% Solids Epoxy Adhesive White is recommended for installing this product in shower floor applications. See complete install instructions for further details.									
<sup>2</sup> Alternate Setting Materials: Ardex X4 White Tile & Stone Mortar									
<sup>3</sup> Alternate Grout: Mapei Keracolor Unsanded, Ardex DG 1 - One Component Grout									
Tech Note: Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. Dry laying of this product prior to installation is required. Massage joints when blending individual sheets. White mortar is recommended for natural stone. The installation of intricate mosaic patterns may require the use of a mosaic nipper to hand cut pieces along the edge to fit or conduct adjustments throughout the installation. For straight cuts on a tile wet saw clear plastic face tape can be applied to keep the mosaic pieces aligned while cutting. Seal and utilize a grout release prior to grouting.									

## MOSAIC

8-7/16" x 8-7/16" x 3/8"

0.49 SF/unit


Interlocking Sheet

*Polished Stone Mosaic*




# MOTOR CITY CIRCLES


ICE WHITE

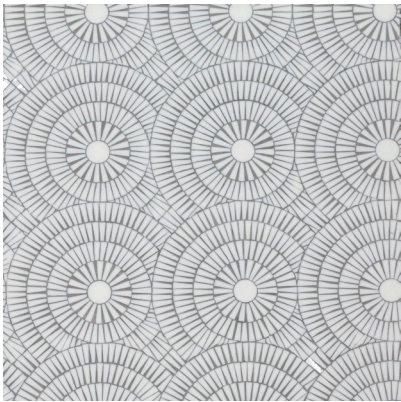

Ice White

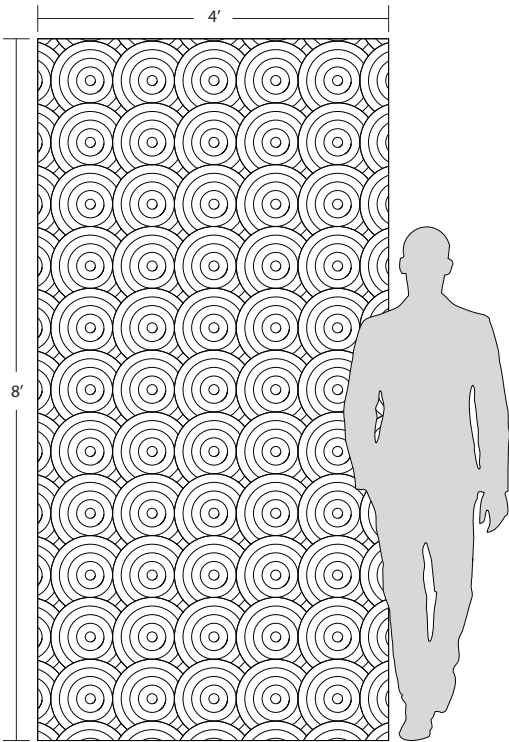

Straight Joint Layout

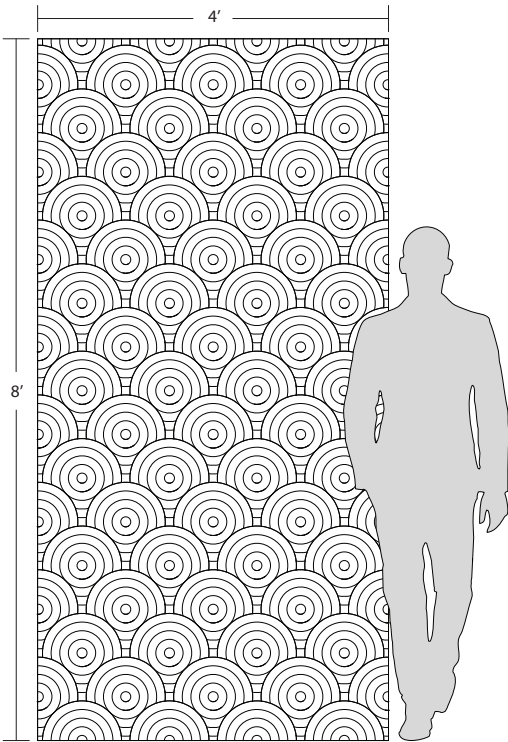

Broken Joint Layout

APPLICATIONS								
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND
Residential Light	All	Yes, including steam	Yes, including steam	No	Yes	No	No	Yes

VARIATION			
V1	V2	V3	V4

INSTALLATION/MAINTENANCE									
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Ardex X77 White Microtec Fiber Reinforced Mortar <sup>1</sup>	Ardex FG-C Microtec Unsanded <sup>2</sup>	As established on sheets	Ardex 8+9	Ardex SX	Not required	AquaMix Concentrated Cleaner	TCNA Handbook	No	Required

NOTES									
Product MUST be installed in accordance with current TCNA Handbook Stone Methods.									
<sup>1</sup> Alternate Setting Materials: Ardex S48 White Rapid-Set Mortar / Mastic Hybrid, Ardex 100% Solids Epoxy Adhesive White									
<sup>2</sup> Alternate Grout: Mapei Keracolor Unsanded, Ardex DG 1 - One Component Grout									
Tech Note: Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. Suitable for low traffic residential floors. Refer to installation guidelines for appropriate setting materials. The appearance of uninstalled glass mosaic is different than the final installed product. The semi translucent Jazz Glass will be influenced by the choice of setting materials. A mockup to confirm mortar and grout selection is highly recommended. Grout color will greatly influence the appearance of the final installation. Grout color selection may be achieved by filling the joints with dry grout powder. Whether on installed mosaic or uninstalled mosaic sheet placed on white background.									

## MOSAIC

**8-7/16" x 8-7/16" x 1/8"**

**0.49 SF/unit**

**Interlocking Sheet**

*Gloss Glass Mosaic*

# SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone,  
B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
<ul style="list-style-type: none"><li>• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend.</li><li>• Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes.</li><li>• Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately.</li><li>• Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor.</li><li>• Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area.</li><li>• Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area.</li><li>• Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage.</li><li>• Tap down and level the mosaic sheets with a grout float over the predetermined area.</li><li>• Allow mortar to set, harden, and cure.</li></ul>	<ul style="list-style-type: none"><li>• Wipe up any epoxy residue with sponges and clean water.</li><li>• Note: No soap and no chemicals are needed. Just clean water.</li><li>• Rinse sponges and change the water often.</li><li>• Finally wipe with cool, clean water &amp; clean sponges.</li><li>• Use clean microfiber cloths for final wipe down.</li></ul>

Artistic Tile recommends sealing all natural stones before grouting.