

XANADU FALLS

The sinuous rills of our poetic 'Xanadu' are now available in Xanadu Falls, a rhythmic confluence of polished stone mosaic pieces in an elegant, lightly reflective stream.




XANADU FALLS



Bianco Dolomiti - Polished



Calacatta Gold - Polished

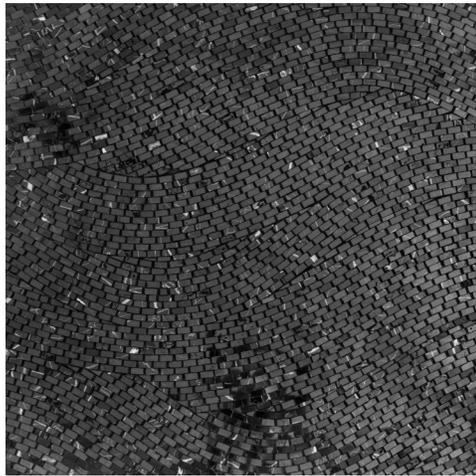

Nero Marquina - Polished⁶



Thassos - Polished


APPLICATIONS									VARIATION			
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND	V1	V2	V3	V4
Light/Medium Traffic Commercial	All	Yes, including steam	Yes	No	Yes, non-freeze thaw ¹	No	No	Yes				

INSTALLATION/MAINTENANCE									
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Ardex X4 White ²	Ardex FG-C Unsanded ³	As established on sheets	Mapei Mapelastick AquaDefense	Mapei Keracaulk Sanded	AquaMix Sealer's Choice Gold	AquaMix Concentrated Stone & Tile Cleaner	TCNA Handbook ⁴	Maintain sheet orientation	Full ⁵

MOSAIC
<p>(2.83 sf/unit) Mesh mounted interlocking sheet</p>

NOTES
<p>¹ Calacatta Gold - No</p> <p>² Alternate Mortar - Mapei Ultraflex 2 White or Ardex N23</p> <p>³ Alternate Grout - Mapei Keracolor Unsanded or Mapei Ultracolor Plus</p> <p>No carpet cutting</p> <p>⁴ IMPORTANT: Proper installation will prevent darkening due to water accumulation behind the product. Follow TCNA guidelines to ensure proper installation.</p> <p>⁵ Layout the full job before installation</p> <p>⁶ Subject to visible scratching</p> <p>Tech Note: The installation of intricate mosaic patterns may require the use of a mosaic nipper to hand cut pieces along the edge to fit, or conduct repairs throughout the installation.</p>

XANADU FALLS

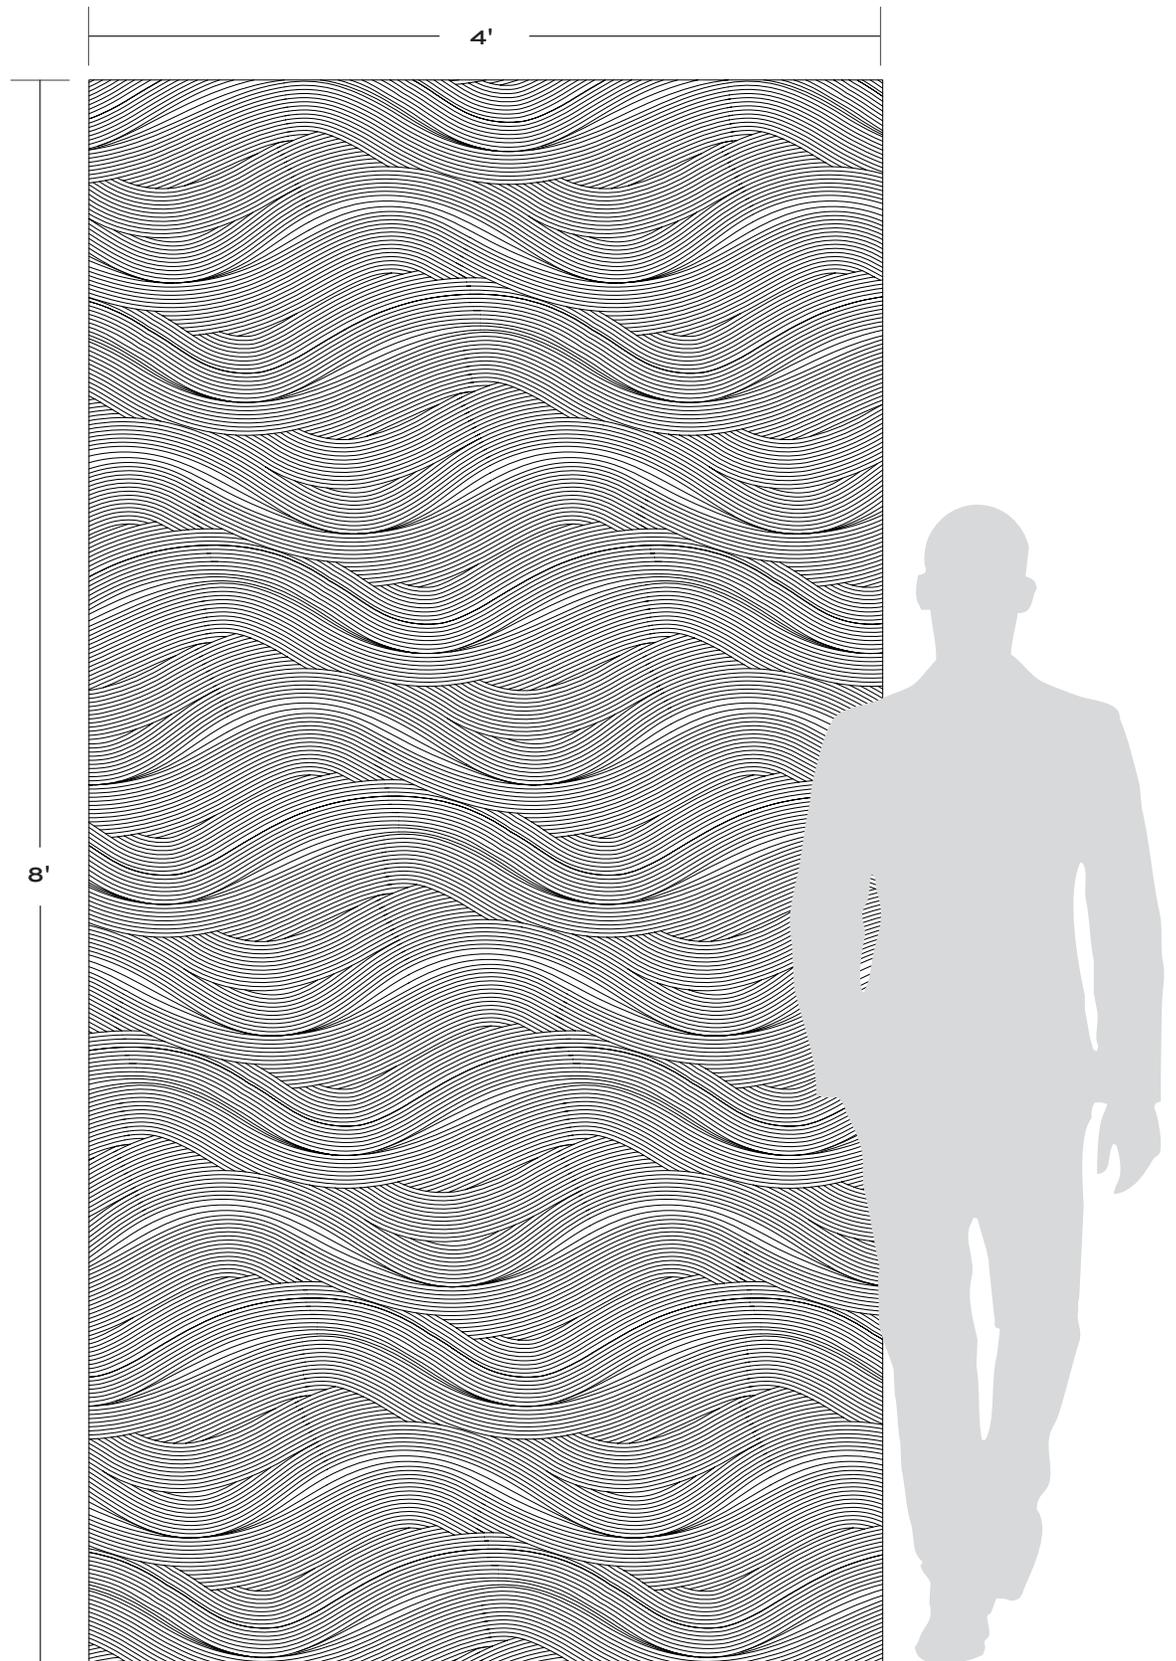

SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone, B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
<ul style="list-style-type: none">• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend.• Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes.• Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately.• Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor.• Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area.• Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area.• Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage.• Tap down and level the mosaic sheets with a grout float over the predetermined area.• Allow mortar to set, harden, and cure.	<ul style="list-style-type: none">• Wipe up any epoxy residue with sponges and clean water.• Note: No soap and no chemicals are needed. Just clean water.• Rinse sponges and change the water often.• Finally wipe with cool, clean water & clean sponges.• Use clean microfiber cloths for final wipe down.

Artistic Tile recommends sealing all natural stones before grouting.