




INSTALLATION GUIDE

AMBRA OUT-CORNER: TURNING CORNER WITH TWO PIECES

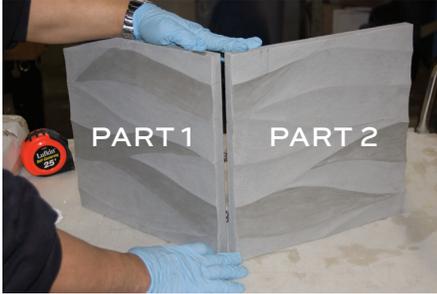

- 1** If layout will allow use of full pieces at the corner, verify you have two pieces selected/aligned so pattern will carry around the corner.




- 2** Mark the edge to be mitered on each piece.



- 3** Set blade at 45 degree angle and position first piece to be cut.



- 4** Tile is face-up, blade at 45 degree angle. Backmiter (aka quirk miter) without cutting into carved face of the tile.
NOTE: Keep top edge of pattern slightly back from blade.

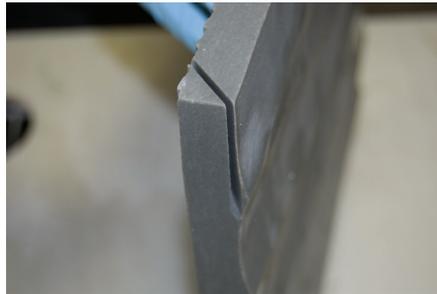

- 5** Showing backmiter.



- 6** Wet-saw blade set at 45 degrees.



- 7** Cut is complete.
NOTE: Only a small amount of material has been removed.
Repeat steps 1-6 for piece 2.



- 8** Verifying cuts, fit and alignment of two mitered pieces.
Continue with installation steps on side B, B6-B9.



INSTALLATION GUIDE

AMBRA OUT-CORNER: TURNING CORNER WITH ONE PIECE



- 1** Place one full piece on wall next to last installed piece. Verify pattern alignment. Measure piece along face of wall; extend beyond the corner the thickness of one tile.

NOTE: Work off center of wall. Verify end-cuts will be even. Shift tiles as necessary to avoid thin cuts at corners.



- 2** Mark piece for single straight cut. Be sure to mark the tile so that you know which is the front piece and which piece will be used for the return. The cut edge on the two pieces will be backmitered as previously illustrated.



- 3** Straight cut to make two pieces necessary for corner installation.



- 4** Miter cut. Tile is face-up, blade at 45 degree angle. Backmiter (aka quirk miter) without cutting into carved face of the tile.

NOTE: Keep top edge of pattern slightly back from blade.



- 5** Measuring return for single straight cut to remove excess material from the return piece (the un-mitered edge).




- 6** Installing cut and mitered pieces. Keying mortar in.



- 7** Installing cut and mitered pieces. Trowel mortar.

Clean and backbutter cut piece to achieve 100% coverage.

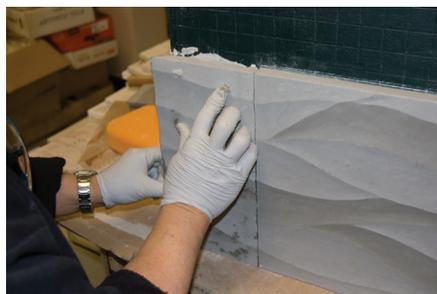

- 8** Installing cut and mitered pieces. Set cut piece in mortar bed.



- 9** Install returned piece in similar manner.

FINAL FINISHING: If necessary, edges of quirk miter may be lightly smoothed; quirk joint may be filled with grout or sealant.




TECHNICAL INFO

Hand Carved Stone - Ambra

INSTALLATION GUIDE


AMBRA INSTALLATION EXAMPLES USING PART 1 AND PART 2

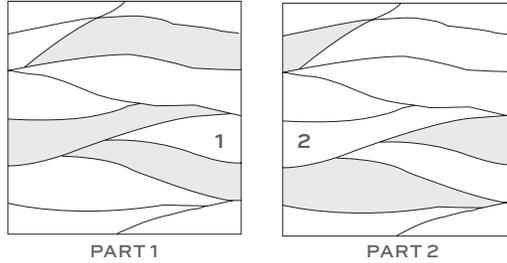


Ambra is sold as a two part unit. Multiple variations of the pattern can be achieved by orienting and arranging Part 1 & Part 2 differently.

INSTALLATION EXAMPLES

EXAMPLE 1

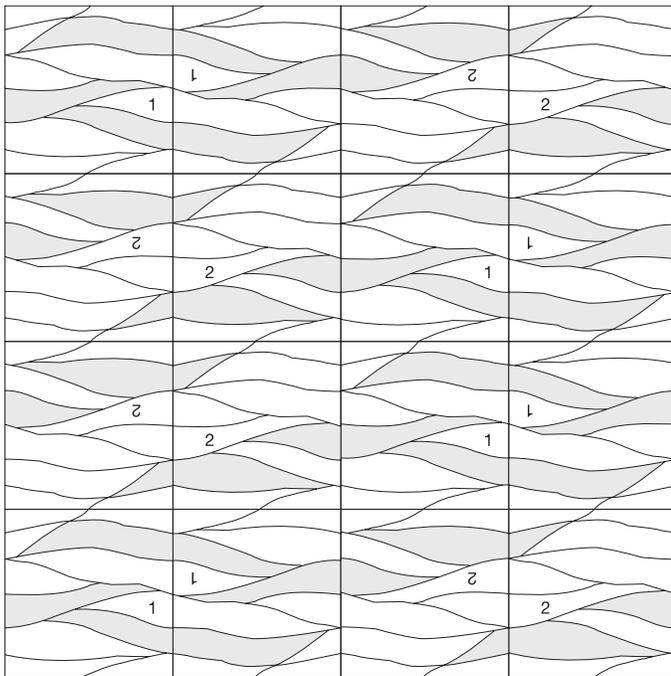

EXAMPLE 2

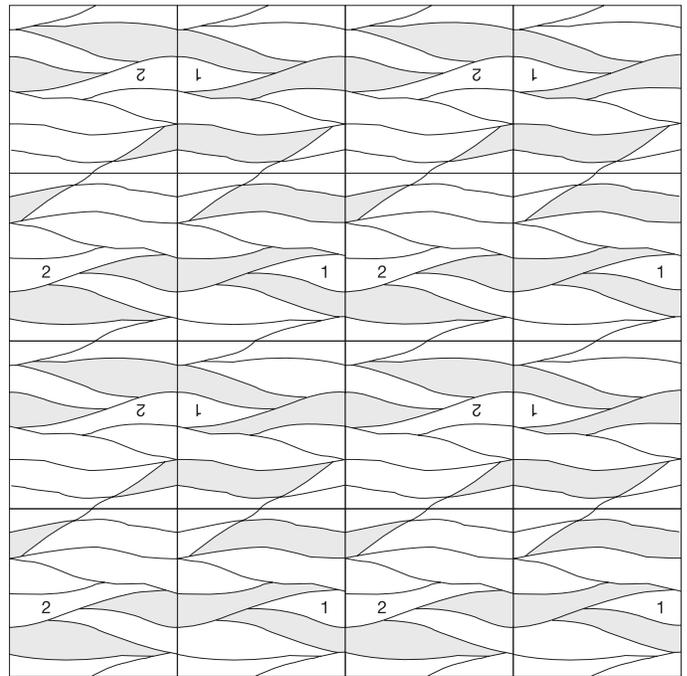

NOTE: Part 1 & Part 2 can only be rotated 180 degrees, but can be arranged in any sequence desired.