

ADENA *by* LORI WEITZNER

Adena reimagines Lori Weitzner's luxurious Adelaide embroidery pattern in micro-mosaic stone. Tiny tumbled pieces of stone are set into an ombre pattern inside of intricately scalloped marble frames. The result is a beautifully arched, textured, & timeless arabesque in three tranquil colorways: Blue, crafted from Bardiglio Nuvolato, Azul Cielo, and White Sand; Cream, with White Sand, Pink, and Thassos marbles; and Grey, combining Smoke limestone, Botticino, and White Sand.



ADENA




Blue



Cream




Grey

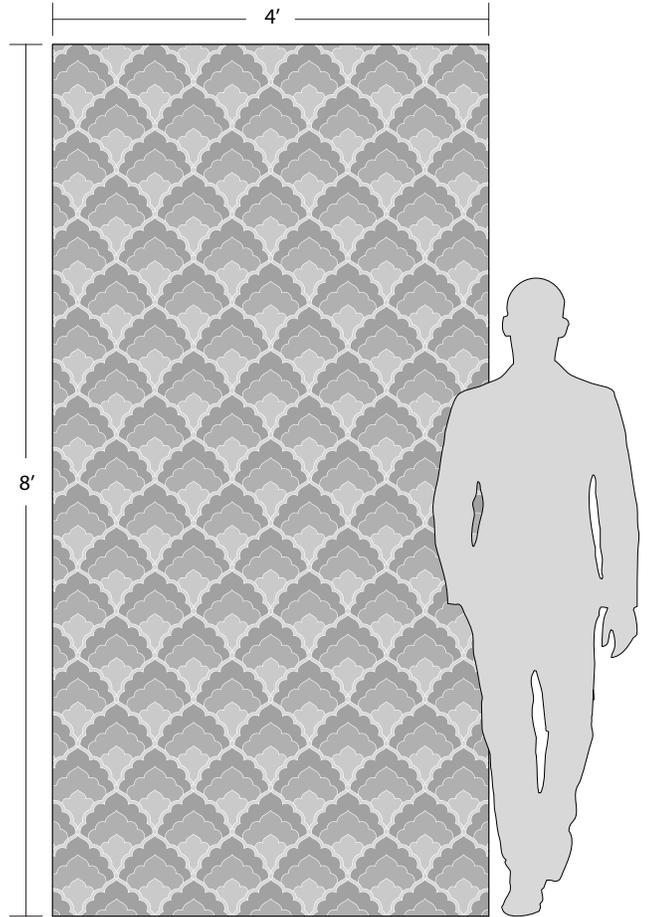

| APPLICATIONS | | | | | | | | |
|--------------------------|---------------|-----------------------------------|---|----------------|----------------------|----------------|-------------|--------------------|
| INTERIOR FLOOR | INTERIOR WALL | SHOWER WALL | SHOWER FLOOR | EXTERIOR FLOOR | EXTERIOR WALL | POOL/ FOUNTAIN | COUNTER TOP | FIREPLACE SURROUND |
| Commercial Light/ Medium | All | Yes, including steam ³ | Yes, including steam, linear drain ³ | No | Yes, non-freeze thaw | No | Yes | Yes |

| VARIATION | | | |
|-----------|----|----|----|
| V1 | V2 | V3 | V4 |
| | | | |

| INSTALLATION/MAINTENANCE | | | | | | | | | |
|---|---|---------------------------------------|-------------|----------|------------------------------|------------------------------|---------------------------|--------|-------------------|
| SETTING MATERIAL | GROUT | GROUT JOINT | MEMBRANE | CAULK | SEALER | CLEANER | INSTALLATION INSTRUCTIONS | LAYOUT | DRY LAYOUT |
| Ardex X4 White Tile & Stone Mortar ¹ | Ardex FG-C Microtec Unsanded ² | As established on sheets ³ | Ardex 8 + 9 | Ardex SX | AquaMix Sealer's Choice Gold | AquaMix Concentrated Cleaner | TCNA Handbook | No | Sample Dry Layout |

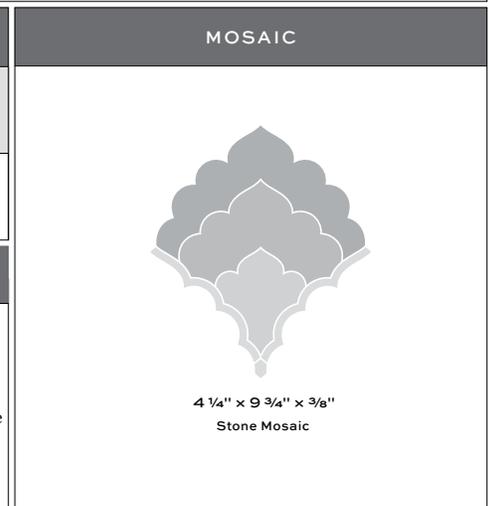

| NOTES |
|---|
| <p>¹ Alternate mortar - Mapei Ultraflex 2 White or Mapei Kerabond White w/Keralastic Additive</p> <p>² Alternate grout - Mapei Ultracolor Plus FA or Mapei Keracolor Unsanded</p> <p>³ Showers: Product MUST be installed in accordance with current TCNA Handbook Stone Methods</p> <p>*Tech Note: Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. White mortar is recommended for natural stone. Product MUST be installed in accordance with current TCNA Handbook Stone Methods.</p> |

SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone, B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

| IMPORTANT NEXT STEPS: | IMPORTANT WATER CLEANUP STEPS |
|---|--|
| <ul style="list-style-type: none">• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend.• Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes.• Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately.• Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor.• Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area.• Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area.• Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage.• Tap down and level the mosaic sheets with a grout float over the predetermined area.• Allow mortar to set, harden, and cure. | <ul style="list-style-type: none">• Wipe up any epoxy residue with sponges and clean water.• Note: No soap and no chemicals are needed. Just clean water.• Rinse sponges and change the water often.• Finally wipe with cool, clean water & clean sponges.• Use clean microfiber cloths for final wipe down. |

Artistic Tile recommends sealing all natural stones before grouting.