




COYOTE® 10" PEDESTAL EXPANDED BUFFER TUBE STORAGE BRACKETS INSTALLATION INSTRUCTIONS

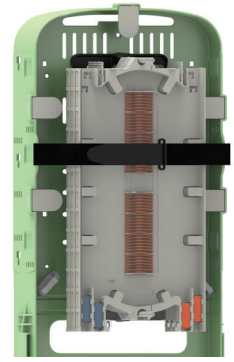


IMPORTANT SAFETY INFORMATION

READ AND COMPLETELY UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLING PRODUCT. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY OR DEATH.

This product is intended for use by trained technicians only. This product should not be used by anyone who is not familiar with and not trained to use it. When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact. Be sure to wear proper safety equipment per your company protocol. These instructions are not intended to supersede any company construction or safety standards. These instructions are offered only to illustrate safe installation for the individual. PLP products are intended for the specified application only. Do not modify this product under any circumstances. Do not reuse or reinstall any PLP product unless that capability is expressly indicated in the product's Installation Instructions. For proper performance and personal safety, be sure to select the proper PLP product before installation. PLP products are precision devices. To ensure proper performance, they should be stored in cartons under cover and handled carefully.

PACKAGE COMPONENTS

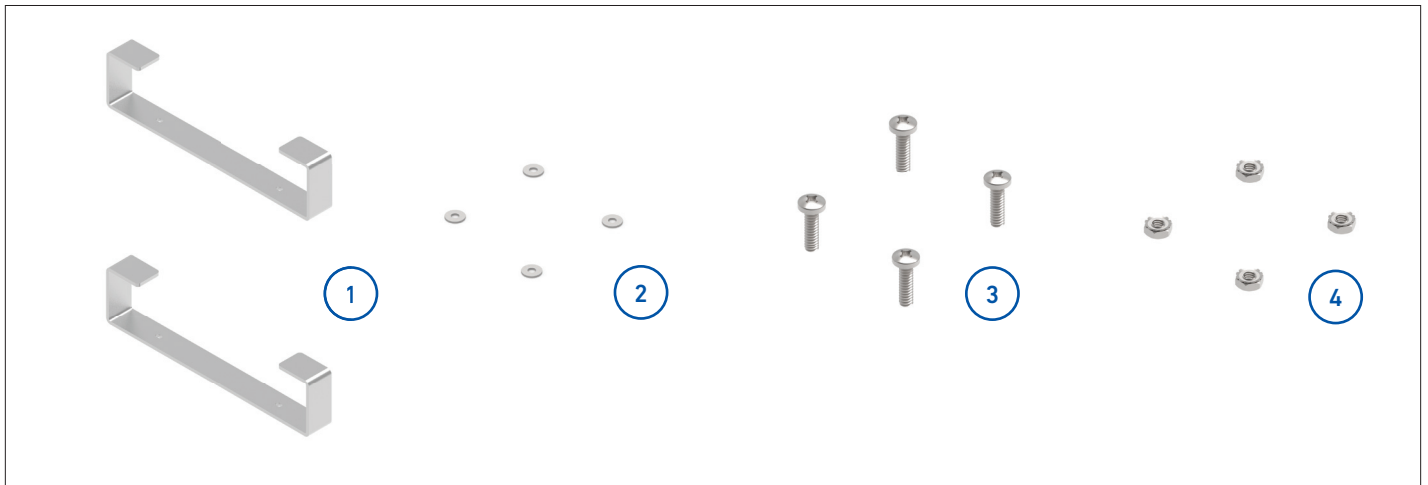


1. Expanded Storage Brackets (2)
2. Flat Washers, #6 (4)
3. Bolts, #6-32 x 1/2" (2)
4. Keps Nuts, #6-32 (2)



Tools Required:

- Fiber Optic Cable Opening Tools
- Phillips Head Screwdriver

- 1 On the feed side of the universal organizer, align the holes in the expanded buffer tube storage brackets with the indicated slot locations.

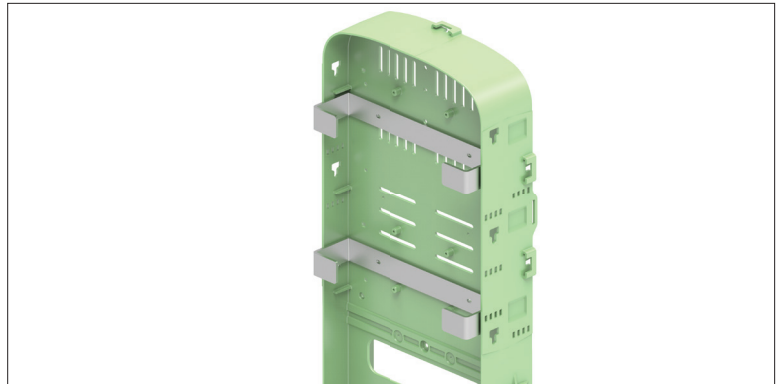


- 2 Secure the brackets to the organizer using the hardware provided.

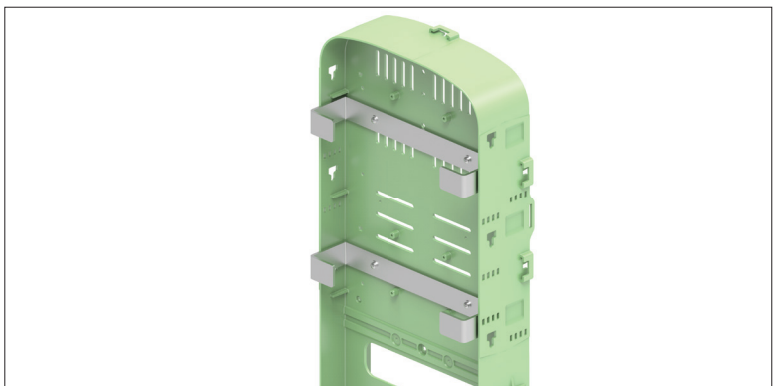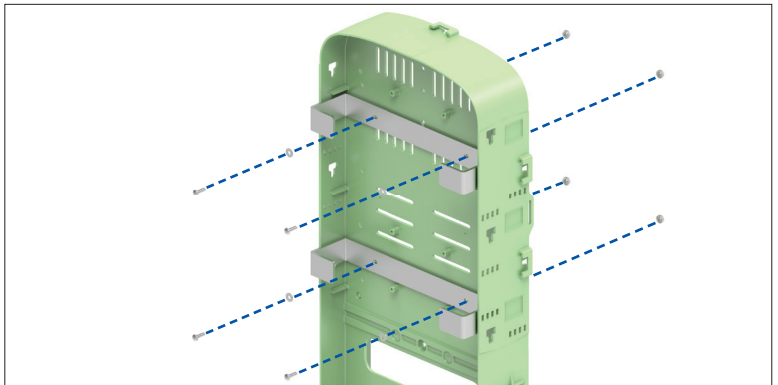

3

Store the buffer tubes in the expanded buffer tube storage brackets as shown. If desired, use tie wraps to further retain buffer tubes to the organizer.

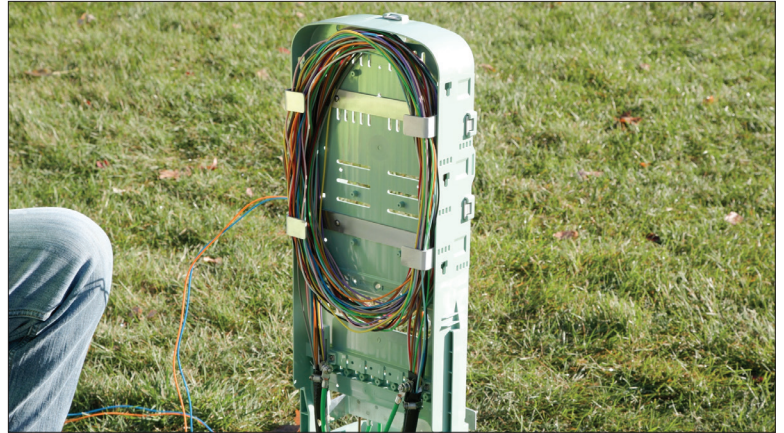

4

Refer to the main COYOTE 10" Pedestal with Universal Organizer Installation Instructions, SP3787, for the rest of the pedestal installation.



GLOBAL HEADQUARTERS
660 BETA DRIVE
CLEVELAND, OH 44143

+1 440 461 5200
INFO@PLP.COM
PLP.COM