



Version 6 Comfort Sleeper Complete Disassembly


"T" Style Back

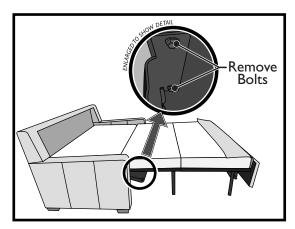


1. To begin, open the comfort sleeper as shown. Remove the two bolts connecting the middle bed section to the mechanism, as shown in the enlarged view. Do this on both the left and right sides.

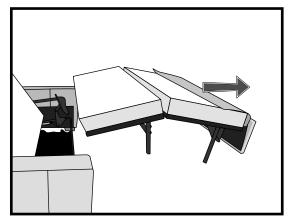


2. With the four (4) bolts removed, lift the front bed sections away from the comfort sleeper and set aside.

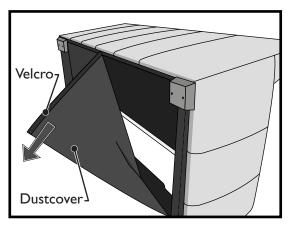


3. Roll the comfort sleeper forward, as shown. Open the dustcover on the bottom by pulling to release the velcro holding it closed.

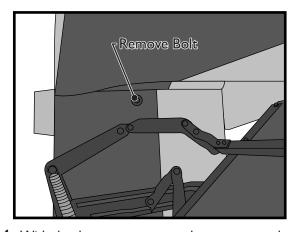

4. With the dustcover open, you have access to the bolt securing the arm to the back. Remove the bolt, as shown in the figure above, from both sides of the comfort sleeper.

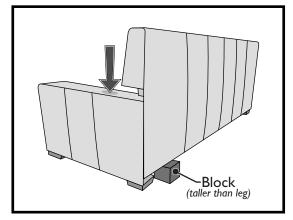

5. Turn the sofa upright and place a block (taller than the sofa leg) under the back near the arm. Press down firmly as shown in the figure above to release the arm from the back.

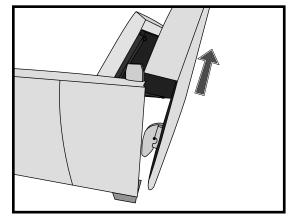


6. Lift the back up and away from the arms. Set the back aside.

Page I of 2 V03.26.13




Version 6 Comfort Sleeper Complete Disassembly


"T" Style Back

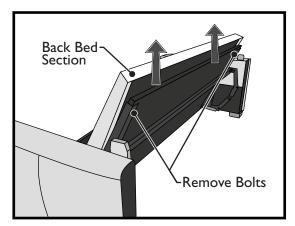


7. Remove (4) four bolts on each side of the comfort sleeper that secure the back bed section to the mechanism. Start from the bottom, leaving a single top bolt on each side. Hold the back bed section while removing the last two bolts. Set the back bed section aside.

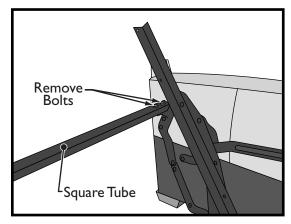

8. To remove the square tube, remove the two bolts on both sides of the comfort sleeper. With all (4) four bolts removed, set the square tube aside.

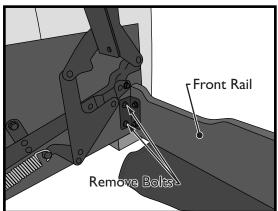

9. Remove the two bolts on each side of the comfort sleeper that secure the front rail to the arm. With the bolts removed, set the front rail aside.

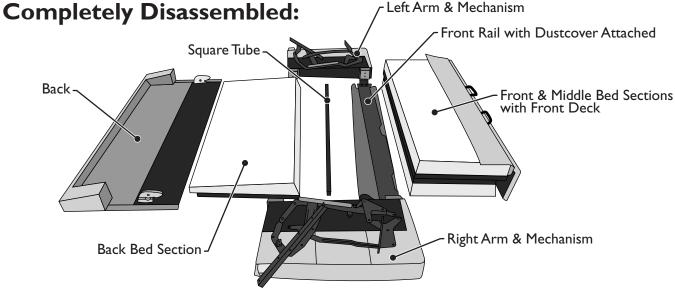

Page 2 of 2 V03.26.13