

ROLLING GARAGE STOOL



Scan QR Code for a How-To Video

Read and understand this entire manual before assembling, installing, operating, or servicing this product. Failure to follow all warnings and instructions may result in property damage and/or serious injury.

⚠ This Safety Alert Symbol indicates caution, warning, or danger. Failure to obey a safety warning can result in serious injury to yourself or others. To reduce the risk of injury, fire, or electric shock, always follow the safety precautions.

📖 Save these directions for future reference.

PRODUCT SPECIFICATIONS

- Dimensions: 16.75" x 16.5" x 16.75"
(42.54 cm x 42.4 cm x 42.54 cm)
- Weight of product: 11.2 lbs (5.09 kg)
- Maximum weight capacity for Unit: 350 lbs (159kgs)

MAINTENANCE

When servicing, use only identical replacement parts. To clean, wipe down with dry or slightly damp cloth. Do not use solvents, as this can damage the upholstery. Be sure to wipe off oil and other fluids when finished using.

SAFETY

⚠ CAUTION: Failure to read and follow all warnings below could result in property damage or personal injury. Always use care when working with tools.

USE PRECAUTIONS

NOTE: This product is not a toy. Do not allow children to play with or near this item. Store out of reach of children.

Use the stool and accessories as intended and in accordance with these instructions, considering the working conditions and the work to be performed. Use of the stool for operations different from those intended, could result in a hazardous situation.

Inspect before every use; do not use if parts are loose or damaged.

Do not exceed weight capacity of 350lbs. (159kg).

Be aware of dynamic loading! Sudden shifts in the load may briefly create excess load, which may result in product failure.

The warnings, cautions and instructions discussed in the instruction manual cannot cover all possible conditions and situations that may occur.

It must be understood by the operator that common sense and caution are factors that cannot be built into this product but must be applied by the operator.

⚠ WARNING: Do not stand on Seat (A) or Plastic Trays (B).

ASSEMBLY PRECAUTIONS

Assemble only according to these instructions. Improper assembly can create hazards.


Use personal protective equipment including ANSI Z87.1-approved safety goggles and heavy-duty work gloves during assembly.

Keep assembly area clean and well lit.

Keep children, pets, and bystanders out of the area during assembly. Distractions can cause you to lose control of tools, injuring yourself or others.

Stay alert, watch what you are doing, and use common sense when operating a power tool. Do not assemble while you are tired or under the influence of alcohol, drugs, or medication. A moment of inattention while operating tools may result in serious personal injury, shock, or fire.

Weight capacity and other product capabilities apply to properly and completely assembled product only. Do not use if incompletely or improperly assembled.

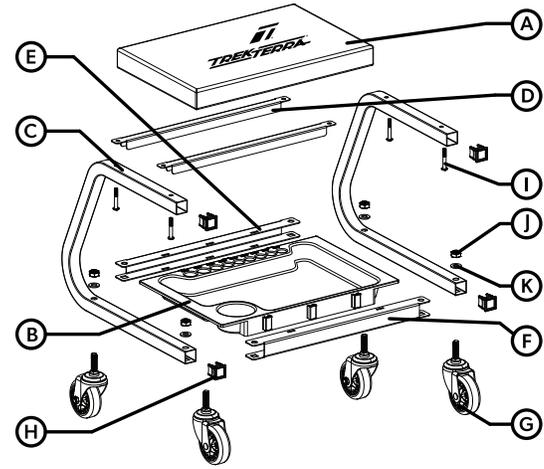

PART	DESCRIPTION	QTY.
A	SEAT	1
B	PLASTIC TRAY	1
C	METAL FRAME	2
D	METAL SEAT SUPPORT	2
E	BACK METAL TRAY BRACKET	1
F	FRONT METAL TRAY BRACKET	1
G	CASTER	4
H	PLASTIC CAP	4
I	PHILLIPS-HEAD BOLTS	4
J	LOCK-NUTS	4
K	WASHERS	4

INSTRUCTIONS

1. Snap Back Metal Tray Bracket (E) and Front Metal Tray Bracket (F) to Plastic Tray (B). Front Metal Tray Bracket (F) installs adjacent to the Plastic Tray cup holder. Make sure that the square holes on (E) and (F) face the floor.
2. Install Metal Frames (C) to the assembled Brackets (E) and (F) so that the holes align for Caster (G) installation. Install the 4 Casters (G) to the Frame. Ensure the square at the bottom of the Caster bolt is inserted into the square hole of the Frame. Use Washer (K) and Lock Nut (J) to secure the Caster. **DO NOT OVERTIGHTEN.**
3. Place Metal Seat Supports (D) between Metal Frames (C) and Seat (A). Align the holes and secure with Phillips Bolts (I).
4. Install Plastic Caps (H) to the Metal Frame (C) ensuring the sides are upright so the Bolts do not interfere with the Caps.

TWO YEAR LIMITED WARRANTY (UNITED STATES ONLY)

This product is warranted to be free of defects in materials or workmanship for two (2) years from the date of purchase for the original purchaser. The manufacturer is not responsible for any consequential or incidental damages arising from the breach of this or any other warranty, whether express, implied or statutory. Some states do not allow the exclusion or limitation of consequential or incidental damages, so the above exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any attempt to self-repair the product will void the limited warranty. Warranty registration is not required.

TO OPEN A WARRANTY CLAIM, PLEASE EMAIL
CUSTOMERSERVICE@DELK.US OR CALL 800-587-0882.



TREK TERRA

© 2024 Delk Industries, Inc. All Rights Reserved. The Delk™, TrekTerra®, Pro-Glide®, and TrekTerra Logo™ Trademarks are Property of Delk Industries, Inc. Patent Pending.