




SCHEDULED MAINTENANCE CHECKLIST

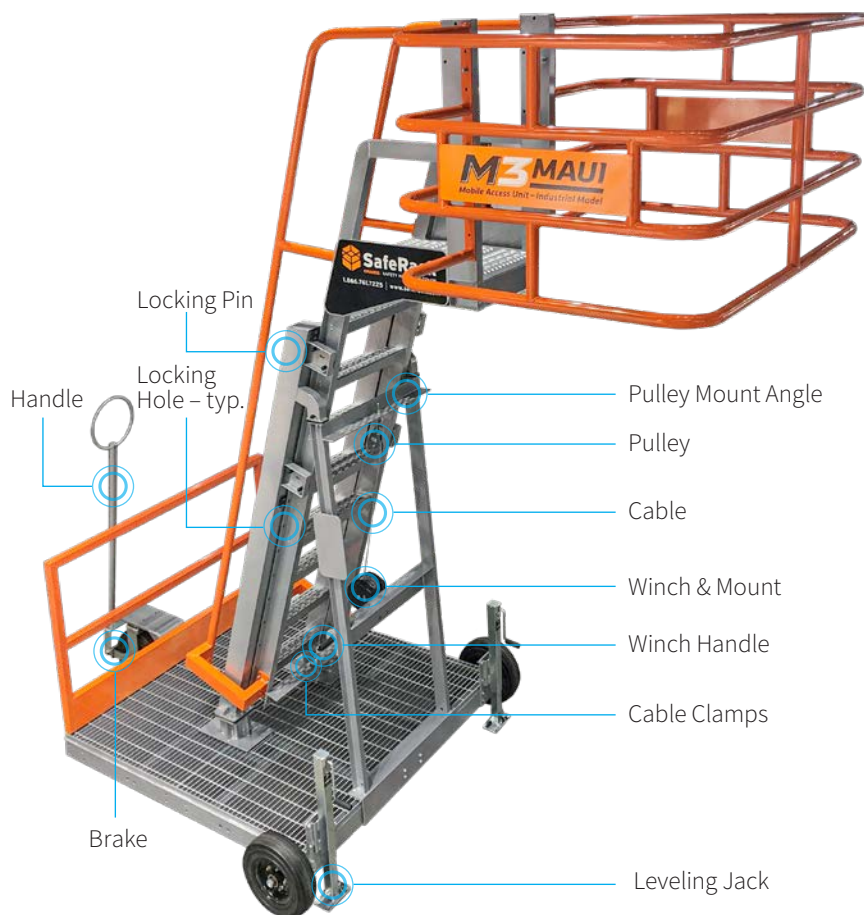

Inspect Locking Pins

- ☐ A) Verify pins are working properly
- ☐ B) Ensure pins are tightened properly in place
- ☐ C) Verify that pins protrude fully thru locking hole a minimum of 3/16" to 1/4"

Movement of Ladder/Platform Unit

- ☐ A) Verify units ability to crank up and down easily
- ☐ B) Inspect ladder rollers
- ☐ C) Ensure all fasteners are tightened properly

Winch/Cable/Pulley System

- ☐ A) Check cable for signs of fraying
- ☐ B) Verify cable clamps are tightened properly
- ☐ C) Inspect pulleys, verify all connections are tight
- ☐ D) Verify pulley mount angle is not damaged or deformed
- ☐ E) Inspect winch for wear and verify it is securely fastened to frame
- ☐ F) Inspect winch and cable for any corrosion forming
- ☐ G) Inspect winch handle and handle extension, ensuring locknut on end is securely fastened

Leveling Jack

- ☐ A) Inspect for proper working and easy cranking
- ☐ B) Verify all fasteners are tightened properly

Connections/Fasteners

- ☐ A) Inspect all bolted connections on the unit. Verify that all are tightened properly and none are missing

Visible Damage

- ☐ A) Inspect unit for damaged, bent or broken parts
- ☐ B) Inspect unit for broken welds
- ☐ C) Inspect unit for bumps and/or dents


Handle/Wheel Brake

- ☐ A) Verify brake engages when handle is in stored position
- ☐ B) Inspect handle/brake for any damage

Prevent Downtime With Replacement Parts

ABAS#	Item	3 Year Basic Kit	3 Year Extended Kit
0000	Winch Handle	1	
12801	Winch Assembly		1
13138	M3 Locking Pin	2	2
11067	Jack with Mount Plate		2
39117	Pulley Assembly	1	1

Replace Or Buy Additional MAUIs

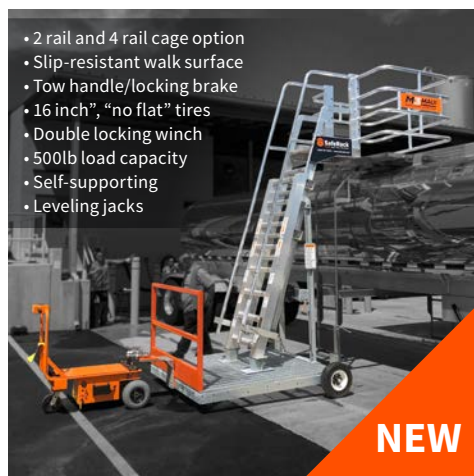

- 2 rail and 4 rail cage option
- Slip-resistant walk surface
- Tow handle/locking brake
- 16 inch, "no flat" tires
- Double locking winch
- 500lb load capacity
- Self-supporting
- Leveling jacks



☐ SafeRack MAUI Mover

The new MAUI Mover is designed to effortlessly move SafeRack's MAUI Portable stairs and platforms.



☐ YellowGate Swing Gate

The most adjustable fall protection swing gate available. Mount anywhere, no additional parts required.

Every Six Months:

- ☐ 1) Check all bolted connections to ensure that they are properly tightened and that none are missing
- ☐ 2) Inspect equipment for any damage that may have occurred while in use and may affect equipment operation
- ☐ 3) Check cable for signs of fraying
- ☐ 4) Lubricate locking pins with a multipurpose lithium grease only
- ☐ 5) Re-Pack wheel bearings with wheel bearing grease as required
- ☐ 6) Grease stabilizer jacks with a multipurpose lithium grease
- ☐ 7) Make sure locking pins are not broke and will fully engage