



W2000


Custom Stand - ZW2100-W
Universal Cradle - ZW1006-W

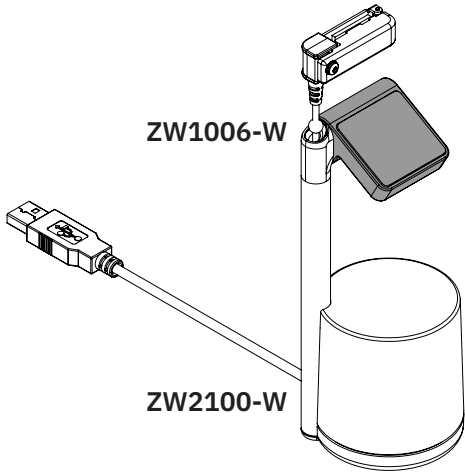


- 1** Remove the plug and use the TT8 bit to remove the screw from the side of the cradle.

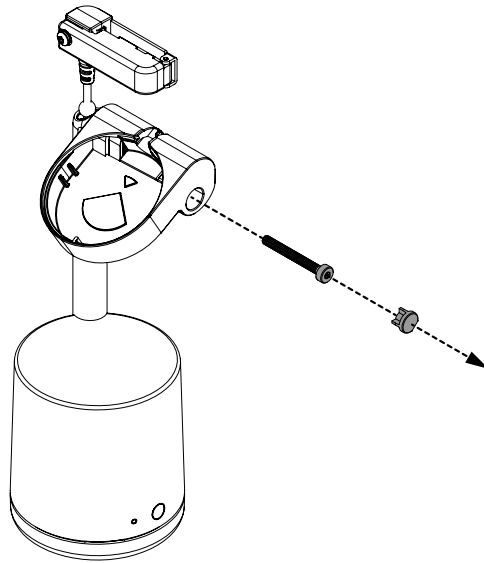


- 2** Remove the cradle from the stand.

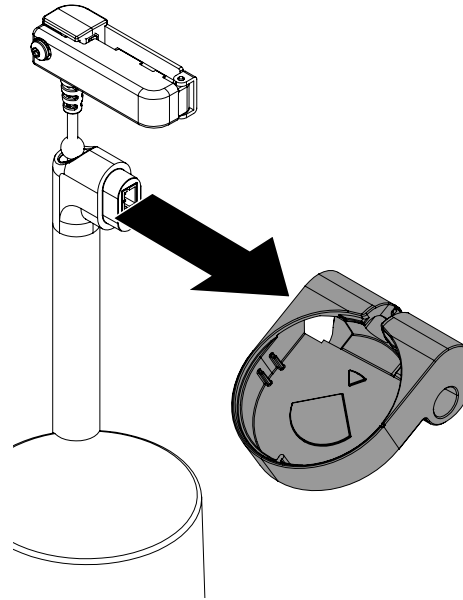


- 3** Place the ZW1006 cradle onto the stand.

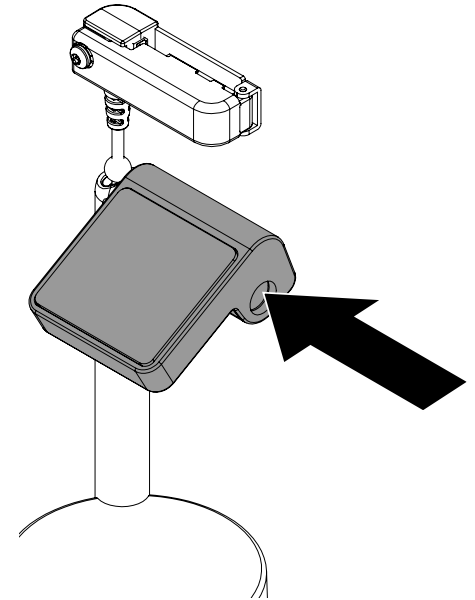


- 4** Insert the screw into the hole on the side of the cradle.

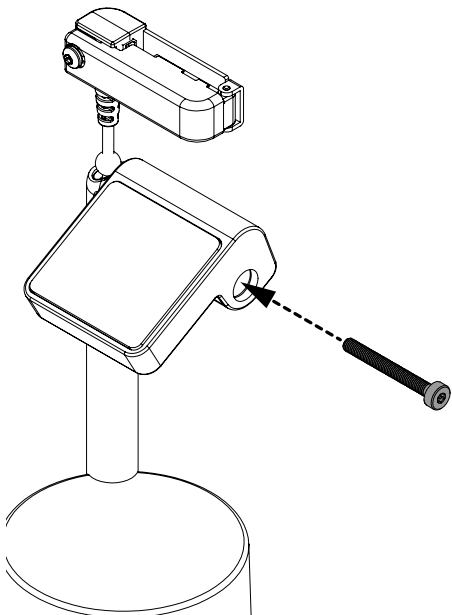


- 5** Use the TT8 in the multitool to fully tighten the screw.

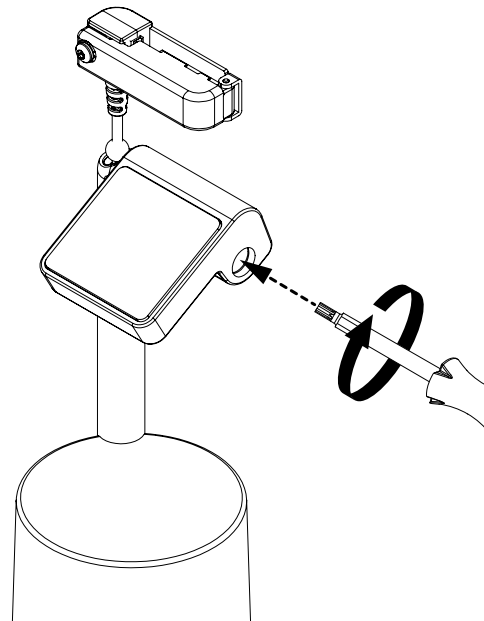


- 6** Insert the plug into the hole on the side of the cradle.

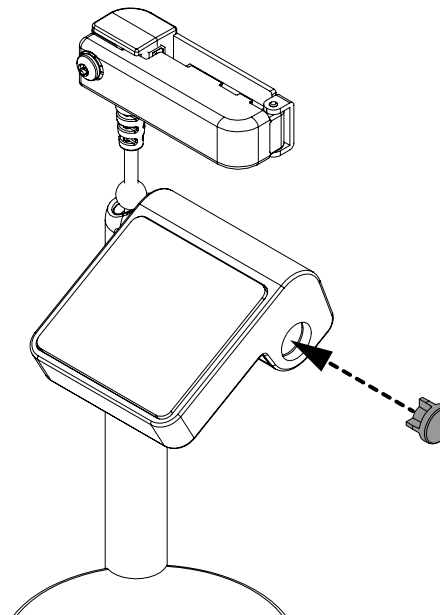


- 7** Lift the band clamp from the stand, pulling enough cable to aid in the installation of the wearable. Snap the included cable stop clip around the cable to prevent it from retracting.

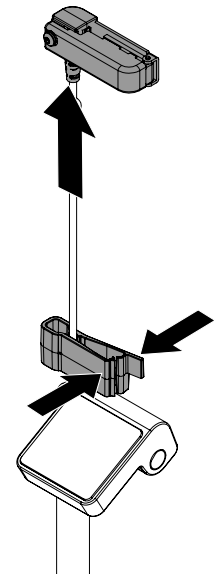


8 Use a TT8 bit to loosen the screw in the band clamp.

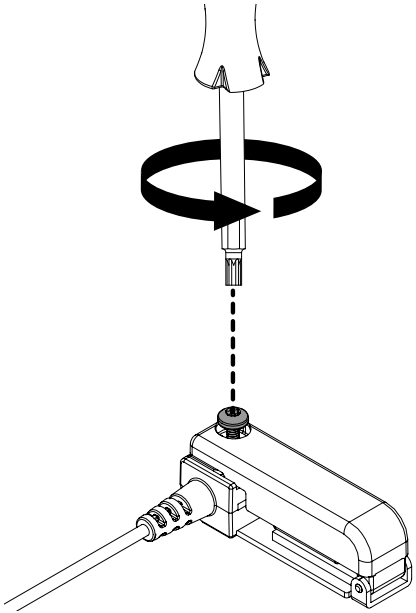


9 Open the band clamp.

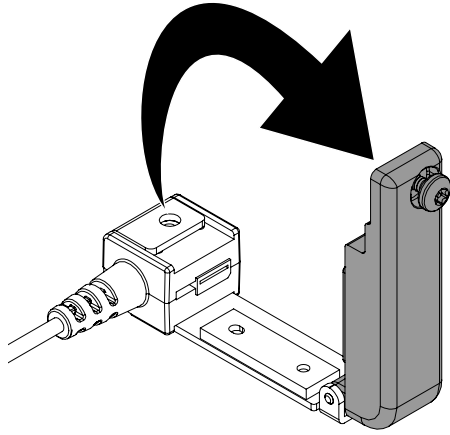


10 With the wearable face down, place the buckle band of the wearable into the open band clamp.

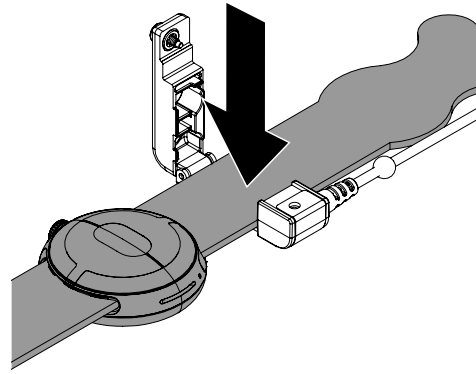


11 Plug the universal flex sensor into the port on the inside of the band clamp over the wearable.

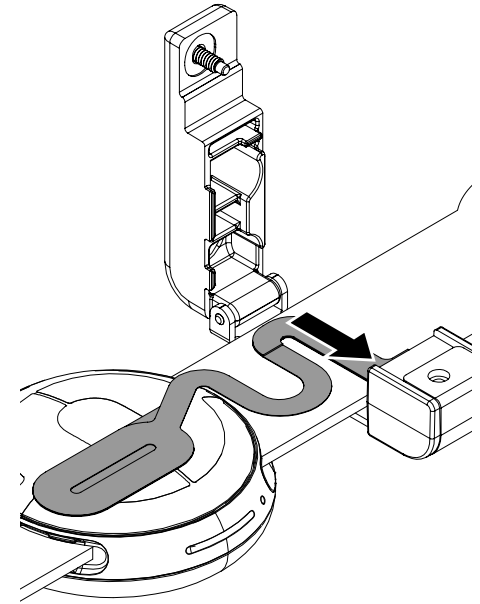


12 Peel the liner from the adhesive portion of the flex sensor.

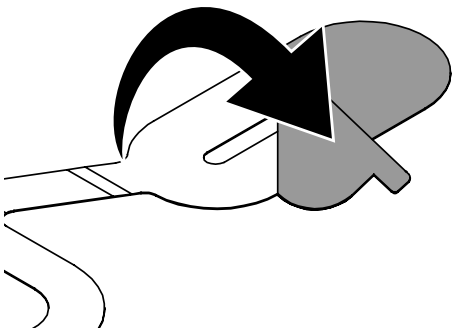


13 Press the flex adhesive against the bottom of the wearable for at least 10 seconds. Ensure that all of the oval is adhered to the wearable and that no gap is visible.

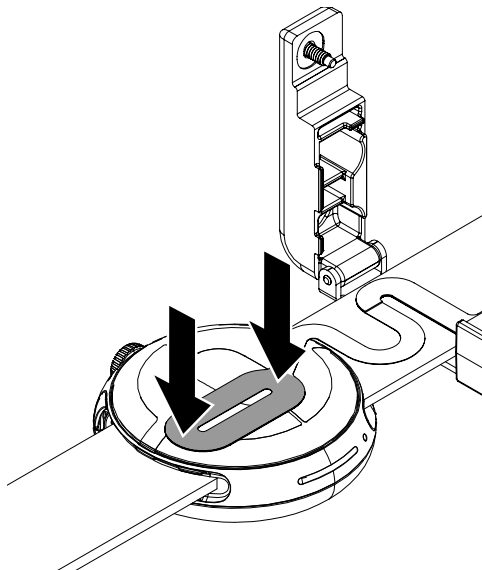


14 Close the band clamp over the watch band so that the screw engages with the screw hole.

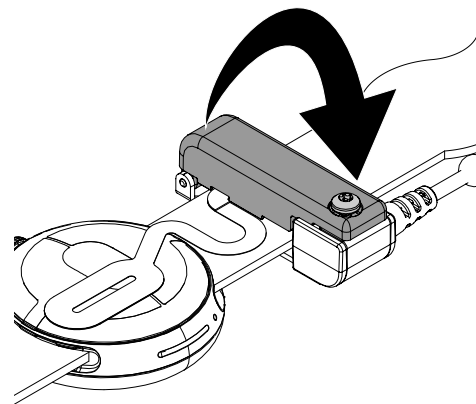


15 Use a TT8 bit to tighten the screw in the band clamp.

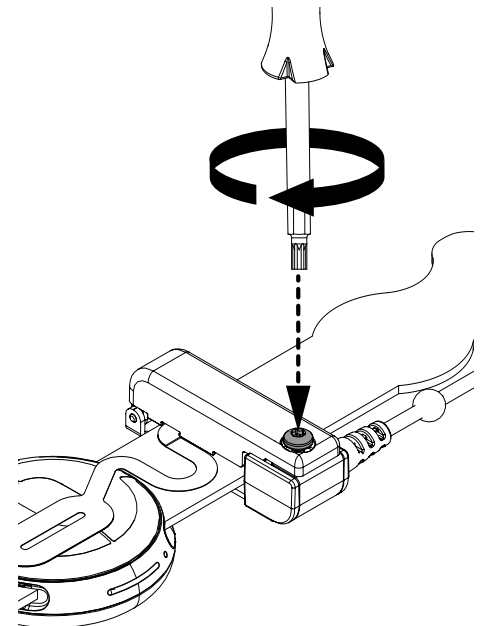


- 16 Remove the cable stop clip from the cable.

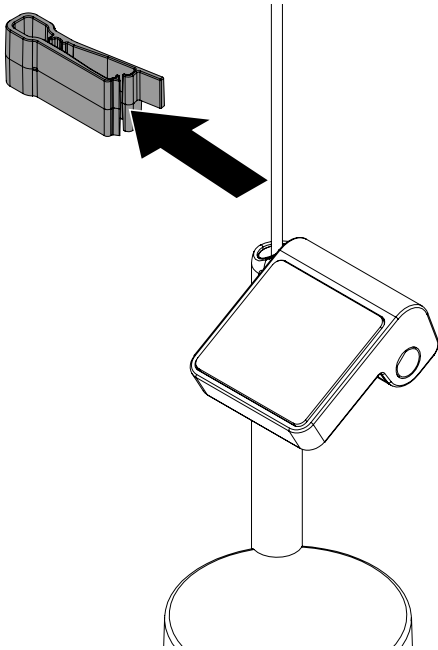


- 17 Place the wearable onto the cradle.

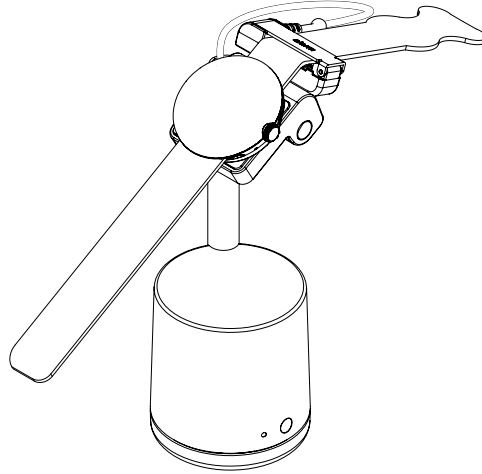

- 18 Plug the stand's power cable into a PS515 power supply and plug the power supply into a power outlet.

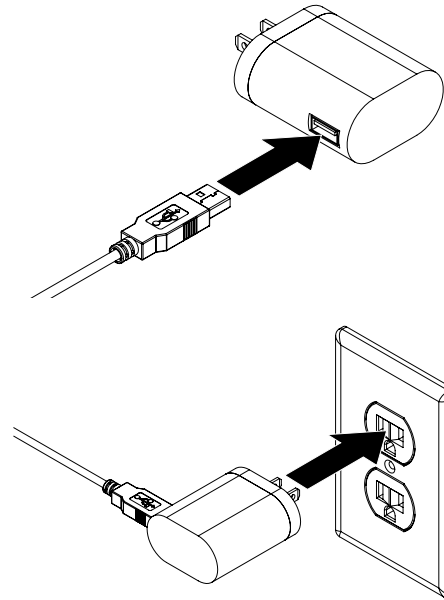

- 19 Place a charged and coded OneKEY against the lens on the side of the stand. Press the button on the key to transfer the code to the stand. This method is also used to deactivate the alarm.

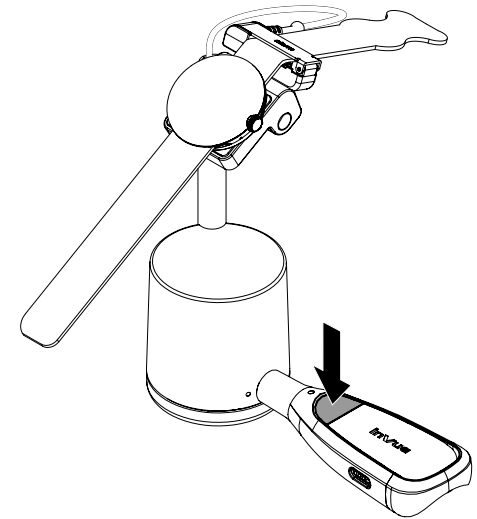

Rev0 02/19/26

invue

www.invue.com

NA / LATAM // 704.752.6513 • 888.55.INVUE

EMEA // +31.23.7113377

APAC // +852.3127.6811

© 2026 InVue Security Products Inc. All rights reserved.
InVue is a registered trademark of InVue Security Products.