



HLC-M-1004 Low Viscosity HLC™ Adhesive

APPLICATIONS

- Catheter Devices
- Endoscopes
- Diagnostic Equipment
- Therapeutic Devices
- General Medical Devices

FEATURES

- UV/Visible Light Cure
- Contact/Moisture Cure
- Limited Blooming with Light Cure
- Low Viscosity

RECOMMENDED SUBSTRATES

- ABS
- CAP
- PC
- PEI
- PMMA
- SAN

BIOCOMPATIBILITY

- ISO 10993-4 Hemolysis
- ISO 10993-5 Cytotoxicity
- ISO 10993-6 Implantation
- ISO 10993-11 Systemic Toxicity
- ISO 10993-23 Intracutaneous Irritation

Dymax HLC-M-1004 is designed for the rapid assembly of medical devices. HLC™ Adhesives utilize a patented hybrid light-curable platform that combines the best qualities of anionic and free radical adhesive chemistries. HLC Adhesives provide on-contact cure capability for dark areas not reachable by light, along with rapid, low-intensity curing with UV or visible light. Dymax MD® Medical Device Adhesives contain no nonreactive solvents. Their ability to cure in seconds enables faster processing, greater output, and lower processing costs. When cured with Dymax light-curing spot lamps, focused-beam lamps, or flood lamps, they deliver optimum speed and performance for device assembly. This material is 100% solids. Dymax lamps offer the ideal balance of UV and visible light for the fastest, deepest cures. This product is in full compliance with RoHS directives 2015/863/EU.

UNCURED PROPERTIES *

Property	Value	Test Method
Solvent Content	No Nonreactive Solvents	N/A
Chemical Class	Hybrid Light-Curable	N/A
Appearance	Yellow Transparent Liquid	N/A
Soluble in	Aprotic Solvents	N/A
Density, g/ml	1.03	ASTM D1875
Viscosity, cP	1,300 (nominal)	ASTM D1084
Unopened Shelf Life @ 2-8°C from Date of Manufacture	6 months	N/A

CURED MECHANICAL PROPERTIES *‡

Property	Value	Test Method
Durometer Hardness	D65	ASTM D2240
Tensile at Break, MPa [psi]	13.1 [1,900]	ASTM D638
Elongation at Break, %	150	ASTM D638
Modulus of Elasticity, MPa [psi]	544.7 [79,000]	ASTM D638

OTHER CURED PROPERTIES *‡

Property	Value	Test Method
Refractive Index (20°C)	1.48	ASTM D542
Boiling Water Absorption, % (2 h)	0.9	ASTM D570
Water Absorption, % (25°C, 24 h)	0.8	ASTM D570
Linear Shrinkage, %	0.2	ASTM D2566
Glass Transition Tg, °C	92	ASTM D5418

ADHESION

Substrate	Recommendation
ABS acrylonitrile-butadiene-styrene	✓
AL aluminum	✓
CAP cellulose acetate propionate	✓
PA polyamide	o
PC polycarbonate	✓
PCTG poly(cyclohexylene dimethylene terephthalate)glycol	✓
PEBA polyether block amide	o
PEEK polyetheretherketone	✓
PEI polyetherimide	✓
PETG poly(ethylene terephthalate)glycol	✓
PMMA poly(methyl methacrylate)	✓
PPO poly(p-phenylene oxide)	✓
PS polystyrene	✓
PVC poly(vinyl chloride)	✓
SAN styrene-acrylonitrile	✓
SS stainless steel	✓
TPU thermoplastic polyurethane	o

✓ Recommended o Limited Applications

* Not Specifications

N/A Not Applicable

‡ Samples cured with 405 nm LED at 100 mW/cm² followed by 24 hours at 25°C/50% R.H.

© 2022 Dymax Corporation. All rights reserved.

All trademarks in this guide, except where noted, are the property of, or used under license by Dymax Corporation, U.S.A.
Technical Data Collected 08/06/2024 Rev. 04/17/2026



MEDICAL HLC™ ADHESIVES

HLC-M-1004 Product Data Sheet

CURING GUIDELINES – TACK-FREE TIME

Cure rate is dependent upon many variables including lamp intensity, distance from the light source, and required depth of cure. The cure times below are based on lab results and are intended for reference only. Testing was performed using a 0.127 mm (0.005") thickness and measured based on the time to achieve a tack-free surface.

Dymax Curing System (Intensity)	Tack-Free Time ^A
5000-EC (200 mW/cm ²) ^B	1 s
BlueWave® MX-250 RediCure®365 nm (255 mW/cm ²) ^C	0.5 s
BlueWave® MX-250 PrimeCure®385 nm (355 mW/cm ²) ^C	0.5 s
BlueWave® MX-250 VisiCure®405 nm (375 mW/cm ²) ^C	0.5 s
BlueWave®200 (10 W/cm ²) ^B	0.5 s
BlueWave® MX-150 RediCure®365 nm (10 W/cm ²) ^C	0.5 s
BlueWave® MX-150 PrimeCure®385 nm (15 W/cm ²) ^C	0.5 s
BlueWave® MX-150 VisiCure®405 nm (15 W/cm ²) ^C	0.5 s

^A Tack-free times/belt speeds are based on a 0.127 mm thickness coating when cured with the noted Dymax cure systems.

^B Intensity was measured over the UVA range (320-395 nm) using a Dymax ACCU-CAL™ 50 Radiometer.

^C Intensity was measured over the UVA/Visible range (350-450 nm) using a Dymax ACCU-CAL™ 50-LED Radiometer.

Full cure is best determined empirically by curing at different times and intensities, and measuring the corresponding change in cured properties such as tackiness, adhesion, hardness, etc. Full cure is defined as the point at which more light exposure no longer improves cured properties.

Dymax recommends that customers employ a safety factor by curing longer and/or at higher intensities than required for full cure. Although Dymax Application Engineering can provide technical support and assist with process development, each customer must ultimately determine and qualify the appropriate curing parameters required for their unique application.



CURING GUIDELINES – NON-UV CURE SPEED VS. SUBSTRATE

Cure rate is dependent upon many variables including substrate cleanliness, porosity, and required depth of cure. The cure times below are based on lab results and are intended for reference only. Testing was performed using a 250 mm² (0.39 in²) bond area and represents the time required for the bond to support a 3 kg (6.6 lb.) weight for 10 seconds at 22°C/50% R.H.

Substrates	Non-UV Fixture Time
ABS – ABS	30 – 45s
Aluminum – Aluminum	25 – 40s
PA – PA	100 – 115s
PC – PC	105 – 120s
PEBA – PEBA	95 – 110s
PMMA – PMMA	140 – 155s
PVC – PVC	160 – 175s
Stainless Steel – Stainless Steel	200 – 215s
Cold Rolled Steel – Cold Rolled Steel	225 – 240s

DEPTH OF CURE

The graph below shows the increase in depth of cure as a function of exposure time. A 9.5 mm [0.37 in] diameter specimen was cured in a polypropylene mold and cooled to room temperature. It was then released from the mold and the cure depth was measured.

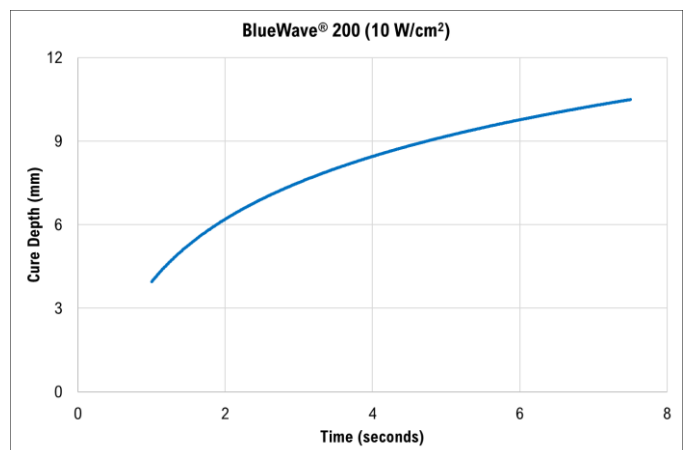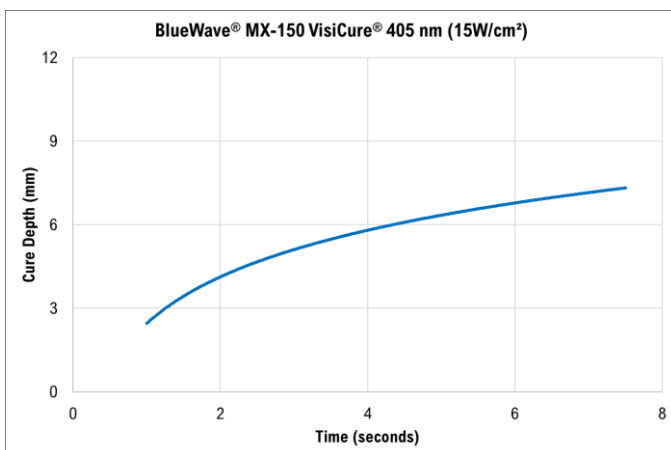



MEDICAL HLC™ ADHESIVES HLC-M-1004 Product Data Sheet

OPTIMIZING PERFORMANCE AND HANDLING

1. This product cures with exposure to UV and visible light as well as moisture. Exposure to light (ambient and artificial) and moisture should be kept to a minimum before curing. Use of nitrogen or dry compressed air is recommended to eliminate moisture in dispensing lines.
2. Dispensing components including needles and fluid lines should be 100% light blocking, not just UV blocking. Fresh acetone or similar aprotic solvents should be used for cleaning and/or purging dispensing equipment.
3. Use polypropylene, polyethylene, PTFE, or PTFE-lining for all wetted parts in direct contact with the liquid adhesive. Passivated stainless steel can be used in place of any metal components that are in direct contact with the liquid adhesive.
4. All bond surfaces should be clean and free from grease, mold release, or other contaminants prior to dispensing the adhesive.
5. Cure speed is dependent upon many variables, including lamp intensity, distance from the light source, required depth of cure, bond gap, and percent light transmission of the substrate.
6. Parts should be allowed to cool after cure before testing and subjecting to any loads.
7. In rare cases, stress cracking may occur in assembled parts. Three options may be explored to eliminate this problem. One option is to heat anneal the parts to remove molded-in stresses. A second option is to open the gap between mating parts to reduce stress caused by an interference fit. The third option is to minimize the amount of time the liquid adhesive remains in contact with the substrate(s) prior to curing.
8. Light curing generally produces some heat. If necessary, cooling fans can be placed in the curing area to reduce the heating effect on components.
9. At the point of curing, an air exhaust system is recommended to dissipate any heat and vapors formed during the curing process.

DISPENSING SUPPORT

The Dymax Application Engineering team is ready to discuss your application requirements to provide the most appropriate dispensing and/or spraying solution. Visit our current dispensing equipment portfolio [here](#) or consult our [global contact](#) phone numbers and online chat feature (available in North America only) during normal business hours for instant support.

Refer to TB117 – Hybrid Light Curable Best Practices for additional details.

STORAGE AND SHELF LIFE

This material shelf life noted on page 1 of this document, when stored between 2°C (35°F) and 8°C (46°F) in the original, unopened container. Storage below 2°C (35°F) and above 8°C (46°F) can adversely affect product properties and shelf life. This product may polymerize upon prolonged exposure to ambient and artificial light as well as moisture.

Unopened material should be brought to ambient temperature before the package is opened for use. Once opened, maintaining storage between 10°C (50°F) and 21°C (70°F) in a low humidity, dark environment is recommended. Shelf life of opened material will be dependent on several factors including temperature and humidity.

Material removed from the original container may be contaminated during handling or use. Do not return product to the original container.

STERILIZATION

Compatible sterilization methods include gamma irradiation and ethylene oxide. Sterilization by autoclaving may be limited to certain applications. It remains the user's obligation to ascertain the effect of sterilization on the cured adhesive.

CLEANUP

Uncured material may be removed from dispensing components and parts with aprotic solvents, such as acetone or ethyl acetate. Cured material will be impervious to many solvents and difficult to remove. Cleanup of cured material may require mechanical methods such as ultrasonic bath, water jet, vacuum tweezers, air knife and/or warming to aid in the removal.

BIOCOMPATIBILITY

Polymerized Dymax MD® medical device adhesives are biocompatibility tested in accordance with ISO 10993 and/or USP Class VI. The completed tests are listed on each product data sheet. Copies of the test reports are available upon request. In all cases, it is the user's responsibility to determine and validate the suitability of these adhesives in the intended medical device. These adhesives have not been tested for prolonged or permanent implantation and are only intended for use in short-term (<29 days) or single-use disposable-device applications. Dymax does not authorize their use in long-term implant applications. Customers using these materials for such applications do so at their own risk and take full responsibility for ensuring product safety and biocompatibility.



MEDICAL HLC™ ADHESIVES HLC-M-1004 Product Data Sheet

GENERAL INFORMATION

This product is intended for industrial use only. Keep out of the reach of children. Avoid breathing vapors. Avoid contact with skin, eyes, and clothing. Wear impervious gloves. Repeated or continuous skin contact with uncured material may cause irritation. Remove material from skin with soap and water. Never use organic solvents to remove material from skin and eyes. For more information on the safe handling of this material, please refer to the Safety Data Sheet before use.

The data provided in this document are based on historical testing that Dymax performed under laboratory conditions as they existed at that time and are for informational purposes only. The data are neither specifications nor guarantees of future performance in a particular application. Dymax does not guarantee that this product's properties are suitable for the user's intended purpose.

Numerous factors—including, without limitation, transport, storage, processing, the material with which the product is used, and the ultimate function or purpose for which the product was obtained—may affect the product's performance and/or may cause the product's actual behavior to deviate from its behavior in the laboratory. None of these factors are within Dymax's control. Conclusions about the behavior of the product under the user's particular conditions, and the product's suitability for a specific purpose, cannot be drawn from the information contained in this document.

It is the user's responsibility to determine (i) whether a product is suitable for the user's particular purpose or application and (ii) whether it is compatible with the user's intended manufacturing process, equipment, and methods. Under no circumstances will Dymax be liable for determining such suitability or compatibility. Before the user sells any item that incorporates Dymax's product, the user shall adequately and repetitively test the item in accordance with the user's procedures and protocols. Unless specifically agreed to in writing, Dymax will have no involvement in, and shall under no circumstances be liable for, such testing.

Dymax makes no warranties, whether express or implied, concerning the merchantability of this product or its fitness for a particular purpose. Nothing in this document should be interpreted as a warranty of any kind. Under no circumstances will Dymax be liable for any injury, loss, expense or incidental or consequential damage of any kind allegedly arising in connection with the user's handling, processing, or use of the product. It is the user's responsibility to adopt appropriate precautions and safeguards to protect persons and property from any risk arising from such handling, processing, or use.

The specific conditions of sale for this product are set forth in Dymax's [General Terms & Conditions of Sale](#). Nothing contained herein shall act as a representation that the product use or application is free from patents owned by Dymax or any others. Nothing contained herein shall act as a grant of license under any Dymax Corporation Patent.

Except as otherwise noted, all trademarks used herein are trademarks of Dymax. The "®" symbol denotes a trademark that is registered in the U.S. Patent and Trademark Office.

The contents of this document are subject to change. Unless specifically agreed to in writing, Dymax shall have no obligation to notify the user about any change to its content.

CONTACT DYMAX

www.dymax.com

Americas

USA | +1.860.482.1010 | info@dymax.com
Mexico | +1 915 315 9381 | info-LATAM@dymax.com

Europe

Germany | +49 611.962.7900 | info_de@dymax.com
Ireland | +353 21.237.3016 | info_ie@dymax.com

Asia

Singapore | +65.67522887 | info_ap@dymax.com
Shenzhen | +86.755.83485759 | info@hanarey.com
Hong Kong | +852.2460.7038 | dymaxasia@dymax.com
Korea | +82.31.608.3434 | info_kr@dymax.com