



## 2101-MW-UR

### LED-Curable Adhesive for Medical Wearables with Ultra-Red® Fluorescing

APPLICATIONS	FEATURES	RECOMMENDED SUBSTRATES	BIOCOMPATIBILITY
<ul style="list-style-type: none"> <li>Medical Smart Devices</li> <li>Patient Monitoring Devices</li> <li>Large Volume Injectors</li> <li>Continuous Glucose Monitors</li> <li>Diabetes Care Monitors</li> <li>Vital Sign Monitoring Devices</li> <li>Sleep Monitoring Devices</li> <li>Pain Management Devices</li> </ul>	<ul style="list-style-type: none"> <li>UV/Visible Light Cure</li> <li>405 nm LED Curable</li> <li>Ultra-Red® Fluorescing</li> <li>Wearable Friendly</li> <li>IBOA Free</li> </ul>	<ul style="list-style-type: none"> <li>PC</li> <li>PVC</li> <li>TPU</li> </ul>	<ul style="list-style-type: none"> <li>ISO 10993-5 Cytotoxicity</li> <li>ISO 10993-23 Intracutaneous Irritation</li> <li>ISO 10993-10 Sensitization</li> </ul>

Dymax 2101-MW-UR is designed for rapid assembly of medical wearable devices where skin sensitivity is a concern and substrates are generally standard medical plastics. Formulated with Ultra-Red® fluorescing technology, 2101-MW-UR fluoresces bright red under low-intensity black light (365 nm). The bright red fluorescence contrasts extremely well on plastics that naturally fluoresce blue in color (like PVC), and greatly assists with visual inspection of the bond-line area. Dymax medical device adhesives contain no nonreactive solvents and cure upon exposure to light. Their ability to cure in seconds enables faster processing, greater output, and lower processing costs. When cured with Dymax light-curing spot lamps, focused-beam lamps, or flood lamps, they deliver optimum speed and performance for device assembly. This material is 100% solids. Dymax lamps offer the ideal balance of UV and visible light for the fastest, deepest cures. This product is in full compliance with RoHS directives 2015/863/EU.

UNCURED PROPERTIES *		
Property	Value	Test Method
Solvent Content	No Nonreactive Solvents	N/A
Chemical Class	Acrylated Urethane	N/A
Appearance	Colorless to Light Yellow Transparent Liquid	N/A
Soluble in	Organic Solvents	N/A
Density, g/ml	1.06	ASTM D1875
Viscosity, cP	5,500 (nominal)	DSTM 502‡
Shelf Life at Recommended Conditions from Date of Manufacture	7 months	N/A

CURED MECHANICAL PROPERTIES *		
Property	Value	Test Method
Durometer Hardness	D77	ASTM D2240
Tensile at Break, MPa [psi]	24.8 [3,600]	ASTM D638
Elongation at Break, %	80	ASTM D638
Modulus of Elasticity, MPa [psi]	1,020.4 [148,000]	ASTM D638

OTHER CURED PROPERTIES *		
Property	Value	Test Method
Refractive Index (20°C)	1.50	ASTM D542
Boiling Water Absorption, % (2 h)	4.5	ASTM D570
Water Absorption, % (25°C, 24 h)	2.1	ASTM D570
Linear Shrinkage, %	0.7	ASTM D2566
Glass Transition Tg, °C	99	ASTM D5418
CTEα1, μm/m/°C	106	ASTM E831

OTHER CURED PROPERTIES *		
Property	Value	Test Method
Refractive Index (20°C)	1.50	ASTM D542
Boiling Water Absorption, % (2 h)	4.5	ASTM D570
Water Absorption, % (25°C, 24 h)	2.1	ASTM D570
Linear Shrinkage, %	0.7	ASTM D2566
Glass Transition Tg, °C	99	ASTM D5418
CTEα1, μm/m/°C	106	ASTM E831
CTEα2, μm/m/°C	208	ASTM E831

ADHESION	
Substrate	Recommendation
ABS - acrylonitrile butadiene styrene	✓
PC - polycarbonate	✓
PCTG - polycyclohexylenedimethylene terephthalate glycol	✓
PEI - polyetherimide	o
PETG - polyethylene terephthalate glycol	✓
PS - polystyrene	o
PVC - polyvinyl chloride	✓
SAN - styrene acrylonitrile	✓
TPU - thermoplastic polyurethane	✓
GL - glass (borosilicate, quartz, mica)	o
FR4 - glass-reinforced epoxy resin laminate	o

✓ Recommended      o Limited Applications  
 st Requires Surface Treatment (e.g. plasma, corona treatment, etc.)

\* Not Specifications

N/A Not Applicable

‡ DSTM Refers to Dymax Standard Test Method

© 2024 Dymax Corporation. All rights reserved.

All trademarks in this guide, except where noted, are the property of, or used under license by Dymax Corporation, U.S.A.

Technical Data Collected 11/11/20 Rev.09/10/2024





## CURING GUIDELINES

Fixture time is defined as the time to develop a shear strength of 0.1 N/mm<sup>2</sup> [10 psi] between glass slides. Actual cure time typically is 3-to-5 times fixture time.

Dymax Curing System (Intensity)	Fixture Time <sup>A</sup>
5000-ECE (200 mW/cm <sup>2</sup> ) <sup>B</sup>	1 s
BlueWave® AX-550 RediCure® 365 nm (425 mW/cm <sup>2</sup> ) <sup>C</sup>	1.4 s
BlueWave® AX-550 PrimeCure® 385 nm (800 mW/cm <sup>2</sup> ) <sup>C</sup>	1.6 s
BlueWave® AX-550 VisiCure® 405 nm (650 mW/cm <sup>2</sup> ) <sup>C</sup>	1.2 s
BlueWave® 200 (10 W/cm <sup>2</sup> ) <sup>B</sup>	1 s
BlueWave® MX-150 RediCure® 365 nm (10 W/cm <sup>2</sup> ) <sup>C</sup>	3.4 s
BlueWave® MX-150 PrimeCure® 385 nm (15 W/cm <sup>2</sup> ) <sup>C</sup>	2.6 s
BlueWave® MX-150 VisiCure® 405 nm (15 W/cm <sup>2</sup> ) <sup>C</sup>	1.6 s

<sup>A</sup> Fixture times/belt speeds are typical for curing thin films through 100% UV and light-transmitting substrates. Light-obstructing substrates may require longer cure times.

<sup>B</sup> Intensity was measured over the UVA range (320-395 nm) using a Dymax ACCU-CAL™ 50 Radiometer.



<sup>C</sup> Intensity was measured over the UVA/Visible range (350-450 nm) using a Dymax ACCU-CAL™ 50-LED Radiometer.

Full cure is best determined empirically by curing at different times and intensities, and measuring the corresponding change in cured properties such as tackiness, adhesion, hardness, etc. Full cure is defined as the point at which more light exposure no longer improves cured properties.

Dymax recommends that customers employ a safety factor by curing longer and/or at higher intensities than required for full cure. Although Dymax Application Engineering can provide technical support and assist with process development, each customer must ultimately determine and qualify the appropriate curing parameters required for their unique application.

## DEPTH OF CURE

The graph below shows the increase in depth of cure as a function of exposure time. A 9.5 mm [0.37 in] diameter specimen was cured in a polypropylene mold and cooled to room temperature. It was then released from the mold and the cure depth was measured.

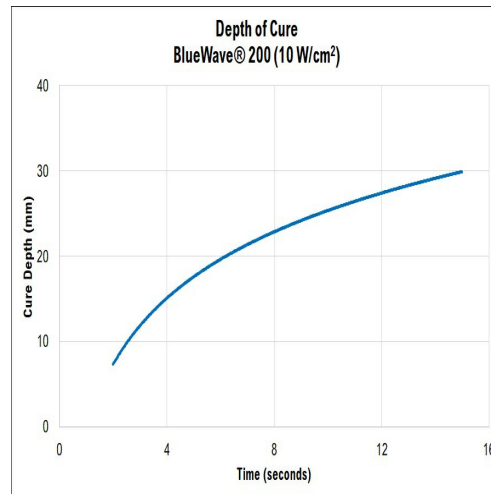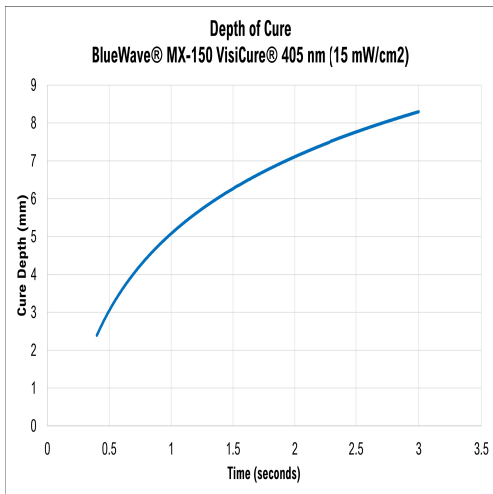



## OPTIMIZING PERFORMANCE AND HANDLING

1. This product cures with exposure to UV and visible light. Exposure to ambient and artificial light should be kept to a minimum before curing. Dispensing components including needles and fluid lines should be 100% light blocking, not just UV blocking.
2. All bond surfaces should be clean and free from grease, mold release, or other contaminants prior to dispensing the adhesive.
3. Cure speed is dependent upon many variables, including lamp intensity, distance from the light source, required depth of cure, bond gap, and percent light transmission of the substrate.
4. Oxygen in the atmosphere may inhibit surface cure. Surfaces exposed to air may require high-intensity UV light to produce a dry surface cure. Flooding the bond area with an inert gas, such as nitrogen, can also reduce the effects of oxygen inhibition.
5. Parts should be allowed to cool after cure before testing and subjecting to any loads.
6. In rare cases, stress cracking may occur in assembled parts. Three options may be explored to eliminate this problem. One option is to heat anneal the parts to remove molded-in stresses. A second option is to open the gap between mating parts to reduce stress caused by an interference fit. The third option is to minimize the amount of time the liquid adhesive remains in contact with the substrate(s) prior to curing.
7. Light curing generally produces some heat. If necessary, cooling fans can be placed in the curing area to reduce the heating effect on components.
8. At the point of curing, an air exhaust system is recommended to dissipate any heat and vapors formed during the curing process.

## DISPENSING SUPPORT

The Dymax Application Engineering team is ready to discuss your application requirements to provide the most appropriate dispensing and/or spraying solution. Visit our current dispensing equipment portfolio [here](#) or consult our [global contact](#) phone numbers and online chat feature (available in North America only) during normal business hours for instant support.

## STORAGE AND SHELF LIFE

Store the material in a cool, dark place when not in use. Do not expose to light. This product may polymerize upon prolonged exposure to ambient and artificial light. Keep covered when not in use. This material shelf life noted on page 1 of this document, when stored between 10°C (50°F) and 32°C (90°F) in the original, unopened container.

## STERILIZATION

Compatible sterilization methods include gamma irradiation and ethylene oxide. Sterilization by autoclaving may be limited to certain applications. It remains the user's obligation to ascertain the effect of sterilization on the cured adhesive.

## CLEANUP

Uncured material may be removed from dispensing components and parts with organic solvents. Cured material will be impervious to many solvents and difficult to remove. Cleanup of cured material may require mechanical methods such as ultrasonic bath, water jet, vacuum tweezers, air knife and/or warming to aid in the removal.

## BIOCOMPATIBILITY

Polymerized Dymax MD® medical device adhesives are biocompatibility tested in accordance with ISO 10993 and/or USP Class VI. The completed tests are listed on each product data sheet. Copies of the test reports are available upon request. In all cases, it is the user's responsibility to determine and validate the suitability of these adhesives in the intended medical device. These adhesives have not been tested for prolonged or permanent implantation and are only intended for use in short-term (<29 days) or single-use disposable-device applications. Dymax does not authorize their use in long-term implant applications. Customers using these materials for such applications do so at their own risk and take full responsibility for ensuring product safety and biocompatibility.



## GENERAL INFORMATION

This product is intended for industrial use only. Keep out of the reach of children. Avoid breathing vapors. Avoid contact with skin, eyes, and clothing. Wear impervious gloves. Repeated or continuous skin contact with uncured material may cause irritation. Remove material from skin with soap and water. Never use organic solvents to remove material from skin and eyes. For more information on the safe handling of this material, please refer to the Safety Data Sheet before use.

The data provided in this document are based on historical testing that Dymax performed under laboratory conditions as they existed at that time and are for informational purposes only. The data are neither specifications nor guarantees of future performance in a particular application. Dymax does not guarantee that this product's properties are suitable for the user's intended purpose.

Numerous factors—including, without limitation, transport, storage, processing, the material with which the product is used, and the ultimate function or purpose for which the product was obtained—may affect the product's performance and/or may cause the product's actual behavior to deviate from its behavior in the laboratory. None of these factors are within Dymax's control. Conclusions about the behavior of the product under the user's particular conditions, and the product's suitability for a specific purpose, cannot be drawn from the information contained in this document.

It is the user's responsibility to determine (i) whether a product is suitable for the user's particular purpose or application and (ii) whether it is compatible with the user's intended manufacturing process, equipment, and methods. Under no circumstances will Dymax be liable for determining such suitability or compatibility. Before the user sells any item that incorporates Dymax's product, the user shall adequately and repetitively test the item in accordance with the user's procedures and protocols. Unless specifically agreed to in writing, Dymax will have no involvement in, and shall under no circumstances be liable for, such testing.

Dymax makes no warranties, whether express or implied, concerning the merchantability of this product or its fitness for a particular purpose. Nothing in this document should be interpreted as a warranty of any kind. Under no circumstances will Dymax be liable for any injury, loss, expense or incidental or consequential damage of any kind allegedly arising in connection with the user's handling, processing, or use of the product. It is the user's responsibility to adopt appropriate precautions and safeguards to protect persons and property from any risk arising from such handling, processing, or use.

The specific conditions of sale for this product are set forth in Dymax's [General Terms & Conditions of Sale](#). Nothing contained herein shall act as a representation that the product use or application is free from patents owned by Dymax or any others. Nothing contained herein shall act as a grant of license under any Dymax Corporation Patent.

Except as otherwise noted, all trademarks used herein are trademarks of Dymax. The "®" symbol denotes a trademark that is registered in the U.S. Patent and Trademark Office.

The contents of this document are subject to change. Unless specifically agreed to in writing, Dymax shall have no obligation to notify the user about any change to its content.

## CONTACT DYMAX

[www.dymax.com](http://www.dymax.com)

### Americas

USA | +1.860.482.1010 | [info@dymax.com](mailto:info@dymax.com)

### Europe

Germany | +49 611.962.7900 | [info\\_de@dymax.com](mailto:info_de@dymax.com)

Ireland | +353 21.237.3016 | [info\\_ie@dymax.com](mailto:info_ie@dymax.com)

### Asia

Singapore | +65.67522887 | [info\\_ap@dymax.com](mailto:info_ap@dymax.com)

Shenzhen | +86.755.83485759 | [info@hanarey.com](mailto:info@hanarey.com)

Hong Kong | +852.2460.7038 | [dymaxasia@dymax.com](mailto:dymaxasia@dymax.com)

Korea | +82.31.608.3434 | [info\\_kr@dymax.com](mailto:info_kr@dymax.com)