




CID

ATTACHMENTS

SNOW PUSHER

SLM OWNER'S MANUAL

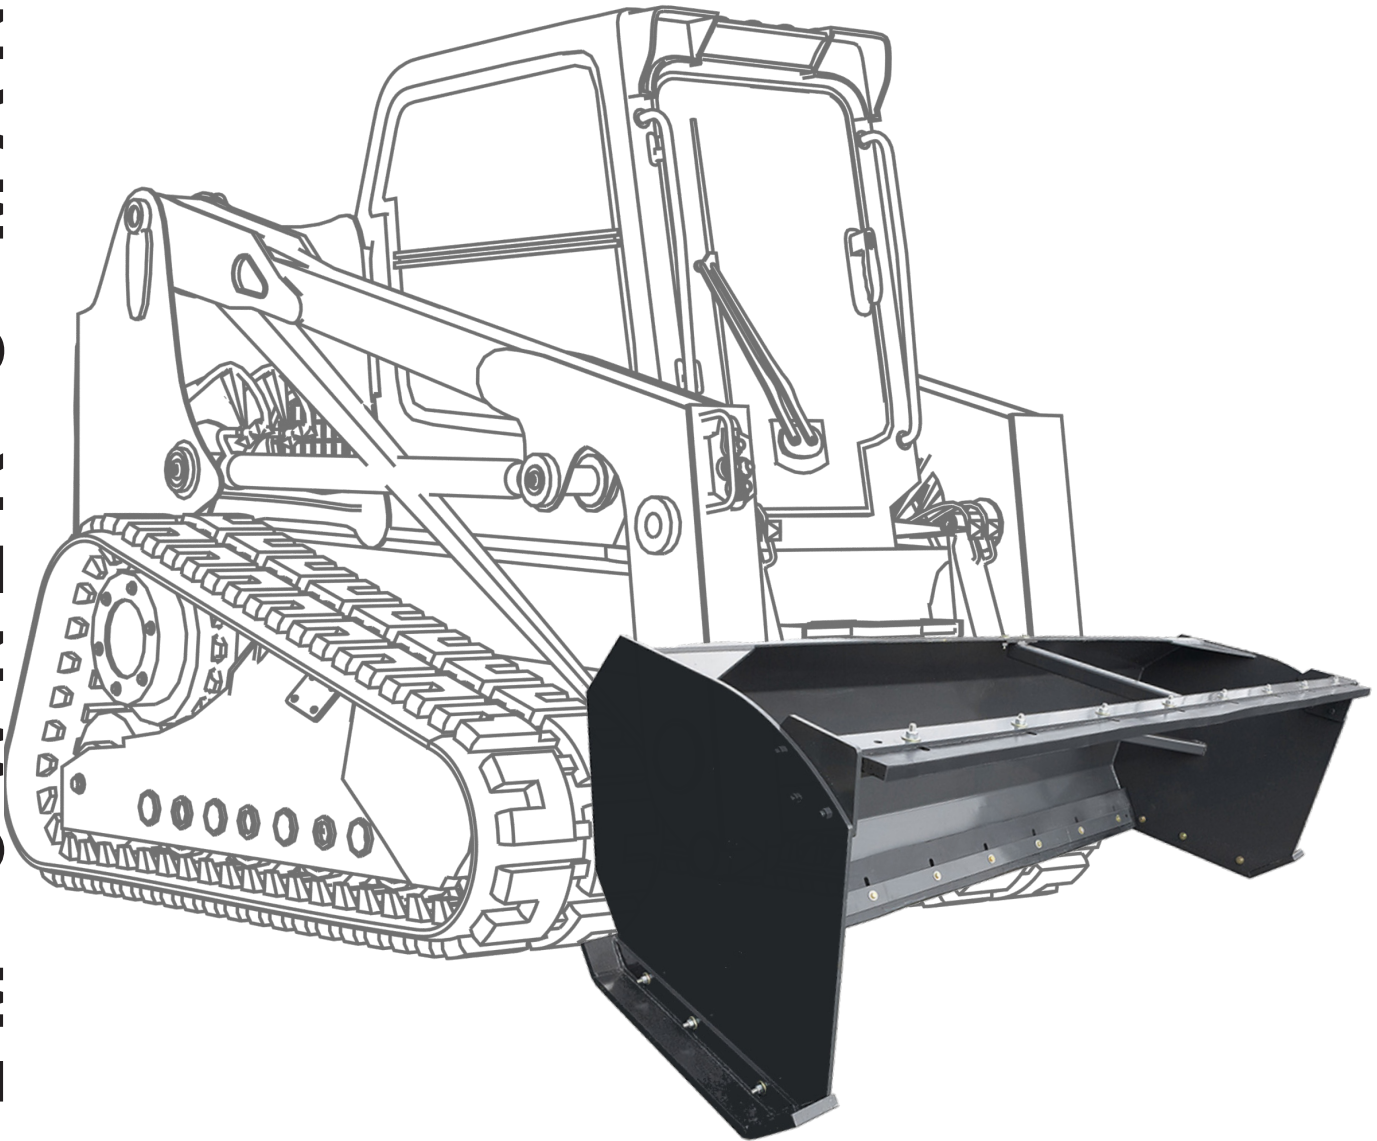

MINI


COMPACT

X-TREME

JUN
2026

OPERATING INSTRUCTIONS | SAFETY RULES | MAINTENANCE PROCEDURES

REGISTER YOUR PRODUCT

 CID	WWW.CIDATTACHMENTS.COM	336-859-2002
MODEL	<input type="text"/>	WEIGHT <input type="text"/>
PART	<input type="text"/>	HP RANGE <input type="text"/>
SERIAL	<input type="text"/>	
HYDRAULIC PRESSURE	<input type="text"/>	HYDRAULIC FLOW <input type="text"/>

Please see Page 7 for instructions of where to find your model and serial number.

WARNING

To prevent personal injury or even death, be sure you read and understand all the instructions in this manual and other related OEM equipment manuals! This attachment is designed for the purpose specified. DO NOT modify or use this attachment for any application other than that for which it was designed.

Thank you for choosing CID. This attachment has been designed and manufactured to meet the needs of discerning users. We are committed to providing you with a heavy duty product that will provide years of satisfaction and safe operation.

This manual will provide instructions on how to safely operate and maintain this attachment. All users must read and understand this manual before operating this attachment. Upon reading this manual, all users should sign the "Safety Acknowledgment Form" at the end of this manual.

Please record your model and dealer information on the inside front cover. You will be asked to provide this information when ordering parts or requesting service. If you need more information on this product, contact your local dealer or visit www.cidattachments.com.

Sincerely, Cid Attachments



TABLE OF CONTENTS

- INTRODUCTION**.....2
- SECTION 2 SNOW PUSHER**
- 2.0 Snow Pusher.....4
- SECTION 3 BASIC SAFETY AND OPERATING PROCEDURES**
- 3.0 Safety Terms.....5
- 3.1 Safety Symbols & Decals.....6-7
- 3.2 Skid Loader Requirements.....8
- 3.3 Personal Protective Equipment.....8
- 3.4 Federal Law & Regulations.....8
- 3.5 Safety Instructions.....9
- SECTION 4 OPERATING PROCEDURES**
- 4.0 Unpacking Your Snow Pusher.....10
- 4.1 Pre-Operating Checklist.....10
- 4.2 How To Connect Attachment10-11
- 4.3 Operating Guidelines.....12
- 4.4 Safety When Snow Pushing.....13
- 4.5 Disconnecting Attachment.....13
- SECTION 5 MAINTENANCE PROCEDURES**
- 5.0 Maintenance Overview.....14
- 5.1 Maintenance Log Instructions.....15
- 5.2 Storage Tips.....15
- 5.3 Snow Pusher Care.....16
- 5.4 Skid Shoe or Edge Replacement.....16
- 5.5 Snow Pusher Pull-Back Removal or Replacement.....16
- SECTION 6 TROUBLESHOOTING**
- 6.0 Troubleshooting Chart.....17
- SECTION 7 PARTS INFORMATION**
- 7.0 Parts Information Form.....18
- 7.1 Snow Pusher Parts Diagram.....19-22
- SECTION 8 WARRANTY INFORMATION**
- 8.0 Warranty Statement.....23-24
- 8.1 Warranty Return Authorization Policy.....24
- 8.2 Warranty Procedure.....25
- SECTION 9 SAFETY ACKNOWLEDGMENT FORM**.....26
- SECTION 10 MAINTENANCE LOGS**.....27

Disclaimer: Any critical changes made to this manual by individuals outside the manufacturer's authorized personnel are doing so at their own risk. The manufacturer cannot be held legally responsible for any consequences, damages, or liabilities resulting from such modifications. It is advised to adhere strictly to the original manual provided by the manufacturer for optimal performance, safety, and reliability.



WARNING: This product can expose you to chemicals including benzene and mineral oils, which are known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.

SECTION 2

MODELS


COMPACT SNOW PUSHER

- 1-1/2" x 8" Replaceable Rubber Edge
- 1/2" x 8" Replaceable AR400 Steel Edge (Optional)
- 1/2" AR400 Replaceable Shoes
- 5/16" Sides
- Optional Pull Back with 1" x 6" Rubber Edge
- Compact rated for up to 45 HP



X-TREME SNOW PUSHER

- 1-1/2" x 8" Replaceable Rubber Edge
- 1/2" x 8" Replaceable AR400 Steel Edge (Option)
- 3/4" AR400 Replaceable Shoes
- 1/4" Mold Board, 3/8" Sides
- Optional: Pull Back that uses 1" x 6" Rubber Edge
- X-Treme Snow Pusher rated for 45 HP and up

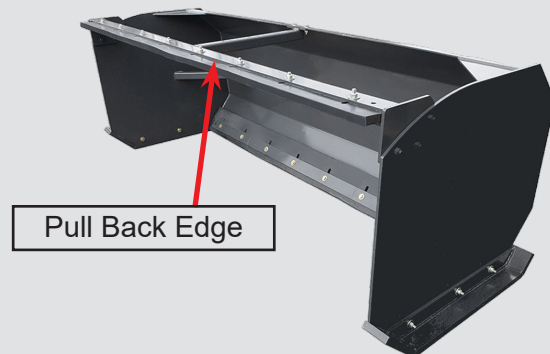

MINI SNOW PUSHER

- 1-1/2" x 8" Replaceable Rubber Edge
- 1/2" x 8" Replaceable AR400 Steel Edge (Optional)
- 1/2" AR400 Replaceable Shoes
- 5/16" Sides
- Optional: Pull Back that uses 1" x 6" Rubber Edge
- Mini rated for up to 45 HP



SECTION 3

SAFETY AND OPERATION

The following terms may be used interchangeably throughout this manual.

Term	Alternate Terms Used
Snow Pusher	implement, attachment, product, pusher
Machine	skid steer loader, tractor, loader, prime mover, host machine, skid steer
Operator	user, personnel

This **Snow Pusher** is designed and manufactured with safety in mind. However, improper use and operator error can result in death or serious injury. It is important that you read and fully understand the safety instructions and operating procedures presented in this manual before operating this attachment. Accident prevention is a combination of good judgment, common sense, awareness and proper training!



BEFORE YOU OPERATE THIS SNOW PUSHER:

KNOW how to safely operate your machine.

READ and UNDERSTAND the safety instructions and operating procedures contained in this manual.

ACKNOWLEDGE your understanding of all safety instructions presented in this manual by signing the “Safety Acknowledgment Form” at the end of this manual.

Although every effort has been made to ensure a safe product, every possible circumstance that could pose a potential hazard cannot be anticipated. The warnings presented in this manual and on this product, are therefore not all-inclusive.

In addition to the safety messages presented in this section, you must also read and understand the safety messages presented in the other sections of this manual.

3.1 SAFETY SYMBOLS & DECALS

This manual and the decals on this attachment use safety symbols, hazard labels, pictograms and color coded signal words to alert you to potential hazards that may cause severe injury or death if a safety instruction is ignored.



SAFETY ALERT SYMBOL - This symbol is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

HAZARD CLASSIFICATIONS

Hazards are identified by the “Safety Alert Symbol” and followed by the signal word “DANGER”, “WARNING”, or “CAUTION”.

! DANGER
 Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This signal word is limited to the most extreme situations.

! WARNING
 Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

! CAUTION
 Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTICE
 Indicates a situation which may cause damage to equipment or property. Messages are not related to personal injury.

Safety Instructions
 Indicates specific safety-related instructions or procedures.



Pictogram	Description
	OPERATING MANUAL: Operators must read and understand the safety instructions in the operating manual to prevent death or serious injury.
	EYE PROTECTION & CARDBOARD: Operators and Maintenance personnel must wear proper eye protection and use cardboard or wood to investigate hydraulic leaks to prevent death or serious injury from being injected with high pressure hydraulic fluid.
	HIGH PRESSURE FLUID INJECTION HAZARD: Operators and Maintenance personnel must not place fingers or hands directly over a hydraulic leak to prevent death or serious injury from being injected with high pressure hydraulic fluid.
	NO BYSTANDERS: DO NOT operate this attachment near bystanders. Bystanders must stay back at least 30 feet from the attachment to prevent death or injury from objects being thrown.
	CRUSH HAZARD: DO NOT place any part of the body under the attachment or machine to prevent death or serious injury from being crushed .


3.1 SAFETY SYMBOLS & DECALS

The safety decals affixed to this attachment are to keep you safe. DO NOT ignore these decals.

Read and understand each decal's safety message. Follow these Safety Decal Instructions:

**WHEN ORDERING, CHOOSE THE PROPER DECAL FOR YOUR MODEL*

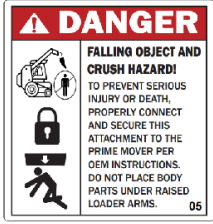REF	DESCRIPTION	LABEL	QTY
1	DANGER-Falling Object/ Crushing Hazard		1
2	WARNING: Read Manual		1

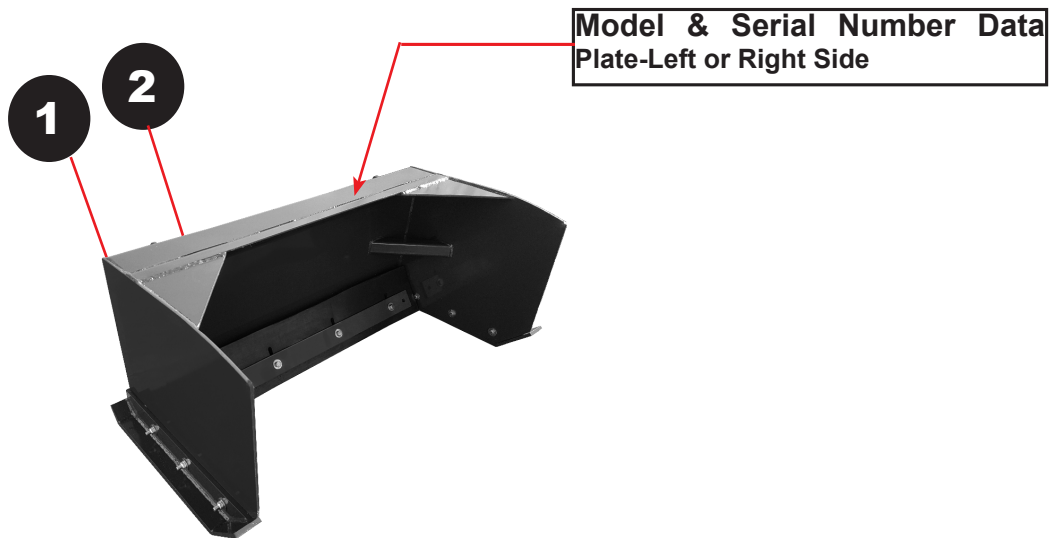

CONTACT YOUR LOCAL DEALER TO ORDER REPLACEMENT DECALS

! Decals must be kept clean and legible at all times.

! Operators must inspect the attachment for safety decals.

! Replace missing, worn or damaged decals immediately.


! When using a hot pressure washer to clean this attachment make sure

water jet is not too close to the decal as this may cause the decal to peel.

! When replacing parts, be sure safety decals are in place prior to using the attachment.

! Make sure metal surface is dry and free of dirt and grease before affixing decals to this attachment.

3.2 SKID STEER LOADER REQUIREMENTS

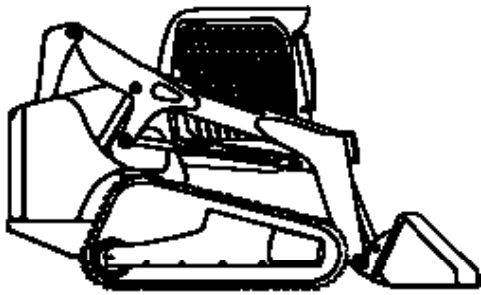

Tracked

VS.



Wheeled

A Tracked Skid Steer or Compact Track Loader (CTL) will provide superior stability in this application.

! CAUTION

Make sure your machine is in good operating condition. Follow the operating instructions found in the operator's manual. Failure to do so could result in minor or serious injury.

Consult the host machine's rated operating capacity to ensure you have the proper lift capacity for optimal operation of your attachment.

3.3 PERSONAL PROTECTIVE EQUIPMENT (PPE)

All operators should wear hearing protection, safety glasses, hand protection and dust mask while operating this attachment.



3.4 FEDERAL LAWS & REGULATIONS

OSHA REGULATIONS

Current OSHA regulations state in part: "At the time of initial assignment and at least annually thereafter, the employer shall instruct every employee in the safe operation and servicing of all equipment with which the employee is, or will be involved." These will include (but are not limited to) instructions to:

Keep all guards in place when the machine is in operation;

Permit no riders on equipment;

Stop engine, disconnect the power source, and wait for all machine movement to stop before servicing, adjusting, cleaning, or unclogging the equipment, except where the machine must be running to be properly serviced or maintained, in which case the employer shall instruct employees as to all steps and procedures which are necessary to safely service or maintain equipment.

Make sure no one is within 300 feet of machinery before starting the engine, engaging power, or operating the machine.

3.5 SAFETY INSTRUCTIONS



MAKE SURE YOU FOLLOW THE GENERAL SAFETY INSTRUCTIONS THAT RELATE TO THE OVERALL OPERATION AND MAINTENANCE OF THIS ATTACHMENT. IT IS IMPORTANT THAT YOU READ AND UNDERSTAND EACH OF THESE MESSAGES TO PREVENT SERIOUS INJURY OR DEATH.

- ⚠ **NEVER** use drugs or alcoholic beverages while operating or servicing this attachment.
- ⚠ **ALWAYS** watch for overhead power lines.
- ⚠ **ALWAYS** operate this attachment during daylight or well-lit areas.
- ⚠ **DO NOT** place any part of your body under this attachment.
- ⚠ We recommend using a high strength clear protective door panel when using with this attachment.
- ⚠ **NEVER** operate this attachment when bystanders are within 30 feet of your work area.
- ⚠ To prevent the machine and attachment from rolling forward, stop the engine and set the parking brake when exiting the machine.
- ⚠ **NEVER** position your body or limbs under an unsupported attachment.
- ⚠ Inspect attachment for loose or missing hardware prior to using this machine.
- ⚠ **DO NOT** allow this attachment to contact buildings, utilities, large rocks or tree stumps or you may lose control of the machine.
- ⚠ **DO NOT** operate this attachment during lightning or severe weather conditions.
- ⚠ **DO NOT** allow children to play on or around this attachment at any time. Store this attachment in an area not frequented by children.
- ⚠ **DO NOT** allow riders on the machine or on this attachment.
- ⚠ **ALWAYS** wear the proper personal protection equipment while operating or servicing this attachment. **NEVER** operate or service this attachment with bare feet, sandals, or other light footwear.
- ⚠ **ALWAYS** call 811, the “Digger’s Hotline” before digging to identify underground utilities to avoid an accident that could result in Death or Serious Injury to the operator.
- ⚠ **ALWAYS** wear work gloves when handling this attachment to protect your hands.
- ⚠ **DO NOT** speed! Speed Kills! Keep your driving speed between 2 and 5 mph.
- ⚠ **ALWAYS** use eye protection while operating or servicing this attachment.



SECTION 4

OPERATING PROCEDURES

Your attachment may arrive from the factory strapped to a wood pallet and requires no final assembly. Use a steel band cutting tool to remove the steel straps.

CAUTION

Shipping straps are under great tension, and could lash out uncontrollably when cut causing injuries to your body or bystanders. Keep bystanders away and wear safety glasses and gloves while removing the steel straps.

4.1 PRE-OPERATING CHECKLIST

Pre-Operating Checklist	
<input type="checkbox"/>	Attachment is securely attached to the machine and pins are locked.
<input type="checkbox"/>	Attachment is in working condition and all bolts and nuts are tight.
<input type="checkbox"/>	Safety labels are present and legible.
<input type="checkbox"/>	No material, rope, wire, etc. is obstructing the machine or attachment
<input type="checkbox"/>	The area of operation is clear of bystanders and any obstacles that could damage the equipment or injury to the operator.
<input type="checkbox"/>	The operator is of good health and not under the influence of any mind altering substances or alcohol.
<input type="checkbox"/>	Check the machine's hydraulic fluid level and add manufacturer recommended fluid if necessary.

4.2 HOW TO CONNECT SNOW PUSHER

DANGER

NEVER enter the area underneath the coupler or any part of the attachment when it is in the raised position to avoid an accident that will result in Death or Serious Injury!

GENERAL ATTACHMENT METHOD

Refer to your machine's manual for specific instructions on how to connect and disconnect your attachment.

4.2 HOW TO CONNECT SNOW PUSHER

This attachment method refers specifically to skid steers. For all other attachment instructions, refer to the Original Equipment Manufacturer (OEM) for instructions.

1. Make sure the locking pins on the skid steer quick attach mechanism are in the unlocked position.
2. Drive the skid steer to the attachment plate and tilt the skid steer coupler forward and hook the top edge of the skid steer quick attach mechanism under the lip of the attachment plate. See figure 4.2a below.
3. Slowly raise and tilt back the skid steer mounting plate, moving upward until the attachment plate is flat against the skid steer quick attach mechanism. See figure 4.2a below.

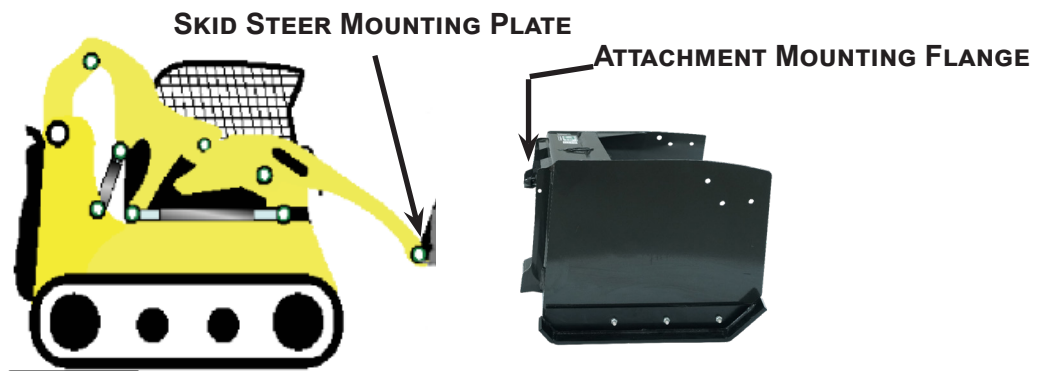


FIGURE 4.2A - SKID STEER MOUNTING PLATE TO ATTACHMENT MOUNTING FLANGE

4. Activate your skid steer's lever lock switch to engage and lock the pins into the flange slots of the snow pusher attachment plate. If your skid steer does not have this switch, push the latch handles down until you can see the lock pins extend into the attachment flange as shown in Figure 4.2b below.

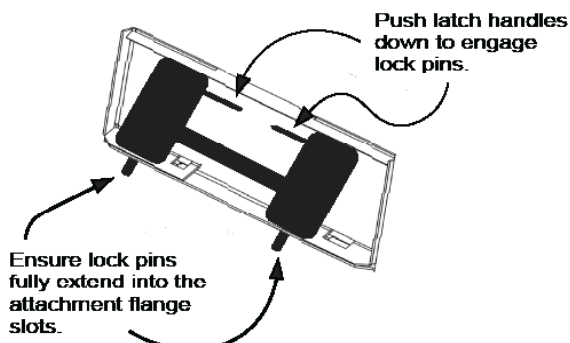


FIGURE 4.2B QUICK ATTACH COUPLER LOCKED TO ATTACHMENT PLATE



FIGURE 4.2C TRACTOR PIN ON HOOKUP

! WARNING

To avoid serious injury or death, ensure coupler pins fully extend through the slots on the attachment bracket and that levers are down in the locked position to prevent attachment from detaching from machine.

4.3 OPERATING GUIDELINES

DANGER

To prevent death from electrocution, NEVER operate this attachment near electrical wires or cables.

1. Inspect the work area and make sure it is free of any utilities, rocks, fence posts, barbed wire, rope, twine, and any other objects that could damage the machine or snow pusher
2. With the snow pusher properly connected to the host machine, raise the machine arms to lift the snow pusher approximately 6" from the ground. Release the parking brake and drive to the work area.
3. Lower/tilt snow pusher to desired position as follows: a) Keeping the attachment edge 1" - 2" off the ground for gravel parking lots and drives; b) On skid shoes keep 1" off the ground for a clean sweep of an asphalt parking lot or road.
4. Remaining alert to bystanders and safety, push the snow to the desired location.
5. Drive forward and adjust speed as needed.
6. If using pull-back option, approach wall or curb slowly with pusher tilted all the way forward. Lower attachment, and drive in reverse to pull snow back from edge.



RUBBER EDGE ADJUSTS.
SIDE SHOES ARE FIXED.

WARNING

Beware of using this attachment in white-out conditions. Remain vigilant of nearby power lines, people, vehicles, and any other obstacles that could potentially damage the machine or attachment.



4.4 SAFETY WHEN SNOW PUSHING

SAFETY PRACTICES

1. ONLY OPERATE IN WELL LIT WORK AREAS
2. NEVER OPERATE DURING SNOW STORMS, FOG OR OTHER ADVERSE WEATHER CONDITIONS WHERE VISIBILITY IS LIMITED.
3. DO NOT OPERATE NEAR STEEP EDGES OR DROP OFFS.
4. WATCH FOR VEHICLES AND PEDESTRIANS ON HIGHWAYS, ROADS AND PARKING LOTS.
5. DO NOT OPERATE ON FROZEN LAKES, CREEKS, RIVERS, OR PONDS.
6. ENSURE WORK AREA IS CLEAR OF OBJECTS THAT MAY BE DISCHARGED AND MARK ALL OBSTACLES. BE AWARE IN HEAVY SNOWFALL, OBJECTS CAN BE COMPLETELY HIDDEN BY THE SNOW. THERE IS NO WARRANTY COVERAGE FOR HITTING UNSEEN OBJECTS.
7. BEFORE LOWERING PUSHER OR STARTING TO PUSH SNOW REMOVE ANY ICE BUILDUP.
8. DO NOT ATTEMPT TO REMOVE ICE ON THE PUSHER OR PLOW WITH THE ENGINE RUNNING. TURN OFF SKID STEER ENGINE, AND SET PARKING BRAKE BEFORE DEICING.

! CAUTION

Exercise caution when pushing snow, as objects can be hidden in the snow and small rocks and debris can be ejected. By using this attachment, you acknowledge and accept responsibility for its safe operation. The manufacturer shall not be held liable for any misuse or negligence associated with the use of this attachment.

4.5 HOW TO DISCONNECT ATTACHMENT

1. Park machine on a flat and level surface then lower attachment to the ground. Place support blocks at the back of the attachment to prevent tipping.
2. **WARNING: NEVER disconnect the attachment with the back of the unit facing downhill to prevent tipping.**
3. Set parking brake and disengage lock pins using the lock lever switch (if installed skip to step 7).
4. Turn off machine engine.
5. Pull latch handles to disengage lock pins.
6. Re-enter cab and start machine engine.
7. Tilt mounting coupler forward until Quick Attach Coupler is free from mounting bracket.
8. Drive machine backward to clear attachment.



SECTION 5

MAINTENANCE PROCEDURES

The maintenance procedures described in this manual should only be carried out by qualified mechanics who have been trained to repair this attachment.

Some procedures require special tools and skills to complete. **DO NOT** attempt to repair or perform service work on this attachment unless you have the skills and tools to do so. Contact your local dealer for maintenance and repair services.

WARNING







Only use genuine Original Equipment Manufacturer (OEM) replacement parts on this attachment. We will not be liable for any damages or injuries caused by the use of after market parts on this attachment.

NOTICE

Improper maintenance or modifications to the design or performance of this attachment will void the warranty. **ONLY** use genuine OEM replacement parts on this attachment.

Safety Instructions

Obey the following safety instructions when servicing or repairing this attachment.

-  **Wear proper Personal Protective Equipment (PPE) while working on this attachment, which may include safety glasses, hard hats, steel toe boots, gloves, etc.**
-  **If servicing is performed while the attachment is attached to the machine, turn engine off, set parking brake and chock wheels to prevent machine from moving.**
-  **Ensure all jack stands, lifts and hoists are in good working condition and have the rated load capacity to support the load.**
-  **Only perform service work in a well-lit area.**
-  **Allow the attachment to cool down before servicing this attachment.**
-  **NEVER work under an unsupported attachment.**


WARNING

Hazardous dust can be generated if painted surfaces are heated or welded and could result in Death or Serious Injury. Remove paint before welding and always make repairs in a well-ventilated area and wear an approved respirator.

5.1 MAINTENANCE LOG INSTRUCTIONS



MAINTENANCE LOG

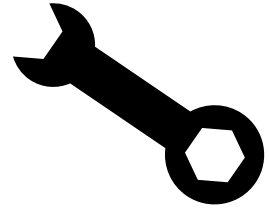

Use the log sheets on at the end of this manual to document all routine maintenance and repair services performed on this attachment.

10. MAINTENANCE


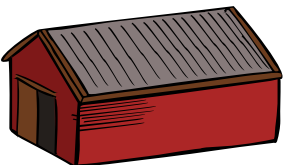

MAINTENANCE LOG

DESCRIPTION OF MAINTENANCE/REPAIR	SERVICED BY:	DATE:
<i>Replace Putter Blades</i>	<i>Joe Smith</i>	01/24/24
<i>Inspect Hydraulic Plumbing</i>	<i>Joe Smith</i>	02/25/24
<i>Change Oil in Bearing Housing</i>	<i>Joe Smith</i>	04/24/24

DANGER

ONLY service the attachment on stable, even terrain. NEVER park on sloped terrain to avoid being struck & killed or seriously injured by the unexpected rolling or movement of the machine.

5.2 STORAGE TIPS

	Ensure attachment is free of water, debris, dirt and grease.
	Store your attachment in a dry shed or garage.
	When storing your attachment for the season, cover with a weather proof tarp to protect it from the elements.

5.3 SNOW PUSHER CARE



WASHING YOUR SNOW PUSHER

Since the snow attachments come in frequent contact with salt, it is **HIGHLY** recommended that you wash your snow attachments with soap at least every week to **PREVENT RUST!** You can use dish soap or any other soap formulated for road grime.

All other attachments may follow the recommended washing schedule.

At the end of each season, all snow attachments **MUST BE** washed thoroughly with soap and water. Allow to dry completely.



5.4 SKID SHOE OR EDGE REPLACEMENT

1. Using the machine controls, position the attachment either with lifts and a hoist or using the host machine, to access bottom edge of the attachment. **MAKE SURE TO INSERT LIFT ARM LOCKS.**
2. Power off machine and place an engine lockout on the host machine.
3. Clean the steel edge, rubber edge, or skid shoes thoroughly.
4. Remove bolts holding the edge or shoes and remove.
5. Place the new edge or shoes in position and insert bolts. Torque the bolts to the proper specifications found in this manual.
6. For steel/rubber edge, adjust as needed




** Rubber Edge Shown*



5.5 SNOW PUSHER PULL-BACK REMOVAL OR REPLACEMENT

1. Using the machine controls, position the attachment on the ground or other safe and stable spot to access the optional pull back.
2. Power off machine and place an engine lockout on the host machine.
3. Clean the attachment thoroughly.
4. Attach lifting sling or hoist to the pull back and remove bolts taking care not to let the pull back fall..
5. Place the new pull back in position and insert bolts. Torque the bolts to the normal bolt specifications.

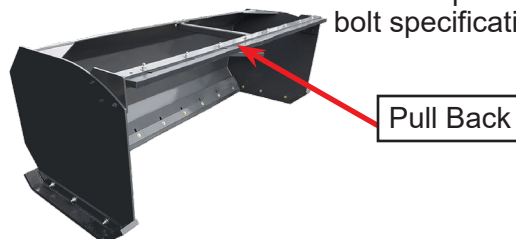

SECTION 6

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Snow pusher mounting frame does not seat properly to the machine's attachment mounting plate.	<p>Mud, ice, or stones are lodged between the snow pusher attachment mounting flange and the host machine mounting plate.</p> <p>Machine's attachment locking levers are not fully retracted before installation.</p> <p>Frame is twisted from hitting solid objects.</p>	<p>Remove Debris.</p> <p>Retract levers fully.</p> <p>Repair or replace frame.</p>
Snow Pusher is leaving snow behind.	<p>Edge is worn or damaged.</p> <p>Edge not properly adjusted.</p> <p>Snow Pusher tilted too far forward.</p>	<p>Replace or flip the edge.</p> <p>Adjust the rubber or steel cutting edge.</p> <p>Adjust Snow Pusher tilt angle.</p>
Edge or skid shoes digging into surface.	<p>Excessive down pressure.</p> <p>Snow pusher is tipped too far forward or backward.</p> <p>Edge not properly adjusted.</p>	<p>Set hydraulics in "float" position if possible.</p> <p>Readjust snow pusher to ride flat on skid shoes.</p> <p>Adjust the rubber or steel cutting edge.</p>
Premature wear of edge.	<p>Excessive down pressure.</p> <p>Using rubber edge to scrape icy surfaces.</p> <p>Edge not correctly adjusted.</p>	<p>Set hydraulics in "float" position if possible.</p> <p>Consider using steel edge for this application.</p> <p>Adjust the rubber or steel cutting edge.</p>
Skid Shoes wearing more on front or rear.	<p>Snow Pusher not level during operation.</p>	<p>Always run snow pusher level to the ground.</p>

WARNING

NEVER disconnect the attachment with the back facing downhill. Snow pushers are back heavy and can easily tip backward when disconnected from the host machine. Always disconnect the attachment on level ground with support blocks at the back to tip the unit forward.

SECTION 7


PARTS INFORMATION

Factory OEM parts specifically designed for your implement are readily available.

For hassle free service and to ensure you receive the correct parts for your implement, please provide your dealer with the following information:

Model Number	
Serial Number	
GPM Requirements	
Date of Owners Manual (Bottom Left Corner of Cover Page)	
Parts Diagram Page Number	
Part Description	
Reference #	
Quantity Desired	
Ship To Information	
Bill To / Payment Information	

7.1 X-TREME SNOW PUSHER PART DIAGRAM


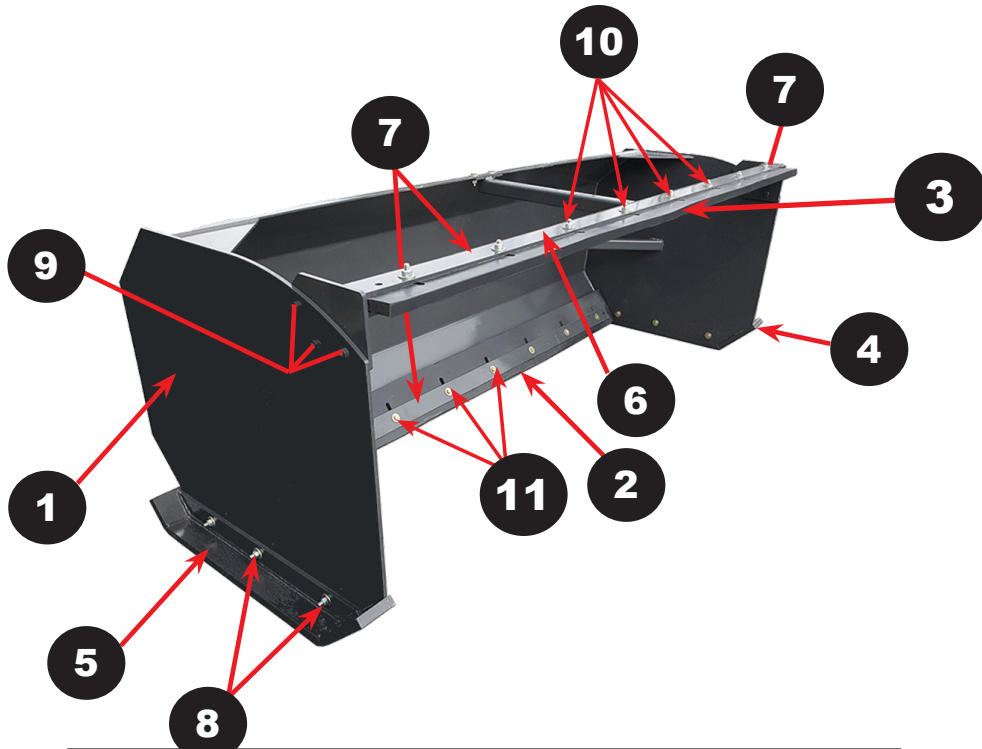


Ref	Part Description	QTY
1	Snow Pusher Weldment	1
2	Main Rubber Edge 1-1/2" x 8" (SPUSH-Rubber Edge) (Lengths vary by size.)	2
3	Pull Back Rubber Edge 1" x 6" (Lengths vary by size.)	
4	SPUSH-Shoe-Weldment-Left	1
	Compact Tractor: CTSPUSH-Shoe-Weldment-Left	
5	SPUSH-Shoe-Weldment-Right	1
	Compact Tractor: CTSPUSH-Shoe-Weldment-Right	
6	Pull Back Weldment	1
7	Edge Retention Bar (SPUSH-Blade Clamp)	2
8	Bolts/Washers/Locknuts for AR400 Side Shoes: 1/2" x 1-3/4"	6 sets
9	Bolts/Washers/Locknuts for Pull Back Weldment to Main Weldment: 1/2" x 1-3/4"	6 sets
10	Bolts/Washers/Locknuts for Pull Back Rubber Edge: 1/2" x 2-1/2"	VAR
11	Bolts/Washers/Locknuts for Bottom Rubber or Steel Edge: 1/2" x 3"	VAR

7.1 60" COMPACT SNOW PUSHER PART DIAGRAM


CTSPUSH60-S

ITEM	Part #	DESCRIPTION	QTY.
1	80900096	Frame Weldment	1
2	20900046	Right Shoe Weldment	1
3	20900036	Left Shoe Weldment	1
4	11201316	1/2"-13 x 1 3/4" Hex Bolt GR 5	6
5	11200446	1/2"-13 Lock Nut GR C	11
6	11200186	1/2" USS Flat Washer	22
7	90400046	Edge Clamp	1
8	20000136	Rubber Edge	1
9	11200266	1/2"-13 X 3" Hex Bolt GR 8	5

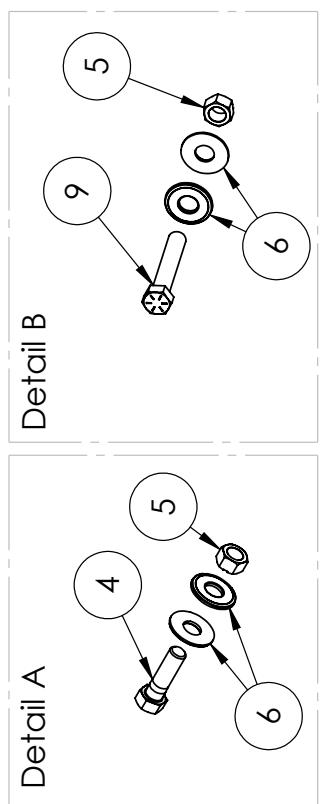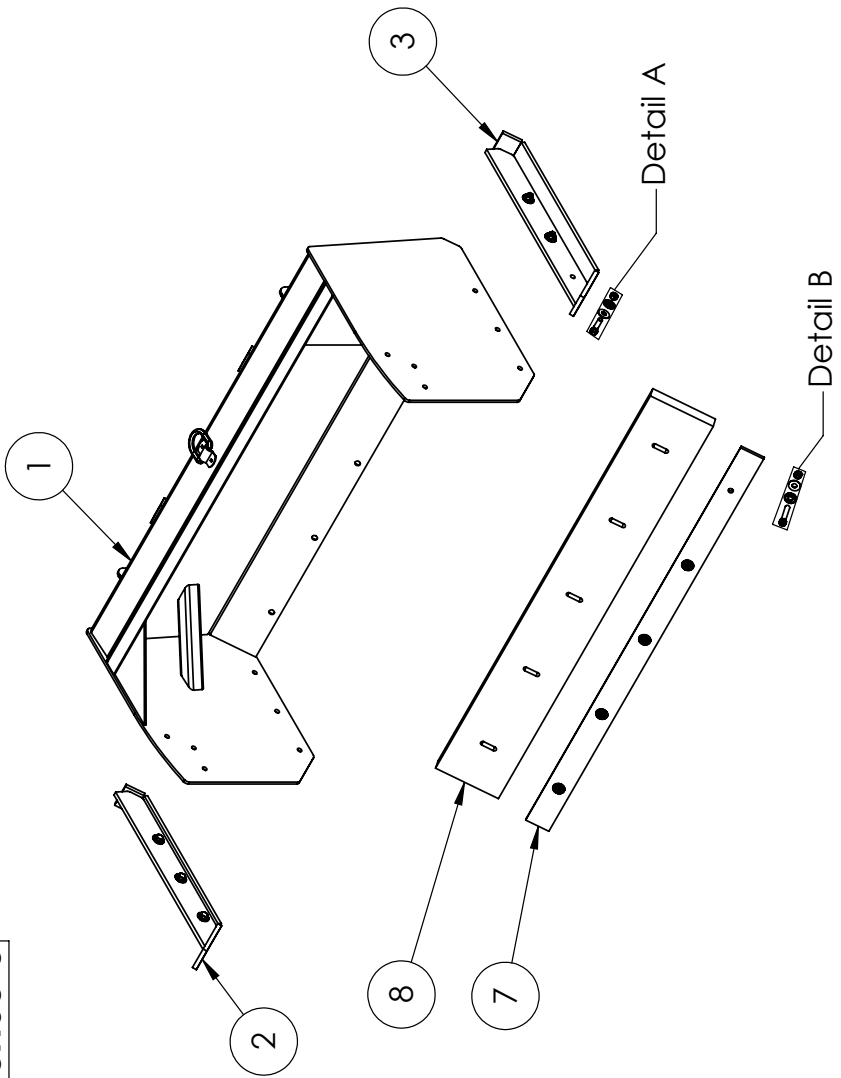

7.1 72" COMPACT SNOW PUSHER PART DIAGRAM




ITEM	Part #	DESCRIPTION	QTY.
1	80900076	Frame Weldment	1
2	20900046	Right Shoe Weldment	1
3	20900036	Left Shoe Weldment	1
4	11201316	1/2"-13 x 1 3/4" Hex Bolt GR 5	6
5	11200446	1/2"-13 Lock Nut GR C	12
6	11200186	1/2" USS Flat Washer	24
7	90400026	Edge Clamp	1
8	20000096	Rubber Edge	1
9	11200266	1/2"-13 X 3" Hex Bolt GR 8	6

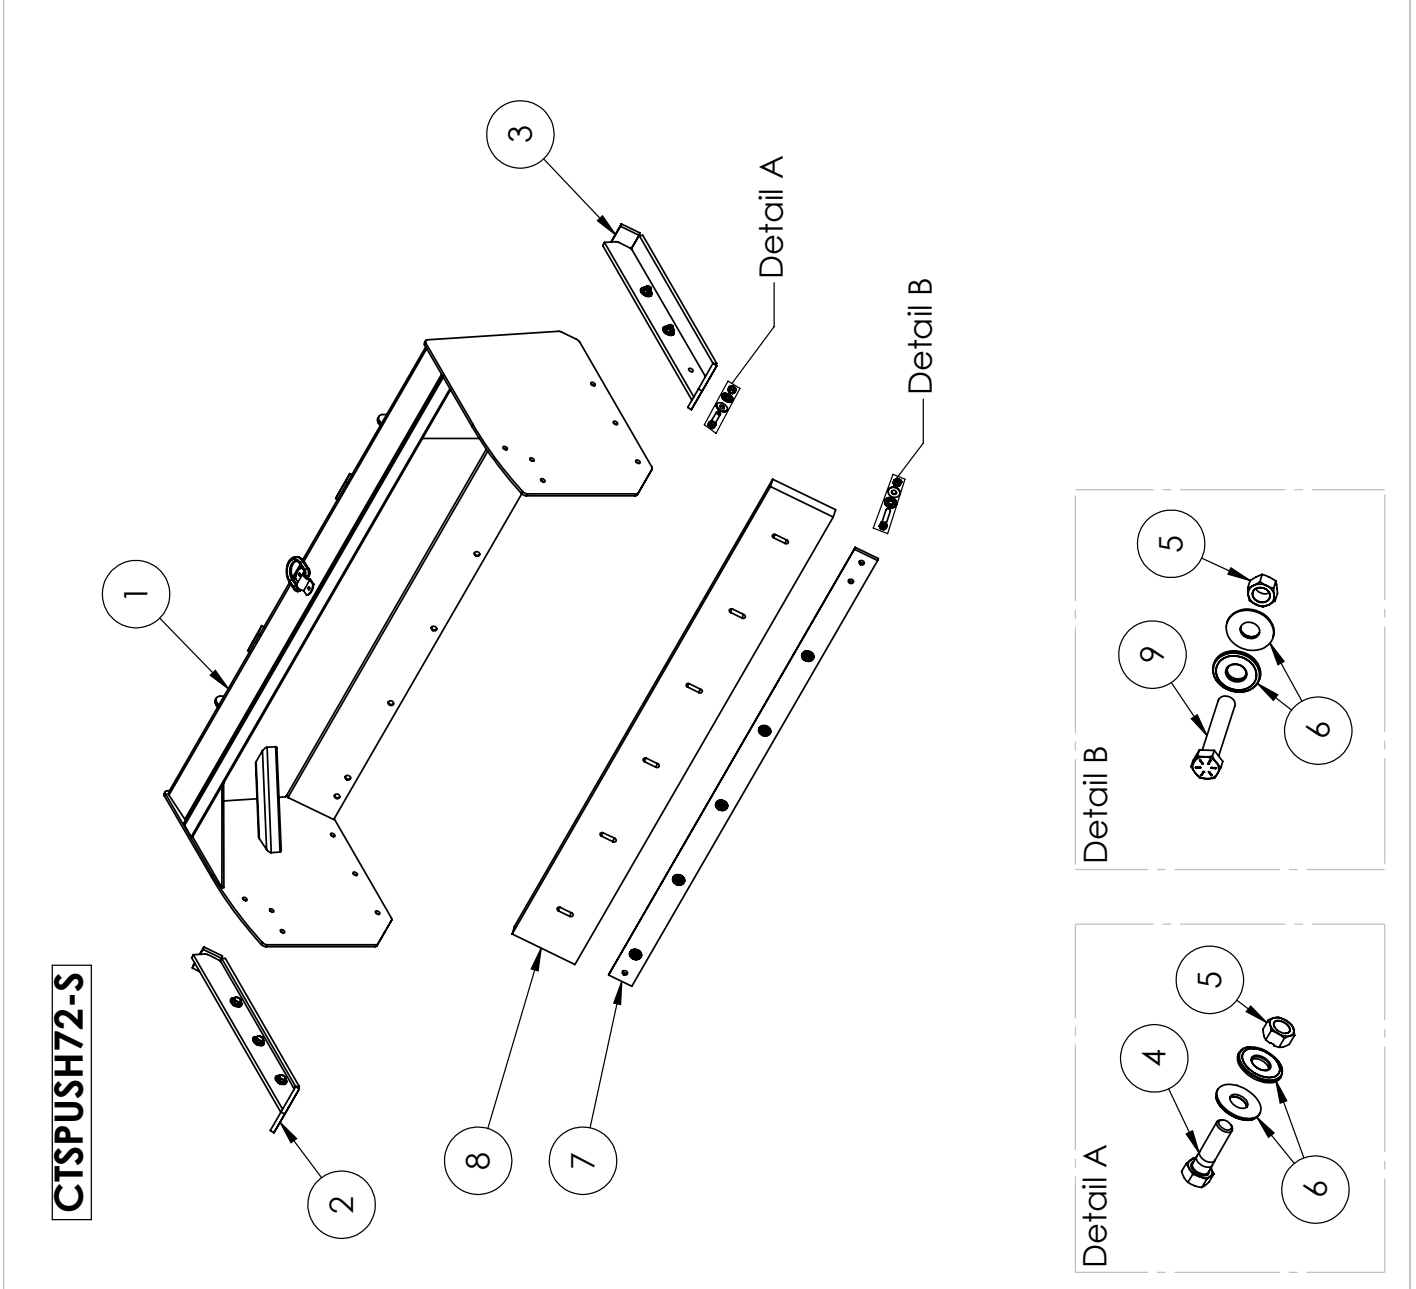

7.1 84" COMPACT SNOW PUSHER PART DIAGRAM

ITEM	Part #	DESCRIPTION	QTY.
1	80900086	Frame Weldment	1
2	20900046	Right Shoe Weldment	1
3	20900036	Left Shoe Weldment	1
4	11201316	1/2"-13 x 1 3/4" Hex Bolt GR 5	6
5	11200446	1/2"-13 Lock Nut GR C	13
6	11200186	1/2" USS Flat Washer	26
7	90400036	Edge Clamp	1
8	20000126	Rubber Edge	1
9	11200266	1/2"-13 X 3" Hex Bolt GR 8	7

CTSPUSH84-S

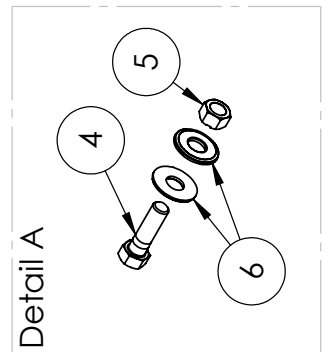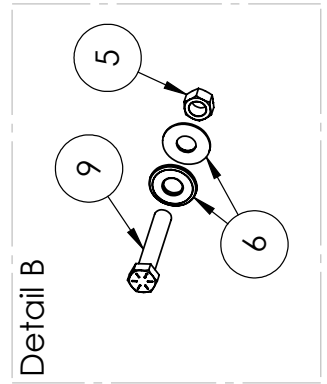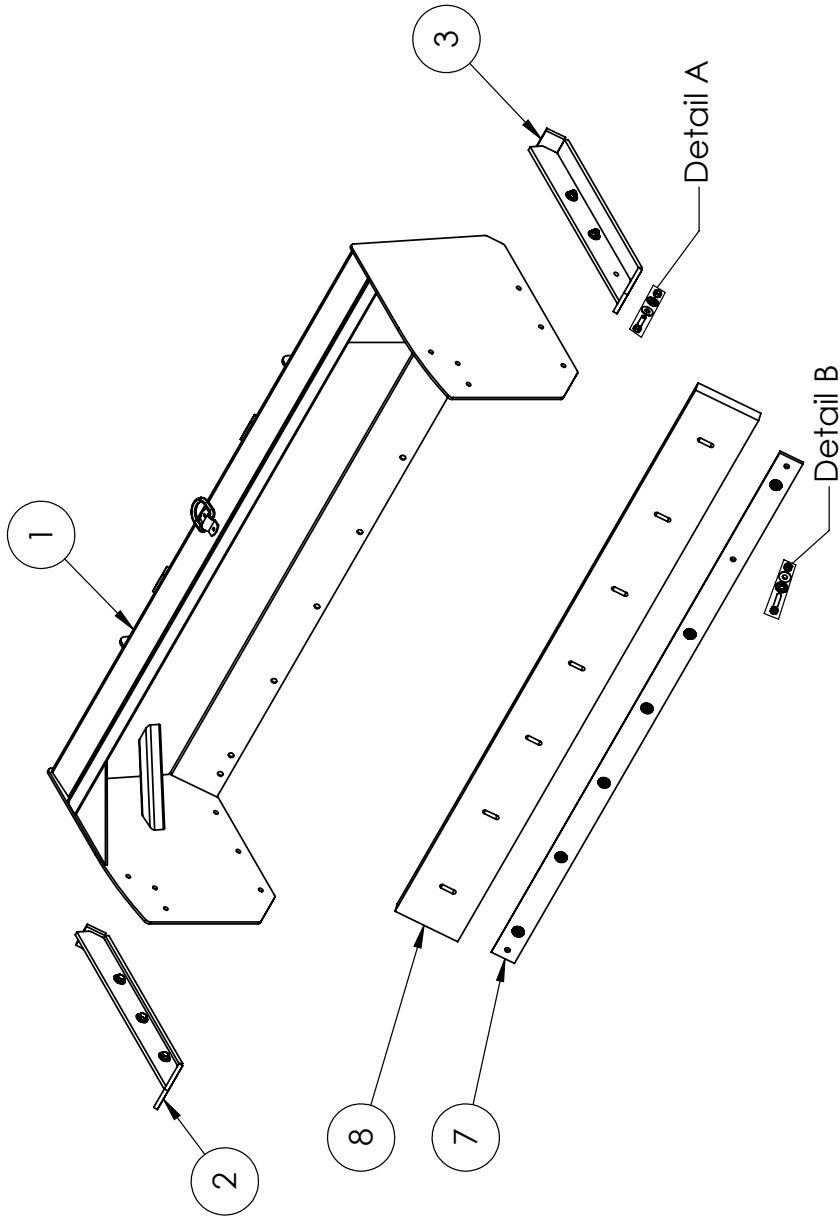

SECTION 8

WARRANTY INFORMATION

LIMITED WARRANTY

Construction Implements Depot, Inc. (CID) products are warranted to be free from defects in workmanship or materials for a period of 12 months from the initial sale.

WARRANTY EXCLUSIONS

This warranty does not cover normal wear items, including but not limited to: bearings, hoses, blade holders, ground engaging parts such as teeth, blades, cutting edges, pilot bits, auger teeth and broom bristles. This warranty does not cover maintenance, service or adjustments. This warranty does not cover damage due to improper application or installation, misuse, negligence, accidents or improper maintenance. Please note: Any modification or customization made to your attachment may void its warranty. This warranty is void if any components have been disassembled, i.e., pumps, gear boxes or motors or the attachment has been used without the case drain attached (if applicable). Be sure to follow all recommended Horsepower and GPM requirements as outlined in product specifications, in order to prevent the warranty from being void. This warranty is contingent upon the use of approved BRAND parts exclusively. Any use of non-approved parts may result in voiding the warranty. Please be advised that the warranty does not cover refurbished attachments. Specially modified attachments built by the manufacturer to meet your needs shall not be warranted by CID, Inc.

REPAIRS UNDER WARRANTY

Any repairs, including welding, on attachments must be performed by certified repair technicians who have requested and obtained written approval from an authorized representative of CID before repairs begin. If you are completing the repair, you must also have prior written approval to prevent the warranty from being voided.

WARRANTY STATEMENT

Our obligation under this Limited Warranty shall be solely limited to repairing or replacing any part (see non-covered items above) that, according to our judgment, show evidence of a defect in quality of workmanship or

8.0 WARRANTY INFORMATION CONT.

materials for the stated 12 month warranty period. All defective parts must be routed directly to CID, Inc. with freight or delivery charges to be prepaid. This limited warranty shall not be interpreted to render CID, Inc. liable for any injury or damage to persons, businesses or property of any kind nor expenses or losses incurred for labor, supplies, substitute machinery rental or for any other reason. Repair or replacement parts are subject to the supply conditions at the time of repair or replacements, which may directly affect our ability to obtain material and/or replacement parts. CID, Inc. reserves the right to make improvements in design or changes in specifications at any time without incurring any obligations to owners of previously purchased products. No one but CID, Inc. is allowed to alter, modify or enlarge this warranty nor the exclusions, limitations and reservation at any time. CID, Inc. products are warranted to be free from defects in workmanship or materials for a period of 12 months from the initial sale.

Purchaser and Manufacturer hereby (a) submit to the non-exclusive jurisdiction of the courts of competent jurisdiction in North Carolina and Davidson County in which this company resides for resolution of any dispute concerning this Limited Warranty or the rights or obligations of Purchaser and/or Manufacturer; (b) agree that any litigation in connection with this Limited Warranty shall be venued in North Carolina and Davidson County in which the company resides and (c) waive any objection they may have as to any such action or proceeding brought in such court that such court is an inconvenient forum. Nothing herein shall limit the right of Purchaser or Manufacturer (or the right of any permitted successor or assign of either) to bring proceedings against the other in the courts of any other jurisdiction wherein any assets of such other party may be located.

8.1 WARRANTY RETURN AUTHORIZATION POLICY

WARRANTY RETURN AUTHORIZATION POLICY:

If repairs are required, a Return Material Authorization (RMA) number must be obtained for the defective part as well as proof of purchase. RMA and services are rendered by CID only. Any responsibility of shipping costs on any item returned for repair is at the discretion of CID, Inc.

All returned parts must have the following:

1. A legible RMA number written on the outside of the package.
2. Warranty Claim Form (online)
3. The defective part.

RMA numbers are only valid for 30 days from the date of issue. All shipped replacement parts will require a Parts Order (PO) number from the original CID, Inc dealer. Repairs not covered by the warranty, will be charged for parts and labor at the current pricing rate. Should you have any problems with your attachment, please follow the instructions listed on the following page.

8.2 WARRANTY PROCEDURE

WARRANTY RETURN AUTHORIZATION PROCEDURE:

1. Call the Warranty Department at (336) 859-2002 EXT 215. You will need to provide the model and serial number of the defective item(s) (see Appendix for where to find this information), a description of the problem, and have photographs available.
2. Upon a warranted issue, visit www.cidattachments.com, click on the warranty tab, and fill in the warranty information on the Warranty Claim Form. CID, Inc will retain a Return Material Authorization (RMA) number of the defective part. If all the information above is completed CID, Inc will issue a RMA number via email.
3. Once you have an approved RMA number, a shipping label will be provided with CID's address and instructions for returning the defective part. **Appropriate RMA's/PO's will be invoiced and payment received while the evaluation process is being completed to prevent delays in your normal business operations. In the event the defective part(s) is un-warranted and repairs are not covered by the warranty, the customer will be invoiced for any additional parts and labor at the current pricing rate. If the part is deemed under warranty, a credit of the invoice will be issued.**
4. CID will ship a replacement part to the provided location or customer with a RMA identifier of some kind. **The customer is responsible for initial shipping charges until evaluation of the part has been completed.** If the part failure is covered by the warranty, the customer will be reimbursed for any paid shipping charges. In the event, the part is not covered by the warranty, the customer is responsible for return shipping.
5. Once the defective part is warranted by CID, the customer will be issued a credit and the PO number will no longer be active.
6. In the event CID decides that the attachment needs to be returned to them for repair, CID will make arrangements for pickup and return. Repairs will be performed by CID qualified technicians. Non-warranted issues will be discussed, and repairs will be performed upon the owner's agreement and receipt of payment for parts and labor.



TRUSTED ATTACHMENTS



EST.

CID

2003

INDUSTRIAL QUALITY

**CONSTRUCTION IMPLEMENT DEPOT
DENTON-USA, LLC
1248 N. MAIN ST
DENTON, NC 27239**

www.CIDATTACHMENTS.COM



CIDSP-MANU-V3M0626